




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE G 1180 SCVI. You'll find the answers to all your questions on the MIELE G 1180 SCVI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE G 1180 SCVI  
User guide MIELE G 1180 SCVI  
Operating instructions MIELE G 1180 SCVI  
Instructions for use MIELE G 1180 SCVI  
Instruction manual MIELE G 1180 SCVI

**Miele**

## Operating Instructions

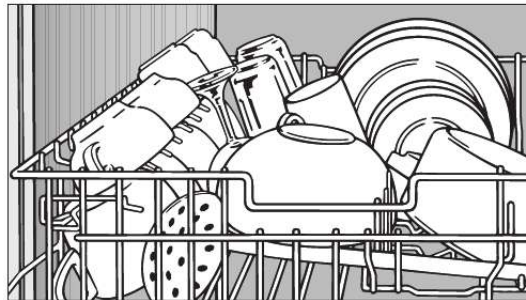

Advanta Series  
G 2170

Inspira Series  
G 1180  
G 2180

To prevent accidents  
and machine damage  
read these instructions  
**before**  
installation or use.

HG03

en - US, CA

M.-Nr. 06 696 040



[You're reading an excerpt. Click here to read official MIELE G 1180 SCVI user guide](#)

<http://yourpdfguides.com/dref/4310713>

**Manual abstract:**

.....  
.....  
.....  
.....

*. . 4 Guide to the dishwasher . . . . .*

.....  
.....  
.....

.....  
.....

*. 7 Guide to the dishwasher . . . .*

.....

.....  
.....  
.....  
.....

*. 7 Control panel . . . . .*

.....  
.....  
.....

.....  
.....  
.....

*. . . . . 8 Caring for the environment . . . . .*

.....  
.....  
.....  
.....

*. . . . . 9 Before using for the first time . . . . .*

.....  
.....  
.....

.....  
.....

*. 10 To open the door . . . .*

.....

.....  
.....  
.....  
.....

*. . . . . 10 To close the door . . . .*

.....  
.....  
.....

.....  
.....  
.....

*. . . . . 10 Rinse aid . . . .*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.. 11 Adding rinse aid .....

.....  
.....  
.....  
.....  
.....  
.. 11 Rinse aid indicator ...  
.....  
.....

.....  
.....  
.....  
.....  
.....  
. 12 Adjusting the dosage. ....  
.....  
.....

.....  
.....  
.....  
... 12 Loading the dishwasher ...  
.....  
.....  
.....

.....  
.....  
.....  
. 14 Items not recommended for dishwashing .....

.....  
.....  
.....  
.. 15 Cutlery tray. ....

.....  
.....  
.....  
..... 16 Cutlery basket ...

.....  
.....  
.....  
.....

.....  
.....  
.....  
.... 17 Upper basket .  
.....

.....  
.....  
.....  
.....  
.....  
.. 18 Adjusting the upper basket ...



.....  
.....  
.....

.....  
.....  
.....  
*. 26 Use.....*  
.....

.....  
.....  
.....

.....  
.....  
*. 27 At the end of a program. . . .*  
.....

.....  
.....  
.....

*. 27 Interrupting a program. . . . .*  
.....  
.....  
.....

.....  
.....

*. . 27 Changing a program . . . .*  
.....

.....  
.....  
.....

*. . . . 27 Additional functions . . . . .*  
.....  
.....  
.....

.....  
.....  
.....

*28 2 Contents Frequently asked questions . . . . .*

.....  
.....  
.....

*30 Technical faults . . . . .*  
.....  
.....  
.....

.....  
.....  
.....

*. 30 Problems water intake/drain . . . . .*

.....

.....  
.....  
.....

.. 32 General problems with the dishwasher .....

.....  
.....  
.....

..... 33 Sounds .....

.....  
.....  
.....  
.....  
.....  
.....

... 34 Poor cleaning results .....

.....  
.....  
.....  
.....  
.....

35 After sales service .....

.....  
.....  
.....  
.....

..... 38 Transport ..

.....  
.....  
.....  
.....  
.....  
.....

... 39 User Maintenance Instructions .....

.....  
.....  
.....  
.....

. 41 Cleaning and Care .....

.....  
.....  
.....  
.....

..... 42 Cleaning the wash cabinet .

.....  
.....  
.....  
.....

. 42 Cleaning the door and the door seal .....

.....

.....  
.....  
.....  
.....  
*. 42 Cleaning the control panel. . . .*  
.....

.....  
.....  
.....  
.....  
*..... 42 Cleaning the exterior .*

.....  
.....  
.....  
.....  
.....  
.....  
*. 42 Triple filter system . . . .*  
.....

.....  
.....  
.....  
.....  
.....  
.....  
*..... 43 Cleaning the spray arms . . . .*  
.....  
.....  
.....

.....  
.....  
.....  
*..... 45 Cleaning the water inlet filter .*  
.....  
.....  
.....  
.....

*46 Cleaning the drain pump and non-return valve . . . . .*  
.....  
.....

*..... 47 Installation instructions . . .*  
.....  
.....  
.....  
.....

.....  
*49 Help to protect the environment. . . .*  
.....  
.....

.....  
.....  
*.. 50 Electrical connection . . .*  
.....  
.....  
.....  
.....

... 51 Plumbing.....

.....  
.....  
.....

.....  
.....  
.....

..... 52 Connection to the water supply .

.....  
.....  
.....

..... 52 Drainage ..

.....  
.....  
.....

.....  
.....  
.....

... @@This data must correspond to prevent injury and machine damage. @@Use the dishwasher only for its intended purpose. This appliance is intended for residential use only. @@Extension cords do not guarantee the required safety of the appliance (e.g. danger of overheating).

~ Be certain your appliance is properly installed and grounded by a qualified technician. To guarantee the electrical safety of this appliance continuity must exist between the appliance and an effective grounding system. It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician. @@@@~ Do not install or use a damaged dishwasher.

A damaged appliance is dangerous. Unplug the machine and call your Miele dealer or the Miele Technical Service Department. ~ Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! ~ This equipment is not designed for maritime use or for use in mobile installations such as recreational vehicles or aircraft.

However, under certain conditions it may be possible for an installation in these applications. Please contact the nearest Miele dealer or the Miele Technical Service Department with specific requirements. ~ It is recommended that the dishwasher only be connected to the mains with the plug (no hard-wiring). The outlet must be accessible at all times after installation to disconnect the dishwasher. ~ This dishwasher should only be installed under a continuous counter top secured to adjacent cabinetry. ~ Do not install this dishwasher beneath a cooking surface, oven or any appliance that radiates heat. High temperatures from these units may damage the dishwasher. ~ When installing the dishwasher under a counter top and removing the toe-kick, a build-under toe-kick must be installed. Use the respective installation kit. Danger of injuries.

~ Do not cut the intake hose or submerge it in liquid. This hose contains electrical components that could cause injury or property damage if cut or submerged. ~ Only connect the dishwasher to the mains when all installation and plumbing work is complete. 5 IMPORTANT SAFETY INSTRUCTIONS Use ~ Only use detergents and rinse aids recommended for residential dishwashers. Keep all detergents and rinse aids out of the reach of children. ~ To reduce the risk of injury, do not allow children to play in, on or near the dishwasher. are properly in place. Do not inhale or swallow detergents. ~ Only use the dishwasher if all panels ~ Dishwasher detergents contain irritant and corrosive ingredients. They can cause burning in the mouth and throat if swallowed, or inhibit breathing.

Consult a doctor immediately if detergent has been swallowed or inhaled. ~ Do not tamper with the controls. ~ Do not damage, sit or stand on the door or baskets of the dishwasher. Close the door when not in use. ~ Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more.

**HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, turn on all hot water faucets and let water flow from each for several minutes before using the dishwasher.



[You're reading an excerpt. Click here to read official MIELE G 1180 SCVI user guide](http://yourpdfguides.com/dref/4310713)  
<http://yourpdfguides.com/dref/4310713>



This will release any accumulated hydrogen gas. Do not smoke or use an open flame during this time. ~ Be sure that all items placed in the dishwasher are "dishwasher safe".

For items not labeled, check the manufacturer's recommendations. ~ When loading tableware, place sharp items away from the door to prevent damage to the seal. Load sharp items pointing downwards to prevent injuries. ~ Do not drink water from the dishwasher! Harmful residues could be present. detergent. It will damage the rinse aid compartment. ~ Do not fill the rinse aid reservoir with ~ If the power cord is damaged it must only be replaced by a Miele Service technician with a genuine Miele power cord. Disposal of an appliance ~ If the appliance is removed from its installation site and will not be used, remove the doorlock to the wash cabinet to prevent children from locking themselves in the machine. SAVE THESE INSTRUCTIONS 6 Guide to the dishwasher Guide to the dishwasher a Upper spray arm (not visible) b Cutlery tray (depending on model) c Upper basket d Middle spray arm e Air inlet for drying (depending on model) f Lower spray arm g Filter combination h Data plate i Rinse aid reservoir j Detergent dispenser 7 Guide to the dishwasher Control panel a Check / Refill indicators b Program selection c Program button d On button g / Indicator e Off button o 8 Caring the baskets. ^ Load dishes so that water can reach all surfaces.

Do not place dishes or cutlery inside other pieces. ^ Make sure that all items are securely positioned. ^ Hollow items such as cups and glasses should be placed upside down in the baskets. ^ To ensure good water coverage, tall, narrow and hollow items, i.e. vases or champagne glasses, should be placed in the center of the basket rather than in the corners. ^ Concave based items such as mugs or bowls, should be placed at an angle so that water does not pool. ^ The spray arms must not be blocked by items that are too tall or hang through the baskets. Check clearance by manually rotating the spray arms. ^ Place very small items in the cutlery tray or basket so they do not fall to the bottom of the wash cabinet.

^ Food residue and spilled liquids should be cleaned from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms. 14 Loading the dishwasher Items not recommended for dishwashing Cutlery with wooden handles Wding the basket in and out in this position. ^ Slide out the upper basket. Depending on the setting of the upper basket, a variety of plate dimensions can be accommodated.

For example: If the upper basket is in its highest position a plate with a diameter of 12 3/16" (31 cm) can be fit in the lower basket. ^ Pull up the levers at the sides of the upper basket and adjust the basket height. ^ Release the levers and the basket will lock in place. 19 Loading the dishwasher Lower basket ^ For larger and heavier items such as plates, serving platters, saucepans, bowls, etc. Dishwashers with cutlery tray Foldable spikes Two rows of spikes can be folded down, to create more room for larger dishware, e.

g. pots, pans and bowls. ^ Lift the spike rows and fold them down on one another. Dishwashers with cutlery basket 20 Loading the dishwasher Vase/Bottle holder (depending on model) The vase/bottle holder, e.g. for vases and baby bottles, can be inserted into the lower basket as shown in the illustration. If placed anywhere else, water will not reach all surfaces. The bottle will not be properly cleaned. 21 Basket accessories Additional inserts for the upper and lower baskets may be purchased from your Miele dealer or Miele. Depending on the model some accessories come standard with the machine.

Glassware insert GGO To wash long stemmed glassware attaches to the upper basket To wash baby bottles or vases To wash the parts of the Cappuccinatore Vase / Bottle holder GF Cappuccinatore insert GCEO 22 Use Detergent You can use powder, gel or tab detergents. Follow the dosage information on the detergent packaging. Detergent tabs are not recommended for use with the program "Short". The tabs may not dissolve completely. Dishwasher detergents contain irritant and corrosive ingredients. Avoid inhaling or swallowing dishwasher detergent. Keep children away from detergent. Fill the detergent dispenser only when you are ready to start the dishwasher. Only use detergents formulated for domestic dishwashers. Use only the recommended amount of detergent.

Continued use of too much detergent may cause machine damage. 23 Use Adding detergent ^ To open, press the latch on the detergent dispenser. The flap will spring open. The flap is always open at the end of a program. ^ Add detergent to compartment II and close the flap.

^ If a Pre-rinse is desired, and available for your chosen program, add 1 teaspoon (5 ml) of detergent to compartment I. The horizontal marks in compartment II indicate the levels of approximately 1 1/4 and 2 tablespoons (20 and 30 ml) respectively. Compartment I holds a maximum of 2 teaspoons (10 ml). 24 Use Turning on ^ Open the water supply, if it is closed. ^ Open the door.

^ Make sure the spray arms can rotate freely. ^ Turn the dishwasher on g. The indicator g lights. Starting a program ^ Select the desired program with the program selector button. The indicator of the selected program lights. ^ Close the door. The program starts. Cancel a program only in the first 5 minutes.

Otherwise important program steps could be interrupted. Selecting a program Choose your program according to the type of load and soiling.

@@@The indicator of the selected program has gone out. @@Close the door again to allow the program to finish. Dishes tends to chip if removed still hot from the dishwasher. ^ Let the dishware cool by opening the door slightly. The dishes will cool much faster. ^ Open the dishwasher and unload the dishes. ^

Turn the dishwasher off o. @@^ If the dishwasher is not used for a longer period of time, e.g. @@@@The water in the dishwasher is hot.

Danger of scalding. Before closing the door again, leave it ajar for approx. 20 secs. This will enable the temperature in the wash cabinet to settle. @@@@^ Press the o button.

^ Press the g button. ^ Select the desired program with the program selector button. ^ Close the door. @@@@The buzzer sounds up to one hour if the dishwasher is not turned off. The buzzer for a fault sounds continuously.

@@The buzzer is activated by default. It can be set to off, so it does not sound at the end of a program. The buzzer for a fault cannot be set to off. ^ Open the door. ^ Turn the dishwasher off o. @@@@If it does not come on, start over. ^ Press the program button briefly four times. The "Intake/Drain" indicator flashes 4 times in intervals. @@@@^ Press the program button briefly three times. The setting is saved.

@@^ Open the door. ^ Turn the dishwasher off o. @@@@If it does not come on, start over.



[You're reading an excerpt. Click here to read official MIELE G 1180 SCVI user guide](http://yourpdfguides.com/dref/4310713)  
<http://yourpdfguides.com/dref/4310713>

^ Press the program button 12 times. @@The upper right program indicator shows if a setting was changed. @@@@^ Press the program button briefly three times. The setting is saved. @@@@Possible fault The door is not properly closed. The machine is not plugged in. The fuse has tripped. Solution Close the door firmly. Insert the plug. Reset the circuit breaker. Make sure it is a 15 A breaker. Press g and select a program. Reset the circuit breaker. @@@@All program indicators flash when the door is open. Possible fault There may be a technical fault. Solution Turn the dishwasher off o. After a few seconds: Turn the dishwasher on. Select the desired program with the program selector button. Close the door. If the problem persists, call Technical Service. Turn off the water supply. @@@@The buzzer sounds. @@@@Possible fault The water supply is closed. @@Fault in the water intake. Open the water supply all the way. @@@@Consult a plumber. Clean the triple filter.

Clean the drain pump and the non-return valve. @@@@There may be water in the wash cabinet. 32 Frequently asked questions General problems with the dishwasher Issue Detergent is left in the dispenser at the end of a program. The detergent lid cannot be closed properly. The door and the interior walls are still wet after a program has finished. Water remains in the wash cabinet at the end of a program. Possible fault Solution The dispenser was damp Dry the dispenser before when detergent was added. adding detergent. Detergent residue is blocking the catch. Remove the residue. This is not a fault! The moisture will It is the normal operating evaporate after a short mode of the drying system. time. Before fixing the fault: Turn the dishwasher off o. Clean the triple filter. See "User Maintenance Instructions".

Clean the drain pump and the non-return valve, see maintenance instructions. Remove any kinks from the drain hose. The triple filter in the wash cabinet is clogged. The drain pump or the non-return valve may be blocked. The drain hose is kinked. 33 Frequently asked questions Sounds Issue There is a knocking noise in the wash cabinet. There is a rattling noise in the wash cabinet. There is a knocking noise in the water pipes. Possible fault Solution The spray arm is hitting an Interrupt the program, item in the basket. rearrange items blocking the spray arms. Items are not secure in the Interrupt the program and wash cabinet. rearrange loose pieces. This may be caused by This has no effect on the the installation or the dishwasher. If in doubt diameter of the pipe. contact a plumber.

34 Frequently asked questions Poor cleaning results Issue Possible fault The dishes are not The dishes were not loaded clean. correctly. The program was not powerful enough. Not enough detergent was dispensed. The spray arms are blocked by items. The triple filter in the base of the wash cabinet is not clean or not correctly inserted. The spray arm jets might be clogged. The drain pump or the non-return valve is blocked. Wash water will run back into the wash cabinet. Glasses and cutlery show streaks.

There is a bluish sheen on the surface of glasses and a film that can be wiped off. The rinse aid dosage is set too high. Solution See "Loading the dishwasher". Select a more intensive program, see "Program Guide". Use more detergent, see "Adding detergent". Turn the spray arm and rearrange the dishes if necessary. Clean the filter and insert it correctly. Clean the spray arm jets. See "User Maintenance Instructions". Clean the drain pump and the non-return valve, see maintenance instructions. Reduce the dosage, see "Before using for the first time". 35 Frequently asked questions Issue Dishes are still wet, glasses and cutlery are spotted. Possible fault The rinse aid setting may be too low, or the rinse aid reservoir is empty. Solution Increase the dosage, refill the reservoir or switch the rinse aid product when refilling, see "Before using for the first time". Dishes were taken out too Leave dishes in longer, see soon. "Use". "2 in 1" products were used. Use powder detergent and These products have a low add rinse aid. drying effect. Not enough rinse aid was Increase the dosage, see used.

"Before using for the first time". Unsuitable "2 in 1" or "3 in 1" Use a different detergent, products were used. normal tabs or normal powder detergent. White residue is visible on cutlery and dishes. Clouding occurs on glassware and film can be wiped off. 36 Frequently asked questions Issue Glasses are discolored and the film cannot be wiped off. Glasses are dull and discolored, film cannot be wiped off. Tea or lipstick stains have not been completely removed. Possible fault Solution Detergent ingredients have Use a different detergent. been deposited on the glassware.

Glasses are not dishwasher safe. The wash temperature of the selected program was too low. The detergent has a low bleaching effect. Natural dyes e.g. from vegetables may be the cause. Not enough detergent was used to break down natural dyes. The affected items are not corrosion resistant. There is no remedy. Only wash dishwasher safe glasses in the dishwasher. Select the "Economy" or "Sani Wash" program. Use a different detergent. Use more detergent, see "Adding detergent". Discoloration is permanent. Plastics are discolored. There are rust stains on cutlery. There is no remedy. Only wash dishwasher safe cutlery in the dishwasher. 37 After sales service Repairs In the event of a fault which you cannot correct yourself please contact the Miele Service Department at the phone number on the back of this booklet. ^ Please quote the model type and number of your appliance.

@@@@@@@@@@@@@@@@ Secure any loose parts, e.g. hoses, cables, cutlery baskets. Transport the dishwasher in the upright position. If unavoidable it may be transported on its back. Do not transport it on its side or on the door. @@every 4-6 months). @@They will damage the surface. ^ Only clean the control panel with a damp cloth. Cleaning the wash cabinet Generally, the wash cabinet is self cleaning if the correct amount of detergent is used. The wash cabinet can be cleaned with a dishwasher cleaner such as "Dis Cleaner" Cleaning the exterior ,Do not use thinner or ammonium cleaners. They will damage the surface. ^ Only use a conditioner suitable for your kitchen cabinetry. ^ Clean wood with a damp cloth and wipe dry. ^ Stainless steel surfaces can be cleaned using a non-abrasive stainless steel cleaner or with dishwashing detergent and warm water.

^ To help prevent resoiling, a conditioner for stainless steel can also be used. Apply sparingly with even pressure. Cleaning the door and the door seal ^ Wipe the door seals regularly with a damp cloth to remove food deposits. ^ Food residue and spilled liquids should be wiped from the sides of the dishwasher door.



[You're reading an excerpt. Click here to read official MIELE G 1180 SCVI user guide](http://yourpdfguides.com/dref/4310713)  
<http://yourpdfguides.com/dref/4310713>

*These are outside of the wash cabinet and are not cleaned by water from the spray arms.*

*42 Cleaning and Care Triple filter system The triple filter system in the base of the wash cabinet prevents food from being redeposited on dishes. It also protects the circulation pump from damage caused by foreign objects (e.g. broken glass, bones). ,The machine must not be used without all the filters in place!*

*^ Check and clean the filter system every 4-6 months or whenever a foreign object is trapped. The level of soiling and time it takes before the filters need cleaning will vary depending on your household. ^ Turn off the dishwasher before cleaning. ^ Turn the handle counterclockwise to release the triple filter system. ^ Lift the filter combination out of the machine. Remove any solid particles and rinse under running water.*

*Scrub with a nylon brush if necessary. 43 Cleaning and Care To clean the inside of the filter, the flap must be opened. ^ Push the clips together and open the flap b. ^ Rinse under running water. ^ Close the flap so that the clip engages. ^ Return the filter so it lies flat in the base of the wash cabinet. ^ Lock the filter by turning the handle clockwise. ,The triple filter system must be inserted and locked. Large particles could get in the circulation system and cause a blockage. 44 Cleaning and Care Cleaning the spray arms Sometimes particles of food get stuck in the spray arm jets.*

*The spray arms should be inspected and cleaned every 4 - 6 months. ^ Turn off the dishwasher before cleaning. Removing the spray arms ^ Remove the cutlery tray (if present). ^ Press the top spray arm up to engage the inner ratchet and unscrew the spray arm. ^ Pull the lower spray arm firmly upwards to remove. ^ Lift up the middle spray arm, a, to engage the ratchet and unscrew the spray arm, b. ^ Remove the lower basket. ^ Use a pointed object such as a toothpick to push food particles into the spray arm jets. ^ Rinse thoroughly under running water. ^ Return the spray arms and check that they rotate freely.*

*45 Cleaning and Care Cleaning the water inlet filter A filter is incorporated into the intake hose attached to the dishwasher's shut off valve. If your water is hard or the pipes contain sediment, this filter may clog and prevent enough water from entering the wash cabinet. ,The plastic housing of the water connection contains electrical wiring. Do not submerge the housing in liquid. Do not cut the intake hose or submerge it in liquid. Installing an in-line water filter If your water contains a large number of insoluble substances, a filter between the water valve and the intake hose connection is recommended. These filters can be purchased from Miele. Cleaning the filter ^ Turn off the dishwasher and pull the plug. ^ Turn off the water supply. ^ Unscrew the intake hose.*

*^ Carefully remove the rubber seal. ^ Remove the filter using needle nose pliers and rinse it under running water. ^ Reinsert the filter and seal. Make sure they are seated correctly. ^ Screw the intake hose back on the water valve, checking that it is not cross-threaded. ^ Slowly turn on the water supply and test for leaks. 46 Cleaning and Care Cleaning the drain pump and non-return valve If the dishwasher is not completely drained at the end of a program, the drain pump or non-return valve may be blocked. ^ Turn off the dishwasher and pull the plug. ^ Remove the triple filter (see "Triple filter system"). ^ Use a jug or bowl to scoop water out of the wash cabinet.*

*The drain pump is beneath the non-return valve (see arrow). ^ Remove all foreign objects from the drain pump (glass or bone splinters). ^ Before returning the non-return valve, check that the drain pump is not blocked. @@@@^ Pull out the non-return valve b and rinse it under running water. ^ Remove all foreign objects from the non-return valve.*

*@@These materials are biodegradable and recyclable. Please recycle. Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of children. @@Please contact your local recycling authority about the possibility of recycling these materials.*

*Ensure that the appliance presents no danger to children while being stored for disposal. Before discarding an old appliance, unplug it from the outlet, cut off its power cord and remove any doors to prevent hazards. 50 Electrical connection ,Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held responsible for unauthorized work. Check that the voltage, frequency and fuse rating shown on the data plate match the household mains supply. The power outlet must be accessible after installation. Do not use an extension cord to connect the dishwasher to the mains. Danger of overheating! See data plate on the right side of the door. @@GROUNDING INSTRUCTIONS THIS APPLIANCE MUST BE GROUNDED. @@@@Do not modify the plug provided with the appliance; if it will not fit the outlet, have a proper outlet installed by a qualified electrician.*

*If there is any question concerning the proper electrical connection or grounding of this appliance to the power supply, please consult a licensed electrician or call Miele's Technical Service Department: U 1-800-999-1360 V 1-800-565-6435 Specifications The dishwasher comes equipped with a 4 ft (1.2 m) power cord with a molded plug for connection to 120 V, 60 Hz, 15 A grounded receptacle. 51 Plumbing Connection to the water supply ,Do not drink water from the dishwasher! The dishwasher can heat its own water to the temperature required by the wash program. This allows for connection of the machine to either a hot or cold water source. For lowest energy consumption connect the dishwasher to a cold water source. For fastest possible wash times, with slightly higher energy consumption, connect the dishwasher to a hot water source. All programs use hot water in the rinse cycles. The inlet hose is approximately 5 ft. (1.5m) long.*

*A 5 ft. (1.5m) extension hose is available from the Technical Service Parts Department at the phone number listed on the back of this manual. The water inlet hose comes equipped with a 3/4" female hose thread connector. This can be directly connected to a water supply with 3/4" MHT (male hose thread ends). Water pressure: Must be between 4.5 - 145 psi (0.3 - 10 bar). ,Do not cut the intake hose. It contains electrical wiring.*

*If the hose is cut, the dishwasher will not work. There will be a waterleak and you could be injured. If the hose is too long, coil it neatly and place it behind the machine. 52 Plumbing Drainage The machine comes equipped with a built-in non-return valve on the discharge side to prevent waste water from flowing back into the dishwasher. The dishwasher is equipped with a 5 ft (1.5 m) flexible drain hose with an internal diameter of 7/8" (22 mm). Drain hose extensions and adapters can be ordered from Miele. The maximum drain hose length is 13 ft.*



**[You're reading an excerpt. Click here to read official MIELE G 1180 SCVI user guide](http://yourpdfguides.com/dref/4310713)**  
<http://yourpdfguides.com/dref/4310713>

(4 m), max. drain height: 39" (1 m).

*If the hose is to be directly fitted to the drainage outlet on site, use the supplied hose clip. The hose can be installed to the left or right side. The existing drain pipe for the drain hose is designed for various hose diameters. The drain pipe must be shortened if the drain pipe extends too far into the drain hose. The drain hose could get clogged. The drain hose must not be shortened. Make sure the hose is installed without kinking, pressure or being pulled. ^ Cut off the vent cap located at the right rear of the triple filter system, as illustrated. Venting the drainage system If the dishwasher drain hose is connected to a floor drain or to a drain pipe that is less than 8" (20 cm) above the floor, the drain must be vented. Otherwise the water inside the dishwasher may siphon out during the wash program.*

*^ Open the dishwasher door and remove the lower basket. ^ Pull the lower spray arm firmly upwards to remove. 53 54 55 Alterations reserved/4906 G 1180 / G 2170 / G 2180 / M.-Nr. 06 696 040 / 03 For the most updated manual see the Miele website.*



[You're reading an excerpt. Click here to read official MIELE G 1180](http://yourpdfguides.com/dref/4310713)

[SCVI user guide](http://yourpdfguides.com/dref/4310713)

<http://yourpdfguides.com/dref/4310713>