




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE G 1472 SCVI. You'll find the answers to all your questions on the MIELE G 1472 SCVI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE G 1472 SCVI  
User guide MIELE G 1472 SCVI  
Operating instructions MIELE G 1472 SCVI  
Instructions for use MIELE G 1472 SCVI  
Instruction manual MIELE G 1472 SCVI

**Miele**

## Operating Instructions

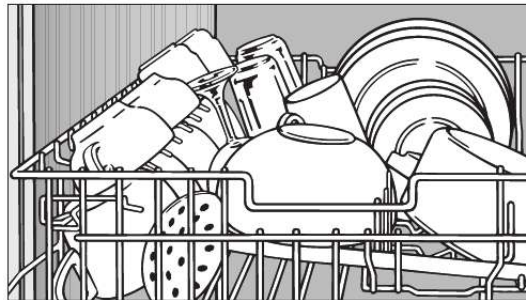

Dishwasher  
G 1472  
G 2472

To prevent accidents  
and appliance damage  
read these instructions  
**before**  
installation or use.

en - US, CA

M.-Nr. 07 724 160



[You're reading an excerpt. Click here to read official MIELE G 1472 SCVI user guide](#)

<http://yourpdfguides.com/dref/4310701>

**Manual abstract:**

.....  
.....  
.....  
.....

*.. 4 Guide to the dishwasher .....*

.....  
.....  
.....

.....  
.....

*. 7 Caring for the environment ....*

.....

.....  
.....  
.....

*..... 9 Before using for the first time. .*

.....  
.....  
.....  
.....

*..... 10 To open the door ...*

.....  
.....  
.....

.....  
.....  
.....

*..... 10 To close the door ...*

.....  
.....  
.....  
.....

.....  
.....

*.. 10 Water softener ...*

.....

.....  
.....  
.....  
.....

*..... 11 Programming the water softener .*

.....  
.....  
.....

.....  
.....

*.. 12 Filling the salt container ...*

.....

.....  
.....  
.....  
.....

.. 13 Salt indicator .....

.....  
.....  
.....

..... 13 Rinse aid .....

.....  
.....  
.....

. 14 Adding rinse aid .....

.....  
.....  
.....

. 14 Rinse aid indicator .....

.....  
.....  
.....  
.....

15 Adjusting the dosage .....

.....  
.....  
.....

.. 15 Loading the dishwasher ...

.....  
.....  
.....  
.....

16 Items not recommended for dishwashing .....

.....  
.....  
.....

. 17 Split cutlery tray .....

.....  
.....  
.....

. 18 Upper basket .....

.....  
.....

.....  
.....  
.....  
.....  
*.... 19 Adjusting the upper basket .*

.....  
.....  
.....  
.....  
.....  
.....  
*..... 21 Lower basket ....*

.....  
.....  
.....  
.....  
.....  
.....  
*.... 22 Basket accessories .*

.....  
.....  
.....  
.....  
.....  
.....  
*..... 25 Use ....*

.....  
.....  
.....  
.....  
.....  
.....  
*..... 26 Adding detergent....*

.....  
.....  
.....  
.....  
.....  
.....  
*..... 27 Turning on ....*

.....  
.....  
.....  
.....  
.....  
.....  
*. 28 Selecting and starting a program .....*

.....  
.....  
.....  
.....  
.....  
.....  
*..... 28 Program guide ..*

.....  
.....  
.....  
.....

.....  
.....  
..... 29 Use .  
.....

.....  
.....  
.....  
.....  
.....  
..... 30 Time display.  
.....

.....  
.....  
.....  
.....  
.....  
..... 30 At the end of a program. .  
.....  
.....

.....  
.....  
.....  
..... 30 Preparing your appliance for an extended vacaion . .  
.....

.....  
.....  
.....  
..... 31 Interrupting a program. ....

.....  
.....  
.....  
.....  
..... 31 Changing a program ...  
.....  
.....

.....  
.....  
..... 31 2 Contents Additional options .....  
.....

.....  
.....  
.....  
.....  
..... 32 Turbo ...  
.....  
.....

.....  
.....  
.....  
.....

. 32 Tab. . . . .

. . . . .  
.....

. . . . .  
.....

. . . . .  
.....

. . 32 Delay start . . . . .

. . . . .  
.....

. . . . .  
.....

. . . . .  
.....

. . . . . 33 Buzzer . . . . .

. . . . .  
.....

. . . . .  
.....

. . . . .  
.....

. . . . . 34 Default settings . . . . .

. . . . .  
.....

. . . . .  
.....

. . . . .  
.....

. . . . . 34 Frequently asked questions . . . . .

. . . . .  
.....

. . . . .  
.....

. . . . .  
.....

. . . . . 35 Technical faults . . . . .

. . . . .  
.....

. . . . .  
.....

. . . . .  
.....

. . . . . 35 Problems water intake/drain . . . . .

. . . . .  
.....

. . . . .  
.....

. . . . .  
.....

. . . . . 37 General problems with the dishwasher . . . . .

. . . . .  
.....

. . . . .  
.....

. 38 Sounds . . . . .

. . . . .  
.....

.....  
.....  
.....  
.....  
.....  
..... 39 Poor cleaning results .  
.....  
.....  
.....  
.....  
.....  
..... 40 Comparison Tests .....  
.....  
.....  
.....  
.....  
..... 43 After sales service .  
.....  
.....  
.....  
.....  
.....  
..... 45 Transport .....  
.....  
.....  
.....  
.....  
..... 46 User Maintenance Instructions. . .  
.....  
.....  
.....  
.....  
..... 47 Cleaning and Care .....  
.....  
.....  
.....  
..... 48 Triple filter system .....  
.....  
.....  
.....  
.....  
..... 50 Cleaning the spray arms . . .  
.....  
.....

.....  
.....  
.....  
..... 52 *Cleaning the water inlet filter* .....

.....  
.....  
.....  
.....  
..... 53 *Cleaning the drain pump and non-return valve* ...

.....  
.....  
.....  
..... 54 *Installation instructions* .....

.....  
.....  
..... 55 *Help to protect the environment.* ...  
.....

.....  
.....  
.....  
..... 56 *Electrical connection* .....

.....  
.....  
.....  
.....  
.....  
..... 57 *Plumbing* .....

.....  
.....  
.....  
.....  
.....  
..... 58 *Waterproof system* .....

.....  
.....  
.....  
..... 58 *Connection to the water supply* .....

.....  
.....  
.....  
.....  
.....  
..... 58 *Drainage* .....

.....  
.....



.....  
.....

*@@Use the dishwasher only for its intended purpose. This appliance is intended for residential use only. @@This data must correspond to prevent injury and machine damage. Consult a qualified electrician if in doubt. @@connect this appliance to electricity. Extension cords do not guarantee the required safety of the appliance (e.g. danger of overheating), properly installed and grounded by a qualified technician. To guarantee the electrical safety of this appliance continuity must exist between the appliance and an effective grounding system.*

*It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician. ~ Before installation or service, ~ Do not use an extension cord to ~ Be certain your appliance is 4 IMPORTANT SAFETY INSTRUCTIONS Installation and connected in compliance with the installation instructions. ~ The dishwasher must be installed ~ , WARNING - Fire hazard ~ Installation and repair work should be performed by a Miele authorized service technician. Work by unqualified persons could be dangerous and may void the warranty.*

*~ Do not install or use a damaged dishwasher. A damaged appliance is dangerous. @@~ Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! @@@@The outlet must be accessible at all times after installation to disconnect the dishwasher.*

*Do not cover or crush the plug of the appliance. Ensure that the cabinet opening for the dishwasher provides ample space for the plug. Installing the dishwasher in a tight space may crimp the power cord or put pressure on the plug which could cause overheating. installed under a continuous counter top secured to adjacent cabinetry. beneath a cooking surface, oven or any appliance that radiates heat. High temperatures from these units may damage the dishwasher. under a counter top and removing the toe-kick, a build-under toe-kick must be installed. Use the respective installation kit. Danger of injuries. submerge it in liquid.*

*This hose contains electrical components that could cause injury or property damage if cut or submerged. mains when all installation and plumbing work is complete. ~ This dishwasher should only be ~ Do not install this dishwasher ~ When installing the dishwasher ~ Do not cut the intake hose or ~ It is recommended that the ~ Only connect the dishwasher to the 5 IMPORTANT SAFETY INSTRUCTIONS Use allow children to play in, on or near the dishwasher. ~ To reduce the risk of injury, do not ~ Do not inhale or swallow detergents. ~ Only use the dishwasher if all panels are properly in place. ~ Do not tamper with the controls. ~ Do not damage, sit or stand on the ~ Under certain conditions, hydrogen Dishwasher detergents contain irritant and corrosive ingredients.*



[You're reading an excerpt. Click here to read official MIELE G 1472](http://yourpdfguides.com/dref/4310701)

[SCVI user guide](http://yourpdfguides.com/dref/4310701)

<http://yourpdfguides.com/dref/4310701>

They can cause burning in the mouth and throat if swallowed, or inhibit breathing. Consult a doctor immediately if detergent has been swallowed or inhaled.  
~ door or baskets of the dishwasher.

Close the door when not in use. Do not drink water from the dishwasher! Harmful residues could be present. salt container with detergent. It will destroy the rinse aid compartment and water softener. must only be replaced by a Miele Service technician with a genuine Miele power cord.

~ Do not fill the rinse aid reservoir or gas may be produced in a hot water system that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, turn on all hot water faucets and let water flow from each for several minutes before using the dishwasher. This will release any accumulated hydrogen gas. Do not smoke or use an open flame during this time.

~ If the power cord is damaged it Disposal of an appliance ~ If the appliance is removed from its ~ Be sure that all items placed in the dishwasher are "dishwasher safe". For items not labeled, check the manufacturer's recommendations. sharp items away from the door to prevent damage to the seal. Load sharp items pointing downwards to prevent injuries. installation site and will not be used, remove the doorlock to the wash cabinet to prevent children from locking themselves in the machine. ~ When loading tableware, place SAVE THESE INSTRUCTIONS ~ Only use detergents and rinse aids recommended for residential dishwashers. Keep all detergents and rinse aids out of the reach of children. 6 Guide to the dishwasher a Upper spray arm (not visible) 27 28 29 30 31 32 33 34 35 36 37 38-46 47-62 63-73 Setting in display 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 45 60 70 ^ Press the "Program" button to select the value which corresponds with the water hardness in your area. With each press of the key the value will raise. Once the highest value is reached the values will start again from the beginning.

^ Turn the dishwasher off with "o". 12 Before using for the first time Filling the salt container ,Inadvertently filling the salt container with dishwashing detergent will damage the water softener. ,Only use water softener water from the spray arms. ash, sand, wax, grease or paint in the dishwasher. Ash and sand do not dissolve and will be distributed throughout the inside of the dishwasher. Wax, grease and paint will cause permanent discoloration and damage to the dishwasher. ^ Scrape food from dishes before placing them in the dishwasher, rinsing is not necessary. ^ Some foods contain natural dyes, e.g. carrots or tomatoes.

Plastic items may discolor permanently if they come in contact with food dyes. ^ All items can be placed anywhere in the baskets. ^ Load dishes so that water can reach all surfaces. Do not place dishes or cutlery inside other pieces. ^ Make sure that all items are securely positioned.

^ Hollow items such as cups and glasses should be placed upside down in the baskets. ^ To ensure good water coverage, tall, narrow and hollow items, i.e. vases or champagne glasses, should be placed in the center of the basket rather than in the corners. ^ Concave based items such as mugs or bowls, should be placed at an angle so that water does not pool.

16 Loading the dishwasher Items not recommended for dishwashing Cutlery with wooden handles Wooden cutting boards Glued items such as old knives with handles glued together around the shank of the blade Handmade craft items, antique, metal trimmed or decorative glassware Plastic items that are not heat resistant Copper, brass, tin or aluminum Dishes with color painted over the glaze. These dishes may fade over time Fine glassware and crystal items should only be washed using the "China & Crystal" program\*. Otherwise clouding or etching may occur after frequent washing. Cast iron pots and pans Glassware: There are no standard guidelines for washing glassware, when in doubt wash by hand. When purchasing new dishes, glasses and cutlery, make sure they are dishwasher safe. Only wash items marked "dishwasher safe" in the dishwasher. If fine glassware is washed in the dishwasher select the "China & Crystal" program\*. This will reduce the risk of clouding. Silver and aluminum: Silver or aluminum items may tarnish. Silverware previously cleaned with a silver polish may be damp or spotted at the end of a program where water has adhered to the polish.

This can be rubbed off with a soft, dry cloth. Silver that has been cleaned in an immersion dip is usually dry at the end of a program, but may tarnish. If left to dry, foods containing sulfur can discolor silver. These include egg yolk, onions, mayonnaise, mustard, fish and marinades. Silverware may tarnish or pit if washed next to stainless steel. Leave space between these metals. Clean aluminum items, e.g. grease filters, with domestic dishwasher detergent only. \* depending on model If unsure whether your china and crystal are dishwasher safe, please check with the manufacturer.

The China & Crystal program, although extremely gentle and thorough can cause the china and crystal to "wear" if they are not dishwasher safe. 17 Loading the dishwasher Split cutlery tray ^ Arrange the cutlery as shown in the cutlery tray. Spoons with thick handles may have to be placed as knives and forks with their heads in the holders. For easier unloading cutlery should be grouped in zones, one for knives, one for forks, one for spoons, etc. Place knives with the cutting edge and forks with the prongs between the holders.

Spoons should be placed in the opposite direction with the handles between the holders. The upper spray arm must not be blocked by tall cutlery items. The inserts of the cutlery tray can be removed. Single inserts can be removed to make room for tall items in the upper basket. 18 Loading the dishwasher Upper basket the upper and lower basket inserted.

Coffee bar (depending on model) Glasses can be leaned against the coffee bar to allow a firm stand. ,Always use the dishwasher with ^ Load the upper basket with small, lightweight, or delicate items such as cups, saucers, glasses, dessert bowls and flat pans. ^ Long items such as soup ladles, mixing spoons and long knives should be placed lying down across the front of the upper basket. ^ The bar can also be used to separate two rows of glasses. ^ To stack wide items, flip the bar to the right. Cup racks ^ Raise the rack to make room for tall glasses. Lower it to double stack smaller pieces. 19 Loading the dishwasher Universal support bar The support bar will hold tall glasses and stemware securely.



[You're reading an excerpt. Click here to read official MIELE G 1472 SCVI user guide](http://yourpdfguides.com/dref/4310701)  
<http://yourpdfguides.com/dref/4310701>

Removable spike insert The spike insert can be removed to create more space for larger items, e.g.

a saucepan. ^ Fold the bar down and lean the desired glasses against it. ^ If desired, a section of the cutlery tray can be removed to allow for even taller glasses. Removing the insert a: ^ To remove an insert, gently pull up on the handle. Replacing the insert b: ^ Slide the hitches of the insert under the horizontal struts of the upper basket. ^ Push down on the handle to snap the insert into position. 20 Loading the dishwasher Adjusting the upper basket The upper basket can be raised or lowered to accommodate tall items. The basket can also be angled to fit tall items in both, the upper and lower baskets. The angles should not be set to opposite extremes. This will block the middle spray arm.

Take care when sliding the basket in and out in this position. ^ Slide out the upper basket. Depending on the setting of the upper basket, a variety of plate dimensions can be accommodated. For example: If the upper basket is in its highest position a plate with a diameter of 12 3/16" (31 cm) can be fit in the lower basket. ^ Pull up the levers at the sides of the upper basket and adjust the basket height.

^ Release the levers and the basket will lock in place. 21 Loading the dishwasher Lower basket Foldable spikes The foldable spikes can be used for small plates and saucers. ^ For larger and heavier items such as plates, serving platters, saucepans, bowls, etc. Small plates and saucers can also be arranged in the lower basket. Two rows of spikes can be folded down, to create more room for larger dishware, e.

g. pots, pans and bowls. ^ Press the yellow lever down a and fold down the spikes b. 22 Loading the dishwasher Removable spike insert The spike insert can be removed in order to make room for larger tableware or to use a different insert. Removable PlateGuard Plus with StemGuard (depending on model) This insert is ideal for cups, glasses, plates, bowls, pots and pans. Removing the insert a ^ To remove the insert, gently pull the handle upwards. Replacing the insert b ^ Slide the hitches of the insert under the struts of the lower basket. ^ Push down on the handle to snap the insert into position. ^ To arrange tall items the cup rack can be raised. ^ The stemguard can be used to hold the stems of glassware or coffee cup handles.

23 Loading the dishwasher Vase / Bottle insert (depending on model) The vase / bottle insert can be used to rinse narrow items, e.g. vases, baby bottles, etc.

Removing the insert a: ^ To remove the insert, gently pull the handle upwards. Inserting the insert b: ^ Place the insert into the lower basket. ^ Slide the hitches of the insert under the struts of the lower basket. ^ Push down on the handle to snap the insert into position. ^ Place the insert into the lower basket as shown in the illustration. If placed anywhere else, water will not reach all surfaces. The item will not be properly cleaned.

24 Basket accessories Additional inserts for the upper and lower baskets may be purchased from your Miele dealer or Miele. Depending on the model some accessories come standard with the machine. Glassware insert GGO To wash long stemmed glassware, attaches to the upper basket To wash the parts of the Cappuccinatore (milk froth mug supplied with the Miele Coffee System), attaches to the upper basket To wash the parts of the Cappuccinatore To wash baby bottles, saucers and small items, attaches to the upper basket To wash a large number of tall glasses, attaches to the lower basket To wash plates with a diameter up to 14" (35 cm), attaches to the lower basket Cappuccinatore insert GCEO Cappuccinatore insert GCEO Multi-function basket GMFO Tall glassware insert GGU Large diameter plate insert GTLU 35 25 Use Detergent You can use powder, gel or tab detergents. Follow the dosage information on the detergent packaging. Detergent tabs are not recommended for use with the program "Express".

The tabs may not dissolve completely. ,Dishwasher detergents contain irritant and corrosive ingredients. Avoid inhaling or swallowing dishwasher detergent. Keep children away from detergent. Fill the detergent dispenser only when you are ready to start the dishwasher.

,Only use detergents formulated for domestic dishwashers. Use only the recommended amount of detergent. Continued use of too much detergent may cause machine damage. Dishwasher cleaning products are available from Miele. When using the "China & Crystal" program (depending on model) reduce the amount of detergent used to at least 1/2 of the normal dosage. Also make certain your china and crystal are dishwasher safe. 26 Use Adding detergent ^ Use one tab or add powder or gel detergent to compartment II and close the flap. ^ If a Pre-rinse is desired, and available for your chosen program, add 1 teaspoon (5 ml) of detergent to compartment I. ^ To open, press the latch on the detergent dispenser. The flap will spring open.

The flap is always open at the end of a program. The horizontal marks in compartment II indicate the levels of approximately 1 1/4 and 2 tablespoons (20 and 30 ml) respectively. Compartment I holds a maximum of 2 teaspoons (10 ml). 27 Use Turning on ^ Open the water supply, if it is closed. ^ Open the door. ^ Make sure the spray arms can rotate freely. ^ Turn the dishwasher on "g". The "g" indicator and the indicator of the last set program lights up. Selecting and starting a program Choose your program according to the type of load and soiling. See the "Program Guide" for more information.

^ Select the desired program with the "Program" button. The program indicator of the selected program lights. The time display shows the duration of the selected program in hours and minutes.. If the "Turbo" or "Tab" option is selected, the respective indicator lights up ^ Select an additional function if desired, see "Additional functions" for more information.

^ Close the door. The program starts. The optical indicator lights as confirmation of a running program. Cancel a program only in the first few minutes. Otherwise important program steps (e.

g. @@@@After opening the door the time display shows "0". Dishes tends to chip if removed still hot from the dishwasher. Let the dishware cool. After turning off the dishwasher open the door slightly. The dishes will cool much faster. ^ Unload the dishwasher. @@@@Turn the dishwasher off "o". @@@@This means under the sink for a dishwasher, at the laundry bib for your washer, etc. Changing a program If the detergent flap is already open, do not change the program.

If a program has already started and you wish to change it: ^ Open the door. ^ Press the "o" button. ^ Press the "g" button. ^ Select the desired program with the program button. ^ Close the door. The optical control lights. @@@@The water in the dishwasher is hot.



[You're reading an excerpt. Click here to read official MIELE G 1472](http://yourpdfguides.com/dref/4310701)

[SCVI user guide](http://yourpdfguides.com/dref/4310701)

<http://yourpdfguides.com/dref/4310701>

Danger of scalding. Before closing the door again, leave it ajar for approx. 20 secs.

This will enable the temperature in the wash cabinet to settle. @^ Open the door. ^ Turn the dishwasher on "U". The U indicator lights up.

@@^ The program sequence is adapted to the selected detergent type.

@@@^ The rinse aid dispenser and indicator light are deactivated. Follow the instructions of the detergent manufacturer. @^ The start time can be delayed from 30 minutes to 24 hours. @ For 10 hours or more it is set in one hour increments. @ Wipe dry with a cloth if necessary.

@^ Open the door. ^ Turn the dishwasher on "g". The indicator "g" lights. ^ Select the desired program with the "Program" button. ^ Press the "d" button. The last set delay start time will show in the time display. The indicator "d" lights. ^ Set the desired delay start time with the "d" button. @ To start again at 30 minutes, press the "d" button twice. @ Once the delay start time has elapsed, the selected program starts.

@ Delay start display Up to 59 minutes: e.g. 30 minutes = 30 Between 1 h and 9 h 30 min: e.g. 5 hours = 5.00 10 hours and over: e.g. @^ Open the door. ^ Press the "o" button. ^ Press the "g" button.

^ Select the desired program with the "Program" button. ^ Close the door. The optical control lights. @ The buzzer at the end of a program sounds five times in quick succession for up to one hour. The buzzer for a fault sounds in intervals up to two minutes.

The buzzer is activated by default. It can be turned off, so it does not sound at the end of a program. The buzzer for a fault cannot be turned off. ^ Open the door. ^ Turn the dishwasher off with "o".

^ Press the "Program" button and at the same time turn the dishwasher on with "g". ^ Hold the program button until the lower right program indicator comes on. If it does not come on, start over. ^ Press the "Options" button four times. The "Tab" indicator flashes four times in intervals. The time display shows if the program end buzzer is turned on or off. "p 1": Buzzer is turned on "p 0": Buzzer is turned off ^ Press the "Program" button to change the setting. The setting is saved. ^ Turn the dishwasher off with "o". Default settings All settings can be reset to the factory default.

^ Open the door. ^ Turn the dishwasher off "o". ^ Press and hold the "Program" button and at the same time turn the dishwasher on "g". Hold the "Program" button until the lower right program indicator comes on. If it does not come on, start over. ^ Press the "Options" button 12 times. The "Tab" indicator flashes once long and twice short in intervals. The time display shows if a setting was changed. "p 1": All settings are factory default. "p 0": At least one setting was changed.

^ To reset the dishwasher to the factory default, press the "Program" button. The setting is saved. ^ Turn the dishwasher off "o". 34 Frequently asked questions With the aid of the following guide, minor problems can be fixed without a service call. Repairs should only be carried out by a qualified and trained person in accordance with local and national safety regulations.

Unauthorized repairs could cause personal injury or machine damage. Technical faults Problem The program does not start. Possible fault The door is not properly closed. The machine is not plugged in. Solution Close the door firmly.

Insert the plug. The fuse is defective Reset the circuit breaker. or the breaker has See data plate for minimum tripped. amperage. The dishwasher is not turned on. The dishwasher stops during a program. The fuse has tripped. Turn the dishwasher on "g" and select a program. Reset the circuit breaker. See data plate for minimum amperage.

Install the reflector properly, see the separate "Installation sheet". The optical indicator is not The reflector was visible when a program not properly has started. installed. 35 Frequently asked questions Problem Possible fault Solution Turn the dishwasher off "o". After a few seconds: Turn the dishwasher on. Select the desired program with the program button. Close the door. If the problem persists contact Technical Service. Turn off the water supply. Contact Miele Technical Service.

The optical indicator There may be a flashes. technical fault. The buzzer sounds. All program indicators are flashing fast when the door is open. The time display shows FXX.

The drain pump is running when the door is opened. Fault F70: The waterproof system has activated. 36 Frequently asked questions Problems water intake/drain Problem Possible fault Solution The optical indicator The water supply Open the water supply. flashes. is shut off.

The buzzer sounds. The "Intake / Drain" indicator flashes when the door is open. Before fixing the fault: The dishwasher stops. The optical indicator Turn the dishwasher off "o". flashes. Fault F12/F13: Open the water supply. The buzzer sounds. Water intake fault Clean the water intake filter, The "Intake / Drain" see "User Maintenance indicator flashes when the Instructions". door is open. The water pressure at the The time display shows water connection is lower FXX.

than 4.35 psi. Consult a plumber. Fault F11: Water See "User Maintenance Instructions". drain fault. There may be Clean the triple filter. water in the wash - Clean the drain pump and the cabinet. non-return valve. Remove any kinks in the drain hose. 37 Frequently asked questions General problems with the dishwasher Problem Possible fault The display turns off.

The dishwasher has gone into "Standby" mode to save energy. Detergent is left in the The dispenser was damp dispenser at the end when detergent was of a program. added. Detergent residue is The detergent lid blocking the catch. cannot be closed properly.

This is not a fault! It is the The door and the interior walls are still normal operating mode of wet after a program the drying system. has finished. Water remains in the wash cabinet at the end of a program. Solution Press any button. The display turns on again.

Dry the dispenser before adding detergent. @ The triple filter in the wash Clean the triple filter. See cabinet is clogged. "User Maintenance Instructions". The drain pump or the non-return valve may be blocked. The drain hose is kinked. @ @ @ There is a rattling noise in the wash cabinet. There is a knocking noise in the water pipes. @ rearrange items blocking the spray arms. Items are not secure in the Interrupt the program and wash cabinet.

rearrange loose pieces. @ If in doubt contact a plumber. @ Solution See "Loading the dishwasher". Select a more intensive program, see "Program Guide".



[You're reading an excerpt. Click here to read official MIELE G 1472](http://yourpdfguides.com/dref/4310701)

[SCVI user guide](http://yourpdfguides.com/dref/4310701)

<http://yourpdfguides.com/dref/4310701>

Not enough detergent was Use more detergent, see dispensed. "Adding detergent". The spray arms are blocked Turn the spray arm and by items. rearrange the dishes if necessary. @@@@clogged. @@@@into the wash cabinet.

Reduce the dosage, see "Before using for the first time". Possible fault The dishes were not loaded correctly. @@There too high. is a bluish sheen on the surface of glasses and film that can be wiped off. 40 Frequently asked questions Issue Possible fault Solution Dishes are not dry, The rinse aid setting may be

Increase the dosage, refill glasses and cutlery too low, or the rinse aid the reservoir or switch the are spotted.

reservoir is empty. rinse aid product when refilling, see "Before using for the first time". Leave dishes in longer, see Dishes were taken out too soon. "Use".

Set the Detergent setting for A "Tab" product was used.

These products have a low a normal detergent and add drying effect. rinse aid. The "Tab" setting is turned on, but a normal product was used. Not enough rinse aid was used. Set the Detergent setting to the detergent used, see "Additional options - Tab". Increase the dosage, see "Before using for the first time".

Refill the salt container, see "Before using for the first time". Reseat it making sure it screws back on correctly. Change detergent, use normal detergent.

Contact Miele's Technical Service.

White residue is visible on cutlery and dishes. Clouding occurs on The salt container is empty. glassware and film can be wiped off. The salt container lid was not correctly screwed on. Unsuitable "Tab" products were used. The automatic water softener unit is defective. 41 Frequently asked questions Issue Possible fault Solution Use a different detergent. Glasses are Detergent deposits. discolored and the film cannot be wiped off. Clouding or etching Possible causes may be : on glasses.

excessive rinse aid, incorrect water hardness level set, type and amount of detergent., Any one or a combination of these faults may be to blame. Glasses are dull and discolored, film cannot be wiped off. Tea or lipstick stains have not been completely removed. See the relevant section of this manual to: adjust the rinse aid dosage, adjust the water hardness level, change the type and/or adjust the amount of detergent used, connect the dishwasher to a cold water supply.

Glasses are not dishwasher There is no remedy. Only safe. wash dishwasher safe glasses in the dishwasher. The wash temperature of Select a program with a the selected program was higher temperature. too low.

The detergent has a low Use a different detergent. bleaching effect. Use more detergent, see "Adding detergent". Discoloration is permanent. Natural dyes e.g. from vegetables may be the cause. Not enough detergent was used to break down natural dyes. There are rust stains The affected items are not on cutlery. corrosion resistant.

Plastics are discolored. No program was run after refilling salt. Salt residuals got in the wash cycle. The salt container lid was not screwed on properly. There is no remedy. Only wash dishwasher safe cutlery in the dishwasher. Start the "Express" program without a load after refilling salt. Reseat and screw the lid on firmly. 42 Comparison Tests 10 place settings, Standard program: Normal Upper basket Lower basket Cutlery tray 43 Comparison Tests 16 place settings, Standard program: Normal Upper basket Lower basket Cutlery tray 44 After sales service Repairs In the event of a fault which you cannot correct yourself please contact the Miele Service Department at the phone number on the back of this booklet. ^ Please quote the model type and number of your appliance.

These can be found on the data plate along the right edge of the door. MieleCare (USA only) MieleCare, our Extended Service Contract program, gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership. MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance. Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele.

Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home. To learn more about MieleCare Extended Service Contracts, please contact your appliance dealer or visit us online at: <http://mieleusa.com/mielecare> PC Update The Program Correction (PC) allows a technician to update the dishwasher to make use of new technology. When, for example, technological developments offer advanced modifications to your existing program cycles a service technician will be able to input these into your machine controls via the indicator light marked PC. Miele will provide information when such possibilities become available.

45 Transport To transport the dishwasher, e.g. when moving to a new home, note the following: Empty the dishwasher. Secure any loose parts, e.g. hoses, cables, cutlery baskets. Transport the dishwasher in the upright position. If unavoidable it may be transported on its back. Do not transport it on its side or on the door. Residual water in the machine could leak and cause electrical damage.

46 User Maintenance Instructions To prevent accidents and appliance damage, read these instructions before installation or use. Cleaning and Care Exterior Check and clean your dishwasher regularly. This will help avoid faults and problems. ^ Use a conditioner suitable for your kitchen cabinetry. ^ Clean wood with a damp cloth and wipe dry. Clean the exterior with a solution of warm water and liquid soap applied with a soft sponge. Dry with a soft cloth. ,Abrasive cleaning agents, all-purpose cleaners, thinner or ammonium cleaners should not be used on the dishwasher. They will damage the surface. Wash cabinet

Generally, the wash cabinet is self cleaning if the correct amount of detergent is used.

The wash cabinet can be cleaned with a dishwasher cleaner such as "Dis Cleaner" available from your Miele dealer, Miele or online at [www.miele.com](http://www.miele.com).

Glass cleaners may be used to clean the exterior. However do not allow them to sit or "puddle", this can cause damage to the surface.

Remove the cleaner promptly. To better maintain your appliance avoid the following: cleaners containing soda, ammonia, thinners, or chlorides cleaners containing descaling agents or lime removers, abrasive cleaners, stainless steel cleaners, dishwasher soap (powder), caustic (oven) cleaners, scouring pads, steel wool, hard brushes, metal scrapers.



[You're reading an excerpt. Click here to read official MIELE G 1472](#)

[SCVI user guide](#)

<http://yourpdfguides.com/dref/4310701>

Door and the door seal ^ Wipe the door seals regularly with a damp cloth to remove food deposits. ^ Food residue and spilled liquids should be wiped from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms.

48 Cleaning and Care Indicator reflector The reflector of the optical interface is located in the steam deflector beneath the counter top. ^ Clean as necessary with a damp cloth. Control panel ^ Clean the control panel as necessary with a damp cloth. ,The appliance front and controls are not scratch proof. Remove spills immediately. 49 Cleaning and Care Triple filter system The triple filter system in the base of the wash cabinet prevents food from being redeposited on dishes. It also protects the circulation pump from damage caused by foreign objects (e.g. broken glass, bones). During normal use, the filter system is self-cleaning.

,The machine must not be used without all the filters in place! ^ Check and clean the filter system periodically for any trapped or foreign objects. The level of soiling and time it takes before the filters need cleaning will vary depending on your household usage. ^ Turn off the dishwasher before cleaning. ^ Turn the handle counterclockwise to release the triple filter system a. ^ Lift the filter combination out of the machine b. Remove any solid particles and rinse under running water. Scrub with a nylon brush if necessary. 50 Cleaning and Care To clean the inside of the filter, the flap must be opened. ^ Push the clips together a and open the flap b. ^ Rinse under running water.

^ Close the flap so that the clip engages. ^ Return the filter so it lies flat in the base of the wash cabinet. ^ Lock the filter by turning the handle clockwise. ,The triple filter system must be inserted and locked into place. Large particles could get in the circulation system and cause a blockage.

51 Cleaning and Care Cleaning the spray arms Sometimes particles of food get stuck in the spray arm jets. The spray arms should be inspected and cleaned every 4 - 6 months. ^ Turn off the dishwasher before cleaning. Removing the spray arms ^ Remove the cutlery tray (if present). ^ Push the upper spray arm up to engage the inner ratchet and unscrew the spray arm.

^ Pull the lower spray arm firmly upwards to remove. ^ Lift up the middle spray arm, a, to engage the ratchet and unscrew the spray arm, b. ^ Remove the lower basket. ^ Use a pointed object such as a toothpick to push food particles into the spray arm jets. ^ Rinse thoroughly under running water. ^ Return the spray arms and check that they rotate freely. 52 Cleaning and Care Cleaning the water inlet filter A filter is incorporated into the intake hose attached to the dishwasher's shut off valve. If your water is hard or the pipes contain sediment, this filter may clog and prevent enough water from entering the wash cabinet. ,The plastic housing of the water connection contains electrical wiring. Do not cut the intake hose or submerge it in liquid.

Installing an in-line water filter If your water contains a large number of insoluble substances, a filter between the water valve and the intake hose connection is recommended. These filters can be purchased from Miele. Cleaning the filter ^ Turn off the dishwasher and pull the plug. ^ Turn off the water supply. ^ Unscrew the intake hose. ^ Carefully remove the rubber seal. ^ Remove the filter using needle nose pliers and rinse it under running water. ^ Reinsert the filter and seal. Make sure they are seated correctly. ^ Screw the intake hose back on the water valve, checking that it is not cross-threaded.

^ Slowly turn on the water supply and test for leaks. 53 Cleaning and Care Cleaning the drain pump and non-return valve If the dishwasher is not completely drained at the end of a program, the drain pump or non-return valve may be blocked. ^ Turn off the dishwasher and pull the plug. ^ Remove the triple filter (see "Triple filter system"). ^ Use a cup or bowl to scoop water out of the wash cabinet.

The drain pump is beneath the non-return valve (see arrow). ^ Remove all foreign objects from the drain pump (glass or bone splinters). ^ Before returning the non-return valve, check that the drain pump is not blocked. Spin the propeller several times in both directions to check for obstructions. @@ ^ Tilt the locking clamp to the side a.

^ Pull out the non-return valve b and rinse it under running water. @@@@ These materials are biodegradable and recyclable. Please recycle. Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! Disposal of an old machine Old appliances may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials. Ensure that the appliance presents no danger to children while being stored for disposal. Before discarding an old appliance, unplug it from the outlet, cut off its power cord and remove any doors to prevent hazards. 56 Electrical connection ,Installation, repairs and other work by unqualified persons could be dangerous.

Check that the voltage, frequency and fuse rating shown on the data plate match the household mains supply. The power outlet must be accessible after installation. Do not use an extension cord to connect the dishwasher to the mains. Danger of overheating! See data plate on the right side of the door.

@@GROUNDING INSTRUCTIONS THIS APPLIANCE MUST BE GROUNDED. @@@@ Do not modify the plug provided with the appliance; if it will not fit the outlet, have a proper outlet installed by a qualified electrician. If there is any question concerning the proper electrical connection or grounding of this appliance to the power supply, please consult a licensed electrician or call Miele's Technical Service Department: U 1-800-999-1360 V 1-800-565-6435 Specifications The dishwasher comes equipped with a 4 ft (1.2 m) power cord with a molded plug for connection to 120 V, 60 Hz, 15 A grounded receptacle.

57 Plumbing Waterproof system All Miele dishwashers have a safety valve located on the incoming water line and a sealed underside with a water sensor. If a fault occurs, the water intake is stopped and the drain pump is activated.

Water damage, if any, is minimized. Providing the dishwasher was installed correctly by a Miele technician, the waterproof system will protect you from water damage throughout the lifetime of the machine. The water inlet hose comes equipped with a 3/4" female hose thread connector. This can be directly connected to a water supply with 3/4" MHT (male hose thread ends). Water pressure: Must be between 4.

5 - 145 psi (0.3 - 10 bar). ,To prevent damage to the dishwasher, it must only be connected to a fully vented drainage system. Connection to the water supply ,Do not drink water from the dishwasher! The dishwasher can heat its own water to the temperature required by the wash program.



[You're reading an excerpt. Click here to read official MIELE G 1472](http://yourpdfguides.com/dref/4310701)

[SCVI user guide](http://yourpdfguides.com/dref/4310701)

<http://yourpdfguides.com/dref/4310701>

*This allows for connection of the machine to either a hot or cold water source.*

*For lowest energy consumption connect the dishwasher to a cold water source. For fastest possible wash times, with slightly higher energy consumption, connect the dishwasher to a hot water source. All programs use hot water in the rinse cycles. The inlet hose is approximately 5 ft. (1.5m) long. A 5 ft. (1.5m) drain extension is available from Miele. Do not cut the intake hose.*

*It contains electrical wiring. If the hose is cut, the dishwasher will not work. There will be a water leak and you could be injured. If the hose is too long, coil it neatly and place it behind the machine. 58 Plumbing Drainage The machine comes equipped with a built-in non-return valve on the discharge side to prevent waste water from flowing back into the dishwasher. The dishwasher is equipped with a 5 ft (1.5 m) flexible drain hose with an internal diameter of 7/8" (22 mm). Drain hose extensions and adapters can be ordered from Miele. The maximum drain hose length is 13 ft. (4 m), max.*

*drain height: 39" (1 m). If the hose is to be directly fitted to the drainage outlet on site, use the supplied hose clip (see assembly plan). The hose can be installed to the left or right side. The existing drain pipe for the drain hose is designed for various hose diameters. The drain pipe must be shortened if the drain pipe extends too far into the drain hose.*

*The drain hose could get clogged. The drain hose must not be shortened. Venting the drainage system If the dishwasher drain hose is connected to a floor drain or to a drain pipe that is less than 8" (20 cm) above the floor, the drain must be vented. Otherwise the water inside the dishwasher may siphon out during the wash program. ^ Open the dishwasher door and remove the lower basket.*

*^ Pull the lower spray arm firmly upwards to remove. ^ Cut off the vent cap located at the right rear of the triple filter system, as illustrated. Make sure the hose is installed without kinking, pressure or being pulled. 59 Alteration rights reserved / 1810 G1472/G2472 M.-Nr. 07 724 160 / 01 INFORMATION IS SUBJECT TO CHANGE. PLEASE REFER TO OUR WEBSITE TO OBTAIN THE MOST CURRENT PRODUCT SPECIFICATIONS, TECHNICAL & WARRANTY INFORMATION. .*



[You're reading an excerpt. Click here to read official MIELE G 1472](#)

[SCVI user guide](#)

<http://yourpdfguides.com/dref/4310701>