




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE G 2430 SCI. You'll find the answers to all your questions on the MIELE G 2430 SCI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE G 2430 SCI
User guide MIELE G 2430 SCI
Operating instructions MIELE G 2430 SCI
Instructions for use MIELE G 2430 SCI
Instruction manual MIELE G 2430 SCI

Miele

Operating Instructions

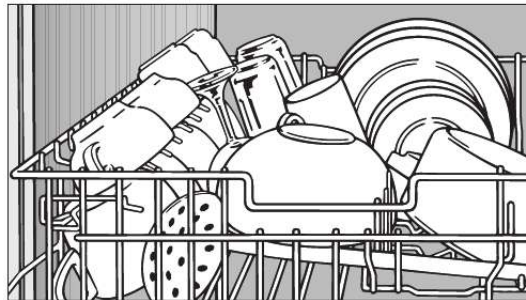

Optima Series
G 2420
G 2430

To prevent accidents
and machine damage
read these instructions
before
installation or use.

HG03

(USA) (CDN)

M.-Nr. 06 696 050



[You're reading an excerpt. Click here to read official MIELE G 2430 SCI user guide](http://yourpdfguides.com/dref/4310907)

<http://yourpdfguides.com/dref/4310907>

Manual abstract:

.....
.....
.....
.....

.. 4 Guide to the dishwasher

.....
.....
.....

.....

.....

. 7 Control panel

.....

.....

.....

.....

.....

.....

8 Caring for the environment

.....

.....

.....

.....

.....

.. 9 Before using for the first time

.....

.....

.....

.....

. 10 To open the door

.....

.....

.....

.....

.....

.....

. 10 To close the door

.....

.....

.....

.....

.....

. 10 Child Safety Lock

.....

.....

.....

.....

.....

.....

. 10 Water softener

.....

.....

.....

. 16 Items not recommended for dishwashing

.....

.....

.. 17 Cutlery tray . . .

.....

.....

.....

.....

.....

.....

.. 18 Cutlery basket . . .

.....

.....

.....

.....

.....

.....

.... 19 Upper basket

.....

.....

.....

.....

.....

.....

..... 20 Adjusting the upper basket . . .

.....

.....

.....

.....

..... 22 Lower basket .

.....

.....

.....

.....

.....

.....

.....

.. 23 Lower basket inserts

.....

.....

.....

.....

.....

... 24 Basket accessories . .

.....

.....

.....

.....

..... 26 Use

.....

.....

.....

.....
.....
.....
.....

..... 27 Adding detergent

.....
.....
.....

.....
.....
.....

..... 28 Turning on

.....
.....
.....
.....

.....
.....
.....

29 Selecting a program

.....
.....
.....
.....

..... 29 Starting a program ...

.....
.....
.....

.....
.....
.....

..... 29 Program guide

.....
.....
.....
.....

.....
.....
.....

.. 30 2 Contents Use ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 31 Time display ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 31 Glasscare indicator

.....
.....

.....
.....
.....

..... 31 Program sequence indicator .

.....
.....
.....
.....

31 At the end of a program.

.....
.....

.....
.....
.....

..... 31 Interrupting a program.

.....
.....
.....
.....

. 32 Changing a program

.....
.....

.....
.....
.....

..... 32 Additional functions . .

.....
.....
.....
.....

..... 33 Detergent settings .

.....
.....

.....
.....
.....
.....

... 33 Delay start

.....
.....
.....

.....
.....
.....

..... 34 Default setting . .

.....
.....
.....

.....
.....
.....
.....
35 Frequently asked questions

.....
.....
.....
.....
36 Technical faults

.....
.....
.....
.....
36 Problems water intake/drain

.....
.....
.....
.....
37 General problems with the dishwasher

.....
.....
.....
.....
38 Sounds

.....
.....
.....
.....
39 Poor cleaning results

.....
.....
.....
.....
40 After sales service

.....
.....
.....
.....
43 Transport ..

... 44 User Maintenance Instructions

.....
.....
.....

. 45 Cleaning and Care

.....
.....
.....

..... 46 Triple filter system .

.....
.....
.....

... 47 Cleaning the spray arms . .

.....
.....
.....
.....

.. 49 Cleaning the water inlet filter

.....
.....
.....

... 50 Cleaning the drain pump and non-return valve . .

.....
.....
.....

51 Installation instructions

.....
.....
.....

... 53 Help to protect the environment

.....
.....
.....
.....

54 Electrical connection

.....
.....
.....

. 55 Plumbing

.....
.....
.....

Do not tamper with the controls. Do not damage, sit or stand on the door or baskets of the dishwasher. Close the door when not in use. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, turn on all hot water faucets and let water flow from each for several minutes before using the dishwasher. This will release any accumulated hydrogen gas. Do not smoke or use an open flame during this time.

Be sure that all items placed in the dishwasher are "dishwasher safe". For items not labeled, check the manufacturer's recommendations. When loading tableware, place sharp items away from the door to prevent damage to the seal. Load sharp items pointing downwards to prevent injuries. Only use detergents and rinse aids recommended for residential dishwashers. Keep all detergents and rinse aids out of the reach of children. Do not inhale or swallow detergents. Dishwasher detergents contain irritant and corrosive ingredients. They can cause burning in the mouth and throat if swallowed, or inhibit breathing. Consult a doctor immediately if detergent has been swallowed or inhaled.

Do not drink water from the dishwasher! Harmful residues could be present. Do not fill the rinse aid reservoir or salt container with detergent. It will destroy the rinse aid compartment and water softener. If the power cord is damaged it must only be replaced by a Miele Service technician before using for the first time. Filling the salt container, Inadvertently filling the salt container with dishwashing detergent will damage the water softener. Only use water softener salt specially formulated for dishwashers.

Other salts may contain insoluble additives which can impair the water softener. ^ Remove the lower basket and unscrew the salt container lid. When opening the salt container, water will run out. Open the reservoir only to refill salt. ^ Place the provided funnel over the salt container.

Carefully fill with salt. The salt container holds approx. 4.5 lbs (2 kg) of salt. As it is filled, water will run out. ^ Clean any excess salt from the threads of the reservoir opening. Screw the lid on firmly. ^ If the dishwasher will not be used immediately, run it water does not pool. ^ The spray arms must not be blocked by items that are too tall or hang through the baskets. Check clearance by manually rotating the spray arms.

^ Place very small items in the cutlery tray or basket so they do not fall to the bottom of the wash cabinet. ^ Food residue and spilled liquids should be cleaned from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms. 16 Loading the dishwasher Items not recommended for dishwashing Cutlery with wooden handles Wooden cutting boards Glued items such as old knives with handles glued together around the shank of the blade Handmade craft items, antique, metal trimmed or decorative glassware Plastic items that are not heat resistant Copper, brass, tin or aluminum Dishes with color painted over the glaze. These dishes may fade over time Fine glassware and crystal items should only be washed using the "China & Crystal" program*. Otherwise clouding or etching may occur after frequent washing. Cast iron pots and pans Glassware: There are no standard guidelines for washing glassware, when in doubt wash by hand. When purchasing new dishes, glasses and cutlery, make sure they are dishwasher safe. Only wash items marked "dishwasher safe" in the dishwasher. If fine glassware is washed in the dishwasher select the "China & Crystal" program*. This will reduce the risk of clouding. Silver and aluminum: Silver or aluminum items may tarnish. Silverware previously cleaned with a silver polish may be damp or spotted at the end of a program where water has adhered to the polish. This can be rubbed off with a soft, dry cloth. Silver that has been cleaned in an immersion dip is usually dry at the end of a program, but may tarnish.

If left to dry, foods containing sulfur can discolor silver. These include egg yolk, onions, mayonnaise, mustard, fish and marinades. Silverware may tarnish or pit if washed next to stainless steel. Leave space between these metals. Clean aluminum items, e.

g. grease filters, with domestic dishwasher detergent only. * depending on model 17 Loading the dishwasher Cutlery tray (depending on model) Spoons with thick handles may have to be placed as knives and forks with their heads in the holders ^ Arrange the cutlery as shown in the cutlery tray. For easier unloading cutlery should be grouped in zones, one for knives, one for forks, one for spoons, etc. Place knives with the cutting edge down and forks with the prongs between the holders. Spoons should be placed in the opposite direction with the handles between the holders. The upper spray arm must not be blocked by tall cutlery items. The cutlery tray insert is removable. 18 Loading the dishwasher Cutlery basket (depending on model) Spoon inserts for the cutlery basket ^ For best cleaning results, cutlery should be placed in the basket with the handles down. Knives and forks should be loaded with the pointed end down to prevent injuries.

^ Place small spoons in the individual slots to either side of the cutlery basket. The supplied insert is designed to wash heavily soiled spoons. The individual slots allow the water to better reach the surface of each spoon. ^ Attach the insert when needed to the cutlery basket. ^ Insert the cutlery with the handles down into the insert. Arrange the cutlery evenly. 19 Loading the dishwasher Upper basket Coffee bar (depending on model) Glasses can be leaned against the coffee bar to allow a firm stand. Always use the dishwasher with the upper and lower basket inserted. ^ Load the upper basket with small, lightweight, or delicate items such as cups, saucers, glasses, dessert bowls and flat pans. ^ Long items such as soup ladles, mixing spoons and long knives should be placed lying down across the front of the upper basket.

^ The bar can also be used to separate two rows of glasses. ^ To stack wide items, flip the bar to the right. Cup racks ^ Raise the rack to make room for tall glasses. Lower it to double stack smaller pieces. 20 Loading the dishwasher Removable spike insert The spike insert can be removed to create more space for larger items, e.

g. a saucepan. Removing the insert a: ^ To remove an insert, gently pull up on the handle. Inserting the insert b: ^ Slide the hitches of the insert under the horizontal struts of the upper basket. ^ Push down on the handle to snap the insert into position.

21 Loading the dishwasher Adjusting the upper basket The upper basket can be raised or lowered to accommodate tall items. The basket can also be angled to fit tall items in both, the upper and lower baskets.



[You're reading an excerpt. Click here to read official MIELE G 2430](http://yourpdfguides.com/dref/4310907)

[SCI user guide](http://yourpdfguides.com/dref/4310907)

<http://yourpdfguides.com/dref/4310907>

The angles should not be set to opposite extremes. This will block the middle spray arm. Take care when sliding the basket in and out in this position. ^ Slide out the upper basket. Depending on the setting of the upper basket, a variety of plate dimensions can be accommodated. For example: If the upper basket is in its highest position a plate with a diameter of 12 3/16" (31 cm) can be fit in the lower basket. ^ Pull up the levers at the sides of the upper basket and adjust the basket height. ^ Release the levers and the basket will lock in place.

22 Loading the dishwasher Lower basket ^ For larger and heavier items such as plates, serving platters, saucepans, bowls, etc. 23 Lower basket inserts PlateGuard Plus with StemGuard The comfort insert is designed for cups, glasses, plates, bowls and pots. ^ The insert sits comfortably in the left side of the lower basket. Bottle holder The bottle holder, e.g. for vases and baby bottles, can be inserted into the lower basket. If placed anywhere else, water will not reach all surfaces. The bottle will not be properly cleaned. ^ To insert tall items, raise the cup rest. ^ Lean or hang stemmed glassware such as wine or champagne glasses in the cut outs of the cup rest.

24 Lower basket inserts Foldable Spike insert A highly flexible design holds tableware securely. Removing an insert a: ^ To remove an insert, gently pull up on the handle. ^ Hook the foldable spike insert into the back right corner of the lower basket. Two rows of spikes can be folded down, to create more room for larger dishware, e.g.

pots, pans and bowls. Inserting an insert b: ^ Slide the hitches of the insert under the vertical struts of the lower basket. ^ Push down on the handle to snap the insert into position. ^ Press down the yellow lever, a, to fold down the spikes, b. 25 Basket accessories Additional inserts for the upper and lower baskets may be purchased from your Miele dealer or Miele.

Depending on the model some accessories come standard with the machine. Glassware insert GGO To wash long stemmed glassware, attaches to the upper basket To wash the parts of the Cappuccinatore (milk froth mug supplied with the Miele Coffee System), attaches to the upper basket To wash baby bottles, saucers and small items, attaches to the upper basket To wash a large number of tall glasses, attaches to the lower basket To wash plates with a diameter up to 14" (35 cm), attaches to the lower basket Cappuccinatore insert GCEO Multi-function basket GMFO Tall glassware insert GGU Large diameter plate insert GTLU 35 26 Use Detergent You can use powder, gel or tab detergents. Follow the dosage information on the detergent packaging. See "Settings - Detergent" for more information on detergent usage. Detergent tabs are not recommended for use with the program "Short". The tabs may not dissolve completely. ,Dishwasher detergents contain irritant and corrosive ingredients. Avoid inhaling or swallowing dishwasher detergent. Keep children away from detergent. Fill the detergent dispenser only when you are ready to start the dishwasher.

,Only use detergents formulated for domestic dishwashers. Use only the recommended amount of detergent. Continued use of too much detergent may cause machine damage. 27 Use Adding detergent ^ To open, press the latch on the detergent dispenser. The flap will spring open. The flap is always open at the end of a program. ^ Add detergent to compartment II and close the flap. ^ If a Pre-rinse is desired, and available for your chosen program, add 1 teaspoon (5 ml) of detergent to compartment I. @@@@^ Close the door. ^ Open the water tap, if it is closed.

^ Turn the dishwasher on s. @@@The indicator of the selected program lights. @@@@^ Press the "Start/Stop" button. The program starts. @@@@Cancel a program only in the first 5 minutes.

Otherwise, important program steps (e.g. @@@@The running time for the same program may vary depending on the intake water temperature, load size and soiling. @@@@Dishes tends to chip if removed still hot from the dishwasher. Let the dishware cool.

After turning off the dishwasher open the door slightly. The dishes will cool much faster. ^ Unload the dishwasher. ^ Turn the dishwasher off s. @@@ If the dishwasher is not used for a longer period of time, e.g. @@@@The program stops. @@@The water in the dishwasher is hot. Danger of scalding. Before closing the door again, leave it ajar for approx.

20 secs. This will enable the temperature in the wash cabinet to settle. @@@@Depending on the program the program running time may increase. @@@@The "Start/Stop" indicator lights. @@@@The start time can be delayed from 30 minutes to 24 hours. @@@For 10 hours or more it is set in one hour steps. @@@Wipe dry with a cloth if necessary. @@@Liquid detergent should not be used when selecting "Delay Start", the detergent could leak. It is recommended to add the detergent and lock the dishwasher door to prevent children from coming in contact with the detergent. ^ Turn the dishwasher on s.

The "Start/Stop" indicator flashes. ^ Select the desired program with the program button. ^ Press the "Delay Start" button. The last set delay start time will show in the time display. The "Delay Start" indicator lights.

^ Set the desired delay start time with the "Delay Start" button. ^ Press the "Start/Stop" button. The "Start/Stop" indicator lights. 34 The time will count down to the program start: in 1-hour-steps over 10 hours, in 1-minute-steps under 10 hours. Once the delay start time has elapsed, the selected program starts.

The time display shows the remaining time, the "Delay Start" indicator goes out, and the "Start/Stop" indicator comes on. Delay start display Up to 59 minutes: e.g. 30 minutes = 30 Between 1 h and 9 h 30 min: e.g. 5 hours = 5.00 10 hours and over: e.g. 15 h = 15^ Starting a program before the delay start has elapsed A program can be started before the delay start time has elapsed. ^ Press the "Start/Stop" button for at least one second.

The "Delay Start" indicator goes out and the "Start/Stop" indicator flashes. ^ Press the "Start/Stop" button. The program starts. The "Start/Stop" indicator lights. Additional functions Default setting All settings can be reset to the factory default. ^ Turn the dishwasher off "s". ^ Press the "Start/Stop" button and at the same time turn the dishwasher on s. Hold the "Start/Stop" button at least 4 seconds until the "Start/Stop" indicator comes on. If it does not come on, start over. ^ Press the "Delay Start" button 12 times.

The "Delay Start" indicator flashes once long and twice short in intervals. The time display shows p 0 or p 1. The time display shows if a setting was changed. "p 1": All settings are factory default. "p 0": At least one setting was changed.



[You're reading an excerpt. Click here to read official MIELE G 2430](http://yourpdfguides.com/dref/4310907)

[SCI user guide](http://yourpdfguides.com/dref/4310907)

<http://yourpdfguides.com/dref/4310907>

^ To reset the dishwasher to the factory default, press the program button. The setting is now saved. ^ Turn the dishwasher off s. 35 Frequently asked questions With the aid of the following guide, minor problems can be fixed without a service call. ,Repairs should only be carried out by a qualified and trained person in accordance with local and national safety regulations.

Unauthorized repairs could cause personal injury or machine damage. Technical faults Issue The Start/Stop indicator does not flash after the dishwasher was turned on with s. The dishwasher stops during a program. The program cycle indicators "Rinse", "Drying" and "End" flash simultaneously. The time display shows FXX. Possible fault The machine is not plugged in. The fuse has tripped. Solution Insert the plug. Reset the circuit breaker. Make sure it is a 15 A breaker.

The fuse has tripped. Reset the circuit breaker. Make sure it is a 15 A breaker. There may be a technical Turn the dishwasher off fault. s. After a few seconds: Turn the dishwasher on. Select the desired program with the program button. Press the "Start/Stop" button. If the problem persists call Technical Service.

Fault F70: The waterproof system has activated.

Turn off the water supply. Call Miele Technical Service. The drain pump is running when the door is open. 36 Frequently asked questions Problems water intake/drain Issue The "Intake/Drain" indicator is flashing. The dishwasher stops.

The "Intake/Drain" indicator flashes. The time display shows FXX. Solution Open the water supply all the way. Before fixing the fault: Turn the dishwasher off s. Fault F12/F13: Fault in Open the water supply all the the water intake.

way. Clean the water intake filter, see "User Maintenance Instructions". The water pressure at the water connection is lower than 4.35 psi. Consult a plumber. Fault F11: Fault in the Clean the triple filter, the drain pump and the non-return water drain. There may valve. See "User Maintenance be water in the wash cabinet. Instructions". Remove any kinks in the drain hose.

Possible fault The water supply is shut off. 37 Frequently asked questions General problems with the dishwasher Issue Detergent is left in the dispenser at the end of a program. The detergent lid cannot be closed properly. @@Water remains in the wash cabinet at the end of a program. Possible fault The dispenser was damp when detergent was added. Detergent residue is blocking the catch. Solution Dry the dispenser before adding detergent. Remove the residue. This is not a fault. @@the drying system.

Before fixing the fault: Turn the dishwasher off s. The triple filter in the wash Clean the triple filter. cabinet is clogged. See "User Maintenance Instructions". @@blocked.

See "User Maintenance Instructions". The drain hose is kinked. @@There is a rattling noise in the wash cabinet. There is a knocking noise in the water pipes. @@rearrange items blocking the spray arms.

Items are not secure in the Interrupt the program and wash cabinet. rearrange loose pieces. @@If in doubt contact a plumber. @@Possible fault The dishes were not loaded correctly. The program was not powerful enough. Fix See "Loading the dishwasher". Select a more intensive program, see "Program Guide". Not enough detergent was Use more detergent, see dispensed. "Adding detergent". The spray arms are blocked Turn the spray arm and by items.

rearrange the dishes if necessary. @@@@clogged. @@@@into the wash cabinet. Reduce the dosage, see "Before using for the first time". Glasses and cutlery The rinse aid dosage is set show streaks. There too high. is a bluish sheen on the surface of glasses and film that can be wiped off. 40 Frequently asked questions Issue Possible fault Fix Dishes are not dry, The rinse aid setting may be Increase the dosage, refill glasses and cutlery too low, or the rinse aid the reservoir or switch the are spotted. reservoir is empty. rinse aid product when refilling, see "Before using for the first time".

Leave dishes in longer, see Dishes were taken out too soon. "Use". A "2 in 1" product was used. Set the Detergent setting to These products have a low "Powder" and add rinse aid. drying effect.

The Detergent setting "2 in 1" or "Gel" is turned on, but another product was used. Not enough rinse aid was used. Set the Detergent setting to the detergent used, see "Detergent settings". Increase the dosage, see "Before using for the first time". Refill the salt container, see "Before using for the first time".

Reseat it making sure it screws back on correctly. Change detergent, use normal tabs or normal powder detergent. Contact Miele's Technical Service. White residue is visible on cutlery and dishes. Clouding occurs on The salt container is empty. glassware and film can be wiped off. The salt container lid was not correctly screwed on. Unsuitable "2 in 1" or "Gel" products were used. The automatic water softener unit is defective. 41 Frequently asked questions Issue Possible fault Fix Use a different detergent.

Glasses are Detergent deposits. discolored and the film cannot be wiped off. Glasses are dull and Glasses are not dishwasher discolored, film safe. cannot be wiped off. Tea or lipstick stains The wash temperature of have not been the selected program was completely removed. too low. The detergent has a low bleaching effect. Plastics are Natural dyes e.g. from discolored.

vegetables may be the cause. Not enough detergent was used to break down natural dyes. There are rust stains The affected items are not on cutlery. corrosion resistant. No program was run after refilling salt.

Salt residuals got in the wash cycle. The salt container lid was not screwed on properly. There is no remedy. Only wash dishwasher safe glasses in the dishwasher. Select a program with a higher temperature.

Use a different detergent. Use more detergent, see "Adding detergent". Discoloration is permanent. There is no remedy. Only wash dishwasher safe cutlery in the dishwasher. Start the "Short" program without a load after refilling salt. Reseat and screw the lid on firmly. 42 After sales service Repairs In the event of a fault which you cannot correct yourself please contact the Miele Service Department at the phone number on the back of this booklet. ^ Please quote the model type and number of your appliance. These can be found on the data plate along the right edge of the door.

MieleCare MieleCare, our Extended Service Contract program, gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership. MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance.



[You're reading an excerpt. Click here to read official MIELE G 2430
SCI user guide
http://yourpdfguides.com/dref/4310907](http://yourpdfguides.com/dref/4310907)

Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele. Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home. To learn more about MieleCare Extended Service Contracts, please contact your appliance dealer or visit us online at: www.store.miele.com PC Update The Program Correction (PC) allows a technician to update the dishwasher to make use of new technology. When, for example, technological developments offer advanced modifications to your existing program cycles a service technician will be able to input these into your machine controls via the indicator light marked PC.

Miele will provide information when such possibilities become available. 43 Transport To transport the dishwasher, e.g. when moving to a new home, note the following: Empty the dishwasher. Secure any loose parts, e.

g. hoses, cables, cutlery baskets. Transport the dishwasher in the upright position. If unavoidable it may be transported on its back. Do not transport it on its side or on the door.

Residual water in the machine could leak and cause electrical damage. 44 User Maintenance Instructions To prevent accidents and machine damage, read these instructions before installation or use. Cleaning and Care Exterior Check and clean your dishwasher regularly (approx. every 4-6 months). This will help avoid problems and faults. ^ Only use a conditioner suitable for your kitchen cabinetry. ^ Clean wood only with a damp cloth and wipe dry. ^ Stainless steel surfaces can be cleaned using a non-abrasive stainless steel cleaner or with dishwashing detergent and warm water. ^ To help prevent resoiling, a conditioner for stainless steel can also be used. Apply sparingly with even pressure.

^ Abrasive cleaning agents, glass cleaning agents, all-purpose cleaners, thinner or ammonium cleaners should not be used on the dishwasher. They will damage the surface. Wash cabinet Generally, the wash cabinet is self cleaning if the correct amount of detergent is used. The wash cabinet can be cleaned with a dishwasher cleaner such as "Dis Cleaner" available from your Miele dealer, Miele or online at www.store.miele.com. Control panel ^ Plastic control panel should only be wiped with a damp cloth or suitable cleaning agent designed for use on plastic. ^ For stainless steel panels see information above. Door and the door seal ^ Wipe the door seals regularly with a damp cloth to remove food deposits.

^ Food residue and spilled liquids should be wiped from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms. ^ The stainless steel surfaces and controls may become discolored or damaged if not cleaned regularly. The appliance front and controls are not scratch proof. Remove spills immediately.

46 Cleaning and Care Triple filter system The triple filter system in the base of the wash cabinet prevents food from being redeposited on dishes. It also protects the circulation pump from damage caused by foreign objects (e.g. broken glass, bones). ^ The machine must not be used without all the filters in place! ^ Check and clean the filter system every 4-6 months or whenever a foreign object is trapped.

The level of soiling and time it takes before the filters need cleaning will vary depending on your household. ^ Turn off the dishwasher before cleaning. ^ Turn the handle counterclockwise to release the triple filter system. ^ Lift the filter combination out of the machine. Remove any solid particles and rinse under running water. Scrub with a nylon brush if necessary. 47 Cleaning and Care To clean the inside of the filter, the flap must be opened. ^ Push the clips together a and open the flap b. ^ Rinse under running water. ^ Close the flap so that the clip engages.

^ Return the filter so it lies flat in the base of the wash cabinet. ^ Lock the filter by turning the handle clockwise. ^ The triple filter system must be inserted and locked. Large particles could get in the circulation system and cause a blockage. 48 Cleaning and Care Cleaning the spray arms Sometimes particles of food get stuck in the spray arm jets. The spray arms should be inspected and cleaned every 4 - 6 months. ^ Turn off the dishwasher before cleaning. Removing the spray arms ^ Remove the cutlery tray (if present). ^ Press the top spray arm up to engage the inner ratchet and unscrew the spray arm. ^ Pull the lower spray arm firmly upwards to remove.

^ Lift up the middle spray arm, a, to engage the ratchet and unscrew the spray arm, b. ^ Remove the lower basket. ^ Use a pointed object such as a toothpick to push food particles into the spray arm jets. ^ Rinse thoroughly under running water. ^ Return the spray arms and check that they rotate freely.

49 Cleaning and Care Cleaning the water inlet filter A filter is incorporated into the intake hose attached to the dishwasher's shut off valve. If your water is hard or the pipes contain sediment, this filter may clog and prevent enough water from entering the wash cabinet. ^ The plastic housing of the water connection contains electrical wiring. Do not submerge the housing in liquid. Do not cut the intake hose or submerge it in liquid.

Installing an in-line water filter If your water contains a large number of insoluble substances, a filter between the water valve and the intake hose connection is recommended. These filters can be purchased from Miele. Cleaning the filter ^ Turn off the dishwasher and pull the plug. ^ Turn off the water supply. ^ Unscrew the intake hose. ^ Carefully remove the rubber seal. ^ Remove the filter using needle nose pliers and rinse it under running water. ^ Reinsert the filter and seal. Make sure they are seated correctly. ^ Screw the intake hose back on the water valve, checking that it is not cross-threaded.

^ Slowly turn on the water supply and test for leaks. 50 Cleaning and Care Cleaning the drain pump and non-return valve If the dishwasher is not completely drained at the end of a program, the drain pump or non-return valve may be blocked. ^ Turn off the dishwasher and pull the plug. ^ Remove the triple filter (see "Triple filter system"). ^ Use a jug or bowl to scoop water out of the wash cabinet. The drain pump is beneath the non-return valve (see arrow).

@@@^ Pull out the non-return valve b and rinse it under running water. ^ Remove all foreign objects from the non-return valve. ^ Make sure the locking clamp clicks into place! 51 52 Installation Instructions For installation of the dishwasher please refer to the Installation Sheet supplied with these instructions. Help to protect the environment Disposal of the packing material The cardboard box and packaging protect the appliance during shipping.



[You're reading an excerpt. Click here to read official MIELE G 2430](http://yourpdfguides.com/dref/4310907)

[SCI user guide](http://yourpdfguides.com/dref/4310907)

<http://yourpdfguides.com/dref/4310907>

These materials are biodegradable and recyclable. Please recycle. Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! Disposal of an old machine Old appliances may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials. Ensure that the appliance presents no danger to children while being stored for disposal. @@@@The power outlet must be accessible after installation. Do not use an extension cord to connect the dishwasher to the mains. Danger of overheating! See data plate on the right side of the door.

@@GROUNDING INSTRUCTIONS THIS APPLIANCE MUST BE GROUNDED. @@This appliance is equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances. ,Improper connection of the equipment grounding conductor can result in electric shock. Do not modify the plug provided with the appliance; if it will not fit the outlet, have a proper outlet installed by a qualified electrician. If there is any question concerning the proper electrical connection or grounding of this appliance to the power supply, please consult a licensed electrician or call Miele's Technical Service Department: U 1-800-999-1360 V 1-800-565-6435 Specifications The dishwasher comes equipped with a 4 ft (1.2 m) power cord with a molded plug for connection to 120 V, 60 Hz, 15 A grounded receptacle. 55 Plumbing Connection to the water supply ,Do not drink water from the dishwasher! The dishwasher can heat its own water to the temperature required by the wash program. This allows for connection of the machine to either a hot or cold water source. For lowest energy consumption connect the dishwasher to a cold water source.

For fastest possible wash times, with slightly higher energy consumption, connect the dishwasher to a hot water source. All programs use hot water in the rinse cycles. The inlet hose is approximately 5 ft. (1.5 m) long. A 5 ft. (1.5 m) extension hose is available from the Technical Service Parts Department at the phone number listed on the back of this manual. The water inlet hose comes equipped with a 3/4" female hose thread connector. This can be directly connected to a water supply with 3/4" MHT (male hose thread ends).

Water pressure: Must be between 4.5 - 145 psi (0.3 - 10 bar). ,Do not cut the intake hose. It contains electrical wiring.

If the hose is cut, the dishwasher will not work. There will be a waterleak and you could be injured. If the hose is too long, coil it neatly and place it behind the machine. 56 Plumbing Drainage The machine comes equipped with a built-in non-return valve on the discharge side to prevent waste water from flowing back into the dishwasher. The dishwasher is equipped with a 5 ft (1.

5 m) flexible drain hose with an internal diameter of 7/8" (22 mm). Drain hose extensions and adapters can be ordered from Miele. The maximum drain hose length is 13 ft. (4 m), max. drain height: 39" (1 m). If the hose is to be directly fitted to the drainage outlet on site, use the supplied hose clip. The hose can be installed to the left or right side. The existing drain pipe for the drain hose is designed for various hose diameters. The drain pipe must be shortened if the drain pipe extends too far into the drain hose. The drain hose could get clogged.

The drain hose must not be shortened. Make sure the hose is installed without kinking, pressure or being pulled. Venting the drainage system If the dishwasher drain hose is connected to a floor drain or to a drain pipe that is less than 8" (20 cm) above the floor, the drain must be vented. Otherwise the water inside the dishwasher may siphon out during the wash program. ^ Open the dishwasher door and remove the lower basket. ^ Pull the lower spray arm firmly upwards to remove. ^ Cut off the vent cap located at the right rear of the triple filter system, as illustrated. 57 58 59 Alterations reserved/4906 G 2420i / G 2430i / M.-Nr. 06 696 050 / 03 en - US .



[You're reading an excerpt. Click here to read official MIELE G 2430 SCI user guide](http://yourpdfguides.com/dref/4310907)
<http://yourpdfguides.com/dref/4310907>