




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE G 2470 SCSF. You'll find the answers to all your questions on the MIELE G 2470 SCSF in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE G 2470 SCSF  
User guide MIELE G 2470 SCSF  
Operating instructions MIELE G 2470 SCSF  
Instructions for use MIELE G 2470 SCSF  
Instruction manual MIELE G 2470 SCSF

**Miele**

## Operating Instructions

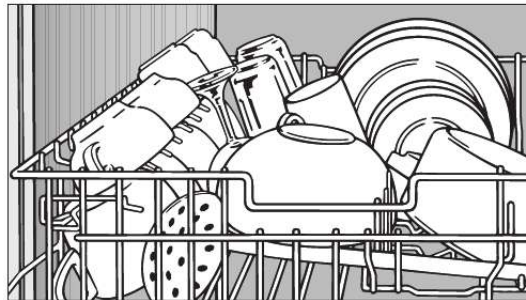

Optima Series  
G 1470  
G 2470

To prevent accidents  
and machine damage  
read these instructions  
**before**  
installation or use.

HG03

(USA) (CDN)

M.-Nr. 06 696 060



[You're reading an excerpt. Click here to read official MIELE G 2470 SCSF user guide](#)

<http://yourpdfguides.com/dref/4310899>

**Manual abstract:**

.....  
.....  
.....  
.....

*.. 4 Guide to the dishwasher .....*

.....  
.....  
.....

.....  
.....

*. 7 Caring for the environment ....*

.....

.....  
.....  
.....

*..... 9 Before using for the first time ..*

.....  
.....  
.....  
.....

*..... 10 To open the door ...*

.....  
.....  
.....

.....  
.....  
.....

*..... 10 To close the door ...*

.....  
.....  
.....  
.....

.....  
.....

*.. 10 Water softener ...*

.....

.....  
.....  
.....  
.....

*..... 11 Checking the water hardness .*

.....  
.....  
.....

.....  
.....

*.... 11 Filling the salt container .*

.....

.....  
.....  
.....  
.....

... 12 Salt indicator .....

.....  
.....  
.....

.....  
.....  
.....

..... 13 Rinse aid ...

.....  
.....  
.....  
.....

.....  
.....  
.....

... 14 Adding rinse aid .....

.....  
.....  
.....  
.....

... 14 Rinse aid indicator ..

.....  
.....  
.....  
.....  
.....

.. 15 Adjusting the dosage .....

.....  
.....  
.....

.....  
.....

.... 15 Loading the dishwasher .

.....  
.....  
.....  
.....  
.....

.. 16 Items not recommended for dishwashing .....

.....  
.....  
.....

... 17 Cutlery tray .....

.....  
.....  
.....

.....  
.....  
.....

..... 18 Cutlery basket ...

.....  
.....

.....  
.....

.....  
.....  
.....  
*19 Upper basket* .....

.....  
.....  
.....  
.....

.....  
.....  
*... 20 Adjusting the upper basket* ..

.....  
.....

.....  
.....  
.....  
.....  
*..... 22 Lower basket* .....

.....  
.....  
.....  
.....

.....  
.....  
*... 23 Lower basket inserts* ..

.....  
.....

.....  
.....  
.....  
.....  
*..... 24 Basket accessories* .....

.....  
.....  
.....

.....  
.....  
.....  
.....  
*. 26 Use* .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
*. 27 Adding detergent* .....

.....  
.....  
.....  
.....

.....  
.....  
*. 28 Turning on* .....

.....  
.....

.....  
.....  
.....  
.....  
..... 29 *Selecting and starting a program* .....  
.....  
.....  
.....  
.....  
..... 29 *Program guide* ..  
.....  
.....  
.....  
.....  
..... 30 *Use* .....  
.....  
.....  
.....  
.....  
.....  
..... 31 *Time display* .....  
.....  
.....  
.....  
..... 31 *Glasscare indicator* ..  
.....  
.....  
.....  
.....  
..... 31 *At the end of a program* ...  
.....  
.....  
.....  
.....  
..... 31 *Interrupting a program* .....  
.....  
.....  
.....  
.....  
..... 32 *Changing a program* ...  
.....  
.....

.....  
.....  
.....  
..... 32 2 Contents Additional options .....  
.....  
.....  
.....  
.....  
.....  
..... 33 Detergent settings .....  
.....  
.....  
.....  
.....  
..... 33 Delay start .....  
.....  
.....  
.....  
.....  
..... 34 Buzzer .....  
.....  
.....  
.....  
.....  
..... 35 Default setting .....  
.....  
.....  
.....  
..... 35 Frequently asked questions .....  
.....  
.....  
.....  
..... 36 Technical faults .....  
.....  
.....  
.....  
..... 36 Problems water intake/drain .....  
.....  
.....

.....  
..... 38 *General problems with the dishwasher* ..  
.....  
.....

.....  
..... 39 *Sounds* .....

.....  
.....  
.....  
..... 40 *Poor cleaning results* .

.....  
.....  
.....  
..... 41 *After sales service* .....

.....  
.....  
.....  
..... 44 *Transport* .

.....  
.....  
.....  
..... 45 *User Maintenance Instructions*.

.....  
.....  
..... 47 *Cleaning and Care* ...  
.....

..... 48 *Triple filter system* .....

.....  
.....  
..... 49 *Cleaning the spray arms* .....





*It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician.*

*@@Use the dishwasher only for its intended purpose. This appliance is intended for residential use only. @@@@Do not install or use a damaged dishwasher. A damaged appliance is dangerous. Unplug the machine and call your Miele dealer or the Miele Technical Service Department. Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! This equipment is not designed for maritime use or for use in mobile installations such as recreational vehicles or aircraft.*

*However, under certain conditions it may be possible for an installation in these applications. Please contact the nearest Miele dealer or the Miele Technical Service Department with specific requirements. It is recommended that the dishwasher only be connected to the mains with the plug (no hard-wiring). The outlet must be accessible at all times after installation to disconnect the dishwasher. , WARNING - Fire hazard Do not cover or crush the plug of the appliance.*

*Ensure that the cabinet opening for the dishwasher provides ample space for the plug. Installing the dishwasher in a tight space may crimp the power cord or put pressure on the plug which could cause overheating. This dishwasher should only be installed under a continuous counter top secured to adjacent cabinetry. Do not install this dishwasher beneath a cooking surface, oven or any appliance that radiates heat. High temperatures from these units may damage the dishwasher.*

*When installing the dishwasher under a counter top and removing the toekick, a build-under toekick must be installed. Use the respective installation kit. Danger of injuries. Do not cut the intake hose or submerge it in liquid. This hose contains electrical components that could cause injury or property damage if cut or submerged. Only connect the dishwasher to the mains when all installation and plumbing work is complete. 5 IMPORTANT SAFETY INSTRUCTIONS Use To reduce the risk of injury, do not allow children to play in, on or near the dishwasher. Only use the dishwasher if all panels are properly in place. Do not tamper with the controls. Do not damage, sit or stand on the door or baskets of the dishwasher.*

*Close the door when not in use. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more.*



[You're reading an excerpt. Click here to read official MIELE G 2470 SCSF user guide](http://yourpdfguides.com/dref/4310899)  
<http://yourpdfguides.com/dref/4310899>

**HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, turn on all hot water faucets and let water flow from each for several minutes before using the dishwasher. This will release any accumulated hydrogen gas. Do not smoke or use an open flame during this time. Be sure that all items placed in the dishwasher are "dishwasher safe". For items not labeled, check the manufacturer's recommendations. When loading tableware, place sharp items away from the door to prevent damage to the seal. Load sharp items pointing downwards to prevent injuries.

Only use detergents and rinse aids recommended for residential dishwashers. Keep all detergents and rinse aids out of the reach of children. Do not inhale or swallow detergents. Dishwasher detergents contain irritant and corrosive ingredients. They can cause burning in the mouth and throat if swallowed, or inhibit breathing.

Consult a doctor immediately if detergent has been swallowed or inhaled. Do not drink water from the dishwasher! Harmful residues could be present. Do not fill the rinse aid reservoir or salt container with detergent. It will destroy the rinse aid compartment and water softener. If the power cord is damaged it must only be replaced by a Miele Service technician with a genuine Miele power cord.

**Disposal of an appliance** If the appliance is removed from its installation site and will not be used, remove the doorlock to the wash cabinet to prevent children from locking themselves in the machine. **SAVE THESE INSTRUCTIONS** 6 Guide to the dishwasher a Upper spray arm (not visible) b Cutlery tray (depending if the dishwasher will not be used immediately, run the "Short" program. This will remove any traces of salt from inside the wash cabinet. Important: The salt container must be filled with 2 quarts (2 l) of water before adding salt for the first time. Water does not have to be added with subsequent refills. 12 Before using for the first time Salt indicator ^ When the "Salt" indicator comes on, refill the salt after the program is finished. After the container has been filled, the water softener is automatically reactivated the next time the dishwasher is started. The "Salt" indicator will be lit during this process. 13 Before using for the first time Rinse aid Rinse aid helps to prevent spotting on dishes and glassware. The rinsPlastic items that are not heat resistant Copper, brass, tin or aluminum Dishes with color painted over the glaze.

These dishes may fade over time Fine glassware and crystal items should only be washed using the "China & Crystal" program\*. Otherwise clouding or etching may occur after frequent washing. Cast iron pots and pans Glassware: There are no standard guidelines for washing glassware, when in doubt wash by hand. When purchasing new dishes, glasses and cutlery, make sure they are dishwasher safe. Only wash items marked "dishwasher safe" in the dishwasher. If fine glassware is washed in the dishwasher select the "China & Crystal" program\*. This will reduce the risk of clouding. Silver and aluminum: Silver or aluminum items may tarnish. Silverware previously cleaned with a silver polish may be damp or spotted at the end of a program where water has adhered to the polish. This can be rubbed off with a soft, dry cloth.

Silver that has been cleaned in an immersion dip is usually dry at the end of a program, but may tarnish. If left to dry, foods containing sulfur can discolor silver. These include egg yolk, onions, mayonnaise, mustard, fish and marinades. Silverware may tarnish or pit if washed next to stainless steel. Leave space between these metals.

Clean aluminum items, e.g. grease filters, with domestic dishwasher detergent only. \* depending on model 17 Loading the dishwasher Cutlery tray (depending on model) Spoons with thick handles may have to be placed as knives and forks with their heads in the holders ^ Arrange the cutlery as shown in the cutlery tray. For easier unloading cutlery should be grouped in zones, one for knives, one for forks, one for spoons, etc.

Place knives with the cutting edge down and forks with the prongs between the holders. Spoons should be placed in the opposite direction with the handles between the holders. The upper spray arm must not be blocked by tall cutlery items. The cutlery tray insert is removable. 18 Loading the dishwasher Cutlery basket (depending on model) Spoon inserts for the cutlery basket The supplied insert is designed to wash heavily soiled spoons. The individual slots allow the water to better reach the surface of each spoon. ^ For best cleaning results, cutlery should be placed in the basket with the handles down. Knives and forks should be loaded with the pointed end down to prevent injuries. ^ Place small spoons in the individual slots to either side of the cutlery basket. ^ Attach the insert when needed to the cutlery basket.

^ Insert the cutlery with the handles down into the insert. Arrange the cutlery evenly. 19 Loading the dishwasher Upper basket Coffee bar (depending on model) Glasses can be leaned against the coffee bar to allow a firm stand. Always use the dishwasher with the upper and lower basket inserted. ^ Load the upper basket with small, lightweight, or delicate items such as cups, saucers, glasses, dessert bowls and flat pans. ^ Long items such as soup ladles, mixing spoons and long knives should be placed lying down across the front of the upper basket. ^ The bar can also be used to separate two rows of glasses. ^ To stack wide items, flip the bar to the right. Cup racks ^ Raise the rack to make room for tall glasses. Lower it to double stack smaller pieces.

20 Loading the dishwasher Removable spike insert The spike insert can be removed to create more space for larger items, e.g. a saucepan. Removing the insert a: ^ To remove an insert, gently pull up on the handle. Inserting the insert b: ^ Slide the hinges of the insert under the horizontal struts of the upper basket.

^ Push down on the handle to snap the insert into position. 21 Loading the dishwasher Adjusting the upper basket The upper basket can be raised or lowered to accommodate tall items. The basket can also be angled to fit tall items in both, the upper and lower baskets. The angles should not be set to opposite extremes. This will block the middle spray arm.

Take care when sliding the basket in and out in this position. ^ Slide out the upper basket. Depending on the setting of the upper basket, a variety of plate dimensions can be accommodated. For example: If the upper basket is in its highest position a plate with a diameter of 12 3/16" (31 cm) can be fit in the lower basket. ^ Pull up the levers at the sides of the upper basket and adjust the basket height. ^ Release the levers and the basket will lock in place. 22 Loading the dishwasher Lower basket ^ For larger and heavier items such as plates, serving platters, saucepans, bowls, etc.



[You're reading an excerpt. Click here to read official MIELE G 2470](http://yourpdfguides.com/dref/4310899)

[SCSF user guide](http://yourpdfguides.com/dref/4310899)

<http://yourpdfguides.com/dref/4310899>

23 Lower basket inserts PlateGuard Plus with StemGuard The comfort insert is designed for cups, glasses, plates, bowls and pots. ^ The insert sits comfortably in the left side of the lower basket. ^ To insert tall items, raise the cup rest.

Bottle holder The bottle holder, e.g. for vases and baby bottles, can be inserted into the lower basket. If placed anywhere else, water will not reach all surfaces. The bottle will not be properly cleaned. ^ Lean or hang stemmed glassware such as wine or champagne glasses in the cut outs of the cup rest. 24 Lower basket inserts Foldable Spike insert Removing an insert a: A highly flexible design holds tableware securely. ^ Hook the foldable spike insert into the back right corner of the lower basket. ^ To remove an insert, gently pull up on the handle. Inserting an insert b: ^ Slide the hitches of the insert under the vertical struts of the lower basket.

^ Push down on the handle to snap the insert into position. Two rows of spikes can be folded down, to create more room for larger dishware, e.g. pots, pans and bowls. ^ Press down the yellow lever, a, to fold down the spikes, b.

25 Basket accessories Additional inserts for the upper and lower baskets may be purchased from your Miele dealer or Miele. Depending on the model some accessories come standard with the machine. Glassware insert GGO To wash long stemmed glassware, attaches to the upper basket To wash the parts of the Cappuccinatore (milk froth mug supplied with the Miele Coffee System), attaches to the upper basket To wash baby bottles, saucers and small items, attaches to the upper basket To wash a large number of tall glasses, attaches to the lower basket To wash plates with a diameter up to 14" (35 cm), attaches to the lower basket Cappuccinatore insert GCEO Multi-function basket GMFO Tall glassware insert GGU Large diameter plate insert GTLU 35 26 Use Detergent You can use powder, gel or tab detergents. Follow the dosage information on the detergent packaging. See "Settings - Detergent" for more information on detergent usage.

Detergent tabs are not recommended for use with the program "Short". The tabs may not dissolve completely. Dishwasher detergents contain irritant and corrosive ingredients. Avoid inhaling or swallowing dishwasher detergent. Keep children away from detergent. Fill the detergent dispenser only when you are ready to start the dishwasher. Only use detergents formulated for domestic dishwashers. Use only the recommended amount of detergent. Continued use of too much detergent may cause machine damage. 27 Use Adding detergent ^ To open, press the latch on the detergent dispenser.

The flap will spring open. The flap is always open at the end of a program. ^ Add detergent to compartment II and close the flap. ^ If a Pre-rinse is desired, and available for your chosen program, add 1 teaspoon (5 ml) of detergent to compartment I. The horizontal marks in compartment II indicate the levels of approximately 1 1/4 and 2 tablespoons (20 and 30 ml) respectively. Compartment I holds a maximum of 2 teaspoons (10 ml). 28 Use Turning on ^ Open the water supply, if it is closed. ^ Open the door. ^ Make sure the spray arms can rotate freely. ^ Turn the dishwasher on "g".

The "g" indicator and the indicator of the last set program lights. Selecting and starting a program ^ Choose your program according to the type of load and soiling. See the "Program Guide" for more information. ^ Select the desired program with the program button. The program indicator of the selected program lights.

@@@See "Detergent settings" for more information. @^ Close the door. The program starts. The optical indicator lights as a confirmation for a started program. Cancel a program only in the first 5 minutes.

Otherwise important program steps (e.g. @@@@The time display shows "0". Dishes tends to chip if removed still hot from the dishwasher. Let the dishware cool. After turning off the dishwasher open the door slightly. The dishes will cool much faster. ^ Unload the dishwasher. @^ Turn the dishwasher off "o". The dishwasher continues to use electricity until turned off with the "o" button.

^ If the dishwasher is not used for a longer period of time, e.g. @@@@^ Press the "o" button. ^ Press the "g" button. ^ Select the desired program with the program button. ^ Close the door. The optical control lights. The program starts. Open the door with care. The water in the dishwasher is hot.

Danger of scalding. Before closing the door again, leave it ajar for approx. 20 secs. This will enable the temperature in the wash cabinet to settle.

@@@@Depending on the program, the program running time may be increased.

@@@@^ Turn the dishwasher on "g". The indicator "g" lights. @@@@The start time can be delayed from 30 minutes to 24 hours.

@@For 10 hours or more it is set in one hour steps. @@Wipe dry with a cloth if necessary.

@@@@^ Open the door. ^ Turn the dishwasher on "g". The indicator "g" lights. ^ Select the desired program with the program button. ^ Press the "d" button. The last set delay start time will show in the time display. The indicator "d" lights. ^ Set the desired delay start time with the "d" button. ^ Close the door. @@@@Delay start display Up to 59 minutes: e.

g. 30 minutes = 30 Between 1 h and 9 h 30 min: e.g. 5 hours = 5.00 10 hours and over: e.g. @^ Open the door. ^ Press the o button. ^ Press the g button. ^ Select the desired program with the program button.

^ Close the door. The optical control lights. The program begins. Additional options Buzzer A signal sounds at the end of a program and when a fault occurs. The buzzer at the end of a program sounds five times in quick succession for up to one hour.

The buzzer for a fault sounds in intervals up to two minutes. The buzzer is activated by default. It can be turned off, so it does not sound at the end of a program. The buzzer for a fault cannot be turned off. ^ Open the door.

^ Turn the dishwasher off with "o". ^ Press the program button and at the same time turn the dishwasher on with "g". ^ Hold the program button for at least 4 seconds until the lower right program indicator comes on. If it does not come on, start over. ^ Press the tab button four times. The "Gel" indicator flashes four times in intervals. The time display shows if the program end buzzer is turned on or off. "p 1": Buzzer is turned on "p 0": Buzzer is turned off ^ Press the program button to change the setting. The setting is saved. ^ Turn the dishwasher off with "o".

Default setting All settings can be reset to the factory default. ^ Open the door. ^ Turn the dishwasher off "o". ^ Press the program button and at the same time turn the dishwasher on "g". Hold the program button for at least 4 seconds until the lower right program indicator comes on.



[You're reading an excerpt. Click here to read official MIELE G 2470](http://yourpdfguides.com/dref/4310899)

[SCSF user guide](http://yourpdfguides.com/dref/4310899)

<http://yourpdfguides.com/dref/4310899>

If it does not come on, start over. ^ Press the tab button 12 times. The "Gel" indicator flashes once long and twice short in intervals. The time display shows if a setting was changed. "p 1": All settings are factory default.

"p 0": At least one setting was changed. ^ To reset the dishwasher to the factory default, press the program button. The setting is saved. ^ Turn the dishwasher off "o". 35 Frequently asked questions With the aid of the following guide, minor problems can be fixed without a service call.

,Repairs should only be carried out by a qualified and trained person in accordance with local and national safety regulations. Unauthorized repairs could cause personal injury or machine damage. Technical faults Issue The program does not start. Possible fault The door is not properly closed. The machine is not plugged in.

Fix Close the door firmly. Insert the plug. The fuse is defective Reset the circuit breaker. or the breaker has Make sure it is a 15 A tripped. breaker. The dishwasher is not turned on. The dishwasher stops during a program. The fuse has tripped. Press "g " and select a program. Reset the circuit breaker.

Make sure it is a 15 A breaker. Install the reflector properly, see Installation sheet. The optical indicator is not The reflector was visible when a program not properly has started. installed. 36 Frequently asked questions Issue Possible fault Fix Turn the dishwasher off "o". After a few seconds: Turn the dishwasher on. Select the desired program with the program button. Close the door. If the problem persists call Technical Service. Turn off the water supply. Call Miele Technical Service. The optical indicator There may be a flashes. technical fault. The buzzer sounds. All program indicators are flashing fast when the door is open.

The time display shows FXX. The drain pump is running when the door is opened. Fault F70: The waterproof system has activated. 37 Frequently asked questions Problems water intake/drain Issue Possible fault Fix The optical indicator The water supply Open the water supply. flashes. is shut off. The buzzer sounds. The "Intake/Drain" indicator flashes when the door is open. Before fixing the fault: The dishwasher stops. The optical indicator Turn the dishwasher off "o". flashes. Fault F12/F13: Open the water supply. The buzzer sounds. Water intake fault Clean the water intake filter, The "Intake/Drain" see "User Maintenance indicator flashes when the Instructions". door is open.

The water pressure at the The time display shows water connection is lower FXX. than 4.35 psi. Consult a plumber. Fault F11: Water See "User Maintenance Instructions". drain fault. There may be Clean the triple filter. water in the wash Clean the drain pump and the cabinet. non-return valve. Remove any kinks in the drain hose.

38 Frequently asked questions General problems with the dishwasher Issue Detergent is left in the dispenser at the end of a program. The detergent lid cannot be closed properly. The door and the interior walls are still wet after a program has finished. Water remains in the wash cabinet at the end of a program. Possible fault The dispenser was damp when detergent was added.

Detergent residue is blocking the catch. Fix Dry the dispenser before adding detergent. Remove the residue. This is not a fault! It is the The moisture will evaporate normal operating mode of after a short time. the drying system.

Before fixing the fault: Turn the dishwasher off "o ". The triple filter in the wash Clean the triple filter. See cabinet is clogged. "User Maintenance Instructions". @@ "User Maintenance Instructions". The drain hose is kinked. @@ There is a rattling noise in the wash cabinet. There is a knocking noise in the water pipes. @@ rearrange items blocking the spray arms. Items are not secure in the Interrupt the program and wash cabinet.

rearrange loose pieces. @@ If in doubt contact a plumber. @@ Possible fault The dishes were not loaded correctly. The program was not powerful enough. Fix See "Loading the dishwasher". Select a more intensive program, see "Program Guide". Not enough detergent was Use more detergent, see dispensed. "Adding detergent". The spray arms are blocked Turn the spray arm and by items. rearrange the dishes if necessary.

@@@ clogged. @@@ into the wash cabinet. @@ There too high. @@ reservoir is empty. rinse aid product when refilling, see "Before using for the first time".

Leave dishes in longer, see Dishes were taken out too soon. "Use". A "2 in 1" product was used. Set the Detergent setting to These products have a low "Powder" and add rinse aid. drying effect.

The Detergent setting "2 in 1" or "Gel" is turned on, but another product was used. Not enough rinse aid was used. Set the Detergent setting to the detergent used, see "Detergent settings". Increase the dosage, see "Before using for the first time". Refill the salt container, see "Before using for the first time". Reseat it making sure it screws back on correctly. Change detergent, use normal tabs or normal powder detergent. Contact Miele's Technical Service. White residue is visible on cutlery and dishes. Clouding occurs on The salt container is empty.

glassware and film can be wiped off. The salt container lid was not correctly screwed on. Unsuitable "2 in 1" or "Gel" products were used. The automatic water softener unit is defective. 42 Frequently asked questions Issue Possible fault Fix Use a different detergent. Glasses are Detergent deposits. discolored and the film cannot be wiped off: Glasses are dull and Glasses are not dishwasher discolored, film safe. cannot be wiped off. Tea or lipstick stains The wash temperature of have not been the selected program was completely removed.

too low. The detergent has a low bleaching effect. Plastics are Natural dyes e.g. from discolored. vegetables may be the cause. Not enough detergent was used to break down natural dyes. There are rust stains The affected items are not on cutlery. corrosion resistant. No program was run after refilling salt.

Salt residuals got in the wash cycle. The salt container lid was not screwed on properly. There is no remedy. Only wash dishwasher safe glasses in the dishwasher. Select a program with a higher temperature. Use a different detergent. Use more detergent, see "Adding detergent". Discoloration is permanent. There is no remedy. Only wash dishwasher safe cutlery in the dishwasher.

Start the "Short" program without a load after refilling salt. Reseat and screw the lid on firmly. 43 After sales service Repairs In the event of a fault which you cannot correct yourself please contact the Miele Service Department at the phone number on the back of this booklet.



[You're reading an excerpt. Click here to read official MIELE G 2470](#)

[SCSF user guide](#)

<http://yourpdfguides.com/dref/4310899>

^ Please quote the model type and number of your appliance. These can be found on the data plate along the right edge of the door. MieleCare MieleCare, our Extended Service Contract program, gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership. MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance. Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele. Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home.

To learn more about MieleCare Extended Service Contracts, please contact your appliance dealer or visit us online at: [www.store.miele.com](http://www.store.miele.com) PC Update The Program Correction (PC) allows a technician to update the dishwasher to make use of new technology. When, for example, technological developments offer advanced modifications to your existing program cycles a service technician will be able to input these into your machine controls via the indicator light marked PC.

Miele will provide information when such possibilities become available. 44 Transport To transport the dishwasher, e.g. when moving to a new home, note the following: Empty the dishwasher. Secure any loose parts, e.

g. hoses, cables, cutlery baskets. Transport the dishwasher in the upright position. If unavoidable it may be transported on its back. Do not transport it on its side or on the door. Residual water in the machine could leak and cause electrical damage. 45 46 User Maintenance Instructions To prevent accidents and machine damage, read these instructions before installation or use. Cleaning and Care Indicator reflector Check and clean your dishwasher regularly (approx. every 4-6 months). This will help avoid faults and problems.

The reflector of the optical indicator is located in the steam deflector beneath the counter top. To clean the reflector, remove it from the plastic bracket. ^ Open the door and remove the reflector from the bracket. ^ Clean the reflector and the plastic bracket with a damp cloth. ^ Return the reflector to the bracket.

^ Abrasive cleaning agents, glass cleaning agents, all-purpose cleaners, thinner or ammonium cleaners should not be used on the dishwasher. They will damage the surface. Wash cabinet Generally, the wash cabinet is self cleaning if the correct amount of detergent is used. The wash cabinet can be cleaned with a dishwasher cleaner such as "Dis Cleaner" available from your Miele dealer, Miele or online at [www.miele.com](http://www.miele.com).

Control panel ^ Clean the control panel with a damp cloth. Exterior ^ Use a conditioner suitable for your kitchen cabinetry. ^ Clean wood with a damp cloth and wipe dry. ^ Stainless steel surfaces can be cleaned using a non-abrasive stainless steel cleaner or with dishwashing detergent and warm water.

^ To help prevent resoiling, a conditioner for stainless steel can also be used. Apply sparingly with even pressure. Door and the door seal ^ Wipe the door seals regularly with a damp cloth to remove food deposits. ^ Food residue and spilled liquids should be wiped from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms.

48 Cleaning and Care Triple filter system The triple filter system in the base of the wash cabinet prevents food from being redeposited on dishes. It also protects the circulation pump from damage caused by foreign objects (e.g. broken glass, bones). ^ The machine must not be used without all the filters in place!

^ Check and clean the filter system every 4-6 months or whenever a foreign object is trapped. The level of soiling and time it takes before the filters need cleaning will vary depending on your household. ^ Turn off the dishwasher before cleaning. ^ Turn the handle counterclockwise to release the triple filter system. ^ Lift the filter combination out of the machine. Remove any solid particles and rinse under running water.

Scrub with a nylon brush if necessary. 49 Cleaning and Care To clean the inside of the filter, the flap must be opened. ^ Push the clips together and open the flap b. ^ Rinse under running water. ^ Close the flap so that the clip engages. ^ Return the filter so it lies flat in the base of the wash cabinet. ^ Lock the filter

by turning the handle clockwise. ^ The triple filter system must be inserted and locked. Large particles could get in the circulation system and cause a blockage. 50 Cleaning and Care Cleaning the spray arms Sometimes particles of food get stuck in the spray arm jets.

The spray arms should be inspected and cleaned every 4 - 6 months. ^ Turn off the dishwasher before cleaning. Removing the spray arms ^ Remove the cutlery tray (if present). ^ Press the top spray arm up to engage the inner ratchet and unscrew the spray arm. ^ Pull the lower spray arm firmly upwards to remove.

^ Lift up the middle spray arm, a, to engage the ratchet and unscrew the spray arm, b. ^ Remove the lower basket. ^ Use a pointed object such as a toothpick to push food particles into the spray arm jets. ^ Rinse thoroughly under running water. ^ Return the spray arms and check that they rotate freely.

51 Cleaning and Care Cleaning the water inlet filter A filter is incorporated into the intake hose attached to the dishwasher's shut off valve. If your water is hard or the pipes contain sediment, this filter may clog and prevent enough water from entering the wash cabinet. ^ The plastic housing of the water connection contains electrical wiring. Do not submerge the housing in liquid. Do not cut the intake hose or submerge it in liquid. Installing an in-line water filter If your water contains a large number of insoluble substances, a filter between the water valve and the intake hose connection is recommended. These filters can be purchased from Miele. Cleaning the filter ^ Turn off the dishwasher and pull the plug. ^ Turn off the water supply. ^ Unscrew the intake hose.

^ Carefully remove the rubber seal. ^ Remove the filter using needle nose pliers and rinse it under running water. ^ Reinsert the filter and seal. Make sure they are seated correctly. ^ Screw the intake hose back on the water valve, checking that it is not cross-threaded. ^ Slowly turn on the water supply and test for leaks. 52 Cleaning and Care Cleaning the drain pump and non-return valve If the dishwasher is not completely drained at the end of a program, the drain

pump or non-return valve may be blocked. ^ Turn off the dishwasher and pull the plug. ^ Remove the triple filter (see "Triple filter system").



[You're reading an excerpt. Click here to read official MIELE G 2470](http://yourpdfguides.com/dref/4310899)

[SCSF user guide](http://yourpdfguides.com/dref/4310899)

<http://yourpdfguides.com/dref/4310899>

<sup>^</sup> Use a jug or bowl to scoop water out of the wash cabinet.

The drain pump is beneath the non-return valve (see arrow). @@@@^^ Pull out the non-return valve b and rinse it under running water. ^ Remove all foreign objects from the non-return valve. clicks into place! 53 54 Installation Instructions For installation of the dishwasher please refer to the Installation Sheet supplied with these instructions. Help to protect the environment Disposal of the packing material The cardboard box and packaging protect the appliance during shipping.

These materials are biodegradable and recyclable. Please recycle. Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! Disposal of an old machine Old appliances may contain materials that can be recycled.

Please contact your local recycling authority about the possibility of recycling these materials. Ensure that the appliance presents no danger to children while being stored for disposal. @@@@The power outlet must be accessible after installation. Do not use an extension cord to connect the dishwasher to the mains. Danger of overheating! See data plate on the right side of the door. @@GROUNDING INSTRUCTIONS THIS APPLIANCE MUST BE GROUNDED. @@This appliance is equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances. ,Improper connection of the equipment grounding conductor can result in electric shock. Do not modify the plug provided with the appliance; if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

If there is any question concerning the proper electrical connection or grounding of this appliance to the power supply, please consult a licensed electrician or call Miele's Technical Service Department: U 1-800-999-1360 V 1-800-565-6435 Specifications The dishwasher comes equipped with a 4 ft (1.2 m) power cord with a molded plug for connection to 120 V, 60 Hz, 15 A grounded receptacle. 57 Plumbing Connection to the water supply ,Do not drink water from the dishwasher! The dishwasher can heat its own water to the temperature required by the wash program. This allows for connection of the machine to either a hot or cold water source. For lowest energy consumption connect the dishwasher to a cold water source. For fastest possible wash times, with slightly higher energy consumption, connect the dishwasher to a hot water source. All programs use hot water in the rinse cycles. The inlet hose is approximately 5 ft. (1.5m) long.

A 5 ft. (1.5m) extension hose is available from the Technical Service Parts Department at the phone number listed on the back of this manual. The water inlet hose comes equipped with a 3/4" female hose thread connector. This can be directly connected to a water supply with 3/4" MHT (male hose thread ends).

Water pressure: Must be between 4.5 - 145 psi (0.3 - 10 bar) ,Do not cut the intake hose. It contains electrical wiring.

If the hose is cut, the dishwasher will not work. There will be a waterleak and you could be injured. If the hose is too long, coil it neatly and place it behind the machine. 58 Plumbing Drainage The machine comes equipped with a built-in non-return valve on the discharge side to prevent waste water from flowing back into the dishwasher. The dishwasher is equipped with a 5 ft (1.5 m) flexible drain hose with an internal diameter of 7/8" (22 mm). Drain hose extensions and adapters can be ordered from Miele. The maximum drain hose length is 13 ft. (4 m), max. drain height: 39" (1 m).

If the hose is to be directly fitted to the drainage outlet on site, use the supplied hose clip. The hose can be installed to the left or right side. The existing drain pipe for the drain hose is designed for various hose diameters. The drain pipe must be shortened if the drain pipe extends too far into the drain hose. The drain hose could get clogged. The drain hose must not be shortened. Make sure the hose is installed without kinking, pressure or being pulled. Venting the drainage system If the dishwasher drain hose is connected to a floor drain or to a drain pipe that is less than 8" (20 cm) above the floor, the drain must be vented. Otherwise the water inside the dishwasher may siphon out during the wash program. ^ Open the dishwasher door and remove the lower basket.

^ Pull the lower spray arm firmly upwards to remove. ^ Cut off the vent cap located at the right rear of the triple filter system, as illustrated. 59 Alterations reserved/4906 G 1470 Vi G 2470 Vi M.-Nr. 06 696 060 / 03 en - US .



[You're reading an excerpt. Click here to read official MIELE G 2470](http://yourpdfguides.com/dref/4310899)

[SCSF user guide](http://yourpdfguides.com/dref/4310899)

<http://yourpdfguides.com/dref/4310899>