




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE G 2670 SCVI. You'll find the answers to all your questions on the MIELE G 2670 SCVI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE G 2670 SCVI
User guide MIELE G 2670 SCVI
Operating instructions MIELE G 2670 SCVI
Instructions for use MIELE G 2670 SCVI
Instruction manual MIELE G 2670 SCVI

Miele

Operating Instructions

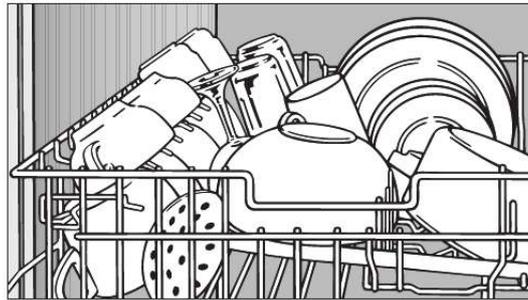

Excella Series
G 2670 SC

To prevent accidents
and machine damage
read these instructions
before
installation or use.

HG03

(USA) (CDN)

M.-Nr. 06 696 120



[You're reading an excerpt. Click here to read official MIELE G 2670 SCVI user guide](http://yourpdfguides.com/dref/4310884)

<http://yourpdfguides.com/dref/4310884>

Manual abstract:

.....
.....
.....
.....

.. 4 Guide to the dishwasher

.....
.....
.....

.....
.....

. 7 Control panel

.....
.....
.....
.....

8 Display function

.....
.....
.....
.....
.....

.. 9 Caring for the environment

.....
.....
.....

... 10 Before using for the first time ..

.....
.....
.....
.....

.. 11 To open the door

.....
.....
.....
.....

.. 11 To close the door ...

.....
.....
.....
.....
.....

.. 11 Language setting

.....
.....
.....

.....
.....
... 12 Time of day setting .
.....

.....
.....
.....
.....
..... 12 Water softener
.....
.....
.....

.....
.....
.....
..... 13 Filling the salt container ...

.....
.....
.....
.....
..... 14 Salt refill message ...
.....
.....

.....
.....
.....
.....
..... 15 Rinse aid
.....
.....

.....
.....
..... 16 Adding rinse aid ...
.....
.....

.....
.....
..... 16 Rinse aid indicator ...
.....
.....

..... 17 Loading the dishwasher
.....
.....
.....
.....

... 18 Items not recommended for dishwashing .

.....

.....

.....

.....

19 Split cutlery tray

.....

.....

.....

.....

.....

20 Upper basket

.....

.....

.....

.....

.....

.....

... 21 Removable spike insert

.....

.....

.....

.....

.....

21 Adjusting the upper basket

.....

.....

.....

.....

..... 24 Lower basket ...

.....

.....

.....

.....

.....

.....

.....

25 Basket accessories

.....

.....

.....

.....

..... 28 Use ...

.....

.....

.....

.....

.....

.....

.....

..... 29 Adding detergent ...

.....

.....

.....

.....
.....
.....
..... 30 Turning on

.....
.....
.....

.....
.....
.....
.. 31 Selecting a program

.....
.....
.....

..... 31 Program guide .

.....
.....

.....
.....
.....

32 Use

.....
.....

.....
.....
.....

34 Selecting Options

.....
.....

.....
.....

.... 34 Starting a program .

.....

.....
.....
.....

..... 35 Time display .

.....
.....

.....
.....
.....

.. 35 At the end of a program.

.....
.....
.....
.....

.... 63 Clean the filters

.....
.....
.....

.....
.....
.....

..... 63 Cleaning the spray arms

.....
.....
.....
.....

..... 65 Cleaning the water inlet filter .

.....
.....
.....

.....
.....
.....

66 Cleaning the drain pump and non-return valve

.....
.....

.. 67 Installation instructions ...

.....
.....
.....
.....
.....

69 Help to protect the environment

.....
.....
.....

..... 70 Electrical connection ...

.....
.....
.....

.....
.....
.....

... 71 Plumbing

.....
.....
.....
.....

.....
.....

.... 72 Connection to the water supply .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... @@This data must correspond to prevent injury and machine damage. Consult a qualified electrician if in doubt. @@@@Extension cords do not guarantee the required safety of the appliance (e.g. danger of overheating). Be certain your appliance is properly installed and grounded by a qualified technician.

To guarantee the electrical safety of this appliance continuity must exist between the appliance and an effective grounding system. It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician. @@Use the dishwasher only for its intended purpose. This appliance is intended for residential use only. @@@@Do not install or use a damaged dishwasher. A damaged appliance is dangerous. Unplug the machine and call your Miele dealer or the Miele Technical Service Department. Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children.

Danger of suffocation! This equipment is not designed for maritime use or for use in mobile installations such as recreational vehicles or aircraft. However, under certain conditions it may be possible for an installation in these applications. Please contact the nearest Miele dealer or the Miele Technical Service Department with specific requirements. It is recommended that the dishwasher only be connected to the mains with the plug (no hard-wiring). The outlet must be accessible at all times after installation to disconnect the dishwasher.

, WARNING - Fire hazard Do not cover or crush the plug of the appliance. Ensure that the cabinet opening for the dishwasher provides ample space for the plug. Installing the dishwasher in a tight space may crimp the power cord or put pressure on the plug which could cause overheating. This dishwasher should only be installed under a continuous counter top secured to adjacent cabinetry. Do not install this dishwasher beneath a cooking surface, oven or any appliance that radiates heat.

High temperatures from these units may damage the dishwasher. When installing the dishwasher under a counter top and removing the toekick, a build-under toekick must be installed. Use the respective installation kit. Danger of injuries. Do not cut the intake hose or submerge it in liquid. This hose contains electrical components that could cause injury or property damage if cut or submerged. Only connect the dishwasher to the mains when all installation and plumbing work is complete. 5 IMPORTANT SAFETY INSTRUCTIONS Use To reduce the risk of injury, do not allow children to play in, on or near the dishwasher. Only use the dishwasher if all panels are properly in place. Do not tamper with the controls.

Do not damage, sit or stand on the door or baskets of the dishwasher.



[You're reading an excerpt. Click here to read official MIELE G 2670 SCVI user guide](http://yourpdfguides.com/dref/4310884)
<http://yourpdfguides.com/dref/4310884>

Close the door when not in use. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, turn on all hot water faucets and let water flow from each for several minutes before using the dishwasher. This will release any accumulated hydrogen gas. Do not smoke or use an open flame during this time.

Be sure that all items placed in the dishwasher are "dishwasher safe". For items not labeled, check the manufacturer's recommendations. When loading tableware, place sharp items away from the door to prevent damage to the seal.

Load sharp items pointing downwards to prevent injuries. Only use detergents and rinse aids recommended for residential dishwashers. Keep all detergents and rinse aids out of the reach of children. Do not inhale or swallow detergents. Dishwasher detergents contain irritant and corrosive ingredients.

They can cause burning in the mouth and throat if swallowed, or inhibit breathing. Consult a doctor immediately if detergent has been swallowed or inhaled. Do not drink water from the dishwasher! Harmful residues could be present. Do not fill the rinse aid reservoir or salt container with detergent. It will destroy the rinse aid compartment and water softener.

If the power cord is damaged it must only be replaced by a Miele Service technician with a genuine Miele power cord. Disposal of an appliance If the appliance is removed from its installation site and g. }+ }12 : 00 Please set the time of day OK } ^ Set the hour with +/- and confirm with OK. Set the minutes and confirm. The settings will be saved after the first wash program has completed. After confirming the minutes, a summary of the language and time settings are shown. The messages Refill salt and Refill rinse aid may show. ^ Confirm with "OK" and the display will change to the main menu. } Normal } Pots + Pans Main menu r The dishwasher can now be used or turned off. 12 Before using for the first time Water softener Every dishwasher is tested before leaving the factory.

Any water remaining in the machine is from the final factory test and does not indicate that the machine has been used. To achieve good cleaning results the dishwasher neinse aid reservoir holds approx. 3.7 oz (110 ml) of liquid. ^ Press on the flap until you hear it click shut. Failure to close it all the way allows water to enter the reservoir during the wash program. ^ Clean any spilled rinse aid. The flap will remain closed during normal operation. To optimize the wash result, the rinse aid dosage can be adjusted. See "Settings J - Rinse aid".

^ Confirm with OK. The indicator light will go out. 17 Loading the dishwasher ,Do not wash items soiled with ash, sand, wax, grease or paint in the dishwasher. Ash and sand do not dissolve and will be distributed throughout the inside of the dishwasher. Wax, grease and paint will cause permanent discoloration and damage to the dishwasher.

^ Scrape food from dishes before placing them in the dishwasher, rinsing is not necessary. ^ Some foods contain natural dyes, e.g. carrots or tomatoes. Plastic items may discolor permanently if they come in contact with food dyes.

^ All items can be placed anywhere in the baskets. ^ Load dishes so that water can reach all surfaces. Do not place dishes or cutlery inside other pieces. ^ Make sure that all items are securely positioned. ^ Hollow items such as cups and glasses should be placed upside down in the baskets. ^ To ensure good water coverage, tall, narrow and hollow items, i.e. vases or champagne glasses, should be placed in the center of the basket rather than in the corners. ^

Concave based items such as mugs or bowls, should be placed at an angle so that water does not pool. ^ The spray arms must not be blocked by items that are too tall or hang through the baskets.

Check clearance by manually rotating the spray arms. ^ Place very small items in the cutlery tray or basket so they do not fall to the bottom of the wash cabinet. ^ Food residue and spilled liquids should be cleaned from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms. 18 Loading the dishwasher Items not recommended for dishwashing Cutlery with wooden handles Wooden cutting boards Glued items such as old knives with handles glued together around the shank of the blade Handmade craft items, antique, metal trimmed or decorative glassware Plastic items that are not heat resistant Copper, brass, tin or aluminum Dishes with color painted over the glaze. These dishes may fade over time Fine glassware and crystal items should only be washed using the "China & Crystal" program*. Otherwise clouding or etching may occur after frequent washing. Cast iron pots and pans Glassware: There are no standard guidelines for washing glassware, when in doubt wash by hand. When purchasing new dishes, glasses and cutlery, make sure they are dishwasher safe. Only wash items marked "dishwasher safe" in the dishwasher.

If fine glassware is washed in the dishwasher select the "China & Crystal" program*. This will reduce the risk of clouding. Silver and aluminum: Silver or aluminum items may tarnish. Silverware previously cleaned with a silver polish may be damp or spotted at the end of a program where water has adhered to the polish. This can be rubbed off with a soft, dry cloth.

Silver that has been cleaned in an immersion dip is usually dry at the end of a program, but may tarnish. If left to dry, foods containing sulfur can discolor silver. These include egg yolk, onions, mayonnaise, mustard, fish and marinades. Silverware may tarnish or pit if washed next to stainless steel. Leave space between these metals.

Clean aluminum items, e.g. grease filters, with domestic dishwasher detergent only. * depending on model 19 Loading the dishwasher Split cutlery tray ^ Arrange the cutlery as shown in the cutlery tray. For easier unloading cutlery should be grouped in zones, one for knives, one for forks, one for spoons, etc. Place knives with the cutting edge and forks with the prongs between the holders. Spoons should be placed in the opposite direction with the handles between the holders. The upper spray arm must not be blocked by tall cutlery items. The inserts of the cutlery tray can be removed. Single inserts can be removed to make room for tall items in the upper basket.

Spoons with thick handles may have to be placed as knives and forks with their heads in the holders 20 Loading the dishwasher Upper basket Removable spike insert The spike insert can be removed to create more space for larger items, e.g. a saucepan. ,For safety reasons only use the dishwasher with the upper and lower basket inserted. Exception: The programs "Large items normal" and "Large items soiled" are designed for use without the upper basket.



[You're reading an excerpt. Click here to read official MIELE G 2670](http://yourpdfguides.com/dref/4310884)

[SCVI user guide](http://yourpdfguides.com/dref/4310884)

<http://yourpdfguides.com/dref/4310884>

Removing an insert a: ^ To remove an insert, gently pull up on the handle. Inserting an insert b: ^ Load the upper basket with small, lightweight or delicate items such as cups, saucers, glasses, dessert bowls and flat pans. ^ Long items such as soup ladles, mixing spoons and long knives should be placed lying down across the front of the upper basket. ^ Slide the hitches of the insert under the vertical struts of the lower basket. ^ Push down on the handle to snap the insert into position.

21 Loading the dishwasher Adjustable cup racks ^ Raise the rack to make room for tall glasses. Lower it to double stack smaller pieces. The height of the cup rack can be adjusted in two levels. Coffee bar (depending on model) Glasses can be leaned against the coffee bar for a secure stand. ^ The bar can also be used to separate two rows of glasses.

^ Pull the cup rack upwards and let it engage at the desired height. To stack wide items, flip the bar to the right. 22 Loading the dishwasher Glassware rail (depending on model) The glassware rail is designed for a secure stand of tall glasses and stemmed glassware. ^ Flip the bar down to lean tall glasses on it. If necessary take out a part of the cutlery tray to make room for tall glasses.

23 Loading the dishwasher Adjusting the upper basket The upper basket can be raised or lowered to accommodate tall items. The basket can also be angled to fit tall items in both, the upper and lower baskets. The angles should not be set to opposite extremes. This will block the middle spray arm. Take care when sliding the basket in and out in this position. ^ Slide out the upper basket. Depending on the setting of the upper basket, a variety of plate dimensions can be accommodated. For example: If the upper basket is in its highest position a plate with a diameter of 12 3/16" (31 cm) can be fit in the lower basket. ^ Pull up the levers at the sides of the upper basket and adjust the basket height. ^ Release the levers and the basket will lock in place.

24 Loading the dishwasher Lower basket ^ For larger and heavier items such as plates, serving platters, saucepans, bowls, etc. 25 Loading the dishwasher Comfort inserts The comfort inserts are designed for cups, glasses, plates, bowls, pots, etc. ^ To insert tall items, raise the cup rest. ^ Lean or hang stemmed glassware such as wine or champagne glasses in the cut outs of the cup rest. PlateGuard Plus with StemGuard Removing an insert a: ^ To remove an insert, gently pull up on the handle. Inserting an insert b: ^ Insert the long comfort insert on the left and the short one in the rear right. ^ Slide the hitches of the insert under the vertical struts of the lower basket. ^ Push down on the handle to snap the insert into position. 26 Loading the dishwasher Removable spike insert with StemGuard Vase/Bottle holder Removing: ^ Push the insert down, a and at the same time push the latch towards the basket, b. The vase/bottle holder, e.

g. for vases and baby bottles, can be inserted into the lower basket as shown in the illustration. If placed anywhere else, water will not reach all surfaces. The bottle will not be properly cleaned. 27 Basket accessories Additional inserts for the upper and lower baskets may be purchased from your Miele dealer or Miele.

Depending on model some accessories come standard with the machine. Glassware insert GGO To wash long stemmed glassware attaches to the upper basket To wash the parts of the Cappuccinatore To wash saucers, baby bottles and small items To wash a large number of glasses, attaches to the lower basket To wash plates with a diameter up to 14", attaches to the lower basket Cappuccinatore insert GCEO Multi-function basket GMFO Tall glassware insert GGU Large diameter plate insert GTLU 35 28 Use Detergent You can use powder, gel or tab detergents. Follow the dosage information on the detergent packaging. See "Settings - Detergent" for more information on detergent usage. Detergent tabs are not recommended for use with the program "Short".

The tabs may not dissolve completely. ,Dishwasher detergents contain irritant and corrosive ingredients. Avoid inhaling or swallowing dishwasher detergent.

Keep children away from detergent. Fill the detergent dispenser only when you are ready to start the dishwasher. ,Only use detergents formulated for domestic dishwashers. Use only the recommended amount of detergent. Continued use of too much detergent may cause machine damage. 29 Use Adding detergent ^ To open, press the latch on the detergent dispenser. The flap will spring open.

The flap is always open at the end of a program. ^ Add detergent to compartment II and close the flap. ^ If a Pre-rinse is desired, and available for your chosen program, add 1 teaspoon (5 ml) of detergent to compartment I. The horizontal marks in compartment II indicate the levels of approximately 1 1/4 and 2 tablespoons (20 and 30 ml) respectively. Compartment I holds a maximum of 2 teaspoons (10 ml). 30 Use Turning on ^ Open the water supply, if it is closed. ^ Open the door. ^ Make sure the spray arms can rotate freely. ^ Turn the dishwasher on g. The main menu shows in the display.

@@See "Settings J - Memory". } Normal } Pots + Pans Main menu r Selecting a program Choose your program according to the type of load and soiling. The "Program guide" describes the programs and using. Information about the selected program can be displayed by pressing the K button. ^ Select the desired program.

The display changes to the program menu. Sensor Wash } Options 1:32 h 12:00 Start } 31 Program guide Program When to use Prerinse 12 Program sequence Main wash X X Interim Final Drying rinse rinse 12 X X X X X Normal Pots + Pans For normally soiled dishware with dried on food Run-time 131 min For normally soiled pots and pans with dried on food, and heavily soiled dishware, 120% detergent recommended Run-time 129 min For temperature sensitive glassware and lightly soiled dishware, 50% detergent recommended; sensor controlled GlassCare program Run-time 100 min "Quick program" for lightly soiled dishware, e.g. party dishware or to remove salt traces from the wash cabinet after refilling salt, includes sensor controlled GlassCare; not suitable for detergent tabs Run-time 30 min Sensor controlled program for normally soiled dishware Run-time 123 min For normally soiled dishware, energy saving program with a long soaking time and a low temperature; includes sensor controlled GlassCare Run-time 95 min XX X China + Crystal as required X X as required X X Short X X X Sensor Wash Economy as required X X as required X X X X X Heavy Soil For heavily soiled dishware with dried starchy food Run-time 120 min Energy Saver The water intake temperature must be a minimum of 115°F (45°C); for light to normally soiled dishware Run-time 74 min To rinse dishes when a complete program is not needed.



[You're reading an excerpt. Click here to read official MIELE G 2670](http://yourpdfguides.com/dref/4310884)

[SCVI user guide](http://yourpdfguides.com/dref/4310884)

<http://yourpdfguides.com/dref/4310884>

Run-time 13 min For light to normally soiled dishware without dried food; water saving program Run-time 87 min X X X X X X X X X X Rinse + Hold Water Saver X X X X X 32 Program guide Program When to use Pre-rinse Program sequence Main wash X Interim rinse 1 2 X Final rinse X Drying Starch For dishware with dried on starchy food; 120% detergent recommended Run-time 148 min For dishware with dried on cheese; 120% detergent recommended Run-time 150 min To sanitize dishware, e.

g. baby bottles, cutting boards and preparation dishware Run-time 122 min To gently clean dishwasher safe plastics and plastic toys Run-time 115 min For extra large, heat-resistant items e.g. large vases Run-time 103 min For extra large items sensitive to high temperatures e.g. large plastics Run-time 98 min X X Cheese X X X X X Sani Wash X X X X X Plastics X X X X X Large items soiled Large items normal X X X X X X X X X Glassware no To wash glassware without detergent rinse aid and rinse aid; rinse cycle with warm water Run-time 50 min Glassware cold For a quick cleaning of glassware for direct reuse; use without detergent and rinse aid Run-time 17 min X X X X X X X Plate Warming For plate warming; use without detergent and rinse aid Run-time 12 min Usage: Electric: 0.01 - 1.3 kWh Water: 1.06 - 6.6 gal (4 - 25 l) 33 Use Selecting Options Options can be added to the selected program.

^ Select Options. The display shows the available options for the selected program. Available options: Pre-rinse: For easily removable soiling Soak: To soak stubborn soiling. When using powder detergent, fill approx. 1 teaspoon (5 g) of detergent into detergent compartment I. Extended drying: To enhance drying of odd shaped dishware and plastic items. } § Extended drying Options OK } ^ Select the desired options and confirm with OK. The selected options are marked with a L check. ^ To deselect the selected options, press the respective button again. When finished customizing the program, confirm with OK.

The display changes back to the program menu. The program menu shows Options selected. 34 Use You can now select the detergent used. Available selections are: Powder, Gel, "2 in 1" and "3 in 1". See "Settings J - Detergent".

Time display Before the program starts, the time display shows the running time of the selected program in hours and minutes. During the running program the remaining time shows in the time display. The running time for the same program may vary depending on the intake water temperature, load size and soiling. When a program is selected for the first time, a time is shown which equals an average program running time with cold water. The time values in the program guide correspond to the program running times with standard loads and temperatures.

Each time a program is run the electronic adjusts the program running time according to the water intake temperature and load size. Starting a program ^ Select Start. The display shows Close the door. To select another program or to add options, select Back and cancel the program with Cancellation. ^ Close the door. The optical interface lights to indicate that a program is running. Cancel a program only in the first 5 minutes. Otherwise important program steps (e.g. the water softening) could be interrupted.

35 Use At the end of a program At the end of a program the optical control light flashes slowly with the door closed. The optical function light goes out one hour after the end of a program. At the end of a program the display shows Program finished. Dishes tends to chip if removed still hot from the dishwasher. Let the dishware cool. After turning off the dishwasher open the door slightly. The dishes will cool much faster. ^ Open the door. ^ Turn the dishwasher off o. The dishwasher continues to use electricity until turned off with the o button.

^ If the dishwasher is not used for a longer period of time, e.g. vacationing, turn off the water supply. Interrupting a program A program is interrupted as soon as the door is opened. If the door is closed, the program will continue from where it was interrupted.

,Open the door with care. The water in the dishwasher is hot. Danger of scalding. Before closing the door again, leave it ajar for approx. 20 secs.

This will enable the temperature in the wash cabinet to settle. Close the door firmly until it clicks into place. 36 Use Changing a program If the detergent flap is already open, do not change the program. If a program has already started and you wish to change it: ^ Open the door. Sensor Wash Main wash 1:32 h 12:00 Cancellation } ^ Select Cancellation and confirm with OK. @@^ Select the desired program. ^ Select Start. ^ Close the door. The optical control lights. @@The start time can be delayed between 15 minutes and 24 hours.

The start can be delayed in 15-minute-increments. @@Wipe dry with a cloth if necessary. @@@@^ Open the door. ^ Turn the dishwasher on g. The indicator g lights. ^ Select the desired program. ^ Select "Delay Start d". @@@@Holding the button will automatically increase or decrease the time. @@@The display changes to the program menu. ^ Select Start.

^ Close the door. The program starts automatically at the selected time. The indicator d goes out. @@Proceed as follows: ^ Open the door. ^ Select Cancel and confirm with OK.

@@^ Select Start. ^ Close the door. The optical control lights. @@The main menu shows in the display. @@See "Settings J - Memory".

@@@@^ Select the desired language and confirm with OK. @@@@The clock can also be set from here. Setting the clock format ^ Select Format.

^ Select the desired clock format and confirm with OK. @@Set the minutes and confirm. @@@@Depending on the program the program running time may increase. @@See "Filling the salt container" and "Rinse aid". The rinse aid refill message is activated. @@See "Filling the salt container" and "Rinse aid". The rinse aid refill message is activated.

@@@@The rinse aid dosage and rinse aid refill messages are deactivated. @@@@See also the information from the detergent manufacturer.

@@@@After plumbing the dishwasher and finishing a program, e.g. "Rinse & Hold", the water hardness is displayed in the menu "Water hardness". ^ Touch OK to change back to "Settings J". Rinse aid For best results, the rinse aid dosage can be adjusted. The dosage can be set in steps from 0 and 6 ml. The dosage is set by default to 3 ml of rinse aid per program. ^ Use a higher setting if spots appear on dry glassware.

^ Use a lower setting if streaking appears on dishes or glasses. ^ Select the desired rinse aid dosage with the +/- controls and confirm with OK. External water softener If the dishwasher is connected to an external water softener unit which is regenerated with salt, the water hardness must still be set in the dishwasher to the water hardness from your water softener unit.



[You're reading an excerpt. Click here to read official MIELE G 2670 SCVI user guide](http://yourpdfguides.com/dref/4310884)
<http://yourpdfguides.com/dref/4310884>

If you don't know the value, set the dishwasher water hardness to 8°d (8 gr/gal [US]). ^ Set the dishwasher to the water hardness of the external water softener and confirm with OK.

If the dishwasher is not longer connected to an external water softener, set the setting to Auto. Filter check This selection allows you to set the number of cycles run before the filter check message shows. You can select between 30 and 60 cycles. The filter check message is set by default to 40 cycles. ^ Select the desired interval and confirm with OK.

Adjusting the "Sensor Wash" program The "Sensor Wash" program can be adjusted to clean stubborn but normal soiling. ^ Select Yes to activate this function and confirm with OK. 43 Settings J Reorganize program list The order of the programs in the program list can be reorganized. The two most frequently used programs can be saved to the first two positions. J Sensor Wash B J Cancel Select program for position 1 e Continue J ^ Select with e the program which you would like to save to the first position of the main menu. Confirm the selection with the button next to the program. ^ Confirm with Continue. ^ Repeat with the second program. The selected programs are shown summarized. To change a program position, select Back until you reach the respective program position.

^ When finished reorganizing the program list, confirm with Finished. 44 Settings J Save options Additional options can be selected for some programs, e.g. extended drying. See "Use - Selecting options". Save options Temperature The temperature can be displayed in "°C/Celsius" or "°F/Fahrenheit". The temperatures are shown in °C/Celsius by default. ^ Select the desired temperature unit and confirm with OK. allows to save the selected options for future use of the program. This function is turned off by default.

^ Select the desired setting and confirm with OK. 45 Settings J Buzzer When the buzzer is activated, a tone sounds at the end of a program and if a fault occurs. The buzzer is turned on by default. Buzzer at the end of a program The buzzer at the end of a program sounds five times in intervals with a brief break in between. The buzzer sounds up to one hour if the dishwasher is not turned off.

Buzzer in case of a fault The buzzer for a fault sounds continuously. The buzzer sounds for up to two minutes if the dishwasher is not turned off or the fault is fixed. The buzzer for a fault cannot be turned off. Buzzer volume Two buzzer volumes can be selected or the buzzer can be deselected. Off The buzzer tone at the end of a program is turned off.

Soft The tone sounds in a soft volume. Loud The tone sounds in a loud volume. ^ Select the desired volume or deactivate the buzzer. ^ Confirm with OK. 46 Settings J Keypad tone A tone will sound when a button is pressed. The button tone is turned on by default. ^ Select the desired option and confirm with OK. Memory The memory function allows you to save the last selected program. When turning the dishwasher off and on again after a program has finished or when opening and closing the door, the last selected program is displayed instead of the main menu. The function is turned on by default.

^ Select the desired option and confirm with OK. Brightness The display brightness can be adjusted in 17 levels. The contrast is set to level 8 by default. ^ Select the desired brightness and confirm with OK. 47 Settings J Dealer Demo modes are only for showrooms. The dishwasher has three demo programs for showrooms. @@@@^ Confirm the message Reset factory default? with OK. @@It runs once and must be started again.

@@@@@Possible fault The door is not properly closed. The machine is not plugged in.

The fuse has tripped. Solution Close the door firmly. Insert the plug. Reset the circuit breaker. Make sure it is a 15 A breaker.

Press g and select a program. Select the desired program. Reset the circuit breaker. Make sure it is a 15 A breaker. Install the reflector properly, see Installation sheet.

The dishwasher is not turned on. No program is selected. The dishwasher stops during a program. The optic indicator is not visible when a program has started. The fuse has tripped. The reflector was not properly installed. 49 Frequently asked questions Issue The optical interface flashes fast, the buzzer sounds or the display shows the fault: Technical fault Call Technical Service Possible fault Solution There may be a technical fault. Turn the dishwasher off o. After a few seconds: Turn the dishwasher on. Select the desired program.

Close the door. If the problem persists, call Technical Service. Turn off the water supply. Call Miele Technical Service. Fault Waterproof F70 The waterproof system has activated. 50 Frequently asked questions Problems water intake/drain Issue Possible fault The optical interface flashes fast, the buzzer sounds and the display shows the fault: Close the door and open the water supply. Fault water intake FXX Solution The water supply is closed. Open the water supply all the way. Before fixing the fault: Turn the dishwasher off o. Fault F12/F13: Open the water supply all Fault in the water intake. the way. Check and clean the water intake filter, see "User Maintenance Instructions". The water pressure at the water connection is lower than 4.35 psi. Consult a plumber.

51 Frequently asked questions Issue The optical interface flashes fast. The program "Energy Saver" displays the fault: Water intake temp. too low Possible fault Solution The intake water does Restart the program. not have a minimum If the fault is displayed temperature of 115°F again, use a different (45°C). See "Plumbing program.

Connection to the water supply". Before fixing the fault: Turn the dishwasher off o. Clean the triple filter. Clean the drain pump and the non-return valve. See "User Maintenance Instructions" for more information on the above. Remove any kinks in the drain hose. The optical interface flashes fast, the buzzer sounds and the Fault F11: display shows: Fault in the water drain. Drain fault FXX There might be water in the wash cabinet. 52 Frequently asked questions General problems with the dishwasher Issue The display remains off. The buzzer sounds during the program and the display shows: Close the salt container lid Possible fault The display has gone into "Standby" mode to save energy.

The salt container lid was not screwed on properly. Solution Press a button. The display turns on again. Close the salt container lid. If the salt container lid opened during a running program, you should also: Turn the dishwasher off and on again with the o button. Restart the program. The display shows the The middle or lower Open the dishwasher door following: spray arm is blocked by and rearrange items blocking dishware.



[You're reading an excerpt. Click here to read official MIELE G 2670 SCVI user guide](http://yourpdfguides.com/dref/4310884)
<http://yourpdfguides.com/dref/4310884>

the spray arms. Middle spray arm blocked or Lower spray arm blocked The spray arm jets of Turn the dishwasher off o. the middle or lower Then: spray arm are clogged.

Clean the spray arms. See "User Maintenance Instructions". 53 Frequently asked questions Issue Detergent is left in the dispenser at the end of a program. The detergent lid cannot be closed properly. The door and the interior walls are still wet after a program has finished.

Water remains in the wash cabinet at the end of a program. The triple filter in the wash cabinet is clogged. The drain pump or the non-return valve may be blocked. The drain hose is kinked. Possible fault The dispenser was damp when detergent was added.

Detergent residue is blocking the catch. This is not a fault! It is the normal operating mode of the drying system. Solution Dry the dispenser before adding detergent. Remove the residue. The moisture will evaporate after a short time. Before fixing the fault: Turn the dishwasher off o. Clean the triple filter. See "User Maintenance Instructions". Clean the drain pump and the non-return valve, see the "User Maintenance Instructions". Remove any kinks from the drain hose.

54 Frequently asked questions Sounds Issue There is a knocking noise in the wash cabinet. There is a rattling noise in the wash cabinet. There is a knocking noise in the water pipes. Possible fault Solution The spray arm is hitting an Interrupt the program, item in the basket. rearrange items blocking the spray arms. Items are not secure in the Interrupt the program and wash cabinet. rearrange loose pieces. This may be caused by the installation or the diameter of the pipe. This has no effect on the dishwasher. If in doubt contact a plumber.

55 Frequently asked questions Poor cleaning results Issue The dishes are not clean. Possible fault The dishes were not loaded correctly. The program was not powerful enough. Stubborn but normal soiling (e.g. tee). Solution See "Loading the dishwasher". Select a more intensive program, see "Program Guide". Use the function "Adjust Sensor Wash". See "Settings J - Adjust Sensor Wash".

Not enough detergent was Use more detergent, see dispensed. "Adding detergent". The spray arms are blocked. Turn the spray arm and rearrange the dishes if necessary. The triple filter is clogged or Clean the filter and insert it not correctly inserted. The correctly, see "User spray arm jets might be Maintenance Instructions". clogged. The drain pump or the Clean the drain pump and non-return valve is blocked. the non-return valve, see Wash water will run back into maintenance instructions. the wash cabinet.

Glasses and The rinse aid dosage is set cutlery show too high. streaks. There is a bluish sheen on the surface of glasses and a film which can be wiped off. Reduce the dosage, see "Before using for the first time". 56 Frequently asked questions Issue Possible fault Solution Dishes are not dry, The rinse aid setting may be Increase the dosage, refill glasses and cutlery too low or the rinse aid the reservoir or switch the are spotted? reservoir is empty. rinse aid product when refilling, see "Before using for the first time". Leave dishes in longer, see Dishes were taken out too soon. "Use". Set the detergent type to "2 in 1" or "3 in 1" products were used. These products "Powder" and insert rinse have a low drying effect.

aid. See "Settings J Detergent". Select the detergent setting to the detergent used. See "Settings J - Detergent". Increase the dosage, see White residue is "Before using for the first visible on cutlery and dishes, time".

clouding occurs on The salt container is empty. Increase the dosage, see glassware and film "Before using for the first can be wiped off. time". The salt container lid was Reseat and screw the lid on not screwed on properly. firmly.

Unsuitable "2 in 1" or "3 in 1" Use a different detergent. products were used. Try using normal tabs or normal powder detergent. The automatic water Contact Miele Technical softener unit is defective. Service. The detergent "2 in 1" or "3 in 1" is set, but another product was used. Not enough rinse aid was used. 57 Frequently asked questions Issue Glasses are discolored and the film cannot be wiped off. Glasses are dull and discolored and have a film which cannot be wiped off. Possible fault Solution Detergent ingredients have Use a different detergent.

been deposited on the glasses. Glasses are not dishwasher There is no remedy. Only safe. wash dishwasher safe glasses in the dishwasher. Select a program with a higher temperature. i.e. Normal, Heavy Soil. Use a different detergent. Use more detergent, see "Adding detergent".

Discoloration is permanent. Tea or lipstick stains The wash temperature of have not been the selected program was completely removed. too low. The detergent has a low bleaching effect. Natural dyes e.

g. from vegetables may be the cause. Not enough detergent was used to break down natural dyes. There are rust stains The affected items are not on cutlery. corrosion resistant.

Plastics are discolored. There is no remedy. Only wash dishwasher safe cutlery in the dishwasher. No "Rinse" program was run Start the "Short" program after refilling salt. Salt without a load after refilling residuals got in the wash salt. cycle. The salt container lid was not screwed on properly. Reseat and screw the lid on firmly. 58 After sales service Repairs In the event of a fault which you cannot correct yourself please contact the Miele Service Department at the phone number on the back of this booklet. ^ Please quote the model type and number of your appliance.

These can be found on the data plate along the right edge of the door. MieleCare MieleCare, our Extended Service Contract program, gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership. MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance. Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele. Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home. To learn more about MieleCare Extended Service Contracts, please contact your appliance dealer or visit us online at: www.store.miele.com PC Update The Program Correction (PC) allows a technician to update the dishwasher to make use of new technology.

When, for example, technological developments offer advanced modifications to your existing program cycles a service technician will be able to input these into your machine controls via the indicator light marked PC.



[You're reading an excerpt. Click here to read official MIELE G 2670 SCVI user guide](http://yourpdfguides.com/dref/4310884)
<http://yourpdfguides.com/dref/4310884>

Miele will provide information when such possibilities become available. 59 Transport To transport the dishwasher, e.g. when moving to a new home, note the following: Empty the dishwasher.

Secure any loose parts, e.g. hoses, cables, cutlery baskets. Transport the dishwasher in the upright position. If unavoidable it may be transported on its back. Do not transport it on its side or on the door. Residual water in the machine could leak and cause electrical damage. 60 User Maintenance Instructions To prevent accidents and machine damage, read these instructions before installation or use. Cleaning and Care Indicator reflector Check and clean your dishwasher regularly (approx. every 4-6 months). This will help avoid faults and problems. The reflector of the optical indicator is located in the steam deflector beneath the counter top. To clean the reflector, remove it from the plastic bracket. ^ Open the door and remove the reflector from the bracket. ^ Clean the reflector and the plastic bracket with a damp cloth.

^ Return the reflector to the bracket. ,Abrasive cleaning agents, glass cleaning agents, all-purpose cleaners, thinner or ammonium cleaners should not be used on the dishwasher. They will damage the surface. Wash cabinet Generally, the wash cabinet is self cleaning if the correct amount of detergent is used.

The wash cabinet can be cleaned with a dishwasher cleaner such as "Dis Cleaner" available from your Miele dealer, Miele or online at www.miele.com. Control panel ^ Clean the control panel with a damp cloth. Exterior ^ Use a conditioner suitable for your kitchen cabinetry. ^ Clean wood with a damp cloth and wipe dry.

^ Stainless steel surfaces can be cleaned using a non-abrasive stainless steel cleaner or with dishwashing detergent and warm water. ^ To help prevent resoiling, a conditioner for stainless steel can also be used. Apply sparingly with even pressure. Door and the door seal ^ Wipe the door seals regularly with a damp cloth to remove food deposits. ^ Food residue and spilled liquids should be wiped from the sides of the dishwasher door.

These are outside of the wash cabinet and are not cleaned by water from the spray arms. 62 Cleaning and Care Triple filter system The triple filter system in the base of the wash cabinet prevents food from being redeposited on dishes. It also protects the circulation pump from damage caused by foreign objects (e.g. broken glass, bones).

Clean the filters ^ Turn off the dishwasher before cleaning. ,The machine must not be used without all the filters in place! Check and clean the filter system every 4-6 months or whenever a foreign object is trapped. The level of soiling and time it takes before the filters need cleaning will vary depending on household. The display shows Filter check after 40 wash cycles (default setting). The filter check frequency can be set between 30 to 60 cycles. See "Settings J - Filter check". ^ Check the triple filter. ^ Clean the triple filter if necessary. ^ Confirm with OK. The display changes to the main menu.

^ Turn the handle counterclockwise to release the triple filter system, a. ^ Remove the triple filter from the machine. Clean any solid particles and rinse under running water. Scrub with a nylon brush if necessary. 63 Cleaning and Care To clean the underside of the filter, the flap must be opened. ^ Push the clips together a and open the flap b. ^ Rinse under running water. ^ Close the flap so that the clip engages. ^ Return the filter so it lies flat in the base of the wash cabinet. ^ Lock the filter by turning the handle clockwise.

The triple filter system must be inserted and locked. Large particles could get in the circulation system and cause a blockage. 64 Cleaning and Care Cleaning the spray arms Sometimes particles of food get stuck in the spray arm jets. The spray arms should be inspected and cleaned every 4 - 6 months. ^ Turn off the dishwasher before cleaning.

Removing the spray arms ^ Remove the cutlery tray (if present). ^ Press the top spray arm up to engage the inner ratchet and unscrew the spray arm. ^ Pull the lower spray arm firmly upwards to remove. ^ Lift up the middle spray arm, a, to engage the ratchet and unscrew the spray arm, b. ^ Remove the lower basket.

^ Use a pointed object such as a toothpick to push food particles into the spray arm jets. ^ Rinse thoroughly under running water. ^ Return the spray arms and check that they rotate freely. 65 Cleaning and Care Cleaning the water inlet filter A filter is incorporated into the intake hose attached to the dishwasher's shut off valve. If your water is hard or the pipes contain sediment, this filter may clog and prevent enough water from entering the wash cabinet. ,The plastic housing of the water connection contains electrical wiring. Do not submerge the housing in liquid. Do not cut the intake hose or submerge it in liquid. Installing an in-line water filter If your water contains a large number of insoluble substances, a filter between the water valve and the intake hose connection is recommended. These filters can be purchased from Miele.

Cleaning the filter ^ Turn off the dishwasher and pull the plug. ^ Turn off the water supply. ^ Unscrew the intake hose. ^ Carefully remove the rubber seal. ^ Remove the filter using needle nose pliers and rinse it under running water. ^ Reinsert the filter and seal. Make sure they are seated correctly. ^ Screw the intake hose back on the water valve, checking that it is not cross-threaded. ^ Slowly turn on the water supply and test for leaks. 66 Cleaning and Care Cleaning the drain pump and non-return valve If the dishwasher is not completely drained at the end of a program, the drain pump or non-return valve may be blocked.

^ Turn off the dishwasher and pull the plug. ^ Remove the triple filter (see "Triple filter system"). ^ Use a jug or bowl to scoop water out of the wash cabinet. The drain pump is beneath the non-return valve (see arrow). ^ Remove all foreign objects from the drain pump (glass or bone splinters).

^ Before returning the non-return valve, check that the drain pump is not blocked. Spin the propeller several times in both directions to check for obstructions. @@ ^ Pull out the non-return valve b and rinse it under running water. @@ These materials are biodegradable and recyclable. Please recycle.

Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of children. @@@@ Ensure that the appliance presents no danger to children while being stored for disposal. Before discarding an old appliance, unplug it from the outlet, cut off its power cord and remove any doors to prevent hazards. 70 Electrical connection ,Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held responsible for unauthorized work. Check that the voltage, frequency and fuse rating shown on the data plate match the household mains supply.



[You're reading an excerpt. Click here to read official MIELE G 2670](http://yourpdfguides.com/dref/4310884)

[SCVI user guide](http://yourpdfguides.com/dref/4310884)

<http://yourpdfguides.com/dref/4310884>

The power outlet must be accessible after installation. Do not use an extension cord to connect the dishwasher to the mains. Danger of overheating! See data plate on the right side of the door.

A damaged power cord must only be replaced with a genuine Miele cord by a Miele service technician. GROUNDING INSTRUCTIONS THIS APPLIANCE MUST BE GROUNDED. @@@@If there is any question concerning the proper electrical connection or grounding of this appliance to the power supply, please consult a licensed electrician or call Miele's Technical Service Department: U 1-800-999-1360 V 1-800-565-6435 Specifications The dishwasher comes equipped with a 4 ft (1.2 m) power cord with a molded plug for connection to 120 V, 60 Hz, 15 A grounded receptacle. 71 Plumbing Connection to the water supply The water inlet hose comes equipped with a 3/4" female hose thread connector. This can be directly connected to a water supply with 3/4" MHT (male hose thread ends). Water pressure: Must be between 4.5 - 145 psi (0.3 - 10 bar). If the water pressure is lower, the display shows Water intake see "Frequently asked questions".

,Do not drink water from the dishwasher! The dishwasher can heat its own water to the temperature required by the wash program. This allows for connection of the machine to either a hot or cold water source. For lowest energy consumption connect the dishwasher to a cold water source. For fastest possible wash times, with slightly higher energy consumption, connect the dishwasher to a hot water source. All programs use hot water in the rinse cycles. To use the "Energy Saver" program, a hot water connection of minimum 115°F / 45°C and maximum 140°F / 60°C (water intake temperature) is necessary.

The higher the water intake temperature, the better the cleaning and drying results. The inlet hose is approximately 5 ft. (1.5m) long.

A 5 ft. (1.5m) extension hose is available from the Technical Service Parts Department at the phone number listed on the back of this manual. ,Do not cut the intake hose. It contains electrical wiring. If the hose is cut, the dishwasher will not work. There will be a water leak and you could be injured. If the hose is too long, coil it neatly and place it behind the machine. 72 Plumbing Drainage The machine comes equipped with a built-in non-return valve on the discharge side to prevent waste water from flowing back into the dishwasher. The dishwasher is equipped with a 5 ft (1.

5 m) flexible drain hose with an internal diameter of 7/8" (22 mm). Drain hose extensions and adapters can be ordered from Miele. The maximum drain hose length is 13 ft. (4 m), max. drain height: 39" (1 m). If the hose is to be directly fitted to the drainage outlet on site, use the supplied hose clip. The hose can be installed to the left or right side. The existing drain pipe for the drain hose is designed for various hose diameters. The drain pipe must be shortened if the drain pipe extends too far into the drain hose. The drain hose could get clogged.

The drain hose must not be shortened. Make sure the hose is installed without kinking, pressure or being pulled. ^ Cut off the vent cap located at the right rear of the triple filter system, as illustrated. Venting the drainage system If the dishwasher drain hose is connected to a floor drain or to a drain pipe that is less than 8" (20 cm) above the floor, the drain must be vented. Otherwise the water inside the dishwasher may siphon out during the wash program.

^ Open the dishwasher door and remove the lower basket. ^ Pull the lower spray arm firmly upwards to remove. 73 74 75 Alterations reserved/4906 G 2670 Vi / M.-Nr. 06 696 120 / 02 en - US .



[You're reading an excerpt. Click here to read official MIELE G 2670](http://yourpdfguides.com/dref/4310884)

[SCVI user guide](http://yourpdfguides.com/dref/4310884)

<http://yourpdfguides.com/dref/4310884>