




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE G 2872 SCVI. You'll find the answers to all your questions on the MIELE G 2872 SCVI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE G 2872 SCVI  
User guide MIELE G 2872 SCVI  
Operating instructions MIELE G 2872 SCVI  
Instructions for use MIELE G 2872 SCVI  
Instruction manual MIELE G 2872 SCVI

**Miele**

## Operating Instructions

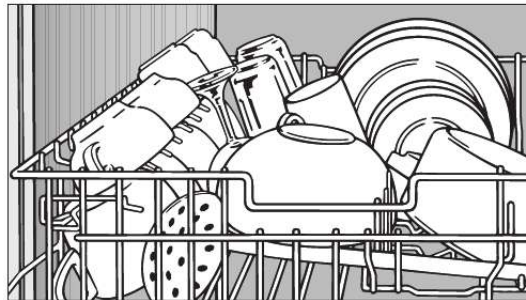

Dishwasher  
G 2872

To prevent accidents  
and appliance damage  
read these instructions  
**before**  
installation or use.

en - US, CA

M.-Nr. 07 724 170



[You're reading an excerpt. Click here to read official MIELE G 2872 SCVI user guide](#)

<http://yourpdfguides.com/dref/4310871>

**Manual abstract:**

.....  
.....  
.....  
.....

*. . 4 Guide to the dishwasher . . . . .*

.....  
.....  
.....

*. 8 Control panel . . . .*

.....  
.....  
.....  
.....

*9 Display function . . . . .*

.....  
.....  
.....  
.....  
.....

*. 10 Caring for the environment . . . . .*

.....  
.....  
.....

*. . 11 Before using for the first time . . .*

.....  
.....  
.....  
.....

*. 12 To open the door . . . . .*

.....  
.....  
.....  
.....

*. 12 To close the door . . . .*

.....  
.....  
.....  
.....

*. 12 Water softener . . . . .*

.....  
.....  
.....

.....  
.....  
.....  
... 15 Filling the salt container .....

.....  
.....  
.....  
.....  
..... 16 Salt refill message ..

.....  
.....  
.....  
.....  
..... 16 Rinse aid ...

.....  
.....  
.....  
.....  
.....  
..... 17 Adding rinse aid .....

.....  
.....  
.....  
.....  
.....  
..... 17 Rinse aid refill message ..

.....  
.....  
.....  
.....  
..... 18 Loading the dishwasher ..

.....  
.....  
.....  
.....  
.....  
..... 19 Items not recommended for dishwashing ....

.....  
..... 20 Split cutlery tray ...

.....  
.....  
.....  
.....  
..... 21 Upper basket .....



.....  
.....  
.....  
.....

... 35 Starting a program . .

.....  
.....  
.....  
.....

..... 36 Time display. . .

.....  
.....  
.....  
.....  
.....

. 36 At the end of a program. ....

.....  
.....  
.....  
.....

. 37 Preparing your appliance for an extended vacaion . . . .

.....

..... 37 Interrupting a program.

.....  
.....  
.....

..... 37 2 Contents Additional options . . . .

.....  
.....  
.....  
.....

... 39 Settings ! . .

.....  
.....  
.....  
.....  
.....

..... 41 Drying Plus. .

.....  
.....  
.....  
.....

.....  
.....  
.....

... 44 Water hardness .....

.....  
.....  
.....

.....  
.....  
.....

.... 44 External water softener .....

.....  
.....  
.....  
.....

..... 44 Filter check .

.....  
.....  
.....

.....  
.....  
.....  
.....

... 45 Button tone. ....

.....  
.....  
.....

.....  
.....  
.....

..... 49 RemoteVision ..

.....  
.....  
.....  
.....

.....  
.....  
.....

. 49 Factory default .....

.....  
.....  
.....  
.....

... 50 RemoteVision ..

.....  
.....  
.....

.....  
.....  
.....  
.....

..... 51 Frequently asked questions .....

.....  
.....

.....

.....

*52 Technical faults* .....

.....

.....

.....

.....

*52 Problems water intake/drain* .....

.....

.....

.....

.....

.....

*54 General problems with the dishwasher* .....

.....

.....

.....

.....

*56 Sounds* .....

.....

.....

.....

.....

.....

.....

*58 Poor cleaning results* .....

.....

.....

.....

.....

*59 Comparison Tests* .....

.....

.....

.....

.....

.....

*62 After sales service* .....

.....

.....

.....

.....

*64 Transport* .....

.....

.....

.....

.....

.....

..... 65 User Maintenance Instructions....

.....  
.....  
.....

..... 67 Cleaning and Care .

.....  
.....  
.....  
.....  
.....

.. 68 Triple filter system .....

.....  
.....  
.....  
.....  
.....

. 70 Cleaning the spray arms .....

.....  
.....  
.....  
.....

..... 72 Cleaning the water inlet filter .....

.....  
.....  
.....  
.....  
.....

. 73 Cleaning the drain pump and non-return valve ....

.....  
.....

... 74 Installation instructions ..

.....  
.....  
.....  
.....  
.....

..... 75 Electrical connection .....

.....  
.....  
.....  
.....

.. 76 Plumbing ..

.....  
.....  
.....  
.....  
.....

..... 77 Waterproof system ..

.....





Keep all detergents and rinse aids out of the reach of children. Do not inhale or swallow detergents.

~ Only use the dishwasher if all panels ~ Dishwasher detergents contain irritant ~ Do not damage, sit or stand on the door or baskets of the dishwasher. Close the door when not in use. gas may be produced in a hot water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, turn on all hot water faucets and let water flow from each for several minutes before using the dishwasher.

This will release any accumulated hydrogen gas. Do not smoke or use an open flame during this time. dishwasher are "dishwasher safe". For items not labeled, check the manufacturer's recommendations. ~ Do not tamper with the controls. and corrosive ingredients. They can cause burning in the mouth and throat if swallowed, or inhibit breathing. Consult a doctor immediately if detergent has been swallowed or inhaled. ~ Under certain conditions, hydrogen ~ Do not drink water from the dishwasher! Harmful residues could be present. salt container with detergent. It will destroy the rinse aid compartment and water softener. must only be replaced by a Miele Service technician with a genuine Miele power cord. feature, i.e. the door will automatically open, without an audible signal first being given, at the end of the program releasing warm air from the dishwasher.

Use caution, the air may be hot! feature, i.e. the door will automatically shut once close enough to engage the catch. ~ Do not fill the rinse aid reservoir or to 2/3 when washing a small load. ^ Choose a program that best suits the degree of soiling and the type of dishes being washed. ^ For small loads select "Express". 11 Before using for the first time To open the door To close the door ^ Push the baskets in. ^ Lift the door and push until the catch engages. The door will then close automatically. ,Keep fingers and other body parts away from the door as it is closing.

Danger of injury. The door will open automatically at the end of the program to aid in the drying process. This function can be deactivated (see "Settings - Drying Plus"). ^ Pull the handle to open the door. If the door is opened during operation, the dishwasher will stop running. Once the door is closed the program will restart. Salt refill message ^ When the display shows Insufficient salt, refill the salt after the program has finished. ^ Confirm with OK. The message will clear from the display. After the container has been filled, the water softener is automatically reactivated the next time the dishwasher is started.

The Insufficient salt message will show again during this process. Confirm again with OK. 16 Before using for the first time Rinse aid Rinse aid helps to prevent spotting on dishes and glassware. The rinse aid is filled in the reservoir and the set amount will be automatically dosed. ,Filling the rinse aid reservoir with detergent will damage the reservoir. Only pour rinse aid formulated for residential dishwashers into the reservoir. When using "Tab" detergents rinse aid is not needed. ^ Pour liquid rinse aid into the reservoir until it is visible on the surface of the screen. The rinse aid reservoir holds approx. 3.

7 oz (110 ml). ^ Press on the flap until you hear it click shut. Failure to close it all the way allows water to enter the reservoir during the wash program. ^ Clean any spilled rinse aid. The flap will remain closed during normal operation. Adding rinse aid To optimize the wash result, the rinse aid dosage can be adjusted. See "Settings J - Rinse aid". ^ Press the button in the direction of the arrow until the flap springs open. 17 Before using for the first time Rinse aid refill message When the Insufficient rinse aid message first comes on, there will be enough rinse aid left for 2 - 3 washes. ^ Refill rinse aid after the program has finished.

If the "Tab" function is selected, the Insufficient rinse aid message will not come on. See "Settings J Detergent". ^ Confirm with OK. The Insufficient rinse aid message will clear from the display. 18 Loading the dishwasher ,Do not wash items soiled with ^ The spray arms must not be blocked by items that are too tall or hang through the baskets.

Check clearance by manually rotating the spray arms. ^ Place very small items in the cutlery tray or basket so they do not fall to the bottom of the wash cabinet. ^ Food residue and spilled liquids should be cleaned from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms. ash, sand, wax, grease or paint in the dishwasher. Ash and sand do not dissolve and will be distributed throughout the inside of the dishwasher. Wax, grease and paint will cause permanent discoloration and damage to the dishwasher. ^ Scrape food from dishes before placing them in the dishwasher, rinsing is not necessary. ^ Some foods contain natural dyes, e.g. carrots or tomatoes. Plastic items may discolor permanently if they come in contact with food dyes. ^ All items can be placed anywhere in the baskets. ^ Load dishes so that water can reach all surfaces. Do not place dishes or cutlery inside other pieces.

^ Make sure that all items are securely positioned. ^ Hollow items such as cups and glasses should be placed upside down in the baskets. ^ To ensure good water coverage, tall, narrow and hollow items, i.e. vases or champagne glasses, should be placed in the center of the basket rather than in the corners. ^ Concave based items such as mugs or bowls, should be placed at an angle so that water does not pool. 19 Loading the dishwasher Items not recommended for dishwashing Cutlery with wooden handles Wooden cutting boards Glued items such as old knives with handles glued together around the shank of the blade Handmade craft items, antique, metal trimmed or decorative glassware Plastic items that are not heat resistant Copper, brass, tin or aluminum Dishes with color painted over the glaze. These dishes may fade over time Fine glassware and crystal items should only be washed using the "China & Crystal" program\*. Otherwise clouding or etching may occur after frequent washing. Cast iron pots and pans Glassware: There are no standard guidelines for washing glassware, when in doubt wash by hand.

When purchasing new dishes, glasses and cutlery, make sure they are dishwasher safe. Only wash items marked "dishwasher safe" in the dishwasher. If fine glassware is washed in the dishwasher select the "China & Crystal" program\*. This will reduce the risk of clouding. Silver and aluminum: Silver or aluminum items may tarnish.

Silverware previously cleaned with a silver polish may be damp or spotted at the end of a program where water has adhered to the polish. This can be rubbed off with a soft, dry cloth.



[You're reading an excerpt. Click here to read official MIELE G 2872](http://yourpdfguides.com/dref/4310871)

[SCVI user guide](http://yourpdfguides.com/dref/4310871)

<http://yourpdfguides.com/dref/4310871>

Silver that has been cleaned in an immersion dip is usually dry at the end of a program, but may tarnish. If left to dry, foods containing sulfur can discolor silver. These include egg yolk, onions, mayonnaise, mustard, fish and marinades.

Silverware may tarnish or pit if washed next to stainless steel. Leave space between these metals. Clean aluminum items, e.g. grease filters, with domestic dishwasher detergent only. \* depending on model If unsure whether your china and crystal are dishwasher safe, please check with the manufacturer. The China & Crystal program, although extremely gentle and thorough can cause the china and crystal to "wear" if they are not dishwasher safe. 20 Loading the dishwasher Split cutlery tray ^ Arrange the cutlery as shown in the cutlery tray. Spoons with thick handles may have to be placed as knives and forks with their heads in the holders. For easier unloading cutlery should be grouped in zones, one for knives, one for forks, one for spoons, etc.

Place knives with the cutting edge and forks with the prongs between the holders. Spoons should be placed in the opposite direction with the handles between the holders. The upper spray arm must not be blocked by tall cutlery items. The inserts of the cutlery tray can be removed. Single inserts can be removed to make room for tall items in the upper basket. 21 Loading the dishwasher Upper basket the upper and lower basket inserted. (except during the Tall items program). Removable spike insert The spike insert can be removed to create more space for larger items, e.g. a saucepan.

Always use the dishwasher with Removing the insert a: ^ Load the upper basket with small, lightweight, or delicate items such as cups, saucers, glasses, dessert bowls and flat pans. ^ Long items such as soup ladles, mixing spoons and long knives should be placed lying down across the front of the upper basket. ^ To remove an insert, gently pull up on the handle. Replacing the insert b: ^ Slide the hinges of the insert under the horizontal struts of the upper basket. ^ Push down on the handle to snap the insert into position.

22 Loading the dishwasher Adjustable cup racks ^ Raise the rack to make room for tall glasses. Lower it to double stack smaller pieces. The height of the cup rack can be adjusted in two levels. Coffee bar (depending on model) Glasses can be leaned against the coffee bar to allow a firm stand. ^ The bar can also be used to separate two rows of glasses.

^ Pull the cup rack upwards and let it engage at the desired height. ^ To stack wide items, flip the bar to the right. 23 Loading the dishwasher Universal support bar The support bar will hold tall glasses and stem-ware securely. ^ Fold the bar down and lean the desired glasses against it. ^ If desired, a section of the cutlery tray can be removed to allow for even taller glasses. 24 Loading the dishwasher Adjusting the upper basket The upper basket can be raised or lowered to accommodate tall items. The basket can also be angled to fit tall items in both, the upper and lower baskets. The angles should not be set to opposite extremes. This will block the middle spray arm. Take care when sliding the basket in and out in this position.

^ Slide out the upper basket. Depending on the setting of the upper basket, a variety of plate dimensions can be accommodated. For example: If the upper basket is in its highest position a plate with a diameter of 12 3/16" (31 cm) can be fit in the lower basket. ^ Pull up the levers at the sides of the upper basket and adjust the basket height. ^ Release the levers and the basket will lock in place. 25 Loading the dishwasher Lower basket Foldable spikes The foldable spikes can be used for small plates and saucers. ^ For larger and heavier items such as plates, serving platters, saucepans, bowls, etc. Small plates and saucers can also be arranged in the lower basket. Two rows of spikes can be folded down, to create more room for larger dishware, e.g.

pots, pans and bowls. ^ Press the yellow lever down a and fold down the spikes b. 26 Loading the dishwasher Removable spike insert The spike insert can be removed in order to make room for larger tableware or to use a different insert. Removable PlateGuard Plus with StemGuard (depending on model) This insert is ideal for cups, glasses, plates, bowls, pots and pans. Removing the insert a ^ To remove the insert, gently pull the handle upwards.

Replacing the insert b ^ Slide the hinges of the insert under the struts of the lower basket. ^ Push down on the handle to snap the insert into position. ^ To arrange tall items the cup rack can be raised. ^ The stemguard can be used to hold the stems of glassware or coffee cup handles. 27 Loading the dishwasher Vase / Bottle insert (depending on model) The vase / bottle insert can be used to rinse narrow items, e.

g. vases, baby bottles, etc. Removing the insert a: ^ To remove the insert, gently pull the handle upwards. Inserting the insert b: ^ Place the insert into the lower basket. ^ Slide the hinges of the insert under the struts of the lower basket. ^ Push down on the handle to snap the insert into position. ^ Place the insert into the lower basket as shown in the illustration. If placed anywhere else, water will not reach all surfaces. The item will not be properly cleaned. 28 Basket accessories Additional inserts for the upper and lower baskets may be purchased from your Miele dealer or Miele.

Depending on the model some accessories come standard with the machine. Glassware insert GGO To wash long stemmed glassware, attaches to the upper basket To wash the parts of the Cappuccinatore (milk froth mug supplied with the Miele Coffee System), attaches to the upper basket To wash the parts of the Cappuccinatore To wash baby bottles, saucers and small items, attaches to the upper basket To wash a large number of tall glasses, attaches to the lower basket To wash plates with a diameter up to 14" (35 cm), attaches to the lower basket Cappuccinatore insert GCEO Cappuccinatore insert GCEO Multi-function basket GMFO Tall glassware insert GGU Large diameter plate insert GTLU 35 29 Use Detergent You can use powder, gel or tab detergents. Follow the dosage information on the detergent packaging. See "Settings J - Tab" for more information on detergent usage. Detergent tabs are not recommended for use with the program "Express". The tabs may not dissolve completely. Dishwasher detergents contain irritant and corrosive ingredients. Avoid inhaling or swallowing dishwasher detergent. Keep children away from detergent. Fill the detergent dispenser only when you are ready to start the dishwasher.

Only use detergents formulated Dishwasher cleaning products are available from Miele. for domestic dishwashers. Use only the recommended amount of detergent. Continued use of too much detergent may cause machine damage. When using the "China & Crystal" program reduce the amount of detergent used to at least 1/2 of the normal dosage.



[You're reading an excerpt. Click here to read official MIELE G 2872](http://yourpdfguides.com/dref/4310871)

[SCVI user guide](http://yourpdfguides.com/dref/4310871)

<http://yourpdfguides.com/dref/4310871>

Also make certain your china and crystal are dishwasher safe. 30 Use Adding detergent ^ To open, press the latch on the detergent dispenser. The flap will spring open. The flap is always open at the end of a program. ^ Add detergent to compartment II and close the flap.

^ If a Pre-rinse is desired, and available for your chosen program, add 1 teaspoon (5 ml) of detergent to compartment I. The horizontal marks in compartment II indicate the levels of approximately 1 ¼ and 2 tablespoons (20 and 30 ml) respectively. Compartment I holds a maximum of 2 teaspoons (10 ml). 31 Use Turning on ^ Make sure the spray arms can rotate freely. ^ Close the door. ^ Open the water supply, if closed. ^ Turn the dishwasher on g. The main menu shows in the display. @@See "Settings J - Memory". } Normal } Pots & Pans Main menu r Selecting a program Choose your program according to the type of load and soiling.

The "Program guide" describes the programs and using. Information about the selected program can be displayed by pressing the K button. ^ Select the desired program. The display changes to the program menu. Sensor Wash } Options 1:32 h 12:00 Start } 32 Program guide Program When to use Pre-rinse 1 Normal For normally soiled dishware with dried on food x 2 x x Program sequence Main wash Interim rinse 1 2 x x Final rinse Drying Pots & Pans For normally soiled pots & pans with dried on food, and heavily soiled dishware, use 120% detergent recommended China & Crystal x x x x as For temperature sensitive required glassware and lightly soiled dishware, use 50% detergent recommended; sensor controlled GlassCare program "Quick program" for lightly soiled dishware, e.g. party dishware or to remove salt traces from the wash cabinet after refilling salt, includes sensor controlled GlassCare; not suitable for detergent tabs To rinse dishes when a complete program is not needed. To sanitize dishware, e.g. baby bottles, cutting boards and preparation dishware For heavily soiled dishware with dried starchy food x x x as required x x Express x x x x Rinse & Hold SaniWash x x x x Heavy Soil x x x x Sensor Wash Economy as Sensor controlled program required for normally soiled dishware For normally soiled dishware, energy saving program with a long soaking time and a low temperature; includes sensor controlled GlassCare x as required x x x x x 33 Program guide Program When to use Pre-rinse 1 Light Soiling For lightly soiled dishware, e.

g. party dishware The water intake temperature must be 115°F (45°C) for light to normally soiled dishware To gently clean dishwasher safe plastics and plastic toys x x 2 Program sequence Main wash x Interim rinse 1 x 2 Final rinse x Drying x Energy Saver x x x x Plastics x x x x Starch/Cheese For dishware with dried on starchy or cheesy food; 120% detergent recommended LG items soiled For extra large, heat resistant items, e.g. large vases. Remove upper basket x x x x x x x x Glassware - no To wash glassware rinse aid warm without detergent and rinse aid; rinse cycle with warm water Glassware - no For a quick cleaning of rinse aid cold glassware for direct reuse; use without detergent and rinse aid x x x x x Usage: Electric: 0.

01 - 1.3 kWh Water: 1.1 - 6.6 gal (4 - 25 l) 34 Use ^ Select the desired options. The detergent type can now be set.

You can choose between powder, gel or Tabs. See "Settings J - Tab". The selected options are marked with a L check. ^ To de-select an option press the respective touch control again. ^ Confirm the selected options with OK. The display changes back to the program menu. The message Options selected will appear in this display. Selecting options Options can be added to the selected program. ^ Select the Options menu. The display shows the available options for the selected program.

Available options: Turbo: For shortening the program duration. To achieve optimum results, energy consumption rates will increase. Pre-rinse: For easily removable soiling Soak: To soak stubborn soiling. When using powder detergent, fill approx. 1 teaspoon (5 g) of detergent in detergent compartment I. Extended drying: To enhance drying of odd shaped dishware and plastic items. 35 Use Starting a program ^ Select Start. The display shows Close the door. To select another program or to add options, select Back and cancel the program with Cancel. ^ Start the program by closing the door.

The optical interface lights to indicate that a program is running. The program starts and Dishes can be added appears in the display. As long as this reference is shown, tableware can be added to the machine without impairing the cleaning result. Cancel a program only in the first few minutes. Otherwise important program steps (e.

g. the water softening) could be interrupted. Time display Before the program starts, the time display shows the running time of the selected program in hours and minutes. During the running program the remaining time is shown in the time display. The running time for the same program may vary depending on the intake water temperature, load size and soiling.

When a program is selected for the first time, a time is shown which equals an average program running time with cold water. Each time a program is run, the electronic adjusts the program running time according to the intake water temperature and the load size. 36 Use At the end of a program At the end of a program the optical control light flashes slowly with the door closed. The optical function light goes out one hour after the end of a program. At the end of a program the display shows Program finished or Drying plus with the door slightly open (if activated). ^ Lift the door and push until the catch engages. The door will then close automatically. ,Do not put your hand inside of the door as it is closing. Danger of injury. Preparing your appliance for an extended vacation If you elect to turn off the water to your home for an extended period of time, please note that this may not be enough to reduce the risk of a leak.

To be completely safe, you must turn off the water supply to each individual appliance. This means under the sink for a dishwasher, at the laundry bib for your washer, etc. ,The steam being released at the end of the program may be hot. @@@@^ Unload the dishwasher. @@^ Push the baskets in. ^ Turn the dishwasher off o. @@@@The water in the dishwasher is hot. Danger of scalding. Before closing the door again, leave it ajar for approx. 20 secs. This will enable the temperature in the wash cabinet to settle. @@@@The display changes to the main menu. ^ Select the desired program. ^ Select Start. ^ Start the program by closing the door.

The optical interface lights. @@The start can be delayed in 15-minute-increments.



[You're reading an excerpt. Click here to read official MIELE G 2872](http://yourpdfguides.com/dref/4310871)

[SCVI user guide](http://yourpdfguides.com/dref/4310871)

<http://yourpdfguides.com/dref/4310871>

@@The detergent might stick together and not get completely rinsed out. @@^ Turn the dishwasher on g. The indicator g lights.  
^ Select the desired program. ^ Select "Delay Start d". @@@@Holding the button will automatically increase or decrease the time. @@The display changes to the program menu. ^ Select Start. ^ Close the door. The program starts automatically at the selected time. The indicator d goes out. @@Proceed as follows: ^ Open the door. ^ Select Cancel and confirm with OK.

@@^ Select the desired program. ^ Select Start. ^ To start the program, close the door. @@The main menu shows in the display. @@See "Settings J - Memory". @@@@The displayed language can be changed by the submenu Language J. ^ Select the desired language and confirm with OK.

@@@@The clock can also be set from here. Setting the clock format ^ Select Format. ^ Select the desired clock format and confirm with OK. Set the time of day ^ Select Set manually. ^ Set the hour with +/- and confirm with OK. Set the minutes and confirm. @@@@The program running time could increase. @@@@The rinse aid refill message is activated.

@@@@The rinse aid refill message is activated. @@The rinse aid dispenser and indicator light are deactivated. Follow the instructions of the detergent manufacturer. @@^ Select the desired detergent and confirm with OK. 43 Settings ! Drying Plus The Drying plus function automatically opens the door slightly at the end of a program, in order to improve the drying process.

This function can also be deactivated. ^ Select the desired setting and confirm with OK. °d 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38-46 47-62 63-73 Setting in display 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 45 60 70 Water hardness The water hardness level set can be viewed under the submenu "Water hardness". ^ Press "OK" to return to the "Settings J" menu. To reset the water hardness see "External water softener". External water softener Set the dishwasher to the hardness of your local water supply (see "Before using for the first time"). If the dishwasher is connected to an external water softening unit which is regenerated with salt, set the dishwasher to the water hardness of the external water softener. ^ Select the water hardness setting using e, confirm with OK. 44 Settings ! Rinse aid For best results the rinse aid dosage can be adjusted. The dosage can be set between 0 and 6 ml.

The dosage set by default to 3 ml of rinse aid per program. Use a higher setting if spots appear on dry glassware. Use a lower setting if streaking appears on dishes or glasses. ^ Use the +/- buttons to selected the desired rinse aid amount and confirm with OK. Filter check This selection allows you to set the number of cycles run before the filter check message shows. You can select between 30 and 60 cycles. The filter check message is set by default to 40 cycles. ^ Select the desired number of cycles and confirm with OK. See "Cleaning and Care - Triple filter system" for more information. Adjust Sensor Wash The "Sensor Wash" program can be adjusted to clean stubborn but normal soiling.

^ Select Yes and confirm with OK. 45 Settings ! Reorganize program list The order of the programs in the program list can be reorganized. The two most frequently used programs can be saved to the first two positions. } Sensor Wash B } Cancel Select program for position 1 e Continue } ^ Select with e the program which you would like to save to the first position of the main menu. Confirm the selection with the button next to the program.

^ Confirm with Continue. ^ Repeat with the second program. The selected programs are shown summarized. To change a program position, select Back until you reach the respective program position. ^ When finished reorganizing the program list, confirm with Finished.

46 Settings ! Save options Additional options can be selected for some programs, e.g. extended drying. See "Use - Selecting options". Save options allows you to save the selected options for future use of the program. This function is turned off by default. ^ Select the desired setting and confirm with OK. Temperature The temperature can be displayed in "°C/Celsius" or "°F/Fahrenheit". The temperatures are shown in °C/Celsius by default. ^ Select the desired temperature unit and confirm with OK.

47 Settings ! Buzzer When the buzzer is activated, a tone sounds at the end of a program and if a fault occurs. The buzzer at the end of a program is turned on by default. Buzzer at the end of a program The buzzer at the end of a program sounds five times in intervals with a brief break in between. The buzzer sounds up to one hour if the dishwasher is not turned off. Buzzer in case of a fault The buzzer for a fault sounds continuously. The buzzer sounds up to two minutes if the dishwasher is not turned off or the fault is fixed. The buzzer for a fault cannot be set to off. Buzzer volume Two buzzer volumes can be selected or the buzzer can be turned off. Off The buzzer tone at the end of a program is turned off. Soft The tone sounds in a soft volume.

Loud The tone sounds in a loud volume. ^ Select the desired volume or deactivate the buzzer. ^ Confirm with OK. 48 Settings ! Button tone A tone will sound when a button is pressed. The volume can be set to seventeen different levels.

It is set to level 8 by default. ^ Select the desired setting and confirm with OK. RemoteVision (Optional accessory. To learn more about RemoteVision visit [www.miele.com](http://www.miele.com).)

^ Select e to show module state. If "K module connected and ready" is displayed, no further action is required. Via the "Options" menu you can: Reboot the module Reset the factory default settings Enter Ad-Hoc mode Refer to the "RemoteVision" section of this manual or the RemoteVision Installation manual for further instructions. Brightness The display brightness can be adjusted in 17 levels. The brightness is set to level 9 by default. @@@@The function is turned on by default. @@The dishwasher has three demo programs for showrooms. @@ Demo mode: The program is started by pressing any button. It runs once and must be started again.

@@@@ Demo Drying Plus: The door opens automatically. @@^ Confirm the following messages with OK. ^ Press any button to start the selected demo mode. ^ To cancel the demo mode press any button again and confirm with OK. @@^ Confirm the message Deactivate demo mode? @@^ Confirm the message Reset to factory default? with OK. @@The main menu shows. 50 RemoteVision Miele's RemoteVision Wi-Fi technology creates a 'virtual link' between your appliance and our monitoring center.



[You're reading an excerpt. Click here to read official MIELE G 2872 SCVI user guide](http://yourpdfguides.com/dref/4310871)  
<http://yourpdfguides.com/dref/4310871>



If a fault occurs, Miele's client service center will be notified and contact you, or another trusted individual identified on your call roster, in order to gain access to your appliance to fix the problem. For information on set-up and installation of the RemoteVision module, see the separate RemoteVision installation manual. Be sure your wireless system meets the following requirements: A wireless router that supports an IEEE 802.11b protocol, Windows XP® or newer operating system, Mac® OS X 10.3 or higher, Cable or DSL modem, Microsoft® Internet Explorer 6 or higher, Safari 2.0 or higher, Firefox 1.5 or higher. \* Please note that each wireless router manufacturer supplies their own device drivers and setup programs. Due to the differences in manufacturers, exact router setup instructions are not included in this manual.

Wording and instructions may vary. 51 Frequently asked questions With the aid of the following guide, minor problems can be fixed without a service call. Repairs should only be carried out by a qualified and trained person in accordance with local and national safety regulations. Unauthorized repairs could cause personal injury or machine damage. Technical faults Issue The program does not start.

Possible fault The door is not properly closed. The machine is not plugged in. The fuse has tripped. Solution Close the door firmly. Insert the plug. Reset the circuit breaker. See data plate for minimum amperage. Press g and select a program. Select the desired program. Reset the circuit breaker.

See data plate for minimum amperage. Install the reflector properly, see the Installation diagram. The dishwasher is not turned on. No program is selected. The dishwasher stops during a program. The optic indicator is not visible when a program has started. The fuse has tripped. The reflector was not properly installed. 52 Frequently asked questions Issue The optical interface flashes fast, the buzzer sounds or the display shows the fault: A technical problem occurred. Turn the machine off, close the water faucet and call Technical Service.

Possible fault Solution There may be a technical fault. Turn the dishwasher off by touching the o control. After a few seconds: Turn the dishwasher on. Select the desired program. Close the door.

If the problem persists, contact Technical Service. Fault Waterproof F70 The waterproof system has activated. Automatic door closing fault Automatic door opening fault Turn off the water supply. Contact Miele Technical Service. The door may be blocked. Remove the item, if blocked. necessary restart the program. If the message shows again contact Miele Technical Service. Possible technical fault. Open the door by hand and restart the program. If the message shows again contact Miele Technical Service. 53 Frequently asked questions Problems water intake/drain Issue Possible fault The optical interface flashes fast, the buzzer sounds and the display shows the fault: No water intake Solution The water supply is closed. Open the water supply all the way. Fault water intake FXX Before fixing the fault: Turn the dishwasher off o. Fault F12/F13: Open the water supply all the way. Fault in the water intake.

Check and clean the water intake filter, see "User Maintenance Instructions". The water pressure at the water connection is lower than 4.35 psi. Consult a plumber. 54 Frequently asked questions Issue The optical interface flashes fast. The program "Energy Saver" displays the fault: Water intake temp. too low Possible fault Solution The intake water does not have a minimum. If the fault is displayed temperature of 115°F again, use a different (45°C). See "Plumbing program. Connection to the water supply".

Before fixing the fault: Turn the dishwasher off o. Clean the triple filter. Clean the drain pump and the non-return valve. See "User Maintenance Instructions" for more information on the above. Remove any kinks in the drain hose.

The optical interface flashes fast, the buzzer sounds and the Fault F11: display shows the Fault in the water drain. fault: There might be water in Drain fault F11 the wash cabinet. 55 Frequently asked questions General problems with the dishwasher Issue The display turns off. Possible fault The dishwasher has gone into "Standby" mode to save energy. Solution Touch any control.

The display turns on again. The display shows the The middle or lower Open the dishwasher door following: spray arm is blocked by and rearrange items blocking dishware. the spray arms. Middle spray arm blocked or Lower spray arm blocked The spray arm jets of Turn the dishwasher off o. the middle or lower Then: spray arm are clogged. Clean the spray arms. See "User Maintenance Instructions". 56 Frequently asked questions Issue Detergent is left in the dispenser at the end of a program. The detergent lid cannot be closed properly. The door and the interior walls are still wet after a program has finished.

Water remains in the wash cabinet at the end of a program. The triple filter in the wash cabinet is clogged. The drain pump or the non-return valve may be blocked. The drain hose is kinked. Possible fault The dispenser was damp when detergent was added. Detergent residue is blocking the catch. This is not a fault! It is the normal operating mode of the drying system. Solution Dry the dispenser before adding detergent. Remove the residue. The moisture will evaporate after a short time.

Before fixing the fault: Turn the dishwasher off o. Clean the triple filter. See "User Maintenance Instructions". Clean the drain pump and the non-return valve, see the "User Maintenance Instructions". Remove any kinks from the drain hose.

57 Frequently asked questions Sounds Issue There is a knocking noise in the wash cabinet. There is a rattling noise in the wash cabinet. There is a knocking noise in the water pipes. Possible fault Solution The spray arm is hitting an Interrupt the program, item in the basket. rearrange items blocking the spray arms.

Items are not secure in the Interrupt the program and wash cabinet. rearrange loose pieces. This may be caused by the installation or the diameter of the pipe. This has no effect on the dishwasher. If in doubt contact a plumber. 58 Frequently asked questions Poor cleaning results Issue The dishes are not clean. Possible fault The dishes were not loaded correctly. The program was not powerful enough. Stubborn but normal soiling (e.g. coffee, tea). Solution See "Loading the dishwasher". Select a more intensive program, see "Program Guide". Use the function "Adjust Sensor Wash". See "Settings J - Adjust Sensor Wash". Not enough detergent was Use more detergent, see dispensed. "Adding detergent".



[You're reading an excerpt. Click here to read official MIELE G 2872 SCVI user guide](http://yourpdfguides.com/dref/4310871)

The spray arms are blocked. Turn the spray arm and rearrange the dishes if necessary. The triple filter is clogged or Clean the filter and insert it not correctly inserted.

The correctly, see "User spray arm jets might be Maintenance Instructions". clogged. The drain pump or the Clean the drain pump and non-return valve is blocked. the non-return valve, see maintenance instructions. Wash water will run back into the wash cabinet.

Glasses and The rinse aid dosage is set cutlery show too high. streaks. There is a bluish sheen on the surface of glasses and a film which can be wiped off. Reduce the dosage, see "Before using for the first time". 59 Frequently asked questions Issue Possible fault Solution Dishes are not dry, The rinse aid setting may be Increase the dosage, refill glasses and cutlery too low, or the rinse aid the reservoir or switch the are spotted.

reservoir is empty. rinse aid product when refilling, see "Before using for the first time". Leave dishes in longer, see Dishes were taken out too soon. "Use". Set the Detergent setting for A "Tab" product was used. These products have a low a normal (powder or gel) drying effect. detergent and add rinse aid. The "Tab" setting is turned on, but a normal (powder or gel) product was used. Not enough rinse aid was used. Set the Detergent setting to the detergent used, see "Additional options - Tab".

Increase the dosage, see "Before using for the first time". Refill the salt container, see "Before using for the first time". Reseat it making sure it screws back on correctly. Change detergent, use normal (powder or gel) detergent. See "Before using for the first time". White residue is visible on cutlery and dishes.

Clouding occurs on The salt container is empty. glassware and film can be wiped off. The salt container lid was not correctly screwed on. Unsuitable "Tab" products were used.

The water softener is programmed on too low a setting. 60 Frequently asked questions Issue Possible fault Solution Use a different detergent. Glasses are Detergent deposits. discolored and the film cannot be wiped off. Clouding or etching Possible causes may be : on glasses.

excessive rinse aid, incorrect water hardness level set, type and amount of detergent., Any one or a combination of these faults may be to blame. Glasses are dull and discolored, film cannot be wiped off. Tea or lipstick stains have not been completely removed. See the relevant section of this manual to: adjust the rinse aid dosage, adjust the water hardness level, change the type and/or adjust the amount of detergent used, connect the dishwasher to a cold water supply.

Glasses are not There is no remedy. Only dishwasher safe. wash dishwasher safe glasses in the dishwasher. The wash temperature of Select a program with a the selected program was higher temperature. too low. The detergent has a low Use a different detergent. bleaching effect. Use more detergent, see "Adding detergent". Discoloration is permanent. Natural dyes e.

g. from vegetables may be the cause. Not enough detergent was used to break down natural dyes. There are rust stains The affected items are not on cutlery. corrosion resistant. Plastics are discolored. There is no remedy. Only wash dishwasher safe cutlery in the dishwasher. No program was run after Start the "Express" program refilling salt. Salt residuals (with the "Turbo" option) got in the wash cycle.

without a load after refilling salt. The salt container lid was Reseat and screw the lid on not screwed on properly. firmly. 61 Comparison Tests 10 place settings, Standard program: Normal Upper basket Lower basket Cutlery tray 62 Comparison Tests 16 place settings, Standard program: Normal Upper basket Lower basket Cutlery tray 63 After sales service Repairs In the event of a fault which you cannot correct yourself please contact the Miele Service Department at the phone number on the back of this booklet. ^ Please quote the model type and number of your appliance.

These can be found on the data plate along the right edge of the door. MieleCare (USA only) MieleCare, our Extended Service Contract program, gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership. MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance. Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele.

Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home. To learn more about MieleCare Extended Service Contracts, please contact your appliance dealer or visit us online at: <http://mieleusa.com/mielecare> PC Update The Program Correction (PC) allows a technician to update the dishwasher to make use of new technology. When, for example, technological developments offer advanced modifications to your existing program cycles a service technician will be able to input these into your machine controls via the indicator light marked PC. Miele will provide information when such possibilities become available. 64 Transport To transport the dishwasher, e.g. when moving to a new home, note the following: Empty the dishwasher. Secure any loose parts, e.g.

hoses, cables, cutlery baskets. Transport the dishwasher in the upright position. If unavoidable it may be transported on its back. Do not transport it on its side or on the door. Residual water in the machine could leak and cause electrical damage. 65 66 User Maintenance Instructions To prevent accidents and appliance damage, read these instructions before installation or use. Cleaning and Care Exterior Check and clean your dishwasher regularly. This will help avoid faults and problems. ^ Use a conditioner suitable for your kitchen cabinetry. ^ Clean wood with a damp cloth and wipe dry.

Clean the exterior with a solution of warm water and liquid soap applied with a soft sponge. Dry with a soft cloth. Abrasive cleaning agents, all-purpose cleaners, thinner or ammonium cleaners should not be used on the dishwasher. They will damage the surface. Wash cabinet Generally, the wash cabinet is self cleaning if the correct amount of detergent is used.

The wash cabinet can be cleaned with a dishwasher cleaner such as "Dis Cleaner" available from your Miele dealer, Miele or online at [www.miele.com](http://www.miele.com). Glass cleaners may be used to clean the exterior. However do not allow them to sit or "puddle", this can cause damage to the surface.



[You're reading an excerpt. Click here to read official MIELE G 2872](#)

[SCVI user guide](#)

<http://yourpdfguides.com/dref/4310871>

Remove the cleaner promptly. To better maintain your appliance avoid the following: cleaners containing soda, ammonia, thinners, or chlorides cleaners containing descaling agents or lime removers, abrasive cleaners, stainless steel cleaners, dishwasher soap (powder), caustic (oven) cleaners, scouring pads, steel wool, hard brushes, metal scrapers. Door and the door seal ^ Wipe the door seals regularly with a damp cloth to remove food deposits. ^ Food residue and spilled liquids should be wiped from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms. 68 Cleaning and Care Indicator reflector The reflector of the optical interface is located in the steam deflector beneath the counter top. ^ Clean as necessary with a damp cloth. Control panel ^ Clean the control panel as necessary with a damp cloth. ,The appliance front and controls are not scratch proof. Remove spills immediately.

69 Cleaning and Care Triple filter system The triple filter system in the base of the wash cabinet prevents food from being redeposited on dishes. It also protects the circulation pump from damage caused by foreign objects (e.g. broken glass, bones, etc.). During normal use, the filter system is self-cleaning. Cleaning the triple filter ,The machine must not be used without all the filters in place! ^ Check and clean the filter system periodically for any trapped or foreign objects. The level of soiling and time it takes before the filters need cleaning will vary depending on household. The display shows Filter check after 40 wash cycles (default setting). The filter check frequency can be set from 30 to 60 cycles.

See "Settings J - Filter check". ^ Check and clean the triple filter. ^ Confirm with OK. The display changes to the program menu. ^ Turn off the dishwasher before cleaning.

^ Turn the handle counterclockwise to release the triple filter system, a. ^ Remove the triple filter from the machine. Clean any solid particles and rinse under running water. Scrub with a nylon brush if necessary. 70 Cleaning and Care To clean the underside of the filter the flap must be opened.

^ Push the clips together a and open the flap b. ^ Rinse under running water. ^ Close the flap so that the clip engages. ^ Return the filter so it lies flat in the base of the wash cabinet. ^ Lock the filter by turning the handle clockwise. ,The triple filter system must be inserted and locked. Large particles could get in the circulation system and cause blockage. 71 Cleaning and Care Cleaning the spray arms Sometimes particles of food get stuck in the spray arm jets. The spray arms should be inspected and cleaned every 4 - 6 months. ^ Turn off the dishwasher before cleaning.

Removing the spray arms ^ Remove the cutlery tray (if present). ^ Push the upper spray arm up to engage the inner ratchet and unscrew the spray arm. ^ Pull the lower spray arm firmly upwards to remove. ^ Lift up the middle spray arm, a, to engage the ratchet and unscrew the spray arm, b. ^ Remove the lower basket. ^ Use a pointed object such as a toothpick to push food particles into the spray arm jets. ^ Rinse thoroughly under running water. ^ Return the spray arms and check that they rotate freely. 72 Cleaning and Care Cleaning the water inlet filter A filter is incorporated into the intake hose attached to the dishwasher's shut off valve. If your water is hard or the pipes contain sediment, this filter may clog and prevent enough water from entering the wash cabinet. ,The plastic housing of the water connection contains electrical wiring. Do not cut the intake hose or submerge it in liquid. Installing an in-line water filter If your water contains a large number of insoluble substances, a filter between the water valve and the intake hose connection is recommended. These filters can be purchased from Miele. Cleaning the filter ^ Turn off the dishwasher and pull the plug.

^ Turn off the water supply. ^ Unscrew the intake hose. ^ Carefully remove the rubber seal. ^ Remove the filter using needle nose pliers and rinse it under running water. ^ Reinsert the filter and seal.

Make sure they are seated correctly. ^ Screw the intake hose back on the water valve, checking that it is not cross-threaded. ^ Slowly turn on the water supply and test for leaks. 73 Cleaning and Care Cleaning the drain pump and non-return valve If the dishwasher is not completely drained at the end of a program, the drain pump or non-return valve may be blocked. ^ Turn off the dishwasher and pull the plug. ^ Remove the triple filter (see "Triple filter system"). ^ Use a cup or bowl to scoop water out of the wash cabinet. The drain pump is beneath the non-return valve (see arrow). ^ Remove all foreign objects from the drain pump (glass or bone splinters). ^ Before returning the non-return valve, check that the drain pump is not blocked.

@@@^ Pull out the non-return valve b and rinse it under running water. @@@@Please refer to our website to obtain the most current product specification, technical & warranty information. Electrical connection ,Installation, repairs and other work by unqualified persons could be dangerous. Check that the voltage, frequency and fuse rating shown on the data plate match the household mains supply. The power outlet must be accessible after installation. Do not use an extension cord to connect the dishwasher to the mains. Danger of overheating! See data plate on the right side of the door. A damaged power cord must only be replaced with a genuine Miele cord by a Miele service technician. **GROUNDING INSTRUCTIONS THIS APPLIANCE MUST BE GROUNDED.** In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for the electrical current.

This appliance is equipped with a cord having an equipment grounding conductor and a grounding plug. @@@@Water damage, if any, is minimized. Providing the dishwasher was installed correctly by a Miele technician, the waterproof system will protect you from water damage throughout the lifetime of the machine. A 5 ft. (1.

5m) drain extension is available from Miele. The water inlet hose comes equipped with a 3/4" female hose thread connector. This can be directly connected to a water supply with 3/4" MHT (male hose thread ends). Water pressure: Must be between 4.5 145 psi (0.

3 - 10 bar). If the water pressure is lower, the display shows Water intake see "Frequently asked questions". With high water intake pressure, a reducing valve must be used. Connection to the water supply ,Do not drink water from the dishwasher! The dishwasher can heat its own water to the temperature required by the wash program. This allows for connection of the machine to either a hot or cold water source. For lowest energy consumption connect the dishwasher to a cold water source. For fastest possible wash times, with slightly higher energy consumption, connect the dishwasher to a hot water source.



[You're reading an excerpt. Click here to read official MIELE G 2872](http://yourpdfguides.com/dref/4310871)

[SCVI user guide](http://yourpdfguides.com/dref/4310871)

<http://yourpdfguides.com/dref/4310871>



All programs use hot water in the rinse cycles. To use the "Energy Saver" program, a hot water connection of minimum 115°F / 45°C and maximum 140°F / 60°C (water intake temperature) is necessary. The higher the water intake temperature, the better the cleaning and drying results.

The inlet hose is approximately 5 ft. (1.5m) long. To prevent damage to the dishwasher, it must only be connected to a fully vented drainage system. Do not cut the intake hose. It contains electrical wiring. If the hose is cut, the dishwasher will not work. There will be a water leak and you could be injured. If the hose is too long, coil it neatly and place it behind the machine. 77 Plumbing Drainage The machine comes equipped with a built-in non-return valve on the discharge side to prevent waste water from flowing back into the dishwasher.

The dishwasher is equipped with a 5 ft (1.5 m) flexible drain hose with an internal diameter of 7/8" (22 mm). Drain hose extensions and adapters can be ordered from Miele. The maximum drain hose length is 13 ft. (4 m), max.

drain height: 39" (1 m). If the hose is to be directly fitted to the drainage outlet on site, use the supplied hose clip (see assembly plan). The hose can be installed to the left or right side. The existing drain pipe for the drain hose is designed for various hose diameters. The drain pipe must be shortened if the drain pipe extends too far into the drain hose.

The drain hose could get clogged. The drain hose must not be shortened. Venting the drainage system If the dishwasher drain hose is connected to a floor drain or to a drain pipe that is less than 8" (20 cm) above the floor, the drain must be vented. Otherwise the water inside the dishwasher may siphon out during the wash program. ^ Open the dishwasher door and remove the lower basket. ^ Pull the lower spray arm firmly upwards to remove. ^ Cut off the vent cap located at the right rear of the triple filter system, as illustrated. Make sure the hose is installed without kinking, pressure or being pulled. 78 79 Alteration rights reserved / 1810 G 2872 M.-Nr.

07 724 170 / 01 INFORMATION IS SUBJECT TO CHANGE. PLEASE REFER TO OUR WEBSITE TO OBTAIN THE MOST CURRENT PRODUCT SPECIFICATIONS, TECHNICAL & WARRANTY INFORMATION. .



[You're reading an excerpt. Click here to read official MIELE G 2872](#)

[SCVI user guide](#)

<http://yourpdfguides.com/dref/4310871>