




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE G 658 SCVI. You'll find the answers to all your questions on the MIELE G 658 SCVI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE G 658 SCVI
User guide MIELE G 658 SCVI
Operating instructions MIELE G 658 SCVI
Instructions for use MIELE G 658 SCVI
Instruction manual MIELE G 658 SCVI

Miele

Operating instructions

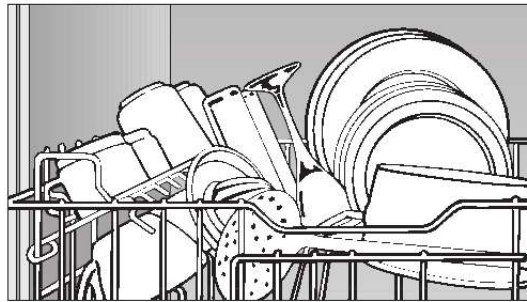

Incognito
G 658 SCVi
G 858 SCVi

To prevent accidents
and machine damage,
read these instructions
before
installation or use.

HG01

USA CDN

M.-Nr. 05 431 331



[You're reading an excerpt. Click here to read official MIELE G 658 SCVI user guide](http://yourpdfguides.com/dref/4310858)

<http://yourpdfguides.com/dref/4310858>

.....
.....
.....
..... 18 Rinse aid

.....
.....
.....
.....

.....
.....
.....
..... 19 Adding rinse aid

.....
.....
.....
.....

.....
..... 19 Adjusting the dosage...
.....
.....

.....
.....
.....
.....

..... 20 Rinse aid indicator .

.....
.....
.....
.....

.....
..... 20 Loading the dishwasher Items not recommended for dishwashing . .
.....
.....

.....
.....
.....
.....

..... 22 Cutlery tray (SC units) .

.....
.....
.....
.....

..... 23 Upper basket

.....
.....
.....
.....

.....
.....
.....
..... 24 Adjusting the upper basket . .

.....
.....
.....
.....

..... 24 Adjustable cup racks ...
.....

.....
.....

.....
.....
.....
.....
.....
. 25 Coffee bar

.....
.....
.....
.....

.....
..... 25 Lower basket .

.....
.....
.....
.....
.....

..... 26 Lower basket inserts Removing an insert . . .

.....
.....
.....

.....
.....
.....

.. 27 Inserting an insert

.....
.....
.....
.....

..... 27 Foldable spike insert .

.....
.....
.....

.....
.....
.....

... 28 PlateGuard Plus insert

.....
.....
.....
.....

..... 29 Vase / Bottle holder . . .

.....
.....
.....

.....
.....
.....

.. 29 Basket accessories 2 Contents Operation Adding detergent.

.....
.....
.....
.....

.....
.. 31 Running the dishwasher ...

.....
.....

.....
.....
.....

..... 32 At the end of a program.....

.....
.....
.....
.....

.....
. 32 Interrupting a program ...

.....
.....

.....
.....
.....

..... 33 Changing a program ...

.....
.....
.....
.....

.....
.... 33 Program guide .

.....
.....

.....
.....
.....
.....

..... 34 Additional features

.....
.....
.....

.....
.....
.....

..... 35 "Top Solo" (2)

.....
.....
.....
.....

.....
.....

35 Delay start (d)

.....
.....
.....
.....

..... @@

several minutes before using the dishwasher. This will release any accumulated hydrogen gas. Do not smoke or use an open flame during this time. Do not wash plastic items unless they are labeled "dishwasher safe" or the equivalent.

For items not labeled, check the manufacturer's recommendations. **5 IMPORTANT SAFETY INSTRUCTIONS** When loading tableware, place sharp items away from the door seal to prevent damage to the seal. Load knives pointing downwards to prevent injuries. Only use detergents and rinse aids recommended for residential dishwashers. Keep all detergents and rinse aids out of the reach of children.

Do not drink water from the dishwasher! Harmful residues could be present. For dishwashers with a visible heating element Do not touch the heating element during or immediately after use. Disposal of an appliance If the appliance is removed from its installation and will not be used, the door to the wash cabinet should be removed to prevent children from being locked in the machine. When discarding an old dishwasher, unplug it from the power outlet, remove the door to the wash cabinet and cut off the power cord. **SAVE THESE INSTRUCTIONS 6 CONSIGNES DE SÉCURITÉ IMPORTANTES AVERTISSEMENT**
Lorsque vous utilisez votre lave-vaisselle, veuillez prendre des précautions essentielles, y compris ce qui suit.



[You're reading an excerpt. Click here to read official MIELE G 658
SCVI user guide
http://yourpdfguides.com/dref/4310858](http://yourpdfguides.com/dref/4310858)

Lisez attentivement l'ensemble des consignes avant d'installer ou d'utiliser le lave-vaisselle afin de prévenir les blessures et éviter d'endommager l'appareil. Sécurité électrique Avant l'installation, assurez-vous que la tension et la fréquence indiquées sur la plaque signalétique correspondent bien à celles de l'alimentation électrique de la résidence afin de prévenir les blessures et d'éviter d'endommager l'appareil. Dans le doute, consultez un électricien qualifié. Avant de procéder à l'installation ou à des travaux d'entretien, coupez l'alimentation électrique, soit en débranchant l'appareil, soit en faisant basculer le disjoncteur, soit en enlevant le fusible. N'utilisez pas de rallonge pour brancher l'appareil à la source d'alimentation électrique.

Les rallonges ne garantissent pas la sécurité requise pour l'appareil - si vous utilisez une rallonge, cela peut causer une surchauffe. Assurez-vous que votre appareil est installé correctement et mis à la terre par un technicien qualifié. Pour garantir la sécurité électrique de l'appareil, il faut le raccorder à une installation de mise à la terre appropriée. Il est essentiel de respecter cette exigence de sécurité élémentaire. Dans le doute, faites vérifier l'installation électrique de la résidence par un électricien qualifié. Le fabricant ne peut être tenu responsable de dommages causés par l'absence d'une installation de mise à la terre ou une installation déficiente. Le fabricant ne peut être tenu responsable des dommages ou blessures causés par une utilisation inappropriée de l'appareil. Utilisez le lave-vaisselle uniquement aux fins auxquelles il a été conçu. Cet appareil est destiné à un usage domestique uniquement. Conservez ces instructions dans un lieu sûr et transmettez-les à tout utilisateur ultérieur.

7 CONSIGNES DE SÉCURITÉ IMPORTANTES Installation L'installation et les réparations devraient être effectuées uniquement par un technicien de service autorisé Miele. Les travaux effectués par des personnes non chauffant pendant ou immédiatement après l'utilisation. Mise au rebut de l'appareil Si vous désinstallez l'appareil et comptez ne plus vous en servir, détachez-en la porte pour éviter que des enfants s'y retrouvent enfermés. Lorsque vous mettez un lave-vaisselle au rebut, débranchez-le de la source d'alimentation électrique, détachez-en la porte et coupez le cordon d'alimentation. **CONSERVEZ CES CONSIGNES** 9 Caring for the environment Energy saving washing This dishwasher is exceptionally economical in the use of water and electricity.

For best results follow these tips: ^ For lowest ener Button a b c d e * US gallons ** Factory preset If this value corresponds with the water hardness in your area: ^ Turn off the dishwasher. If you need to program a different water hardness: ^ Press the button, which corresponds with your water hardness (see Table 1). The "Salt" and b indicators will flash. ^ Press the f button twice. The "Salt" and f indicators will flash.

The new water hardness is set. ^ Turn off the dishwasher. 15 Before using for the first time 13 - 70 gr/gal: ^ Press the f button. The f indicator will light. An indicator corresponding to a set water hardness will light (see Table 2). Table 2: gr/gal ppm Button a b c d e 13 230 14 - 16 250 - 290 17 - 22 310 - 400 23 - 35 410 - 630 36 - 70 650 - 1260 Checking the programmed water hardness ^ Open the door. ^ Turn off the dishwasher. ^ Press and hold the a and c buttons. At the same time turn on the dishwasher with the "On" (15) button. ^ Release all buttons.

The "Salt" and b indicators will flash. If this is not the case, the above steps must be repeated. ^ Press the b button. The programmed water hardness is indicated by: 1 - 12 gr/gal Corresponding indicator is lit, (see Table 1). If you need to program a different water hardness: ^ Press the button which corresponds to your water hardness (see Table 2). The "Salt" and b indicators will flash. ^ Press the f button twice. The "Salt" and f indicators will flash. The new water hardness is set. ^ Turn off the dishwasher.

^ If an indicator is not lit, press the f button. 13 - 70 gr/gal: The f indicator and an additional corresponding indicator is lit, (see Table 2). ^ Turn off the dishwasher. If this value corresponds with the water hardness in your area: ^ Turn off the dishwasher. 16 Before using for the first time Filling the salt reservoir If your water hardness level is greater than 8 gr/gal, the salt reservoir should be filled before the first use and when the "Salt" indicator lights. Only use water softener salt specially formulated for dishwashers. Other salts may contain insoluble additives which can impair the water softener. The proper salt can be purchased from your Miele dealer or Miele. To fill the salt reservoir: ^ Remove the lower basket. ^ Unscrew and remove the salt reservoir cap located on the floor of the wash cabinet.

^ Place the provided funnel over the salt reservoir. The salt reservoir must be filled with 2 quarts (2 l) of water before adding salt for the first time. Water does not have to be added with subsequent refills. Inadvertently filling the salt reservoir with dishwashing detergent will damage the water softener. ^ Carefully fill with salt. The salt reservoir holds approximately 4.5 lbs (2 kg) of salt. As it is filled, water will run out. ^ Clean any excess salt from the threads of the reservoir opening. ^ Screw the cap on firmly.

^ If the dishwasher will not be used immediately, run the "Rinse & Hold" program. This will remove any traces of salt from inside the wash cabinet. 17 Before using for the first time Salt indicator When the salt reservoir is empty, the "Salt-PC" indicator will light, indicating that it should be refilled with reactivation salt. Bypassing the salt indicator If your water is soft (below 8 gr/gal) the salt reservoir should not be filled with salt. The indicator will remain lit and should be disregarded or bypassed. ^ Remove the salt reservoir cap. Looking into the salt reservoir, you will see the top of the float chamber on the right hand side, a. After the reservoir has been filled, the water softener is automatically reactivated the next time the dishwasher is started. The "Salt" indicator will be lit during this process.



[You're reading an excerpt. Click here to read official MIELE G 658](http://yourpdfguides.com/dref/4310858)

[SCVI user guide](http://yourpdfguides.com/dref/4310858)

<http://yourpdfguides.com/dref/4310858>

^ Using a screwdriver, carefully pivot the float chamber towards the center of the reservoir.

^ Using needle nose pliers, pull the cap, b, off of the float chamber, and remove the float, c. Replace the float chamber cap, push the chamber back into its upright position, and replace the salt reservoir cap. The "Salt" indicator should no longer be lit. 18 Before using for the first time Rinse aid Rinse aid is recommended to prevent spotting on dishes and glassware. ,Filling the rinse aid reservoir with detergent will damage the reservoir.

Only pour rinse aid formulated for residential dishwashers into the reservoir. Adding rinse aid ^ Pour liquid rinse aid into the reservoir until it is visible on the surface of the screen. ^ Press on the flap until you hear it click shut. Failure to close it all the way will allow water to enter the reservoir during the wash program. ^ Wipe up any spilled rinse aid.

The flap will remain closed during normal operation. ^ Add rinse aid before the first use and whenever the "Rinse aid" indicator lights. ^ Press the button in the direction of the arrow until the flap springs open. 19 Before using for the first time Adjusting the dosage The dosage selector is preset to 3. This dispenses approximately 3 ml of rinse aid per program. It can be adjusted from 1 to 6. Rinse aid indicator The rinse aid indicator on the control panel will light when the rinse aid reservoir needs refilling. ^ Use a higher setting if spots appear on dry glassware. ^ Use a lower setting if streaking appears on dishes or glasses.

When the indicator first comes on, there will be enough rinse aid left for 2 - 3 washes.

20 Loading the dishwasher ,Do not wash items soiled with ^ The spray arms must not be blocked by items that are too tall or hang through the baskets. Check clearance by manually rotating the spray arms. ^ Food residue and spilled liquids should be cleaned from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms. ash, sand, wax, grease or paint in the dishwasher. Ash and sand do not dissolve and will be distributed throughout the inside of the dishwasher. @ @ ^ Scrape food from dishes before placing in the dishwasher. Do not rinse dishes. ^ Load dishes so that water can reach all surfaces. Do not place dishes and cutlery inside other pieces.

@ @ @ @ @ ^ Small cups and glasses should be placed on the cup racks. Taller mugs and glasses can be placed beneath the rack. @ @ Wooden cutting boards. @ @ @ @ Lead crystal. Copper, brass, tin or pewter.

Plastic items that are not heat resistant. Dishes with color painted over the glaze. These dishes may fade over time. Cast iron pots and pans. @ @ @ @ See the "Program guide".

@ @ @ @ @ Silver and aluminum: Silver or aluminum items may tarnish. @ @ This can be rubbed off with a soft, dry cloth. @ @ If left to dry, foods containing sulfur can discolor silver. @ ^ Release the levers and the basket will lock in place. @ @ The angles should not be set to opposite extremes. This will block the middle spray arm. @ @ @ @ The bar can also be used to separate two rows of glasses.

@ @ @ @ @ It can be folded out of the way for pots, pans and other large items. @ @ pots, pans and bowls. @ @ for milk or baby bottles, can be inserted into the bottom basket in more than one place.

Position in any area marked white in the illustration. Do not place the insert in the corners of the lower basket, water cannot properly cover bottles in these areas. 29 Basket accessories Additional inserts for the upper and lower baskets may be purchased from your Miele dealer or the Miele Technical Service Department. Vase / Bottle holder To wash milk or baby bottles, attaches to the lower basket. To wash a large number of glasses, attaches to the lower basket.

To wash a large number of cups, attaches to the lower basket. To wash plates with a diameter up to 12 1/2" (32 cm), attaches to the lower basket. To wash additional cutlery for units with cutlery tray, attaches to the lower basket. To wash cups and stemware in the lower basket, attaches to the Plateguard rack. To wash long stemmed glassware, attaches to the upper basket.

Tall Glassware Insert Lower Basket Cup Insert Large Diameter Plate Insert Mini Cutlery Basket Plateguard Plus Cup Rack Upper Basket Glassware Insert

30 Operation Adding detergent ,Dishwasher detergents contain irritant and corrosive ingredients. Keep children away from detergent. Do not fill the detergent dispenser until you are ready to start the dishwasher. Only use powder detergents or tablets formulated for residential dishwashers. The use of gel or liquid detergent is not recommended.

Never fill the detergent dispenser to capacity. Do not use more than the recommended amount of detergent. Continued use of too much detergent may cause machine damage. The horizontal marks in Compartment II indicate levels of approximately 1 1/4, 1 3/4 and 2 tablespoons (20, 25 and 30 ml) respectively. ^

With the dishwasher door fully open fill compartment II with 2 tablespoons (30 ml) of powder detergent or one detergent tablet.

^ Close the cover. The cover will always open at the end of a wash program except in "Rinse & Hold". 2 tablespoons (30 ml) of detergent is enough for most normally soiled loads. For heavily soiled loads, or if food has dried on the dishes, a program containing a prewash cycle should be selected. Add an extra tablespoon (15 ml) of detergent to compartment I. ^ To open, press the latch on the detergent dispenser. Less detergent is needed in homes with very soft water and when washing lightly soiled dishes. 31 Operation Running the dishwasher ^ Open the door. ^ Make sure the spray arms are not blocked. ^ Turn on the dishwasher using the "On" button (15).

^ Select a wash program using the program selection buttons (22). Refer to the "Program guide" for details. The selected program indicator will light. ^ Select "Top Solo" or "Delay Start" if desired. See "Additional features". ^ Close the door. The red optic indicator will come on. The program will begin. Do not end a program prematurely! Important program steps could be omitted (e.g.

reactivating the water softener). Waterproof System All Miele dishwashers are specially designed to shut off the water intake and drain the wash cabinet in the rare event of an internal water valve failure. For this feature to be active, the machine must be "On" (not necessarily running), and the door must be closed. At the end of a program At the end of a program the optic indicator will flash. The optic indicator will go out after an hour, or sooner if the door is opened.

After a program has ended: ^ Open the door. The optic indicator and the program indicator will go out. ^ Press the "Off" button (16). Allow dishes to cool before unloading. It is advisable to turn off the water supply if the dishwasher will not be used for a period of time (e.



[You're reading an excerpt. Click here to read official MIELE G 658](http://yourpdfguides.com/dref/4310858)

[SCVI user guide](http://yourpdfguides.com/dref/4310858)

<http://yourpdfguides.com/dref/4310858>

g. while vacationing). 32 Operation Interrupting a program A program is interrupted as soon as the door is opened. If the door is closed, the program will continue from where it was interrupted. Changing a program If the door has not been closed yet: ^ Press the program button of the new program. ^ Close the door. hot. There is a danger of being burned! Only open the door if absolutely necessary. Water in the dishwasher may be The program will begin. If the door has already been closed and the program is running: ^ Open the door.

^ Press the "Off" button (16). ^ Press the "On" button (15). ^ Select a new program using the program selection buttons (22). ^ Close the door. @@@@Program times are based on a hot water connection. @@@@This program is recommended when there is only a small load to clean. "Top Solo" can be selected with all programs. @@@@The "On" indicator (15) will light. ^ Select a program using the program selection buttons (22). The selected program indicator will light.

^ Press the 2 (19) button. The 2 (19) indicator will light. @@^ Close the door. The optic indicator will come on. The program will begin. 35 Operation Delay start (d) The start time of a program can be delayed from 1 to 9 hours. The delay start is set in one hour steps. When using delay start, make sure the detergent compartment is dry before adding detergent. Wipe dry if necessary. ^ Press the "On" button (15). ^ Select a program using the program selection buttons (22). The selected program indicator will light. ^ Press the d (18) button. 1 will appear in the delay start display (17). A delayed start time of one hour is set. ^ Press the d button (18) until the desired delayed start time appears in the time display (17). The delay start is set in one hour steps up to 9 hours. If the "Delay Start" d (18) button is pressed after the 9 hour mark the delay start feature will be canceled and must be reselected. ^ The "Top Solo" feature may also be selected at this time (see previous page). ^ Close the door.

Once the delay start period has elapsed, the selected program will begin automatically. 36 Operation To start a program before the delay start period has elapsed: ^ Open the door. ^ Press the "Off" button (16). ^ Press the "On" button (15). ^ Select a program using the program selection buttons (22). ^ Select "Top Solo", if needed. ^ Close the door. The optic indicator will come on. The program will begin. 37 Frequently asked questions With the aid of the following guide, minor problems can be fixed without a service call.

,Repairs should only be carried out by a qualified and trained technician in accordance with local and national safety regulations. Unauthorized repairs could cause personal injury or machine damage. What if...

Possible fault Fix Close the door firmly. Insert the plug. Reset the circuit breaker. Make sure it is a 15 A circuit breaker. Press "On", select program. Select a program with the program selection buttons. Reset the circuit breaker. Make sure it is a 15 A circuit breaker. Turn off the dishwasher. Open the water valve. Clean the water inlet filter, see maintenance instructions. The waterproof system has activated. Call the Miele Technical Service Department. the dishwasher does not The door is not properly start? closed. The machine is not plugged in.

The fuse is defective or the breaker has tripped. The dishwasher is not turned on. No program is selected. the dishwasher stops during a program? the dishwasher stops running, shortly after starting a program and the optic indicator flashes? The fuse or breaker has tripped. Water intake error. The "Intake/Drain" indicator flashes/lights. 38 Frequently asked questions What if ... shortly after starting a program, the dishwasher stops running and the optic indicator flashes? Possible fault Water intake error.

The "Intake/Drain" indicator flashes. Fix The water pressure is less than 4.5 psi (0.3 bar). Contact a plumber. Drain error, water remains Turn off the dishwasher. in the wash cabinet. Clean the triple filter. The "Intake/Drain" See maintenance indicator flashes. instructions.

Clean the drain pump and the non-return valve, see maintenance instructions. Remove any kinks in the drain hose. after starting a program, The optic indicator Install the optic indicator the optic indicator does reflector was not placed in reflector correctly. See Installation manual, not shine? the steam deflector properly. "1. Install the steam deflector". 39 Frequently asked questions What if ... after a program has ended, the optic indicator and the program indicators flash? Possible fault Fix There may be a technical Turn the dishwasher off.

fault. Despite the problem the dishwasher can be used. If the indicators flash again after the next program cycle, call Miele Technical Service. The spray arm is hitting an item in the basket. Interrupt the program, rearrange items blocking the spray arms. Interrupt the program and rearrange loose pieces. This has no effect on the dishwasher. If in doubt contact a plumber. Increase the dosage or refill the reservoir, see "Before using for the first time". there is a knocking noise in the wash cabinet? there is a rattling noise? Items are not secure in the wash cabinet.

there is a knocking noise in the water pipes? dishes are not dry, glasses and cutlery are spotted? This may be caused by the installation or diameter of the pipes. The rinse aid setting may be too low, or the rinse aid reservoir is empty. Dishes were taken out too Leave dishes in longer. soon. 40 Frequently asked questions What if .

.. dishes are not clean? Possible fault The dishes were not loaded correctly. The program was not powerful enough. Not enough detergent was used. The spray arm jets are clogged. Fix See "Loading the dishwasher". Select a more intensive program, see the "Program guide". Use more detergent, see "Adding detergent". Clean the spray arm jets, see "User Maintenance Instructions". The triple filter is clogged Clean and reseal the filter, or not correctly seated. see "User Maintenance Instructions". The drain pump or the non-return valve is blocked. Clean the drain pump and the non-return valve, see "User Maintenance Instructions". 41 Frequently asked questions What if .

.. tea or lipstick stains have not been completely removed? Possible fault Fix The wash temperature of Select a program with a the selected program was higher temperature. too low. Not enough detergent Use more detergent. was used. Not enough rinse aid was Increase the dosage, used. see "Before using for the first time". The salt reservoir is Add reactivation salt, empty. see "Before using for the first time". The salt reservoir cap was not correctly screwed on.



[You're reading an excerpt. Click here to read official MIELE G 658](http://yourpdfguides.com/dref/4310858)

[SCVI user guide](http://yourpdfguides.com/dref/4310858)

<http://yourpdfguides.com/dref/4310858>

The programmed setting of the water softener is too low. Reseat it making sure it screws back on correctly. Adjust the setting of the water softener, see "Before using for the first time". Reduce the dosage, see "Before using for the first time".

white residue is visible on cutlery and dishes, clouding occurs on glassware and film can be wiped off? there are smears on glasses and cutlery, bluish sheen on the surface of glasses and film can be wiped off? glasses are dull and discolored and film cannot be wiped off? The rinse aid dosage is set too high. Glasses are not dishwasher safe. There is no remedy. Only wash dishwasher safe glasses. 42 Frequently asked questions What if .

.. Possible fault Fix Use more detergent, see "Adding detergent". Discoloration is permanent. Reseat and screw the cap on firmly. There is no remedy. Only wash dishwasher safe cutlery. Remove the residue. plastics are discolored? Natural dyes e.g.

from vegetables may be the cause. Not enough detergent was used to break down natural dyes. there are rust stains on The salt reservoir cap was cutlery? not screwed on properly. The affected items are not corrosion resistant. the detergent dispenser lid cannot be closed properly? detergent is left in the dispenser at the end of a program? water remains in the wash cabinet at the end of a program? Detergent residue is blocking the catch. The dispenser was damp Dry the dispenser before when detergent was added. The triple filter in the wash Clean the filter, see "User cabinet is clogged. Maintenance Instructions". The drain pump or the non-return valve may be blocked.

The drain hose is kinked. Clean the drain pump and the non-return valve, see "User Maintenance Instructions". Remove the kink. 43 After sales service In the event of a fault which you cannot correct yourself please contact the Miele Technical Service Department. U 1-800-999-1360 techserv@mieleusa.com V 1-800-565-6435 service@miele.ca When contacting the Miele Technical Service Department, please quote the model and serial number of your appliance. These can be found on the data plate on the upper inside edge of the dishwasher door. Program update function - PC The Program Correction (PC) allows a technician to update the dishwasher to make use of new technology. MieleCare MieleCare, our Extended Service Contract program; gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership.

MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance. Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele. Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home. To learn more about MieleCare Extended Service Contracts, please contact your appliance dealer or visit us online at: www.miele.com/mielecare/mielecare.home.asp. For example, if a detergent with good wash results using only cold water becomes available, the wash programs can be modified to take advantage of this. 44 Transport To transport the dishwasher, e.

g. when moving to a new home, note the following: Empty the dishwasher. Secure any loose parts, e.g. hoses, cables, cutlery baskets. Transport the dishwasher in the upright position. If unavoidable it may be transported on its back. Do not transport it on its side or on the door. @@@@broken glass, bones). @@Remove any solid particles and rinse under running water.

@@^ Turn the handle counterclockwise to release the triple filter system. 48 Cleaning and Care To clean the underside of the filter, the flap must be opened: ^ Pull back the yellow clip. ^ Rinse all parts under running water. Scrub with a nylon brush if necessary. ^ Close the flap so that the clip engages.

^ Return the filter so it lies flat in the base of the wash cabinet. ^ Lock the filter by turning the handle clockwise. The dishwasher must not be used without the filter locked in place. 49 Cleaning and Care Cleaning the spray arms Sometimes particles of food get stuck in the spray arm jets. The spray arms should be inspected and cleaned every 4 - 6 months.

^ Turn off the dishwasher before cleaning. Remove the spray arms as follows: ^ Remove the cutlery tray (if present). @@@ Pull the lower spray arm firmly upwards to remove. @@@ Rinse thoroughly under running water. @@@@They will damage the surface. Plastic All plastic surfaces and the control panel can be cleaned with warm water and liquid dish soap applied with a soft sponge. Wipe dry using a soft cloth. Cleaning the door and door seal ^ Wipe the door seal with a damp cloth to remove any food particles. ^ Food residue and spilled liquids should be wiped from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms.

,Do not use too much water when cleaning the controls. Water could penetrate into the electronics and cause damage. Stainless steel Stainless steel surfaces can be cleaned using a non-abrasive stainless steel cleaner. To help prevent resoiling, a conditioner for stainless steel can also be used. Apply sparingly with even pressure. Stainless steel colored controls These controls may become discolored or damaged if not cleaned regularly. Do not use a stainless steel cleaner on the knobs or buttons. Wood Panels made from wood should be cleaned using a soft damp cloth and an appropriate wood cleaner. 51 Cleaning and Care Cleaning the water inlet filter A filter is incorporated in the intake hose attached to the dishwasher's shut off valve. If your water is hard, or the pipes contain sediment, this filter may clog and prevent enough water from entering the wash cabinet.

Installing an in-line water filter ^ If your water contains a large number of insoluble substances, a filter between the water valve and the intake hose connection is recommended. These filters can be purchased from Miele. ,The plastic valve housing on the intake hose contains electrical components and should not be submerged, or run through water. Cleaning the filter: ^ Disconnect the dishwasher from electricity (unplug it or "trip" the circuit breaker). ^ Turn off the water valve.

^ Unscrew the intake hose. ^ Carefully remove the rubber seal. ^ Remove the filter using needle nose pliers and rinse under running water. ^ Return the filter and seal. Make sure they are seated correctly.

^ Screw the intake hose back on the water valve, checking that it is not cross-threaded. ^ Slowly turn on the valve and test for leaks.



[You're reading an excerpt. Click here to read official MIELE G 658 SCVI user guide](http://yourpdfguides.com/dref/4310858)
<http://yourpdfguides.com/dref/4310858>

52 *Cleaning and Care* *Cleaning the drain pump and non-return valve* If the dishwasher is not completely drained at the end of a program, the drain pump or non-return valve may be blocked. ^ Turn off the dishwasher. ^ Remove the triple filter (see "Cleaning the filter in the wash cabinet"). ^ Use a jug or bowl to scoop water out of the wash cabinet. ^ Pull out the non-return valve and rinse well under running water. ^ Tilt the locking clamp to the side. The drain pump is beneath the non-return valve (see arrow). ^ Before returning the non-return valve, check that the drain pump is not blocked.

Spin the propeller several times in both directions to check for obstructions. ^ Carefully refit the non-return valve and secure it with the locking clamp. ^ Refit and lock the filter in place. 53 54 55 Alterations rights reserved / G 851 Plus 2505 M.-Nr. 05 431 331 / 02 .



[You're reading an excerpt. Click here to read official MIELE G 658](#)

[SCVI user guide](#)

<http://yourpdfguides.com/dref/4310858>