




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE G 694 SC. You'll find the answers to all your questions on the MIELE G 694 SC in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE G 694 SC  
User guide MIELE G 694 SC  
Operating instructions MIELE G 694 SC  
Instructions for use MIELE G 694 SC  
Instruction manual MIELE G 694 SC

**Miele**

## Installation instructions

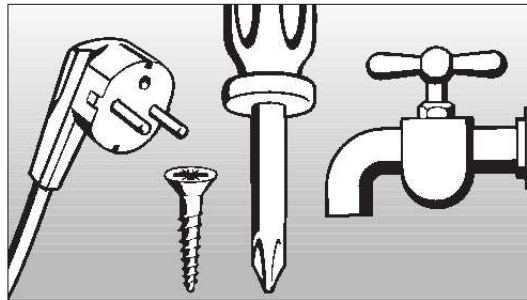

Dishwasher

To prevent accidents  
and machine damage,  
read these instructions  
**before**  
installation or use.

HG01  
HG02

(USA) (CDN)

M.-Nr. 05 620 922



[You're reading an excerpt. Click here to read official MIELE G 694 SC user guide](http://yourpdfguides.com/dref/4310850)

<http://yourpdfguides.com/dref/4310850>

**Manual abstract:**

.....  
.....  
.....  
.....

*.. 3 INSTRUCTIONS IMPORTANTES SUR LA SÉCURITÉ.....*

.....  
.....

*... 5 Caring for the environment.....*

.....  
.....  
.....  
.....

*..... 7 Disposal of the packing material.....*

.....  
.....  
.....

*..... 7 Disposal of an old machine .*

.....  
.....

*..... 7 Product and Cut-out Dimensions ...*

.....  
.....  
.....  
.....

*..... 8 Installation.....*

.....  
.....  
.....

*..... 11 1. Install the steam deflector .*

.....  
.....  
.....  
.....

*11 2. Install the mounting brackets. ...*

.....  
.....

*12 3. Install the slide skis.....*

.....  
.....  
.....  
.....

..... 12 4. Install the dishwasher under the countertop . .

.....  
.....  
.....

..... 13 5. Level the legs . . . .

.....  
.....  
.....

..... 14 6. Install the control panel . .

.....  
.....  
.....  
.....

. 15 7. Align the control panel . . .

.....  
.....

..... 18 8. Install the custom door panel . . .

.....  
.....  
.....  
.....

..... 19 9. Secure the dishwasher . . . .

.....  
.....  
.....

.....  
.....

..... 26 10.

Adjust the door springs . . . . .

.....  
.....  
.....  
.....

. . 28 11. Make the plumbing connections . . . . .

.....  
.....  
.....

..... 29 12. Make the electrical connection .

.....  
.....  
.....

.....  
.....

33 13. Test the unit . . . .

.....  
.....  
.....

.....  
.....  
..... 35 14. Install the toe kick ..

..... @@@@ However, under certain conditions it may be possible for an installation in these applications. Please contact the nearest Miele dealer or the Miele Technical Service Department with specific requirements. Inspect the dishwasher for transport damage. Do not install or use a damaged unit. Contact the place of purchase.

This dishwasher must be installed under a continuous countertop secured to adjacent cabinetry. Do not install this dishwasher beneath a cooking surface or oven. Do not, under any circumstances, cut the intake hose or submerge in liquid. @@@@ This data must correspond to prevent injury and machine damage. Consult a qualified electrician if in doubt. @@ It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician. The manufacturer cannot be held responsible for damages caused by the lack, or inadequacy of, an effective grounding system. Before installation or service, disconnect the power supply to the work area by manually "tripping" the circuit breaker, unplugging the unit, or removing the fuse. Do not use an extension cord to connect the unit to electricity. Extension cords do not guarantee the required safety of the appliance, (e.

g. danger of overheating). Child safety Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation! If the appliance is removed from its installation and will not be used, the door to the wash cabinet should be removed to prevent children from being locked in the machine.

When discarding an old dishwasher, unplug it from the power outlet, remove the door to the wash cabinet and cut off the power cord. 4 INSTRUCTIONS IMPORTANTES SUR LA SÉCURITÉ Installation L'installation et les travaux de réparation et d'entretien doivent être effectués par un technicien de service autorisé Miele. Les travaux effectués par des personnes non qualifiées, pourraient être dangereux et faire annuler la garantie. Cet équipement n'a pas été conçu pour usage maritime ou pour les installations mobiles telles que les roulottes ou les avions. Toutefois, il peut être parfois possible de faire l'installation de ces applications sous certaines conditions.

Veillez contacter le Concessionnaire Miele le plus près de chez-vous ou le Département du service technique Miele pour leur donner vos exigences précises. Inspecter le lave-vaisselle pour voir s'il a été endommagé lors de l'expédition. Ne pas installer ou utiliser, un appareil endommagé. Veuillez contacter le point d'achat. Ce lave-vaisselle doit être installé sous un comptoir continu bien fixé aux armoires adjacentes. Ne pas installer ce lave-vaisselle sous une surface de cuisson ou un four. Ne jamais, sous aucunes circonstances, couper le boyau de prise ou submerger dans un liquide. Ce boyau contient des éléments électriques qui pourraient causer des blessures ou des dégâts matériels s'ils sont coupés ou submergés. Si vous avez des doutes au sujet de l'installation, contactez le Département du service technique Miele. USA 1-800-999-1360 techserv@mieleusa.

com CDN 1-800-565-6435 service@miele.ca ,Durant le processus d'installation, veuillez faire attention aux rebords coupants qui peuvent blesser. 5 INSTRUCTIONS IMPORTANTES SUR LA SÉCURITÉ Sécurité électrique Avant l'installation, s'assurer que la tension et la fréquence énumérées sur la plaque signalétique correspondent à la source d'électricité de la résidence. Ces données doivent correspondre afin d'éviter de vous blesser et d'endommager l'appareil. Consulter un électricien qualifié si vous avez des doutes. Pour garantir la sécurité électrique de cet appareil, il doit y avoir continuité entre l'appareil et un système efficace de mise à la terre. Ce critère de sécurité doit absolument être respecté. Si vous avez des doutes, faire vérifier le système électrique de votre maison par un électricien qualifié. Le fabricant ne peut pas être tenu responsable des dommages causés par un système de mise à la terre efficace, manquant ou inadéquat. Débrancher le courant de la zone de travail avant l'installation, en débranchant l'appareil, retirant le fusible ou en faisant "sauter" le disjoncteur.

Ne pas utiliser de rallonge pour brancher l'appareil. Les rallonges ne garantissent pas la sécurité requise pour l'appareil, (par ex. danger de surchauffage). Sécurité des enfants S'assurer de disposer de tous les emballages de plastique, sacs etc. et de les garder hors de la portée des bébés et jeunes enfants. Danger de suffocation! Si l'appareil est retiré de son installation et que vous ne l'utilisez pas, vous devez retirer la porte du meuble de lavage pour empêcher les enfants de s'enfermer dans l'appareil. Pour disposer d'un ancien lave-vaisselle, le débrancher de la prise, enlever la porte du meuble de lavage et couper le cordon électrique.



[You're reading an excerpt. Click here to read official MIELE G 694 SC user guide](http://yourpdfguides.com/dref/4310850)  
<http://yourpdfguides.com/dref/4310850>

6 Caring for the environment Disposal of the packing material The cardboard box and packaging protect the appliance during shipping. These materials are biodegradable and recyclable. Please recycle.

Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! Disposal of an old machine Old appliances may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials. Ensure that the appliance presents no danger to children while being stored for disposal. Before discarding an old appliance, unplug it from the outlet and cut off its power cord and remove any doors to prevent hazards. 7 Product and Cut-out Dimensions G 600 Series Dishwashers Full size models G 636 - G 698 Removing the leg extensions The black leg extensions can be removed to reduce the height of the machine to 32 1/4" - 33" (819 - 838 mm) (see Inset). A = Black leg extension (removable) B = White leg (must be installed on machine). ^ After removing the black leg extensions, screw the white legs onto the dishwasher. Machine heights of 33 1/4" - 34" (845- 864 mm) are not possible using the supplied legs.

For this height range, or for heights greater than 34 7/8" (886 mm), extended legs (part # 02 702 601) are necessary.

Install the slide skis Two slide skis are included and should be installed on the feet of the dishwasher before the machine is pushed under the countertop. This will allow the machine Dishwashers with fixed push buttons ^ Press the "On/Off" button in and place the cover, a, over the push button. ^ Push the drying vent grill, b, into its opening. ^ Position the control panel, c, and fasten it from the inside of the door, d, using the six screws provided. 17 Installation 7. Align the control panel The control panel should be aligned with the drawer fronts of the adjoining kitchen cabinets by adjusting the filler strips. ^ After adjliance. ,The side mounting holes ^ Open the dishwasher door and remove the caps covering the mounting holes on the outer edge of the wash cabinet. ^ Fasten the dishwasher to the adjacent cabinets using the supplied screws and bushings.

A bushing must be placed over the screw before inserting it into its mounting hole. ^ Tighten the screws and insert the caps. 27 Installation 10. Adjust the door springs ^ Open the dishwasher door halfway. If the door remains in this position when released, the springs are adjusted correctly.

If the door drops, the tension on the springs needs to be increased. If it closes on its own, the tension on the springs need to be decreased. Note: If the door springs can not be adjusted enough (the door falls), the custom door panel is too heavy. Call your Miele dealer or Miele's Technical Service Department for advice on stronger door spings. ^ To adjust the door springs use a T20 Torx or a small slotted screwdriver and turn the screw located behind the door in the upper front strip, on the left hand side of the dishwasher.

Do not use a power screwdriver. turn clockwise to increase the tension turn counterclockwise to decrease the tension. 28 Installation 11. Make the plumbing connections An air gap is built into the water inlet system to prevent potable water from mixing with waste water. The dishwasher can heat its own water to the temperatures required by the wash program. This allows the option of connecting the machine to either a hot or cold water source. ^ For lowest energy consumption connect the dishwasher to a cold water source. ^ For fastest possible wash times, with slightly higher energy consumption, connect the dishwasher to a hot water source. Hot water supply specifications: Recommended temperature: 120 °F (49 °C), max 140 °F (60 °C) Water pressure: Must be between 5 - 145 psi (0.3 -10 bar).

If the water pressure is too low, the "Intake/Drain" or "Intake" indicator may flash (see Operating Instructions/ "Frequently asked questions"). If the water pressure is too high, a pressure reducer must be installed. New plumbing: The water inlet hose comes equipped with a 3/4" female hose thread connector. @@@@@If the hose is cut, the dishwasher will not work. There will be a water leak and you could be injured. @@@@@ A built-in mechanical non-return valve on the discharge side to prevent waste water from flowing back into the dishwasher. A built-in odor trap on the discharge side to prevent odors from entering the kitchen. Maximum drain height: 39" (1 m) Maximum drain hose length: 12 ft (3.5 m) Do not shorten the drain hose. Do not connect the drain hose to anything but a genuine Miele hose.

Other hoses may melt or collapse. Connect the supplied drain hose to the drain pipe of the kitchen sink either: above the P trap using the clamp provided, or - to the dishwasher connector of the garbage disposal. When connecting the drain hose to the garbage disposal, make sure to remove the knockout from the connection nipple. (See the disposal manufacturer's instructions for this procedure.) 31 Installation Venting the drainage system If the dishwasher drain hose is connected to a floor drain or to a drain pipe that is less than 8" (20 cm) above the floor, the drain must be vented.

Otherwise the water inside the dishwasher may siphon out during the wash program. To vent the drain: ^ Open the dishwasher door and remove the lower basket. Additional note Since all Miele dishwashers are equipped with an odor trap and nonreturn valve, the drain hose can be connected directly to the drain pipe as illustrated. If plumbing codes require an external air gap on the discharge side of the dishwasher, the following requirements must be met: No part of the drain hose should be higher than 39" (1 m). If installed horizontally, the drain hose can be up to 12 ft (3.

5 m) long. If the drain hose is angled upwards in any way, it cannot be longer than 5 ft (1.5 m). The drain connection should be made as close as possible to the dishwasher. The internal diameter (7/8" or 22 mm) of the drain hose should not be reduced at any point. ^ Cut off the vent cap located at the right rear of the triple filter system, as illustrated. 32 Installation 12. @@@@Specifications The dishwasher comes equipped with a 4 ft (1.2 m) power cord with a molded plug for connection to 120 V, 60 Hz, 15 A grounded receptacle. Rated load:.

..... 12.  
5 A / 1500 W Voltage: .....  
.....  
..... 120 VAC Frequency: ..  
  
.....  
.....  
..... 60 Hz Circuit breaker:.....  
.....

.. 15 A ,Improper connection of the equipment grounding conductor can result in electric shock. Do not modify the plug provided with the appliance; if it will not fit the outlet, have a proper outlet installed by a qualified electrician.If there is any question concerning the proper electrical connection or grounding of this appliance to the power supply, please consult a licensed electrician or call Miele's Technical Service Department: USA 1-800-999-1360 CDN 1-800-565-6435 33 Installation Power outlet The power outlet for the appliance must be installed within a cabinet, on a wall adjacent to the undercounter space in which the dishwasher is located.

[You're reading an excerpt. Click here to read official MIELE G 694 SC user guide](#)



<http://yourpdfguides.com/dref/4310850>

An opening through the partition between the compartments of 1 1/2" (3 to 4 cm) can be made to allow the plug to pass through. @@@@Test the unit Once the dishwasher is level and secured it should be tested. ^ Remove all packing and literature from inside the unit. The yellow Child Safety Lock key hung on the upper basket must be removed before operating the dishwasher. If not removed, the key could become lodged in the circulation pump. ^ Check for any leaks, odd noises and flashing / lit fault indicators on the control panel. See the "Operating Instructions / Frequently asked questions" if there is a problem. ^ Make sure the triple filter system in the base of the wash cabinet is locked in place. Turn the handle clockwise to lock. ^ Close the soap dispenser.

Do not add detergent. ^ Run the dishwasher through the "Rinse & Hold" program. See the operating instructions for information on operation and program selection. 35 Installation 14. Install the toekick For installations using a continuous toekick or a cabinet matching toekick Before installing the toekick, measurements must be taken to ensure that the toekick will not interfere with the complete opening of the dishwasher If the door panel hits the toekick when the dishwasher door is opened, the toekick must be cut shorter or recessed deeper.

Note: If a decorative or flush mount toekick is desired, and (R) is less than 3/4" (19 mm), other modifications, such as beveling the top rear edge of the toekick, may be necessary. It is extremely important that the toekick is removable in case service is needed. door. The door panel overhang (P), and toekick depth of recess (R), determine the maximum dishwasher toekick height (H). If (H) is equal to or less than the toekick height of the adjoining cabinets, no interference will exist, provided that (R) is at least 3/4" (19 mm). 36 Installation For installations using the included plastic toekick G 600 Series dishwasher G 800 Series dishwasher and "U" model ^ Insert the mounting bracket with the flange pointing toward the center of the machine. ^ Push the mounting brackets in as far as possible by releasing the tension on the spring clip (see illustration). ^ Insert the mounting bracket with the flange pointing toward the outside of the machine. ^ Push the mounting brackets in as far as possible by releasing the tension on the spring clip (see illustration). 37 Installation The included toekick will fit without modification if the machine is set to its maximum height and the toekick is recessed as far as possible (4" / 10 cm).

If the machine height is less than maximum, or if the toekick is not recessed 4" (10 cm), the toekick must be shortened. ^ Screw the toekick onto the installed brackets, with the cutting lines towards the top, and pull out evenly and slowly until it aligns with the toekick of the adjoining cabinets. The toekick can not be pushed back in once it has been extended. It must be unscrewed, so that the tension on the spring clips can be released. The brackets can then be pushed in, and the toekick reattached. The rear of the toekick has two cutting lines. 38 Installation ^ Carefully open the dishwasher door until it hits the toekick. ^ Using the front lower edge of the door panel as a guide, draw a line across the toekick. ^ Unscrew and remove the toekick. ^ If one of the cutting lines is close to the line just drawn, score the front of the toekick, and snap off the excess, otherwise, trim the toekick along the line using a saw.

^ Screw the toekick back onto the brackets, with the cut edge at the bottom. After installation, carefully open the dishwasher door to check that the front panel does not hit the toekick. If it does, remove the toekick and trim it accordingly. 39 Alterations rights reserved / (NovoplusB,P,S) / 2703 M.-Nr. 05 620 922 / 01 This bio-friendly paper was bleached without the use of chlorine. .



[You're reading an excerpt. Click here to read official MIELE G 694 SC user guide](http://yourpdfguides.com/dref/4310850)  
<http://yourpdfguides.com/dref/4310850>