




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE G 842 SC PLUS. You'll find the answers to all your questions on the MIELE G 842 SC PLUS in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE G 842 SC PLUS
User guide MIELE G 842 SC PLUS
Operating instructions MIELE G 842 SC PLUS
Instructions for use MIELE G 842 SC PLUS
Instruction manual MIELE G 842 SC PLUS

Miele

Operating instructions

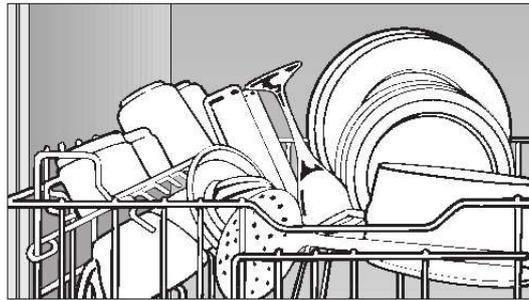

Novotronic
G 842 Plus
G 842 SC Plus

To prevent accidents
and machine damage,
read these instructions
before
installation or use.

HG01

USA CDN

M.-Nr. 06 088 620



[You're reading an excerpt. Click here to read official MIELE G 842 SC PLUS user guide](http://yourpdfguides.com/dref/4310825)

<http://yourpdfguides.com/dref/4310825>

.. 24 Upper basket ...

.....
.....
.....
.....

25 Adjusting the upper basket

.....
.....

..... 25 Adjustable cup racks .

.....
.....
.....

... 26 Coffee bar

.....
.....
.....

..... 26 Lower basket

.....
.....
.....

..... 27 Foldable spikes.

.....
.....
.....

..... 28 Vase / Bottle holder (select models) ..

.....
.....

. 28 Basket accessories 2 Contents Operation Adding detergent. ...

.....
.....
.....

. 30 Running the dishwasher

.....
.....

.....
.....
31 Program sequence indicator (14)
.....

.....
.....
.....
. . 31 At the end of a program.

.....
.....
.....
.....

. 32 Interrupting a program. . .
.....
.....
.....

.....
.....
.....
. . . 32 Changing a program

.....
.....
.....
.....

.....
32 Program guide
.....
.....

.....
.....
.....
.....

. . @@
.....
.....
.....

. 42 Cleaning the spray arms
.....
.....
.....

.....
.....
. . . . 44 Cleaning the wash cabinet .
.....

.....
.....
.....
.....

. 45 Cleaning the door and door seal
.....
.....
.....

. 45 Cleaning the exterior .

Sécurité électrique Avant l'installation, assurez-vous que la tension et la fréquence indiquées sur la plaque signalétique correspondent bien à celles de l'alimentation électrique de la résidence afin de prévenir les blessures et d'éviter d'endommager l'appareil. Dans le doute, consultez un électricien qualifié. Avant de procéder à l'installation ou à des travaux d'entretien, coupez l'alimentation électrique, soit en débranchant l'appareil, soit en faisant basculer le disjoncteur, soit en enlevant le fusible. N'utilisez pas de rallonge pour brancher l'appareil à la source d'alimentation électrique. Les rallonges ne garantissent pas la sécurité requise pour l'appareil - si vous utilisez une rallonge, cela peut causer une surchauffe. Assurez-vous que votre appareil est installé correctement et mis à la terre par un technicien qualifié.

Pour garantir la sécurité électrique de l'appareil, il faut le raccorder à une installation de mise à la terre appropriée. Il est essentiel de respecter cette exigence de sécurité élémentaire. Dans le doute, faites vérifier l'installation électrique de la résidence par un électricien qualifié. Le fabricant ne peut être tenu responsable de dommages causés par l'absence d'une installation de mise à la terre ou une installation déficiente. Le fabricant ne peut être tenu responsable des dommages ou blessures causés par une utilisation inappropriée de l'appareil. Utilisez le lave-vaisselle uniquement aux fins auxquelles il a été conçu. Cet appareil est destiné à un usage domestique uniquement. Conservez ces instructions dans un lieu sûr et transmettez-les à tout utilisateur ultérieur. 7 CONSIGNES DE SÉCURITÉ IMPORTANTES Installation L'installation et les réparations devraient être effectuées uniquement par un technicien de service autorisé Miele. Les travaux effectués par des personnes non qualifiées peuvent s'avérer dangereux et annuler la garantie.

, ATTENTION - Risque d'incendie Ne recouvrez et n'écrasez jamais la fiche d'un appareil électrique. Assurez-vous que dans l'espace occupé par le lave-vaisselle, il y a suffisamment d'espace pour la fiche. Si vous installez le lave-vaisselle dans un #039;alimentation électrique, détachez-en la porte et coupez le cordon d'alimentation. CONSERVEZ CES CONSIGNES 9 Caring for the environment Energy saving washing This dishwasher is exceptionally economical in the use of water and electricity. For best results follow these tips: ^ For lowest energy consumption and the gentlest washing of china and crystal, connect the dishwasher to a cold water source.

^ For fastest possible wash times, yet higher energy consumption, connect the dishwasher to a hot water source. ^ Make full use of the baskets without overloading for the most economical washing. ^ Choose a program that best suits the degree of soiling and the type of dish. 15 Before using for the first time ^ Press the "Start" button. The "Start" indicator will light.

^ Turn the program selector to "Stop". ^ Turn off the dishwasher with the "On/Off" button. The programmed water hardness is stored. Checking the programmed water hardness ^ Make sure the dishwasher is turned off. ^ Turn the program selector to "Stop". ^ Press and hold the "Start" button and at the same time turn on the dishwasher with the "On/Off" button. Release the "Start" button within two seconds. The "Salt" indicator will flash. If the "Rinse aid" indicator comes on, the rinse aid dispenser needs to be filled. If any other indicator is lit or flashing, the above steps must be repeated.

^ Turn the program selector clockwise until the "Start" indicator comes on. The position where the "Start" indicator comes on corresponds to the programmed water hardness (see table "Programming the water softener"). ^ Turn the program selector to "Stop". ^ Turn off the dishwasher. 16 Before using for the first time Filling the salt reservoir If your water hardness level is greater than 8 gr/gal, the salt reservoir should be filled before the first use and when the "Salt" indicator lights. Only use water softener salt specially formulated for dishwashers. Other salts may contain insoluble additives which can impair the water softener. The proper salt can be purchased from your Miele dealer or Miele. To fill the salt reservoir: ^ Remove the lower basket. ^ Unscrew and remove the salt reservoir cap located on the floor of the wash cabinet.

^ Place the provided funnel over the salt reservoir. The salt reservoir must be filled with 2 quarts (2 l) of water before adding salt for the first time. Water does not have to be added with subsequent refills. .Inadvertently filling the salt reservoir with dishwashing detergent will damage the water softener. ^ Carefully fill with salt.

The salt reservoir holds approximately 4.5 lbs (2 kg) of salt. As it is filled, water will run out. ^ Clean any excess salt from the threads of the reservoir opening. ^ Screw the cap on firmly.

^ If the dishwasher will not be used immediately, run the "Rinse & Hold" program. This will remove any traces of salt from inside the wash cabinet. 17 Before using for the first time Salt indicator When the salt reservoir is empty, the "Salt-PC" indicator will light, indicating that it should be refilled with reactivation salt. Bypassing the salt indicator If your water is soft (below 8 gr/gal) the salt reservoir should not be filled with salt. The indicator will remain lit and should be disregarded or bypassed. ^ Remove the salt reservoir cap. Looking into the salt reservoir, you will see the top of the float chamber on the right hand side, a. After the reservoir has been filled, the water softener is automatically reactivated the next time the dishwasher is started. The "Salt" indicator will be lit during this process. ^ Using a screwdriver, carefully pivot the float chamber towards the center of the reservoir.

^ Using needle nose pliers, pull the cap, b, off of the float chamber, and remove the float, c. Replace the float chamber cap, push the chamber back into its upright position, and replace the salt reservoir cap. The "Salt" indicator should no longer be lit. 18 Before using for the first time Rinse aid Rinse aid is recommended to prevent spotting on dishes and glassware.



[You're reading an excerpt. Click here to read official MIELE G 842 SC PLUS user guide](http://yourpdfguides.com/dref/4310825)
<http://yourpdfguides.com/dref/4310825>

,Filling the rinse aid reservoir with detergent will damage the reservoir. Only pour rinse aid formulated for residential dishwashers into the reservoir. Adding rinse aid ^ Pour liquid rinse aid into the reservoir until it is visible on the surface of the screen. ^ Press on the flap until you hear it click shut. @ @ ^ Wipe up any spilled rinse aid. The flap will remain closed during normal operation.

@ @ @ @ This dispenses approximately 3 ml of rinse aid per program. @ @ @ @ @ @ ^ Scrape food from dishes before placing in the dishwasher. Do not rinse dishes. ^ Load dishes so that water can reach all surfaces. Do not place dishes and cutlery inside other pieces. @ @ @ @ @ ^ Small cups and glasses should be placed on the cup racks. Taller mugs and glasses can be placed beneath the rack. @ @ @ @ Check clearance by manually rotating the spray arms. @ @ @ @ Wooden cutting boards. @ @ @ @ Lead crystal.

Copper, brass, tin or pewter. Plastic items that are not heat resistant. Dishes with color painted over the glaze. These dishes may fade over time. Cast iron pots and pans. @ @ @ @ See the "Program guide". @ @ @ @ @ Silver and aluminum: Silver or aluminum items may tarnish. @ @ This can be rubbed off with a soft, dry cloth. @ @ If left to dry, foods containing sulfur can discolor silver. @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ ^ Slide out the upper basket.

Load the upper basket with small, lightweight, or delicate items such as cups, saucers, glasses, dessert bowls and flat pans. Long items such as soup ladles, mixing spoons and knives can be set across the front of the upper basket. ^ Pull up the levers at the sides of the upper basket and adjust the basket height. ^ Release the levers and the basket will lock in place. The basket can also be angled to fit tall items in both, the lower and upper baskets. The angles should not be set to opposite extremes. This will block the middle spray arm. Take care when sliding the basket in and out in this position. 25 Loading the dishwasher Adjustable cup racks Coffee bar Raise the rack to make room for tall glasses. Lower it to double stack smaller pieces.

To allow water to run off the bottom of coffee mugs, place them slanted on top of the coffee bar. The bar can also be used to separate two rows of glasses. To stack wide items, flip the bar to the right. 26 Loading the dishwasher Lower basket For larger and heavier items such as plates, serving platters, sauce pans, bowls. Dishwasher with cutlery tray Dishwasher with cutlery basket 27 Loading the dishwasher Height limit Vase / Bottle holder (select models) The guide at the front of the upper basket determines the maximum height for items placed in the lower basket so that the middle spray arm is not blocked.

Foldable spikes The bottle holder e.g. for milk or baby bottles, can be inserted into the bottom basket in more than one place. Position in any area marked white in the illustration. Do not place the insert in the corners of the lower basket, water cannot properly cover bottles in these areas. Two rows of spikes can be folded down, to create more room for larger dishware e.g. pots, pans and bowls. ^ Lift up the spike rows and fold them one on top of the other. 28 Basket accessories Additional inserts for the upper and lower baskets may be purchased from your Miele dealer or the Miele Technical Service Department. Vase / Bottle holder To wash milk or baby bottles attaches to the lower basket To wash additional cutlery for units with cutlery tray attaches to the lower basket To wash long stemmed glassware attaches to the upper basket Mini Cutlery Basket Upper Basket Glassware Insert 29 Operation Adding detergent ,Dishwasher detergents contain irritant and corrosive ingredients. Keep children away from detergent. Do not fill the detergent dispenser until you are ready to start the dishwasher. Only use powder detergents or tablets formulated for residential dishwashers. The use of gel or liquid detergent is not recommended.

Never fill the detergent dispenser to capacity. Do not use more than the recommended amount of detergent. Continued use of too much detergent may cause machine damage. The horizontal marks in Compartment II indicate levels of approximately 1 1/4, 1 3/4 and 2 tablespoons (20, 25 and 30 ml) respectively. ^ With the dishwasher door fully open fill compartment II with 2 tablespoons (30 ml) of powder detergent or one detergent tablet. ^ Close the cover. The cover will always open at the end of a wash program except in "Rinse & Hold". 2 tablespoons (30 ml) of detergent is enough for most normally soiled loads. For heavily soiled loads, or if food has dried on the dishes, a program containing a pre-wash cycle should be selected. Add an extra tablespoon (15 ml) of detergent to compartment I.

Less detergent is needed in homes with very soft water and when washing lightly soiled dishes. ^ To open, press the latch on the detergent dispenser. 30 Operation Running the dishwasher ^ Make sure the spray arms are not blocked. ^ Close the door. ^ Turn on the dishwasher. The "Start" indicator (15) will flash. ^ Select a wash program by turning the program selector (16) to the left or right. Refer to the "Program guide" for details. ^ Press the "Start" button (15). The program will begin.

Waterproof System All Miele dishwashers are specially designed to shut off the water intake and drain the wash cabinet in the rare event of an internal water valve failure. For this feature to be active, the machine must be "On" (not necessarily running) and the door must be closed. Program sequence indicator (14) The current step of the program is indicated by one of the program sequence indicators (14). Do not end a program prematurely! Important program steps could be omitted (e.g. @ @ ^ Turn the program selector (16) to "Stop". ^ Turn off the dishwasher. @ @ @ @ @ @ @ There is a danger of being burned! @ @ ^ Turn the program selector (16) to the new program. @ @ @ @ @ @ @ Program times are based on a hot water connection. @ @ Usage: Electric 0.

06 - 2.4 (kWh) Water 1.3 - 6.3 US gallons (5 - 24 L) 33 Frequently asked questions With the aid of the following guide, minor problems can be fixed without a service call. ,Repairs should only be carried out by a qualified and trained person in accordance with local and national safety regulations. Unauthorized repairs could cause personal injury or machine damage. What if ... Possible fault Fix Close the door firmly.

Insert the plug. Reset the circuit breaker. Make sure it is a 15 A breaker. Turn the program selector to the desired program. Press the "Start" button. The fuse or breaker has tripped. The water valve is closed. The filter in the water inlet is blocked. The flow pressure at the water inlet is less than 4.5 psi (0.3 bar). The waterproof system has activated. Reset the circuit breaker. Make sure it is a 15 A breaker. Open the water valve. See maintenance instructions. Contact a plumber.



[You're reading an excerpt. Click here to read official MIELE G 842](http://yourpdfguides.com/dref/4310825)

[SC PLUS user guide](http://yourpdfguides.com/dref/4310825)

<http://yourpdfguides.com/dref/4310825>

the dishwasher does not start? The door is not properly closed. The machine is not plugged in. The fuse is defective or the breaker has tripped.

the dishwasher does not start, after pressing the "Start" button and the "Start" indicator flashes? the dishwasher stops during a program? the "Intake/Drain" indicator is lit or flashing and the dishwasher may have stopped? The program selector is set to "Stop". Call the Miele Technical Service Department. 34

Frequently asked questions What if ... the "Intake / Drain" indicator flashes, the program stops? Possible fault Water intake error Fix Turn off the dishwasher before fixing the problem. Open the water valve. Clean the water intake filter, see maintenance instructions. Turn off the dishwasher before fixing the problem. Clean the triple filter.

See maintenance instructions. Clean the drain pump and the non-return valve, see maintenance instructions. Remove any kinks in the drain hose. Drain error, water left in the wash cabinet 35 Frequently asked questions What if ..

Possible fault Fix the "End", "Start" and There may be a technical Turn the program "Top Solo" indicators fault. selector to "Stop". flash at the same time at Turn off the dishwasher. the end of a program? A few seconds later: Turn the dishwasher on.

Select the desired program. Press the "Start" button. If the indicators flash again, there is a technical problem. Call the Miele Technical Service Department. Interrupt the program, rearrange items blocking the spray arms. Interrupt the program and rearrange loose pieces. there is a knocking noise in the wash cabinet? The spray arm is hitting an item in the basket. there is a rattling noise? Items are not secure in the wash cabinet. there is a knocking noise in the water pipes? dishes are not dry, glasses and cutlery are spotted? This may be caused by the installation or the diameter of pipe. The rinse aid setting may be too low, or the rinse aid reservoir is empty.

This has no effect on the dishwasher. If in doubt contact a plumber. Increase the dosage or refill the reservoir, see "Before using for the first time". Dishes were taken out too soon. Leave dishes in longer. soon. 36 Frequently asked questions What if ... dishes are not clean? Possible fault The dishes were not loaded correctly. The program was not powerful enough.

Not enough detergent was dispensed. The spray arm jets are clogged. Fix See, "Loading the dishwasher". Select a more intensive program see, "Program guide". Use more detergent, see, "Adding detergent".

Clean the spray arm jets, see, maintenance instructions. The triple filter is clogged Clean and/or reseal the or not correctly seated. filter, see, maintenance instructions. The drain pump or the non-return valve are blocked. tea or lipstick stains have not been completely removed? Clean the drain pump and the non-return valve, see maintenance instructions.

The wash temperature of Select a program with a the selected program was higher temperature. too low. Not enough detergent was used. Use more detergent. white residue is visible on cutlery and dishes, clouding occurs on glassware and film can be wiped off? there is a bluish sheen on the surface of glasses and film can be wiped off? Not enough rinse aid was used. Increase the dosage, used. see "Before using for the first time". The salt reservoir is empty. Add reactivation salt, see "Before using for the first time". The salt reservoir cap was Reseat it making sure it not correctly screwed on. screws back on correctly.

The programmed setting Adjust the setting of the of the water softener is too water softener , see low. "Before using for the first time". The rinse aid dosage is Reduce the dosage, see set too high. "Before using for the first time". 37 Frequently asked questions What if ... glasses are dull and discolored and film cannot be wiped off? plastic items are discolored? Possible fault Glasses are not dishwasher safe. Natural dyes e. g.

from vegetables may be the cause. Not enough detergent was used to break down natural dyes. The salt reservoir cap was not screwed on properly. The affected items are not corrosion resistant. Fix There is no remedy.

Only wash dishwasher safe glasses. Use more detergent, see "Adding detergent". Discoloration is permanent. Reseat and screw the cap on firmly. There is no remedy.

Only wash dishwasher safe cutlery. detergent is left in the The dispenser was damp Dry the dispenser before dispenser at the end of a when detergent was adding detergent. program? added. there are rust stains on cutlery? the detergent dispenser Detergent residue is lid can not be closed blocking the catch. properly? water remains in the wash cabinet at the end of a program? Remove the residue. The triple filter in the wash Clean the filter, cabinet is clogged. see maintenance instructions. The drain pump or the Clean the drain pump and non-return valve may be the non-return valve, blocked. see maintenance instructions. The drain hose is kinked.

Remove the kink. 38 After sales service In the event of a fault which you cannot correct yourself please contact the Miele Technical Service Department. U 1-800-999-1360 techserv@mieleusa.com V 1-800-565-6435 service@miele.ca When contacting the Miele Technical Service Department, please quote the model and serial number of your appliance. These can be found on the data plate on the upper inside edge of the dishwasher door. Program update function - PC The Program Correction (PC) allows a technician to update the dishwasher to make use of new technology. MieleCare MieleCare, our Extended Service Contract program; gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership. MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance.

Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele. Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home. To learn more about MieleCare Extended Service Contracts, please contact your appliance dealer or visit us online at: www.store.miele.com

For example, if a detergent with good wash results using only cold water becomes available, the wash programs can be modified to take advantage of this. 39 Transport To transport the dishwasher, e.g. when moving to a new home, note the following: Empty the dishwasher.



[You're reading an excerpt. Click here to read official MIELE G 842 SC PLUS user guide](http://yourpdfguides.com/dref/4310825)

Secure any loose parts, e.

g. hoses, cables, cutlery baskets. Transport the dishwasher in the upright position. If unavoidable it may be transported on its back. Do not transport it on its side or on the door. Residual water in the machine could leak and cause electrical damage. 40 User Maintenance Instructions To prevent accidents and machine damage, read these instructions before installation or use. Cleaning and Care Triple filter system The triple filter system in the base of the wash cabinet prevents food from being redeposited on dishes. @@broken glass, bones). @@Remove any solid particles and rinse under running water.

@@@^ Rinse all parts under running water. Scrub with a nylon brush if necessary. ^ Close the flap so that the clip engages. ^ Return the filter so it lies flat in the base of the wash cabinet. ^ Lock the filter by turning the handle clockwise. ,The dishwasher must not be used without the filter locked in place. 43 Cleaning and Care Cleaning the spray arms Sometimes particles of food get stuck in the spray arm jets. The spray arms should be inspected and cleaned every 4 - 6 months. ^ Turn off the dishwasher before cleaning. Remove the spray arms as follows: ^ Remove the cutlery tray (if present).

^ Press the top spray arm upwards to engage the inner ratchet and unscrew the spray arm. ^ Pull the lower spray arm firmly upwards to remove. @@^ Rinse thoroughly under running water. @@@@They will damage the surface. @@Wipe dry using a soft cloth.

Cleaning the door and door seal ^ Wipe the door seal with a damp cloth to remove any food particles. ^ Food residue and spilled liquids should be wiped from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms. ,Do not use too much water when cleaning the controls. Water could penetrate into the electronics and cause damage.

Stainless steel Stainless steel surfaces can be cleaned using a non-abrasive stainless steel cleaner. To help prevent resoiling, a conditioner for stainless steel can also be used. Apply sparingly with even pressure. Stainless steel colored controls These controls may become discolored or damaged if not cleaned regularly. Do not use a stainless steel cleaner on the knobs or buttons. Wood Panels made from wood should be cleaned using a soft damp cloth and an appropriate wood cleaner. 45 Cleaning and Care Cleaning the water inlet filter A filter is incorporated in the intake hose attached to the dishwasher's shut off valve. If your water is hard, or the pipes contain sediment, this filter may clog and prevent enough water from entering the wash cabinet. Installing an in-line water filter ^ If your water contains a large number of insoluble substances, a filter between the water valve and the intake hose connection is recommended. These filters can be purchased from Miele.

,The plastic valve housing on the intake hose contains electrical components and should not be submerged, or run through water. Cleaning the filter: ^ Disconnect the dishwasher from electricity (unplug it or "trip" the circuit breaker). ^ Turn off the water valve. ^ Unscrew the intake hose. ^ Carefully remove the rubber seal. ^ Remove the filter using needle nose pliers and rinse under running water. ^ Return the filter and seal. Make sure they are seated correctly. ^ Screw the intake hose back on the water valve, checking that it is not cross-threaded. ^ Slowly turn on the valve and test for leaks.

46 Cleaning and Care Cleaning the drain pump and non-return valve If the dishwasher is not completely drained at the end of a program, the drain pump or non-return valve may be blocked. ^ Turn off the dishwasher. ^ Remove the triple filter (see "Cleaning the filter in the wash cabinet"). ^ Use a jug or bowl to scoop water out of the wash cabinet. ^ Pull out the non-return valve and rinse well under running water.

^ Tilt the locking clamp to the side. The drain pump is beneath the non-return valve (see arrow). ^ Before returning the non-return valve, check that the drain pump is not blocked. Spin the propeller several times in both directions to check for obstructions. ^ Carefully refit the non-return valve and secure it with the locking clamp.

^ Refit and lock the filter in place. 47 Alterations rights reserved / 3105 M.-Nr. 06 088 620 / 01 .



[You're reading an excerpt. Click here to read official MIELE G 842 SC PLUS user guide](http://yourpdfguides.com/dref/4310825)
<http://yourpdfguides.com/dref/4310825>