




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE G 863 SCVI. You'll find the answers to all your questions on the MIELE G 863 SCVI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE G 863 SCVI
User guide MIELE G 863 SCVI
Operating instructions MIELE G 863 SCVI
Instructions for use MIELE G 863 SCVI
Instruction manual MIELE G 863 SCVI

Miele

Installation instructions

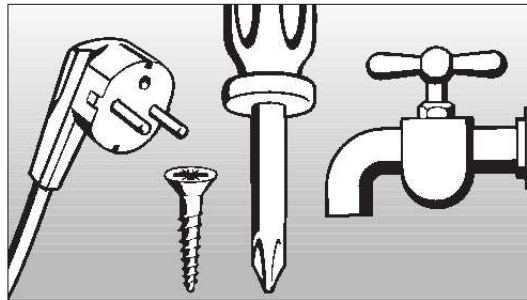

Integrated dishwasher

To prevent accidents
and machine damage,
read these instructions
before
installation or use.

HG01

USA CDN

M.-Nr. 05 620 662



[You're reading an excerpt. Click here to read official MIELE G 863 SCVI user guide](http://yourpdfguides.com/dref/4310486)

<http://yourpdfguides.com/dref/4310486>

Manual abstract:

.....
.....
.....
.....

.. 3 INSTRUCTIONS IMPORTANTES SUR LA SÉCURITÉ

.....
.....

... 5 Caring for the environment

.....
.....
.....
.....

..... 7 Disposal of the packing material

.....
.....
.....

.... 7 Disposal of an old machine .

.....
.....

.....
.....
.....

..... 7 Opening the door ...

.....
.....
.....
.....

.....
.....

.. 8 Opening the door without a panel in place ...

.....

.....
.....

... 8 Without the mounting bracket in place: ..

.....

.....
.....

.... 8 Product and Cut-out Dimensions .

.....

.....
.....

..... 9 Installation

.....
.....
.....
.....

.....
.....

.....
.....

11 1. Install the steam deflector

.....
.....
.....
.....

.. 11 2. Install the mounting brackets.

.....
.....
.....

.. 14 3. Install the slide skis ..

.....
.....

.....
.....
.....

..... 14 4.

Install the dishwasher under the countertop

.....
.....

..... 15 5. Level the legs ..

.....
.....
.....
.....

.....
.....

..... 16 6.

Install the custom door panel

.....
.....
.....

..... 17 7. Adjust and secure the front panel .

.....
.....
.....
.....

.... 22 8. Secure the dishwasher

.....
.....
.....

.....
.....

... 23 9. Adjust the door springs .

.....
.....

.....
.....
.....
.....

.. 25 10. Make the plumbing connections

.....
.....
.....

..... 26 11. Make the electrical connection .

.....

.....
.....
.....
30 12. Test the unit
.....
.....
.....
.....
.....

..... 32 13. Install the toekick

..... @@@@@ However, under certain conditions it may be possible for an installation in these applications. Please contact the nearest Miele dealer or the Miele Technical Service Department with specific requirements. Inspect the dishwasher for transport damage. Do not install or use a damaged unit. Contact the place of purchase.

This dishwasher must be installed under a continuous countertop secured to adjacent cabinetry. Do not install this dishwasher beneath a cooking surface or oven. Do not, under any circumstances, cut the intake hose or submerge in liquid. This hose contains electrical components that could cause injury or property damage if cut or submerged. If there is any doubt concerning installation contact the Technical Service Department. USA 1-800-999-1360 techserv@mieleusa.com CDN 1-800-565-6435 service@miele.ca ,During the installation process, please be careful of sharp edges that can cause harm. 3 IMPORTANT SAFETY INSTRUCTIONS Electrical safety Before installation, make sure the voltage and frequency listed on the data plate correspond with the household electrical supply. This data must correspond to prevent injury and machine damage.

Consult a qualified electrician if in doubt. To guarantee the electrical safety of this appliance, continuity must exist between the appliance and an effective grounding system. It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician. The manufacturer cannot be held responsible for damages caused by the lack, or inadequacy of, an effective grounding system Before installation or service, disconnect the power supply to the work area by manually "tripping" the circuit breaker, unplugging the unit, or removing the fuse. Do not use an extension cord to connect the unit to electricity. Extension cords do not guarantee the required safety of the appliance, (e.g. danger of overheating). Child safety Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation! If the appliance is removed from its installation and will not be used, the door to the wash cabinet should be removed to prevent children from being locked in the machine. @@@@@ Veuillez contacter le Concessionnaire Miele le plus près de chez-vous ou le Département du service technique Miele pour leur donner vos exigences précises. Inspecter le lave-vaisselle pour voir s'il a été endommagé lors de l'expédition. Ne pas installer ou utiliser, un appareil endommagé. Veuillez contacter le point d'achat. Ce lave-vaisselle doit être installé sous un comptoir continu bien fixé aux armoires adjacentes. Ne pas installer ce lave-vaisselle sous une surface de cuisson ou un four. Ne jamais, sous aucunes circonstances, couper le boyau de prise ou submerger dans un liquide. Ce boyau contient des éléments électriques qui pourraient causer des blessures ou des dégâts matériels s'ils sont coupés ou submergés.

Si vous avez des doutes au sujet de l'installation, contactez le Département du service technique Miele. USA 1-800-999-1360 techserv@mieleusa.com CDN 1-800-565-6435 service@miele.ca ,Durant le processus d'installation, veuillez faire attention aux rebords coupants qui peuvent blesser. 5 INSTRUCTIONS IMPORTANTES SUR LA SÉCURITÉ Sécurité électrique Avant l'installation, s'assurer que la tension et la fréquence énumérées sur la plaque signalétique correspondent à la source d'électricité de la résidence. Ces données doivent correspondre afin d'éviter de vous blesser et d'endommager l'appareil. Consulter un électricien qualifié si vous avez des doutes. Pour garantir la sécurité électrique de cet appareil, il doit y avoir continuité entre l'appareil et un système efficace de mise à la terre. Ce critère de sécurité doit absolument être respecté. Si vous avez des doutes, faire vérifier le système électrique de votre maison par un électricien qualifié. Le fabricant ne peut pas être tenu responsable des dommages causés par un système de mise à la terre efficace, manquant ou inadéquat. Débrancher le courant de la zone de travail avant l'installation, en débranchant l'appareil, retirant le fusible ou en faisant "sauter" le disjoncteur. Ne pas utiliser de rallonge pour brancher l'appareil. Les rallonges ne garantissent pas la sécurité requise pour l'appareil, (par ex. danger de surchauffage). Sécurité des enfants S'assurer de disposer de tous les emballages de plastique, sacs etc. et de les garder hors de la portée des bébés et jeunes enfants. Danger de suffocation! Si l'appareil est retiré de son installation et que vous ne l'utilisez pas, vous devez retirer la porte du meuble de lavage pour empêcher les enfants de s'enfermer dans l'appareil.

 [You're reading an excerpt. Click here to read official MIELE G 863 SCVI user guide](http://yourpdfguides.com/dref/4310486)
<http://yourpdfguides.com/dref/4310486>

Pour disposer d'un ancien lave-vaisselle, le débrancher de la prise, enlever la porte du meuble de lavage et couper le cordon électrique. 6 Caring for the environment Disposal of the packing material The cardboard box and packaging protect the appliance during shipping. These materials are biodegradable and recyclable. Please recycle. Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! Disposal of an old machine Old appliances may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials. @@@@If the counter is made of different materials, the steam deflector should be positioned so it covers the edge where the materials are joined. Countertops with wood or laminate edging should be tacked through the rear holes of the steam deflector. ^ Remove the protective film from the deflector. The left side of the reflector and the optic indicator in the control panel must line up for the reflector to work.

^ Squeeze the supplied silicone sealant along the groove of the deflector. 11 Installation ^ Center the steam deflector in the opening for the dishwasher and align with the lower front edge of the countertop. Note: For rounded countertops it may be necessary to pull the steam deflector closer to the counter's edge so the optic reflector will be visible. ^ Secure the deflector in place using the supplied nails. ^ Wipe of any excess silicone with a solution of liquid dish soap and warm water. ^ Press the optic indicator reflector in place. 12 Instalockwise. Several turns may be needed to set the correct height. Do not use a power screwdriver. ^ Adjust the front leveling legs by pushing on the feet with a slotted screwdriver.

^ Tipping the machine slightly backwards, if possible will make adjusting the front legs easier. Make sure the machine is level when adjustments are complete. The dishwasher should be raised until it just touches the underside of the countertop. 16 Installation 6. Install the custom door panel A , connect the dishwasher to a hot water source.

Hot water supply specifications: Recommended temperature: 120 °F (49 °C) max 140 °F (60 °C) Water pressure: Must be between 5 - 145 psi (0.3 -10 bar). If the water pressure is too low, the "Intake/Drain" or "Intake" indicator may flash (see "Operating Instructions/ Frequently asked questions"). If the water pressure is too high, a pressure reducer must be installed. New plumbing: The water inlet hose comes equipped with a 3/4" female hose thread connector. This can be directly connected to a shut off valve with 3/4" MHT (male hose thread ends). Preferred Installation: The hose assembly should be installed vertically so the hose exits from the bottom of the valve box (not as shown). If this is not possible, it can be installed horizontally, provided the hose exit remains beneath the main body of the valve box (see illustration). The valve box should also be installed so that it is at least 10" (24 cm) above the floor (or base of the cabinet), so that the excess coiled hose will remain lower than the valve box at all points. 26 Installation Existing plumbing: If the standard 3/8" copper plumbing for a dishwasher already exists with a compression fitting and valve as pictured: ,WARNING - Elcetrical Hazard ^ Cut the 3/8" copper tubing after the valve. ^ Install the 3/8" compression to 3/4" MHT (Male Hose Thread) adapter (supplied with the machine), as illustrated. ^ For any other size plumbing, buy the correct size adapter from a hardware store. ^ Connect the inlet hose to the existing valve /adapter assembly. Do not cut the intake hose. If the hose is cut, the dishwasher will not work.

There will be a water leak and you could be injured. If the hose is too long, coil it neatly and place it behind the machine. Electrical wiring and components should not come into contact with any plumbing fixtures or hoses. 27 Installation Drainage system specifications: The machine comes equipped with: A 5 ft. long (1.5 m) flexible drain hose with an internal diameter of 7/8" (22 mm). Drain hose extensions can be ordered from Miele's Technical Service Department. @@@@Do not connect the drain hose to anything but a genuine Miele hose. @@@@ If installed horizontally, the drain hose can be up to 12 ft (3.5 m) long.

If the drain hose is angled upwards in any way, it cannot be longer than 5 ft (1.5 m). The drain connection should be made as close as possible to the dishwasher. The internal diameter (7/8" or 22 mm) of the drain hose should not be reduced at any point. ^ Cut off the vent cap located at the right rear of the triple filter system, as illustrated.

29 Installation 11. Make the electrical connection GROUNDING INSTRUCTIONS THIS APPLIANCE MUST BE GROUNDED. In the event of a malfunction or break down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current. This appliance is equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be inserted in an appropriate outlet installed and grounded in according to local codes and ordinances.

Specifications The dishwasher comes equipped with a 4 ft (1.2 m) power cord with a molded plug for connection to 120 V, 60 Hz, 15 A grounded receptacle. Rated load:

. . 12.5 A / 1500 W Voltage:

.
.

. 120 VAC Frequency:

. 60 Hz Circuit breaker:

.
.

. . . . 15 A ,WARNING- An improper connection of the equipment grounding conductor can result in electric shock. Do not modify the plug provided with the appliance; if it will not fit the outlet, have a proper outlet installed by a qualified electrician. If there is any question about the proper electrical connection or grounding of this appliance to the power supply, please consult a licensed electrician or call Miele's Technical Service Department: USA 1-800-999-1360

CDN 1-800-565-6435 30 Installation Power outlet The power outlet for the appliance must be installed within a cabinet, on a wall adjacent to the undercounter space in which the dishwasher is located. An opening through the partition between the compartments of 1 1/2" (3 to 4 cm) can be made to allow the plug to pass through. Permanent Connection (Hard Wiring) For hard wiring, the power cord must be disconnected from the terminal box located at the lower left front of the dishwasher, behind the toe kick and service panel.

@@@@@^ Remove all packing and literature from inside the unit. The yellow Child Safety Lock key hung on the upper basket must be removed before operating the dishwasher. If not removed, the key could become lodged in the circulation pump. ^ Check for any leaks, odd noises and flashing / lit fault indicators on the control panel.



[You're reading an excerpt. Click here to read official MIELE G 863 SCVI user guide](#)

See the "Operating Instructions / Frequently asked questions" if there is a problem. ^ Make sure the triple filter system in the base of the wash cabinet is locked in place. Turn the handle clockwise to lock. ^ Close the soap dispenser. Do not add detergent. ^ Run the dishwasher through the "Rinse & Hold" program.

See the operating instructions for information on operation and program selection. 32 Installation 13. Install the toekick For installations using a continuous toekick or a cabinet matching toekick Before installing the toekick, measurements must be taken to ensure that the toekick will not interfere with the complete opening of the dishwasher If the door panel hits the toekick when the dishwasher door is opened, the toekick must be cut shorter or recessed deeper. Note: If a decorative or flush mount toekick is desired, and (R) is less than 3/4" (19 mm), other modifications, such as beveling the top rear edge of the toekick, may be necessary. It is extremely important that the toekick is removable in case service is needed.

door. @@@@If the machine height is less than maximum, or if the toekick is not recessed 4" (10 cm), the toekick must be shortened. ^ Screw the toekick onto the installed brackets, with the cutting lines towards the top, and pull out evenly and slowly until it aligns with the toekick of the adjoining cabinets. The toekick can not be pushed back in once it has been extended. It must be unscrewed, so that the tension on the spring clips can be released.

The brackets can then be pushed in, and the toekick reattached. The rear of the toekick has two cutting lines. 35 Installation ^ Carefully open the dishwasher door until it hits the toekick. ^ Using the front lower edge of the door panel as a guide, draw a line across the toekick. ^ Unscrew and remove the toekick. ^ If one of the cutting lines is close to the line just drawn, score the front of the toekick, and snap off the excess, otherwise, trim the toekick along the line using a saw. ^ Screw the toekick back onto the brackets, with the cut edge at the bottom. After installation, carefully open the dishwasher door to check that the front panel does not hit the toekick. If it does, remove the toekick and trim it accordingly. 36 37 38 39 Alterations rights reserved / MVi60 3304 M.

-Nr. 05 620 662 / 01 This bio-friendly paper was bleached without the use of chlorine. .



[You're reading an excerpt. Click here to read official MIELE G 863](#)

[SCVI user guide](#)

<http://yourpdfguides.com/dref/4310486>