




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE G 863 SCVI. You'll find the answers to all your questions on the MIELE G 863 SCVI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE G 863 SCVI
User guide MIELE G 863 SCVI
Operating instructions MIELE G 863 SCVI
Instructions for use MIELE G 863 SCVI
Instruction manual MIELE G 863 SCVI

Miele

Operating instructions

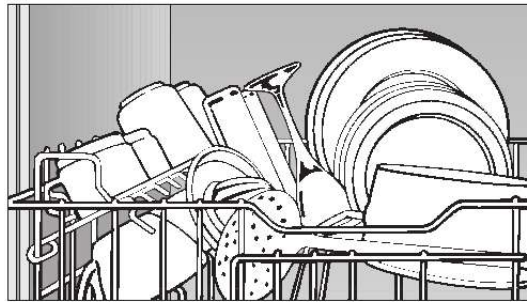

G 663 Plus
G 863 Plus

To prevent accidents
and machine damage,
read these instructions
before
installation or use.



M.-Nr. 05 724 281



[You're reading an excerpt. Click here to read official MIELE G 863 SCVI user guide](http://yourpdfguides.com/dref/4310487)

<http://yourpdfguides.com/dref/4310487>

Manual abstract:

.....
.....
.....
.....

.. 4 CONSIGNES DE SÉCURITÉ IMPORTANTES

.....
.....
.....

7 Caring for the environment

.....
.....
.....

. 10 Energy saving washing

.....
.....

.....
.....
.....

..... 10 Guide to the dishwasher

.....
.....
.....
.....

..... 11 Wash cabinet .

.....
.....
.....

.....
.....
.....
.....

.. 11 Control panel

.....
.....
.....

.....
.....
.....

..... 12 Before using for the first time

.....
.....
.....
.....

.... 13 To open the door

.....
.....
.....

.....
.....
.....

.... 13 To close the door

.....
.....
.....
.....

.....
..... *13 Water softener*

.....
.....
.....
.....

..... *14 Salt indicator*

.....
.....
.....

.....
.....
.....

..... *16 Rinse aid*

.....
.....
.....
.....

.....
.....
.....

..... *17 Adding rinse aid*

.....
.....
.....
.....

.....
.....
.....

17 Adjusting the dosage

.....
.....
.....
.....

.. *18 Rinse aid indicator*

.....
.....
.....

.....
.....
.....

18 Loading the dishwasher

.....
.....
.....
.....

..... *19 Items not recommended for dishwashing*

.....

.....
.....

..... 20 *Cutlery tray (SC units)*

.....
.....
.....

.....
.....

. 21 *Upper basket*

.....
.....
.....
.....

... 22 *Adjusting the upper basket* .

.....
.....

... 22 *Adjustable cup racks*

.....
.....
.....
.....

..... 23 *Coffee bar* ...

.....
.....
.....

.....
.....
.....
.....

23 *Lower basket*

.....
.....
.....

... 24 *Lower basket inserts*

.....
.....
.....
.....

..... 25 *Removing an insert* .

.....
.....
.....

.....
.....
.....

..... 25 *Inserting an insert*

.....
.....
.....
.....

.....
.. 25 *Foldable spike insert* ..

.....
.....

.....
.....
.....
.....
..... 26 *Plateguard Plus with StemGuard* ..

.....
.....
.....
.....

.. 27 *Tall Glassware Insert for lower basket*

.....
.....
.....

... 28 *Vase / Bottle holder*

.....
.....
.....

.....
.....
.....
.....
..... 28 *Basket accessories* .

.....
.....

..... 29 2 *Contents Operating the dishwasher*

.....
.....
.....

.....
.....
.....
.....
..... 30 *Adding detergent* ..

.....
.....

..... 30 *Running the dishwasher* ..

.....
.....
.....

.....
.....
.....
.....
..... 31 *At the end of a program*

.....

.....	
.....	
.....	
.....	31 Interrupting a program. . .
.....	
.....	
.....	
.....	
.....	32 Changing a program
.....	
.....	
.....	
.....	
.....	32 Program guide
.....	
.....	
.....	
.....	
.....	33 Additional features
.....	
.....	
.....	
.....	
.....	34 "Top Solo" (2)
.....	
.....	
.....	
.....	
.....	34 Delay start (d)
.....	
.....	
.....	
.....	
.....	35 Frequently asked questions
.....	
.....	
.....	
.....	
.....	37 After sales service
.....	
.....	
.....	
.....	
.....	

..... 42 Transport ..

.....
.....
.....
.....

.....
.....
.....

... 43 User Maintenance Instructions.....

.....
.....
.....
.....

. 45 Cleaning and Care

.....
.....
.....

.....
.....

... 46 Cleaning the filter in the wash cabinet.

.....

.....
.....
.....

... 46 Cleaning the spray arms

.....
.....
.....
.....

..... 48 Cleaning the wash cabinet ...

.....
.....
.....

.....
.....

... 49 Cleaning the door and door seal .

.....

.....
.....
.....

..... 49 Cleaning the optic indicator reflector. ...

.....
.....
.....
.....

.. 49 Cleaning the control panel.....

.....
.....
.....

.....
.....

50 Cleaning the exterior

.....

.....
.....
.....
.....

.. 50 Cleaning the water inlet filter

.....
.....
.....

... 51 Cleaning the drain pump and non-return valve . .

.....
.....
.....

@@@ danger of overheating). Be certain your appliance is properly installed and grounded by a qualified technician. To guarantee the electrical safety of this appliance, continuity must exist between the appliance and an effective grounding system. It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician.

The manufacturer cannot be held responsible for damages caused by the lack, or inadequacy, of an effective grounding system. The manufacturer cannot be held responsible for damage or injury caused by improper use of this appliance. Use the dishwasher only for its intended purpose. This appliance is intended for residential use only. @@@@ Installing the dishwasher in a tight space may crimp the power cord or put pressure on the plug which may cause overheating.

Electrical safety Before installation make sure that the voltage and frequency listed on the data plate correspond with the household electrical supply. This data must correspond to prevent injury and machine damage. Consult a qualified electrician if in doubt. Before installation or service, disconnect the power supply to the work area by unplugging the unit, "tripping" the circuit breaker or removing the fuse. 4 IMPORTANT SAFETY INSTRUCTIONS This equipment is not designed for maritime use or for use in mobile installations such as recreational vehicles or aircraft. However, under certain conditions it may be possible for an installation in these applications. Please contact the nearest Miele dealer or the Miele Technical Service Department with specific requirements. Inspect the dishwasher for shipping damage. Do not install or operate a damaged unit. Contact the place of purchase.

Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! This dishwasher should only be installed under a continuous countertop secured to adjacent cabinetry. Do not install this dishwasher beneath a cooking surface, oven or any appliance that radiates heat. High temperatures from these units may damage the dishwasher. Do not, under any circumstances cut the intake hose or submerge in liquid. This hose contains electrical components that could cause injury or property damage if cut or submerged. Use Only use the dishwasher if all panels are properly in place. Do not tamper with the controls. To reduce the risk of injury, do not allow children to play in, on, or near the dishwasher.

Do not damage, sit, or stand on the door or baskets of the dishwasher. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, turn on all hot water faucets and let water flow from each for several minutes before using the dishwasher. This will release any accumulated hydrogen gas.

Do not smoke or use an open flame during this time. Do not wash plastic items unless they are labeled "dishwasher safe" or the equivalent.



[You're reading an excerpt. Click here to read official MIELE G 863](http://yourpdfguides.com/dref/4310487)

[SCVI user guide](http://yourpdfguides.com/dref/4310487)

<http://yourpdfguides.com/dref/4310487>

For items not labeled, check the manufacturer's recommendations. **5 IMPORTANT SAFETY INSTRUCTIONS** When loading tableware, place sharp items away from the door seal to prevent damage to the seal. Load knives pointing downwards to prevent injuries.

Only use detergents and rinse aids recommended for residential dishwashers. Keep all detergents and rinse aids out of the reach of children. Do not drink water from the dishwasher! Harmful residues could be present. For dishwashers with a visible heating element Do not touch the heating element during or immediately after use. Disposal of an appliance If the appliance is removed from its installation and will not be used, the door to the wash cabinet should be removed to prevent children from being locked in the machine. When discarding an old dishwasher, unplug it from the power outlet, remove the door to the wash cabinet and cut off the power cord. **SAVE THESE INSTRUCTIONS 6 CONSIGNES DE SÉCURITÉ IMPORTANTES AVERTISSEMENT** Lorsque vous utilisez votre lave-vaisselle, veuillez prendre des précautions essentielles, y compris ce qui suit. Lisez attentivement l'ensemble des consignes avant d'installer ou d'utiliser le lave-vaisselle afin de prévenir les blessures et éviter d'endommager l'appareil. Sécurité électrique Avant l'installation, assurez-vous que la tension et la fréquence indiquées sur la plaque signalétique correspondent bien à celles de l'alimentation électrique de la résidence afin de prévenir les blessures et d'éviter d'endommager l'appareil. Dans le doute, consultez un électricien qualifié.

Avant de procéder à l'installation ou à des travaux d'entretien, coupez l'alimentation électrique, soit en débranchant l'appareil, soit en faisant basculer le disjoncteur, soit en enlevant le fusible. N'utilisez pas de rallonge pour brancher l'appareil à la source d'alimentation électrique. Les rallonges ne garantissent pas la sécurité requise pour l'appareil - si vous utilisez une rallonge, cela peut causer une surchauffe. Assurez-vous que votre appareil est installé correctement et système d'eau chaude n'a pas servi durant une telle période, ouvrez tous les robinets d'eau chaude et laissez l'eau couler plusieurs minutes avant d'utiliser le lave-vaisselle. Cette action libérera l'hydrogène qui aura pu s'y accumuler. Entre-temps, abstenez-vous de fumer et n'utilisez pas de flamme nue. Ne lavez pas des articles en plastique qui ne portent pas la mention "va au lave-vaisselle" ou une formulation équivalente. Consultez les recommandations. If your water hardness is lower than 8 gr/gal (140 ppm), you do not need to add dishwasher salt. If there is a fault, it will help the service technician to know the hardness of your local water supply.

^ Enter the water hardness below: gr/gal (ppm) Water hardness gr/gal* 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36-70 ppm 20 40 50 70 90 110 130 140 160 180 200 220 230 250 270 290 310 320 340 360 380 400 410 430 450 470 490 500 520 540 560 580 590 610 630 650-1260 * US gallons 14 Before using for the first time Filling the salt reservoir If your water hardness level is greater than 8 gr/gal (140 ppm), the salt reservoir should be filled before the first use and when the "Salt" indicator lights. Only use water softener salt specially formulated for dishwashers.

Other salts may contain insoluble additives which can impair the water softener. The proper salt can be purchased from your Miele dealer or Miele's Technical Service Department. To fill the salt reservoir: ^ Remove the lower basket ^ Unscrew and remove the salt reservoir cap located on the floor of the wash cabinet.

^ Place the provided funnel over the salt reservoir. The salt reservoir must be filled with 2 quarts (2 l) of water before adding salt for the first time. Water does not have to be added with subsequent refills. Inadvertently filling the salt reservoir with dishwashing detergent will damage the water softener. ^ Carefully fill with salt.

The salt reservoir holds approx. 4.5 lbs (2 kg) of salt. As it is filled, water will run out. ^ Clean any excess salt from the threads of the reservoir opening. ^ Screw the cap on firmly. ^ If the dishwasher will not be used immediately, run the "Rinse & Hold" program. This will remove any traces of salt from inside the wash cabinet. 15 Before using for the first time Salt indicator When the salt reservoir is empty, the "Salt-PC" indicator will light, indicating that it should be refilled with reactivation salt. Bypassing the Salt indicator If you have soft water (below 8 gr/gal (140 ppm)), the salt reservoir should not be filled with salt.

The indicator will remain lit and should be disregarded or bypassed. ^ Remove the salt reservoir cap. Looking into the salt reservoir, you will see the top of the float chamber on the right hand side, a. After the reservoir has been filled, the water softener is automatically reactivated the next time the dishwasher is started. The "Salt" indicator will be lit during this process. ^ Using a screwdriver, carefully pivot the float chamber towards the center of the reservoir. ^ Using the needle nose pliers, first pull the cap, b, off of the float chamber, then remove the float, c. Replace the float chamber cap, push the chamber back into its upright position, and replace the salt reservoir cap. The "Salt" indicator should no longer be lit. 16 Before using for the first time Rinse aid Rinse aid is recommended to prevent spotting on dishes and glassware.

Filling the rinse aid reservoir with detergent will damage the reservoir. Only pour rinse aid formulated for residential dishwashers into the reservoir. Adding rinse aid ^ Pour liquid rinse aid into the reservoir until it is visible on the surface of the screen. ^ Press on the flap until you hear it click shut. Failure to close it all the way will allow water to enter the reservoir during the wash program.

^ Wipe up any spilled rinse aid. The flap will remain closed during normal operation. ^ Add rinse aid before the first use and whenever the "Rinse aid" indicator lights. ^ Press the button in the direction of the arrow until the flap springs open. 17 Before using for the first time Adjusting the dosage The dosage selector is preset to 3.

This dispenses approximately 3 ml of rinse aid per program. It can be adjusted from 1 to 6. Rinse aid indicator The rinse aid indicator on the control panel will light when the rinse aid reservoir needs refilling. ^ Use a higher setting if spots appear on dry glassware. ^ Use a lower setting if streaking appears on dishes or glasses.



[You're reading an excerpt. Click here to read official MIELE G 863](http://yourpdfguides.com/dref/4310487)

[SCVI user guide](http://yourpdfguides.com/dref/4310487)

<http://yourpdfguides.com/dref/4310487>

When the indicator first comes on, there will be enough rinse aid left for 2 -3 washes. 18 Loading the dishwasher ,Do not wash items soiled with ash, sand, wax, grease or paint in the dishwasher. Ash and sand do not dissolve and will be distributed throughout the inside of the dishwasher. Wax, grease and paint will cause permanent discoloration or damage to the dishwasher. ^ Scrape food from dishes before placing in the dishwasher.

Do not rinse dishes. ^ Load dishes so that water can reach all surfaces. Do not place dishes and cutlery inside other pieces. ^ Hollow items such as cups and glasses should be placed upside down in the upper basket. ^ Concave based items, such as mugs or bowls, should be placed at an angle so that water does not pool. ^ To ensure good water coverage tall, narrow, hollow pieces, such as a vase, should be placed in the center of the basket, rather than in the corners. ^ Small cups and glasses should be placed on the cup racks. Taller mugs and glasses can be placed beneath the rack. ^ Place very small items in the cutlery tray or basket so they do not fall to the bottom of the wash cabinet. ^ The spray arms must not be blocked by items that are too tall or hang through the baskets. Check clearance by manually rotating the spray arms. ^ Food residue and spilled liquids should be cleaned from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms. 19 Loading the dishwasher Items not recommended for dishwashing Cutlery with wooden handles. Wooden cutting boards.

Glued items such as old knives with handles glued together around the shank of the blade. Hand made craft items, antique, metal trimmed or decorative glassware. Lead crystal. Copper, brass, tin or pewter. Plastic items that are not heat resistant. Dishes with color painted over the glaze. These dishes may fade over time. Cast iron pots and pans. @@@@See the "Program guide". @@@@Silver and aluminum: Silver or aluminum items may tarnish. @@This can be rubbed off with a soft, dry cloth. @@ If left to dry, foods containing sulfur can discolor silver. @@@@^ Release the levers and the basket will lock in place. @@The angles should not be set to opposite extremes. This will block the middle spray arm.

@@@The bar can also be used to separate two rows of glasses. @@@@It can be folded out of the way for pots, pans and other large items. @@pots, pans and bowls. @@It can also hold teacups. ^ Place stems of glasses into the slots. Cups can be placed on top of the StemGuard. @@@@Position in any area marked white in the illustration. @@Keep children away from detergent. @@The use of gel or liquid detergent is not recommended. Never fill the detergent dispenser to capacity.

Do not use more than the recommended amount of detergent. @@@@^ Close the cover. The cover will always open at the end of a wash program except in "Rinse & Hold". 2 tablespoon (30 ml) of detergent is enough for most normally soiled loads. For heavily soiled loads, or if food has dried on the dishes, a program containing a pre-wash cycle should be selected.

Add an extra tablespoon (15 ml) of detergent to compartment I. Less detergent is needed in homes with very soft water and when washing lightly soiled dishes. ^ To open, press the latch on the detergent dispenser. 30 Operating the dishwasher Running the dishwasher ^ Open the door. ^ Make sure the spray arms are not blocked.

^ Turn on the dishwasher using the "On" button (15). ^ Select a wash program using the program selection buttons (22). The selected program indicator will light. ^ Refer to the "Program guide" for details. ^ Select "Top Solo" or "Delay Start" if desired. See "Additional features". ^ Close the door. The red optic indicator will come on. The program will begin. Do not end a program prematurely! Important program steps could be omitted (e.

g. reactivating the water softener). Waterproof System All Miele dishwashers are specially designed to shut off the water intake and drain the wash cabinet in the rare event of an internal water valve failure. For this feature to be active, the machine must be "On" (not necessarily running), and the door must be closed. At the end of a program At the end of a program the optic indicator will flash. The optic indicator will go out after an hour, or sooner if the door is opened. After a program has ended: ^ Open the door. The optic indicator and the program indicator will go out. ^ Press the "Off" button (16). Allow dishes to cool before unloading.

It is advisable to turn off the water supply if the dishwasher will not be used for a period of time (e.g. while vacationing). 31 Operating the dishwasher Interrupting a program A program is interrupted as soon as the door is opened. If the door is closed, the program will continue from where it was interrupted. Changing a program If the door has not been closed yet: ^ Press the program button of the new program. ^ Close the door. ,Water in the dishwasher may be hot. There is a danger of being burned! Only open the door if absolutely necessary. The optic indicator will come on.

The program will begin. If the door has already been closed and the program is running: ^ Open the door. ^ Press the "Off" button (16). ^ Press the "On" button (15). ^ Select a new program using the program selection buttons (22). ^ Close the door. The optic indicator will come on. The new program will begin. 32 Operating the dishwasher Program guide Program When to use Program cycle Pre- Main Interim Final Drywash wash rinse rinse ing 12 12 Pots & Pans1) for heavily soiled pots and pans with dried on food Main wash temperature 170 °F (75 °C) Run-time 142 min Sani Wash1) extended wash time for sanitizing normally soiled dishware with dried on food Main wash temperature 150 °F (65 °C) Run-time 147 min XX X XX X -X X XX X X Normal Plus1) higher wash temperature helps to clean normally soiled dishware with stubborn dried on food or greasy residues Main wash temperature 150 °F (65 °C) Run-time 145 min Normal 2) for normally soiled dishware Main wash temperature 130 °F (55 °C) Run-time 143 min China & "Gentle program" Crystal o1) for lightly soiled and heat sensitive tableware Main wash temperature 115 °F (45 °C) Run-time 82 min Rinse & Hold XX X X- X X XX X X- X X -X X X- X X for rinsing dishes when a complete cycle is not needed - X Run-time 11 min - - - - 1) Eco sensor active in this program. Usage and run-times may vary.

2) Standard for Energy Label When washing a full load in Pots & Pans, Sani Wash and the Normal programs use at least 2 tablespoons (30 ml) of detergent. For the Pots & Pans program add an additional teaspoon (5 ml) to compartment I.



[You're reading an excerpt. Click here to read official MIELE G 863](http://yourpdfguides.com/dref/4310487)

[SCVI user guide](http://yourpdfguides.com/dref/4310487)

<http://yourpdfguides.com/dref/4310487>

If "Top Solo" is selected, reduce the amount of detergent to 1 1/4 tablespoons (20 ml). Program times are based on a hot water connection. If the unit is connected to cold water, program times will increase by approximately 25 minutes. 33 Operating the dishwasher Additional features "Top Solo" (2) Using "Top Solo" will save water and energy. This program is recommended when there is only a small load to clean. "Top Solo" can be selected with all programs. With this feature, water is directed only to the top and middle spray arms. This means that the water jets are only aimed at items in the upper basket and the cutlery tray.

The middle spray arm also directs water downwards, so lightly soiled plates or platters can be placed in the lower basket. When using this program, do not place bowls or other hollow containers in the lower basket. Because a smaller load is being washed the amount of detergent used can be reduced to 1 1/4 tablespoons (20 ml). ^ Press the "On" button (15). The "On" indicator (15) will light.

^ Select a program using the program selection buttons (22). The selected program indicator will light. ^ Press the 2 (19) button. The 2 (19) indicator will light. @@^ Close the door.

The optic indicator will come on. @@The delay start is set in one hour steps. @@Wipe dry if necessary. ^ Press the "On" button (15). ^ Select a program using the program selection buttons (22). The selected program indicator will light. ^ Press the d (18) button. 1 will appear in the delay start display (17). A delayed start time of one hour is set. @@The delay start is set in one hour steps up to 9 hours.

@@@^ Close the door. @@^ Press the "Off" button (16). ^ Press the "On" button (15). ^ Select a program using the program selection buttons (22). ^ Select "Top Solo", if needed. ^ Close the door. The optic indicator will come on. @@Insert the plug. Reset the circuit breaker. Make sure it is a 15 A circuit breaker.

Press "On", select program. Select a program with the program selection buttons. Reset the circuit breaker. @@closed. The machine is not plugged in. The fuse is defective or the breaker has tripped. The dishwasher is not turned on. No program is selected. the dishwasher stops during a program? @@Water intake error. @@ Open the water valve.

Clean the water inlet filter, see maintenance instructions. The waterproof system has activated. Call the Miele Technical Service Department. Install the optic indicator after starting a program, The optic indicator the optic indicator does reflector was not placed in reflector correctly. not shine? the steam deflector See Installation manual, "1. Install the steam properly. deflector". 37 Frequently asked questions What if ...

Possible fault Fix Turn off the dishwasher. Open the water valve. Clean the water inlet filter, see maintenance instructions. The water pressure is less than 4.5 psi (0.3 bar). Contact a plumber. shortly after starting a Water intake error. program, the dishwasher The "Intake / Drain" stops running and the indicator flashes. optic indicator flashes? Drain error.

Water remains Turn off the dishwasher. in the wash cabinet. Clean the triple filter. The "Intake / Drain" See maintenance indicator flashes. instructions. Clean the drain pump and the non-return valve, see maintenance instructions. Remove any kinks in the drain hose. There may be a technical Turn the dishwasher off. fault. Despite the problem the dishwasher can be used.

If the indicator lights flash again after the next program cycle, call the Miele Technical Service Department. there is a knocking The spray arm is hitting Interrupt the program and an item in the basket. rearrange items blocking noise in the wash cabinet? the spray arms. there is a rattling noise? Items are not secure in Interrupt the program and the wash cabinet. rearrange loose pieces. there is a knocking This may be caused by This has no effect on the noise in the water the installation or the dishwasher. If in doubt pipes? diameter of the pipe. contact a plumber. after a program has ended, the optic indicator and the program indicators flash? 38 Frequently asked questions What if ..

. dishes are not clean? Possible fault The dishes were not loaded correctly. The water feed for the middle spray arm was covered. Not enough water flowed into the middle spray arm. The program was not powerful enough. Not enough detergent was used. The spray arms were blocked by tall items. The spray arm jets are clogged. Fix See "Loading the dishwasher". Rearrange items in the upper basket so that the opening is not covered.

Select a more intensive program, see "Program guide". Use more detergent, see "Adding detergent". Check that spray arms rotate freely before washing.

Clean the spray arm jets, see maintenance instructions. The triple filter is clogged Clean and reseal the triple or not correctly seated. filter, see maintenance instructions. The drain pump or the Clean the drain pump and non-return valve is the non-return valve, see blocked. maintenance instructions. 39 Frequently asked questions What if ..

. dishes are not dry, glasses and cutlery are spotted? Possible fault Fix white residue is visible on cutlery and dishes, clouding occurs on glassware and film can be wiped off? The rinse aid setting may Increase the dosage or be too low, or the rinse aid refill the reservoir, see reservoir is empty. "Before using for the first time". Dishes were taken out too Leave dishes in longer. soon. Not enough rinse aid was Increase the dosage, see used. "Before using for the first time". The salt reservoir is empty. The salt reservoir cap was not correctly screwed on. The incorrect detergent was used.

The rinse aid dosage is set too high. Add reactivation salt, see "Before using for the first time". Reseat it making sure it screws back on correctly. Only use powder detergent or tablets. Reduce the dosage, see "Before using for the first time". there are smears on glasses and cutlery, bluish sheen on the surface of glasses and film can be wiped off? 40 Frequently asked questions What if ... glasses are dull and discolored and film cannot be wiped off? tea or lipstick stains have not been completely removed? Possible fault Glasses are not dishwasher safe. Fix There is no remedy.

Only wash dishwasher safe glasses. The wash temperature of Select a program with a the selected program was higher temperature. too low. Not enough detergent Use more detergent. was used.

Use more detergent, see plastics are discolored? Natural dyes e. g. from "Adding detergent". vegetables may be the cause. Not enough Discoloration is permanent. detergent was used to break down natural dyes. there are rust stains on The salt reservoir cap was Reseat and screw the cap cutlery? not correctly screwed on.



[You're reading an excerpt. Click here to read official MIELE G 863 SCVI user guide](http://yourpdfguides.com/dref/4310487)
<http://yourpdfguides.com/dref/4310487>

on firmly. The affected items are not There is no remedy. corrosion resistant. Only wash dishwasher safe cutlery. A program was not run Always run a program soon after filling the salt after refilling the salt reservoir. reservoir. the detergent dispenser Detergent residue is Remove the residue. lid can not be closed blocking the catch.

properly? detergent is left in the The dispenser was damp Dry the dispenser before dispenser at the end of a when detergent was adding detergent. program? added. water remains in the wash cabinet at the end of a program? The triple filter in the wash Clean the triple filter. See cabinet is clogged. maintenance instructions. The drain pump or the non-return valve may be blocked. The drain hose is kinked. A program was not run soon after filling the salt reservoir.

Clean the drain pump and the non-return valve, see maintenance instructions. Remove any kinks in the drain hose.

Always run a program after refilling the salt reservoir. 41 After sales service In the event of a fault which you cannot correct yourself please contact: the Miele Technical Service Department. U 1-800-999-1360 techserv@mieleusa.com l 1-800-565-6435 service@miele.ca When contacting the Miele Technical Service Department, please quote the model and serial number of your appliance.

These can be found on the data plate on the upper inside edge of the dishwasher door. Program update function - PC The "PC" indicator has the function of Program Correction (PC). This allows a technician to update the programming of the dishwasher to make use of new technological developments. MieleCare MieleCare, our Extended Service Contract program; gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership. MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts.

Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance. Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele. Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home. To learn more about MieleCare Extended Service Contracts, please contact your appliance dealer or visit us online at: www.store.miele.com For example, if a detergent that gives good wash results using only cold water were to become available, the wash programs can be modified to take advantage of this. 42 Transport To transport the dishwasher, e. g. when moving to a new home, note the following: Empty the dishwasher.

Secure any loose parts, e. g. hoses, cables, cutlery baskets. Transport the dishwasher in the upright position. If unavoidable it may be transported on its back. Do not transport it on its side or on the door. Residual water in the machine could leak and cause electrical damage. 43 44 User Maintenance Instructions To prevent accidents and machine damage, read these instructions before installation or use. Cleaning and Care Triple filter system The triple filter system in the base of the wash cabinet prevents food from being redeposited on dishes. It also protects the circulation pump from damage caused by foreign objects (e.

g. broken glass, bones). The filter system should be cleaned every 4 - 6 months or whenever a foreign object is trapped. Cleaning the filter in the wash cabinet ^ Lift the filter out of the machine. Remove any solid particles and rinse under running water.

Scrub with a nylon brush if necessary. ^ Turn off the dishwasher before cleaning. ^ Turn the handle counterclockwise to release the triple filter system. 46 Cleaning and Care To clean the underside of the filter, the flap must be opened: ^ Pull back the yellow clip. ^ Rinse all parts under running water.

Scrub with a nylon brush if necessary. @@@@The spray arms should be inspected and cleaned every 4 - 6 Months. ^ Turn off the dishwasher before cleaning. @@@@^ Pull the lower spray arm firmly upwards to remove. ^ Remove the lower basket. ^ Lift up the middle spray arm, a, to engage the ratchet and unscrew the spray arm, b. ^ Use a pointed object such as a toothpick to push food articles into the spray arm jets. ^ Rinse thoroughly under running water. ^ Return the spray arms and check that they rotate freely. 48 Cleaning and Care Cleaning the wash cabinet Generally, the wash cabinet is self cleaning if the correct amount of dishwasher detergent is used.

The wash cabinet can be cleaned with a dishwasher cleaner such as Dis Cleaner available from your Miele dealer or the Miele Technical Service Department. Cleaning the optic indicator reflector The optic indicator reflector is located in the steam deflector under the countertop. To clean the optic indicator reflector: ^ Open the door and remove the reflector from the plastic mounting. @@@@They will damage the surface. Plastic All plastic surfaces can be cleaned with warm water and liquid dish soap applied with a soft sponge. Wipe dry using a soft cloth. Stainless steel Stainless steel surfaces can be cleaned using a non-abrasive stainless steel cleaner. To help prevent resoiling, a conditioner for stainless steel can also be used. Apply sparingly with even pressure. Stainless steel colored controls These controls can be cleaned with warm water and liquid dish soap.

These controls may become discolored or damaged if not cleaned regularly. Do not use a stainless steel cleaner on the knobs or buttons. Wood Panels made from wood should be cleaned using a soft damp cloth and an appropriate wood cleaner. ,Do not use too much water when cleaning the controls. Water could penetrate into the electronics and cause damage.

,Do not use abrasive, glass or all purpose cleaners. They will damage the surface. 50 Cleaning and Care Cleaning the water inlet filter A filter is incorporated in the intake hose attached to the dishwasher's shut off valve. If your water is hard, or the pipes contain sediment, this filter may clog and prevent enough water from entering the wash cabinet. Installing an in-line water filter If your water contains a large number of insoluble substances, a filter between the water valve and the intake hose connection is recommended.

These filters can be purchased from Miele's Technical Service Department. ,The plastic valve housing on the intake hose contains electrical components and should not be immersed, or run through water. Cleaning the filter: ^ Disconnect the dishwasher from electricity (unplug it or "trip" the circuit breaker). ^ Turn off the water valve. ^ Unscrew the intake hose. ^ Carefully remove the rubber seal. ^ Remove the filter using a needle nose plier and rinse under running water.



[You're reading an excerpt. Click here to read official MIELE G 863](#)

[SCVI user guide](#)

<http://yourpdfguides.com/dref/4310487>

^ Return the filter and seal. Make sure they are seated correctly. ^ Screw the intake hose back on the water valve, checking that it is not cross-threaded.

^ Slowly turn on the valve and test for leaks. 51 Cleaning and Care Cleaning the drain pump and non-return valve If the dishwasher is not completely drained at the end of a program, the drain pump or non-return valve may be blocked. ^ Turn off the dishwasher. ^ Remove the triple filter (see "Cleaning the filter in the wash cabinet"). ^ Use a jug or bowl to scoop water out of the wash cabinet. ^ Pull out the non-return valve and rinse well under running water. ^ Tilt the locking clamp to the side. The drain pump is beneath the non-return valve (see arrow). ^ Before returning the non-return valve, check that the drain pump is not blocked. Spin the propeller several times in both directions to check for obstructions.

^ Carefully refit the non-return valve and secure it with the locking clamp. ^ Refit and lock the filter in place. 52 53 54 55 Alterations rights reserved / G 663 / G863 Plus 3105 M.-Nr. 05 724 281 / 01 .



[You're reading an excerpt. Click here to read official MIELE G 863
SCVI user guide
http://yourpdfguides.com/dref/4310487](http://yourpdfguides.com/dref/4310487)