




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE H 387 B. You'll find the answers to all your questions on the MIELE H 387 B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE H 387 B
User guide MIELE H 387 B
Operating instructions MIELE H 387 B
Instructions for use MIELE H 387 B
Instruction manual MIELE H 387 B

Miele

Operating instructions

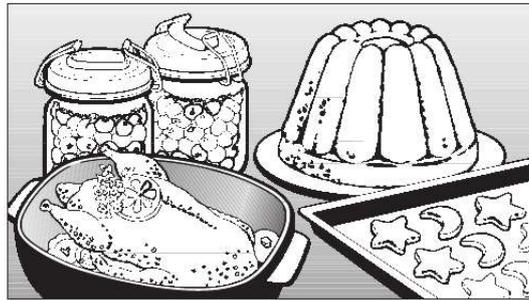

Oven
H 387-1 B
H 387-2 B

To prevent accidents
and machine damage,
read these instructions
before installation or use.

(USA) (CDN)

M.-Nr. 05 644 991



[You're reading an excerpt. Click here to read official MIELE H 387 B user guide](#)

<http://yourpdfguides.com/dref/4310520>

.. 11 Energy-Conservation feature

.....
.....
.....

.....
... @@...
.....
.....

... 14 Adjusting the default temperature ..

.....
.....
.....
.....

15 Entering the time of day

.....
.....
.....
.....

..... 17 To conceal the time of day

.....
.....
.....
.....

17 To make the time visible

.....
.....
.....
.....

..... 17 Programming the cooking time ...

.....
.....
.....
.....

..... 18 To program a cooking time to end automatically...

.....
.....
.....

.. 19 To enter a cooking length and a time for the oven to shut off

.....
.....
.....

. 19 Enter the start time and the length of cooking

.....
.....
.....

. 20 Checking, changing and canceling times entered

.....
.....

..... 20 To cancel a program

.....
.....
.....
.....
.....

.....
.. 21 Entering a cooking time

.....
.....
.....
.....

..... 22 Checking, changing and deleting a cooking time. . .

.....
.....
.....

.. 22 Rapid heat

.....
.....
.....

..... 23 To turn off "rapid heat". . .

.....
.....
.....
.....

.....
. 23 Customizing a temperature setting

.....
.....

.....

.. @@..

.....

.....

.....

.....

..... 32 Using the roast probe Roasting Recommendations 2 Contents Broiling Broiling tips .

.....
.....
.....

.....

.....

.....

.....

... 40 Broiling chart Defrost Defrosting tips

.....
.....
.....

.....

.....

.....

..... 42 Cleaning and care PerfectClean

.....

.....

.....

.....

technician.

Work by unqualified persons could be dangerous and may void the warranty. Before installation or service, disconnect the power supply to the work area by "tripping" the circuit breaker, or shutting off the main power. **4 IMPORTANT SAFETY INSTRUCTIONS Oven use** The door gasket is essential for a good seal. Care should be taken not to rub, damage or move the gasket. The door gasket should only be cleaned with a solution of warm water and soap. Do not block oven vents. Do not let metal objects (aluminum foil, metal pans) or the roast probe come in contact with the heating element. Do not slide pots or pans on the oven floor. This could scratch and damage the surface. Do not lean, sit, or place heavy items on the open oven door.

The door can support a maximum weight of 33 lbs (15 kg). , **WARNING:** Ovens can produce high temperatures that can cause burns. Prevent children from touching the appliance when in use. Use heat-resistant pot holders when placing items in the oven, turning them, or removing them from the oven. The upper heating element and oven racks can become very hot and cause burns.

To prevent burns, always place oven racks at their desired height while the oven is cool. Always open the door carefully. Allow hot air or steam to escape before placing or removing food. To prevent burns, allow the heating element to cool before cleaning by hand. Only clean parts listed in this manual.

Caution: Heating elements may be hot even though they are not glowing. During and after use, do not let clothing or other flammable materials come in contact with heating elements or interior surfaces of the oven until they have had sufficient time to cool. External parts of the oven such as the door glass, vents, and control panel may also become hot. **5 IMPORTANT SAFETY INSTRUCTIONS** Do not heat unopened containers of food in the oven, pressure may build up and cause them to explode. Never add water to food on a hot tray or pan, or directly onto food in a hot oven. The steam created could cause serious burns or scalds and the sudden change in temperature can damage the enamel. This oven must only be used for cooking. Do not use it as a dryer, kiln, dehumidifier, etc. Fumes or vapors given off by glues, plastics or other non-food items could ignite and cause property damage or injury. Cover all cooked food that is left in the oven to be kept warm.

This will prevent moisture from condensing on the interior of the oven. Long-term or excessive condensation could damage the oven. Only use the Miele roast probe supplied with the oven. Contact Miele if you need to purchase a new probe. Remove the roast probe from the oven when not using it. High broiling temperatures may damage the probe. Never use aluminum foil to line the oven floor. Do not place pots, pans or baking sheets directly on the oven floor when using "Surround", "Bottom Heat" or "Intensive". This could crack the enamel on the oven floor.



[You're reading an excerpt. Click here to read official MIELE H 387 B user guide](http://yourpdfguides.com/dref/4310520)

<http://yourpdfguides.com/dref/4310520>

Never store flammable liquids and materials in, above or under an oven, or near cooking surfaces.

6 IMPORTANT SAFETY INSTRUCTIONS General notes Do not use a steam cleaner to clean the oven. Steam could penetrate electrical components and cause a short circuit. Children should not be left alone or unattended in an area where an oven is in use. Never allow children to sit or stand on any part of the oven. Caution: Do not store items of interest to children in cabinets above an oven.

Children climbing on the oven to reach these items may be injured. Do not leave the oven unattended when cooking with oils or fats, they can be a fire hazard if overheated. Do not use water on grease fires! Smother the fire with a properly rated dry chemical or foam fire extinguisher. Be aware of loose fitting or hanging garments while operating the oven. Do not use the oven to heat the room.

Make certain that the power cords of small appliances do not come in contact with or get caught in the oven door. Use only dry, heat resistant potholders. Moist or damp potholders used on hot surfaces may result in steam burns. Do not let potholders come in contact with oils. Do not substitute towels or other bulky items for potholders. Disposal of an old oven When discarding an old oven, disconnect it from the power supply and cut off the power cord. Remove the door to prevent a trapping hazard. 7 Guide to the oven a Program selector b Oven display and push buttons c Clock/Timer display and push buttons d "+/" adjust buttons e Door contact switch* *This switch shuts off the heating element and convection fan when the door is opened during use. 8 f Upper heating element and safety guard g Rotisserie motors h Roast probe socket i Convection fan j Non-tip, four level runners k Oven door Guide to the oven Accessories Roasting pan and Anti-splash tray Wire rack and baking trays The roasting pan is ideal for catching drippings from meat or poultry roasted or broiled directly on the rack. It can also be used as a baking tray.

The anti-splash tray may be placed in the roasting pan to reduce splattering of drippings from meat or poultry. The roasting pan and anti-splash tray are coated with PerfectClean enamel and can be easily cleaned with a sponge and dish soap. The oven comes equipped with a wire rack and two baking trays. The trays are to be slid into the runners on either side of the oven rather than on the wire rack itself. Non-tip safety notches The wire rack, roasting pan and baking trays are equipped with non-tip safety notches (see arrows) which prevent them from being pulled out completely while the oven is in use. When inserting a rack, pan or tray always check that the safety notches are at the rear of the oven. Once inserted into the oven these pieces can only be removed by raising the piece upwards and then pulling it out. 9 Guide to the oven Grease filter Rotisserie The filter helps to keep the oven fan clean from moisture and grease. When roasting or broiling, insert the grease filter in front of the fan opening. Roast probe The rotisserie evenly broils and adds a finishing touch to items such as stuffed meat, poultry, and kabobs by gently turning the skewers during the broiling function.

The skewers are inserted into the rotisserie motor in the back panel. Slide opener The roast probe monitors the core temperature of meat and poultry during a roasting function. The long pointed end of the probe is inserted into the thickest portion of the meat while the short end of the probe is inserted into the roast pring the oven Adjusting the default temperature The default temperature of each program, can be adjusted within the range shown below: Convection Auto Roast 90-480°F (30-250°C) 210-440°F (100-230°C) 90-480°F (30-250°C) 90-510°F (30-280°C) 210-480°F (100-250°C) 90-120°F (30-50°C) 120-480°F (50-250°C) 120-470°F (50-260°C) 390-570°F (200-30n. The time of day and the entered cooking time will appear in the display. ^ Using the "+" button enter the actual time you want the oven to stop cooking.

Once the indicator between the "+/" buttons goes out the timer has been set. 19 Using the oven Enter the start time and the length of cooking ^ Select the desired program. Checking, changing and canceling times entered It is possible at any time to review or change the times entered. ^ Press the button for the desired time to be viewed. ^ Press the "Start" button.

"0:00" appears in the display field. "Start" The start time of the cooking process is displayed. This goes out as soon as the process begins. "Cook" The display shows the duration of the cooking time, or the time left if the program has started. "End" The ending time of the cooking process is displayed. ^ Use the "+" button to set the actual time for the oven to start. ^ Press the "Cook" button to enter the cooking time. "0:00" appears in the display. ^ With the "+" button enter the cooking time in hours:minutes. If only a start time is programmed, the oven will start heating immediately, except when cooking with the roast probe.

20 Using the oven To change ^ Press the "Start", "Cook" or "End" button. The indicator between the "+/" buttons comes on. ^ Use the "+/" buttons to enter the new time. When the indicator light between the "+/" buttons goes out, the newly selected time is entered. The time of day will appear in the display. Note : If a button is pressed, where the time was not entered, but calculated automatically by the system, the indicator light between the "+/" buttons will not light.

This time cannot be changed. To cancel an entered time ^ To cancel, press the appropriate button and use the "" button to set the time to "0:00". If the cooking time is canceled, this automatically cancels the Start / End time, and vice versa. New times must be entered for the oven to begin the program. To cancel a program ^ Turn the program selector to "0". During a power failure all programming entered will be deleted. 21 Using the oven Entering a cooking time When a cooking time is entered the oven will turn off automatically at the end of the elapsed time. Checking, changing and deleting a cooking time To check a cooking time ^ Press the "Cook" button. "0:00" will appear in the display and the "+/" indicator will light.

^ Press the "Cook" button. The remaining cooking time will appear in the display. To change a cooking time ^ Press the "Cook" button. ^ While the light between the "+/" buttons is lit, enter the cooking time using the "+" button. A time from one minute to 23 hours 59 minutes can be entered.

The cooking process will begin as soon as the indicator light between the "+/" buttons goes out.



[You're reading an excerpt. Click here to read official MIELE H 387 B user guide](http://yourpdfguides.com/dref/4310520)
<http://yourpdfguides.com/dref/4310520>

The following have been treated with "PerfectClean": oven interior, roasting pan, anti-splash tray, racks, runners. Items with PerfectClean enamel should not need to be cleaned in a dishwasher but can be if desired, hand cleaning should be sufficient.

Clean after each use with a sponge and soapy water. Do not use abrasive cleaners, ceramic cleaners, metal scourers, or oven cleaners on PerfectClean surfaces. After cleaning, rinse thoroughly with water. The water should run off the surface easily. Any residue will hinder this effect. Stubborn baked on grease may need to be soaked first to loosen deposits. Clean spills on PerfectClean surfaces as soon as possible to prevent stains. Spilled fruit juices may permanently discolor surfaces. This discoloration is permanent but will not affect the efficiency of the enamel. 44 Cleaning and care Catalytic liners The removable back panel and roof liner are coated with a dark catalytic enamel.

Circulating air in the oven deposits oil and fat on the back of the oven. These deposits are burnt off from the catalytic liners when the oven temperature exceeds 390°F (200°C). The oven and accessories should be cleaned after each use, so cleaning does not become difficult. Cleaning by hand Allow the oven to cool before cleaning. Danger of burns! Do not use abrasive cleaning agents, hard brushes, scouring pads, cloths, steel wool, knives or other abrasive materials. Do not use oven sprays on catalytic surfaces. Chemicals used in oven sprays will damage the catalytic enamel. ^ Catalytic surfaces should be cleaned using a solution of hot water and dish soap with a soft brush. 45 Cleaning and care Catalytic cleaning process Before cleaning the catalytic liners using high temperatures, make sure all PerfectClean surfaces are clean. High temperatures can cause deposits to become baked onto the PerfectClean surfaces and become impossible to remove.

If the oven is still heavily soiled after cleaning by hand, heating it to a high temperature will burn off oil and grease from the catalytic liners. Deposits of spices, syrups and similar substances are not removed by this process. These should be removed while fresh with soapy water and a soft brush. To clean at high temperatures: ^ Turn the program selector to "Convection". ^ Set the temperature to 480°F (250°C), using the "+" button while the indicator light between the "+" and "" buttons is lit.

^ Press the "Cook" button and set the time for 1 hour. More time may be needed if the liners are heavily soiled. Any remaining soiling will gradually disappear with each use of the oven at high temperatures. If the catalytic liners are damaged through improper use or heavy soiling, a replacement may be purchased from your Miele dealer or Miele. 46 Cleaning and care Cleaning the oven cavity by hand Removing the oven door ^ Open the door fully. to cool before cleaning. ,Danger of burns! Allow the oven To make cleaning easier remove the oven door, remove the runners, lower the upper heating element, remove the safety guard. ^ Clean the oven surfaces with a solution of hot water and liquid dish soap, and a sponge or soft nylon brush. Do not use abrasive cleaning agents, hard brushes, metal scouring pads, steel wool, knives or other abrasive materials. Do not use oven sprays on any part of this oven. ^ Dry surfaces before reassembly. Please note: The oven door is quite heavy. It should be gripped firmly at the sides when being removed or refitted. ^ Flip up the locking clamps on each door hinge. ^ Grip the sides of the door and lift until the hinges disengage.

Remove the door. 47 Cleaning and care Removing the runners Removing the back panel ^ Pull on the fastener to release the runner. ^ Loosen the screws in the back panel with a socket wrench and remove. The oven must not be used without the back panel in place. This could lead to injuries and machine damage. ^ Pull the runner out from the rear of the oven. 48 Cleaning and care Lowering the upper heating element ^ Remove the runners. Removing the safety guard If needed, the safety guard can be removed for cleaning: ^ Pull and turn the fastener on the grill element to release it. ^ Gently lower the grill element. ^ Hold the guard firmly and unscrew the knurled nuts.

^ Remove the guard. Reassemble in the reverse order, carefully ensuring all parts are correctly in place. 49 Cleaning and care Replacement of Catalytic side panels To avoid burns, make sure the oven is completely cool before removing the side panels. ^ Remove the runners. Refitting the oven door ^ Use a coin or screwdriver to loosen the screw and remove the catalytic side panel from the oven.

Reassemble in the reverse order, making sure all parts are correctly positioned. ^ Hold the door as shown above and carefully put the locked hinges into the guide holes (see arrow) until they engage. Open the door fully. ^ Still supporting the door, flip the locking clamps down. Check that the locking clamps are flipped down when the door is reinstalled after cleaning.

Otherwise, the hinges may work loose from the guide holes and damage the door. 50 Changing the light bulb ^ Turn off the electrical supply to the oven at the circuit breaker. ^ Take the runners out of the oven. ^ Remove the catalytic liners, if present. ^ Press the lamp back into the sidewall of the oven and reinsert the cover. Reassemble the oven in the reverse order, making sure that all the parts are in place. ^ Remove the lamp cover. Use the supplied slide opener to pry the lamp out of the side panel. ^ Replace the halogen bulb. Only use a 12 V, 10 W, heat resistant up to 572°F/300°C, Osram, type w818 bulb.

DO NOT TOUCH the new bulb with your fingers; touching the bulb will reduce its life. Follow the instructions of the bulb manufacturer. 51 Turning additional features on or off To turn an additional feature on or off: ^ Turn the program selector to "0". ^ Open the oven door fully. ^ Turn the program selector to "Light". ^ Press the "Temp." button. "01:0" or the most recently changed feature will appear in the oven display. ^ Use the "+/" buttons to select the additional feature to be changed, (see chart). ^ Press the "Timer" button to turn the feature on or off.

The following appears after the colon: 1 when the feature is on, 0 when the feature is off. ^ Turn the program selector to the "0" position to store the change into memory. You may change as many additional features as you wish, as long as the program selector has not been turned to the "0" position. The additional feature is (* marks the factory setting) 01:0* The program and 01:1 Once the program and temperature can be temperature have been adjusted at any time. selected the oven can no longer be adjusted, except to lower the target temperature.



[You're reading an excerpt. Click here to read official MIELE H 387 B user guide](http://yourpdfguides.com/dref/4310520)

<http://yourpdfguides.com/dref/4310520>

Changes can only be made if the program selector is turned back to the "Light" or "0" position. 02:0* no function. 03:0* The oven lights when selecting a program. 04:0* The temperature is displayed in °C. The clock/timer has a 24-hour display.

02:0 no function. 03:1 The oven lights when the door is opened. 04:1 The temperature is displayed in °F. The clock/timer has a 12-hour display. 05:1 The oven lights 05:0* The oven light continuously when the turns off 15 seconds oven is in use. after program selection. The light can be turned back on for 15 seconds by pressing any button. 06:0* Rapid heat is on during "Convection", "Auto Roast" and "Surround". 07:0* The time of day entered appears in the display. 08:0* The time of day entered appears in the display.

06:1 Rapid heat is turned off. 07:1 The time advances by 1 hour for daylight savings time. 08:1 While pressing the "Timer" button, the time can be set back by 1hr up to 4 hrs. 09:0* A tone sounds at 09:1 No tone signal at the end of cooking. the end of cooking. 52 Frequently asked questions Installation work and repairs should only be performed by a qualified technician in accordance with all applicable codes and standards. Repairs and other work by unqualified persons could be dangerous and may void the warranty. What if the oven does not heat? Possible fault A program was not selected. The Child Safety Lock is activated. The circuit breaker has tripped.

The timer has been set. The door is not fully closed. Fix Select a program. Deactivate the child safety lock. Check the breaker.

Cancel the timer. Close the door firmly. What if the oven heats but the light does not illuminate? Possible fault Fix The halogen lamps are bad. See "Changing the light bulb". What if no noise is heard when the oven door is opened during operation? This is normal.

If the door is opened during operation, a safety switch causes the oven heaters and the convection fan to turn off. What if a noise is heard after baking, roasting or broiling? This is normal. The fan will continue to run for a short time to cool the oven. When the oven has cooled sufficiently, the fan will turn off automatically. What if cakes and cookies are not cooked enough? Possible fault Fix The grease filter was not removed. What if uneven browning occurs?

Possible fault Oven not preheated. Oven temperature too high. Grease filter was not removed. Shiny or thin pans were used. If the grease filter is not removed, increase baking by 10 to 15 minutes Fix Allow the oven to preheat.

Lower the oven temperature. Remove the grease filter next time. Use dark, matte finish pans. 53 Frequently asked questions What if "F" and a number appear in the oven display? Possible fault Fix If "F3" appears, the roast probe is faulty. Remove the probe from its socket and the code will disappear. If "F6" appears, the oven has automatically This is a safety feature to protect the shut off during operation. oven if it has been operated for too long. The maximum operating time depends upon the program selected. @@If "F7" appears in the display. The cooling fan has stopped turning or is turning too slowly.

If "F8" appears in the display. The Convection fan has stopped turning. @@@@The oven will turn itself on again automatically. @@This is normal. If the time display has been turned off, the display will remain dark.

If the "Start" and "End" buttons are pressed simultaneously, "12:00" should appear in the display. What if the time of day cannot be entered after a power failure? Check whether the program selector is set to "0". The time of day can only be entered when the program selector is set to "0". 54 After sales service

In the event of a fault which you cannot easily fix yourself, please contact the Miele Technical Service Department U 1-800-999-1360 techserv@mieleusa.com V 1-800-565-6435 service@miele.

ca When contacting Technical Service please quote the serial number and model of your oven. This information is visible on the silver data plate along the right side of the oven. 55 Optional accessories The following accessories are available for purchase from your Miele Dealer or Miele. @@@@A lid is also available separately. Small dish part # 22 996 078 Large dish part # 22 996 077 56 Optional accessories Catalytic converter A catalytic converter can be built into the cooling system to filter fat particles and reduce food odors. Catalytic liners The catalytic liners can be replaced. When ordering please state the model number of your oven. The poultry clamp is ideal for roasting small birds on the rotisserie. The spring like clamps keep wings and legs close to the body to prevent uneven cooking. Part # 01 104 460 The kebab griller allows you to cook 4 skewers of kebabs evenly on the rotisserie.

Part # 01 009 230 Poultry clamp and Kabob griller 57 58 Installation Instructions Caring for the environment Disposal of the packing materials The cardboard box and packing materials protect the appliance during shipping. They have been designed to be biodegradable and recyclable. Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! Disposal of an old appliance Old appliances may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials. Ensure the appliance presents no danger to children while being stored for disposal. Before discarding an old appliance, unplug it from the outlet and cut off its power cord. Remove any doors to prevent trapping hazards. 60 Electrical connection Power supply Installation work and repairs should only be performed by a qualified technician in accordance with all applicable codes and standards.

Repairs and other work by unqualified persons could be dangerous and the manufacturer will not be held responsible. Before connecting the appliance to the power supply make sure that the voltage and frequency listed on the data plate correspond with the household electrical supply. This data must correspond to prevent machine damage. Consult a qualified electrician if in doubt. The oven is equipped with a 6 ft.

/1.8 m flexible power cord consisting of 4 wires ready for connection to a dedicated 3 pole, 4 wire grounding power supply: 120/240 V, 60 Hz, 20 A or 120/208 V, 60 Hz, 20 A Black wire: connect to L1 (hot), 20 A Red wire: connect to L2 (hot), 20 A White wire: connect to N (neutral) Green wire: connect to GND (ground) CAUTION: Before servicing, disconnect the power supply by either removing the fuse, unplugging the unit or manually "tripping" the circuit breaker. Installer: Please leave these instructions with the consumer. A dedicated line and junction box should be used to connect the oven to a 20 A circuit.

Connection details are also given on the diagram located on the top of the oven.



[You're reading an excerpt. Click here to read official MIELE H 387 B user guide](http://yourpdfguides.com/dref/4310520)

<http://yourpdfguides.com/dref/4310520>

61 *Installing the oven* The oven must be installed into cabinetry before use. Do not insulate the cabinet. This will prevent proper ventilation. If the oven is to be installed under a counter top, a sealing strip must replace the stainless steel rail above the control panel. The sealing strip offers additional protection from any liquids that might spill down from the counter top. The strip can be purchased from Miele. ^ Connect the oven to the electrical supply. The oven must be supported from underneath. ^ Place the oven into the cabinet as far as the oven trim and align. ^ Open the oven door and locate the two mounting screw holes in the oven frame.

Mark and drill 6 mm pilot holes. Secure the oven to the cabinetry by inserting screws through the frame and into the cabinetry. Only operate the appliance after it has been installed into the cabinetry. 62 63 Alteration rights reserved / 1705 M.-Nr. 05 644 991 / 05 .



[You're reading an excerpt. Click here to read official MIELE H 387 B user guide](#)

<http://yourpdfguides.com/dref/4310520>