




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE H 4080 BM. You'll find the answers to all your questions on the MIELE H 4080 BM in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE H 4080 BM  
User guide MIELE H 4080 BM  
Operating instructions MIELE H 4080 BM  
Instructions for use MIELE H 4080 BM  
Instruction manual MIELE H 4080 BM

**Miele**

## Operating and Installation Instructions

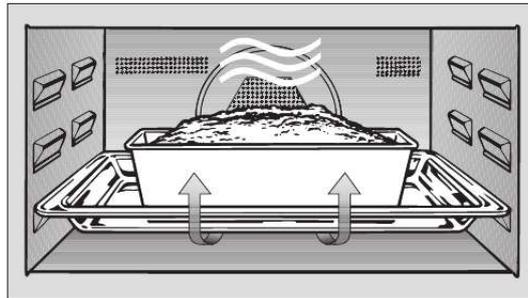

Convection microwave oven  
H 4080 BM

To prevent accidents  
and machine damage  
read these instructions  
**before**  
installation or use.

en - US, CA

M.-Nr. 06 894 670



[You're reading an excerpt. Click here to read official MIELE H 4080 BM user guide](http://yourpdfguides.com/dref/4310543)  
<http://yourpdfguides.com/dref/4310543>

**Manual abstract:**

.....  
.....  
.....  
.....

*.. 4 Guide to the oven.....*

.....  
.....  
.....

.....  
.....  
.....

*. 10 Guide to the display.....*

.....  
.....  
.....  
.....

*..... 11 Oven accessories ..*

.....  
.....  
.....

.....  
.....  
.....

*..... 13 Safety and energy saving features. ...*

.....  
.....  
.....  
.....

*. 15 Settings J.....*

.....  
.....  
.....

.....  
.....  
.....

*..... 16 Language J.....*

.....  
.....  
.....  
.....

.....  
.....  
.....

*16 Clock.....*

.....  
.....  
.....  
.....

.....  
.....  
.....

*.... 16 Temperatures.*

.....

.....  
.....  
.....  
.....

.....  
.. *17 Oven Light* ...

.....  
.....  
.....  
.....

..... *17 Temperature °F/°C* ...

.....  
.....  
.....  
.....

..... *17 Tone Options* ...

.....  
.....  
.....  
.....

.....  
... *18 Display* .

.....  
.....  
.....  
.....

.....  
.. *19 System Lock* ...

.....  
.....  
.....  
.....

.....  
*19 Warming function* .....

.....  
.....  
.....  
.....

*20 Power Level* .....

.....  
.....  
.....  
.....

.....  
..... *20 Reset* .....

.....  
.....  
.....  
.....

.....  
.....  
.....

... *21 Selecting cookware* .....

.....  
.....  
.....  
.....

.....  
*22 Before using the oven* .....

.....  
.....

.....  
.....  
.....

..... *26 Programming the oven* .....

.....  
.....  
.....  
.....

.....  
*26 Cleaning the appliance* .....

.....  
.....

.....  
.....  
.....

..... *26 Heating the oven* .....

.....  
.....  
.....  
.....

.....  
.....

*27 Using the oven* .....

.....  
.....  
.....  
.....

..... *29 Selecting cooking times* .....

.....  
.....  
.....

.....  
.....

..... *31 Timer* .....

.....





.....  
.....  
.....  
.. 63 Programming the oven ..  
.....  
.....  
.....  
.....

.. @@@@This appliance is intended for residential use only. Only use the appliance for its intended purpose. @@This appliance complies with current safety requirements. Improper use of the appliance can lead to personal injury and material damage. Electrical safety ~ Installation, repair and maintenance work should be performed by a Miele authorized service technician in accordance with national and local safety regulations and the provided installation instructions. Contact Miele's Technical Service Department for examination, repair or adjustment. Repairs and other work by unauthorized persons could be dangerous and may void the warranty. the voltage and frequency listed on the data plate correspond with the household electrical supply.

@@If in doubt, consult a qualified technician. @@It is imperative that this basic safety requirement be met. @@@@This is necessary to ensure that all electrical components are shielded. ~ This appliance is not designed for maritime use or for use in mobile installations such as recreational vehicles or aircraft. However, under certain conditions it may be possible for installation in these applications.

Please contact the Miele Technical Service Department with specific requirements. ~ Before service or maintenance work the power supply must be disconnected. ~ If the electrical cord is damaged it must be replaced by a Miele Service technician with a genuine Miele spare part. connect the appliance to electricity. Use ~ The appliance is intended for domestic use only: defrosting, heating, cooking, baking, roasting and broiling of food.

It is not designed for industrial or laboratory use. vapors in this appliance. ~ Do not use corrosive chemicals or ~ Do not use the appliance to store or dehydrate flammable materials. This is a fire hazard. room. Due to the high temperatures radiated, objects left near the oven could catch fire. appliance when in use. ~ Do not use the oven to heat the ~ Prevent children from touching the ~ Times for cooking, heating and defrosting food in the microwave are shorter than that of traditional food preparation methods. Extensive microwaving could dry out food and cause possible ignition. Fire hazard! to dry bread, flowers, herbs, etc.

Use the Convection Bake function. ~ Do not use an extension cord to ~ Do not open the casing of the oven. Danger of electric shock! ~ Do not use the microwave function ~ Do not heat cushions filled with herbs, gel, etc. with the microwave function. The cushions could ignite, even once removed from the oven after heating. This is a fire hazard. empty dishes. The lack or minimal amount of food could cause damage to the appliance. ~ Do not use full power when warming 5 IMPORTANT SAFETY INSTRUCTIONS ~ Supervise cooking with grease or oils. Oils and grease could ignite. ~ Never heat undiluted alcohol in the microwave oven, it can easily ignite. ~ If materials inside the oven ignite, keep the oven door closed to avoid fueling any flames. Turn the oven off or disconnect the power supply. ~ Cover food stored in the oven interior. Condensation from food and drinks could cause corrosion damage.

It also prevents the food from drying out. ~ Spills or stains from food and liquids containing salt should be immediately cleaned from the stainless steel interior. Corrosion may occur. fueling any flame, do not open the oven door. Switch the appliance off by pressing the ON/OFF button, switch off at the mains and remove the plug from the socket.

Do not open the oven door until the smoke has dispersed. ~ When using residual heat to keep food warm leave the selected function on and select the lowest temperature. Do not turn the oven off. Condensation from food and drinks could cause damage at the machine or the countertop and cabinetry. Leaving the machine on will keep the fan running to aid in dissipating the condensation. support a maximum weight of 17.5 lb (8 kg). These accessories may be damaged if over strained. on the open oven door. The machine may be damaged.

directly on a cold surface, such as a tiled or granite countertop. The glass tray may crack. this appliance. The steam could penetrate live components and permanently damage the oven or cause injury.



[You're reading an excerpt. Click here to read official MIELE H 4080](http://yourpdfguides.com/dref/4310543)

[BM user guide](http://yourpdfguides.com/dref/4310543)

<http://yourpdfguides.com/dref/4310543>

has a damaged cord or plug, if it is not working properly or has been damaged or dropped, on the appliance. ~ The glass tray and combi rack can ~ Do not lean, sit or place heavy items ~ Never place the hot glass tray ~ If smoke occurs in the oven, to avoid ~ Do not use a steam cleaner to clean ~ Only use the Miele roast probe supplied with this appliance. If a replacement is necessary it can be ordered from Miele or your Miele dealer. roast probe in the oven, especially when broiling. The high temperatures used for broiling could cause plastic components on the roast probe to melt.

~ Do not operate this appliance if it ~ When not in use do not leave the ~ Do not cover or block any opening ~ This appliance must not be installed or operated outdoors. ~ Do not use this appliance near water, e.g. sink, wet basement, swimming pool, etc. 6 IMPORTANT SAFETY INSTRUCTIONS

Microwave function PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy.

It is important not to damage or tamper with the safety interlocks. Do not place any object between the oven front and the door or allow soil or cleaner residue to accumulate on sealing surfaces. Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

~ Items not suitable for use when using the microwave function or any combination functions: metal, aluminum foil, cutlery, dishware with metal decoration, crystal glass containing lead, bowls with a knurled rim, non-temperature safe dishware, wooden dishware, metal clips, wire twist ties, food containers with metal coverings or residues. Danger of machine damage and fire. The provided combi rack is specially designed for use in this oven. unattended when heating food in disposable, e.g. plastic, paper or other flammable materials. See "Selecting cookware". heat retaining packaging, e.g. take-out food bags.

This packaging contains a thin layer of aluminum foil which reflects the microwaves. This reflected energy can cause the paper layer to ignite. ~ Do not leave tpower for 1 minute. You do not have to turn the microwave on to start this function. ^ Press the Minute+ button and the program will start automatically. e

Display f Timer To time any kitchen activity, e.g. cooking pasta. Two separate times can be entered. g Clear To delete the last entry or to go back to the previous menu.

If more than one function is entered, a question is displayed to clarify which one the user would like to delete. 11 Guide to the display Display + This symbol is allocated to a touch control and shows in the display with an option or request, e.g. "more", "back", "OK", etc. The display shows a maximum of six options.

If more menu points are availableck will have to be reset. Enter Time: ( Size ( 12 hour 04:23 Clock display On ) OK ) Normal 16 Settings J Temperatures The default temperature of each function can be adjusted. If a temperature out of the available range is selected, the oven will revert to the default temperature. ^

Touch the control of the function whose default temperature you wish to alter. ^ Enter the new default temperature using the keypad.

The next time this function is selected, the new temperature will be used. TEMPERATURES ( CONVECTION BAKE ( CONVECTION BROIL ( AUTO ROAST 325°F 400°F 325°F OK ) more ) Oven Light The "on" duration of the oven light can be altered. ^ Touch the control of the light setting you wish to change.

"Off after 1 minute" The light goes off after the 1st minute of a function. "On during use" The oven light remains lit during a function. The selected setting will appear in the display. ^ Touch the "OK" control to confirm the selection. OVEN LIGHT On during use ( Off after 1 minute ( On during use OK )

Temperature °F/°C All oven temperatures can be displayed in either Fahrenheit or Celsius. ^ Touch the "Temperature" control to toggle between °F and °C. SETTINGS ( LANGUAGE.

..J ( CLOCK... ( TEMPERATURES... OVEN LIGHT..

. ) TEMPERATURE °F...) more ) 17 Settings J Tone Options Unique tones may be set for each of the two timers to differentiate them from an oven function tone.

"Timer 1" and "Timer 2" The tone of "Timer 1" and "Timer 2" can be set to one of five tone options. ^ Select "Timer 1 Tone" or "Timer 2 Tone" by touching the corresponding control. With every touch of the respective control, another tone will sound and the display will show the tone number. For example, Timer 1 Tone 1. ^ Select a tone for each timer.

"Keypad Tone" The keypad can be set to make a sound with each touch of a control. ^ Touch the "Keypad tone" control to toggle between the on and off settings. "Volume" This control adjusts the volume of the tone options. ^ Touch the "Volume" control until you hear the desired volume. TONE OPTIONS ( Timer 1 Tone ( Keypad tone 1 Volume Tone 1 ) Short ) OK ) ( Timer 2 Tone 2 on 18 Settings J "Tone Short / Long" The duration of the timer and oven tones can be modified. "Tone short" will beep in quick succession when an oven signal or the oven timer sounds. "Tone long" a continuous tone will sound when an oven signal or the oven timer sounds. ^ Touch the "Tone" control to toggle between the short and long settings. ^ Touch the "OK" control to confirm the "Tone Options" settings. When the tone sounds to indicate an oven signal or the timer, touch any number on the keypad to turn off the tone.

System Lock The oven can be locked. Do not accept The lock is not used. Default setting Accept The lock is used. When "Accept" is set, the display shows a lock which is either open or closed. Off The lock is open, the oven can be used. On The lock is closed, the oven can not be used. The timer can still be used.

The oven will remain locked after a power failure. Display The oven display can be adjusted as desired by touching the controls next to "Brightness" and "Contrast". 19 Settings J Warming function The microwave has a built-in warming function which is activated by default.

Food which is not immediately removed from the oven will be kept warm for a short period of time. The display shows "Keep warm". The function can be deselected. The "Warming function" cannot be set as a separate function. WARMING FUNCTION On ( Off ( On OK ) Power Level The default power levels for microwave and combined microwave functions can be adjusted.



[You're reading an excerpt. Click here to read official MIELE H 4080](http://yourpdfguides.com/dref/4310543)

[BM user guide](http://yourpdfguides.com/dref/4310543)

<http://yourpdfguides.com/dref/4310543>

Confirm with "OK". They are shown in a bar. A full bar shows the maximum power. Seven power levels are available for microwave. If only two segments are shown the minimum power is displayed.

Four power levels are available for combination functions. If only four segments are shown the minimum power is displayed. ( Lower MICROWAVE Adjust power level w v Higher ) OK ) COMBINATIONS ( Lower Adjust power level Higher ) OK ) 20 Settings J Reset The default settings of the microwave oven can be restored with "Reset". RESET ( TEMPERATURES ( SETTINGS ( FAVORITES Temperatures If the request is confirmed with "yes", all changed temperatures will be restored to the factory default. RESET TEMPERATURES Are you sure? ( Yes No ) Settings If the request is confirmed with "yes", all changed settings will be restored to the factory default. RESET SETTINGS Are you sure? ( Yes No ) Favorites If the request is confirmed with "yes", all changed "Favorite" entries will be deleted. Once deleted, these entries cannot be restored. Reset Favorites Are you sure? ( Yes No ) 21 Selecting cookware Microwaves: Material and shape The material and shape of containers used affect cooking results and times. Circular and oval containers work best. The food will heat more evenly than in a square container.

Metal are reflected by metal, Do not use metal containers, aluminum foil, cutlery or dishes with metal decor during any microwave function including all combination functions. The metal reflects the microwaves which can damage the microwave oven. pass through glass and chinaware, are absorbed by the food. 22 Selecting cookware Exceptions: Pre-cooked meals in aluminum foil containers can be defrosted and reheated in the microwave oven. Important: Remove the lid before heating the food. The food is heated only from above. To heat the food evenly place it in a container suitable for microwaving. For even defrosting and to avoid overcooking unevenly shaped cuts of meat, poultry or fish, small pieces of aluminum foil may be used to mask wing-tips or other thin parts for the last few minutes of the process. Make sure that the aluminum foil is at least 1 inch (2.5 cm) from the oven walls at all times. It must not touch the walls. Metal meat skewers or clamps should only be used if they are small in comparison to the size of the meat. The enclosed combi rack is suitable for microwaving. Do not set it on the oven floor. The combi rack gets hot.

Let it cool before touching or use pot holders to avoid injury. Glassware Heat-resistant glass or ceramic glassware are ideal for use in the microwave oven. Crystal contains lead and is unsuitable. Porcelain (china) Porcelain (china) is suitable for use in the microwave oven. Do not use porcelain with gold or silver edging or items with hollow knobs or handles, insufficient ventilation may cause damage.

Earthenware Decorated earthenware is only suitable if the decoration is beneath the glaze. Earthenware can get very hot and may crack. Glazes and colors Some glazes and colors contain metallic substances. They are not suitable for the microwave. 23 Selecting cookware Plastics Use plastic dishes only for Microwave - Solo. They must be heat resistant up to 230°F (110°C) otherwise the plastic may melt into the food. Special plasticware, designed for use in microwave ovens is available in retail outlets. Plastic boiling bags can be used for cooking and reheating. They should be pierced beforehand so that steam can escape. This prevents a build-up of pressure and reduces the risk of the bag bursting.

Roasting bags These bags can be used in the microwave oven. Please follow the manufacturers' instructions. Wood Wood containers are not suitable. The water from the wood evaporates during the cooking process causing it to dry out and crack. Disposable containers Only those plastic disposable containers specified under "Plastics" are suitable for use in the microwave oven. Do not leave the oven unattended when reheating or cooking food in disposable containers made of plastic, paper or other flammable materials. Disposable containers are not always microwave safe. 24 Selecting cookware Covering the food Use a cover only during the Microwave-Solo function. Plastics are only heat-resistant up to 230°F (110°C). Higher temperatures (Broiling, Convection Bake, etc.

) can cause the cover to melt into the food. The cover should not completely seal the container. This may prevent steam from escaping causing the cover to melt. A cover: prevents most of the steam from escaping, especially when cooking foods which needs longer to cook, such as potatoes. shortens and evens out the cooking process.

prevents the food from drying out. prevents any loss of aroma. prevents soiling of the oven interior. ^ Cover the food with a glass or plastic lid suitable for microwave ovens. They are available in retail stores.

Plastic wrap suitable for microwaving can also be used. Do not heat food in closed containers e.g. glass baby food containers. Vent the container before heating. Do not use a lid or cover if: cooking food in which a crisp finish is desired e.g. breaded chicken, garlic bread, etc. a combination function is selected. 25 Before using the oven Programming the oven When the oven is first connected to the electrical supply you will be prompted to set the time of day.

See "Settings Clock". Cleaning the appliance Remove the protective film from the appliance front (if present). ^ Wipe the interior with a solution of warm water and liquid dish soap. Dry with a soft cloth. Leave the door open until the interior is completely dry. Otherwise odors and corrosion may occur. ^ Wash the accessories. See "Cleaning and care" for more information. 26 Before using the oven Heating the oven New ovens may have a slight odor during the first use. To eliminate the odor quickly, the oven should be operated at a high temperature for 2 hours.

Before heating the oven, remove all accessories and labels. Make sure the room is well ventilated during this process. ^ Touch the "On" control. ^ Select the "Bake" function. ( BAKE.

.. ( BROIL...

( MICROWAVE... MASTER CHEF... ) DEFROST... ) more ) ^ Select "Convection Bake".

BAKE FUNCTIONS ( CONVECTION BAKE ( COMBINATION BAKE ^ Select "Temperature". CONVECTION BAKE 325°F Preheating 60°F Temperature ) ( Delay Start Add to favorites ) 12:23 ^ Set the temperature to 435°F (225 °C) using the keypad. CONVECTION BAKE 325°F Range: 125°F - 435°F 12:23 Temperature ) ( Delay Start Add to favorites ) 27 Before using the oven ^ Set the timer by touching the "Delay Start" control. CONVECTION BAKE 435°F 12:23 Temperature ) ( Delay Start Add to favorites ) ^ Select "Duration".



[You're reading an excerpt. Click here to read official MIELE H 4080 BM user guide](http://yourpdfguides.com/dref/4310543)  
<http://yourpdfguides.com/dref/4310543>

Set a cooking time by entering "2", "0", "0" using the number keypad. ^ Touch the "OK" control. Delay Start: Select ( Start time ( Duration ( End time hh:mm hh:mm hh:mm 12:23 OK ) The oven will run for 2 hours and the time remaining will appear in the display. CONVECTION BAKE 435°F Preheating 60°F ( Remaining time 02:00 ( End Time 12:23 Temperature ) 02:23 Add to favorites ) 28 Using the oven Turning the oven on and off ^ To turn the oven on or off touch the On/Off sensor. The main menu appears and displays 9 menu options. ^ Select the desired menu (e.g. Bake) by touching the sensor next to it. Functions will then appear. ^ Select the desired function (e.g. Convection Bake) by touching the sensor next to it. Each function has different settings which can be adjusted. (The settings will vary depending on the function selected.) + Temperature + Power Level + Delay Start + Duration + Add to favorites ^ Adjust the settings as desired. The currently selected settings are then shown in the display.

The oven is factory set so that it starts automatically. Once the oven has reached the selected temperature a tone will sound. CONVECTION BAKE 325°F Preheating 60°F Temperature ) ( Delay Start Add to favorites ) 12:23 ( BAKE... ( BROIL... ( MICROWAVE... ) DEFROST... ) more ) BAKE FUNCTIONS ( CONVECTION BAKE ( COMBINATION BAKE 29 Using the oven Manually starting a microwave function Only when microwaving is used must the oven be started manually. ^ Turn the oven on. ^ Select the desired function e.g. Microwave. The submenu is shown. ^ Select the desired option from the submenu e.g. Microwave. ( BAKE... ( BROIL... ( MICROWAVE... MASTER CHEF... ) DEFROST... ) more ) MICROWAVE ( MICROWAVE COMBINATION BROIL ) MICRO BROIL ) ( COMBINATION BAKE ( COMBINATION AUTO ROAST ^ Select the desired cooking time. ^ Select a power level and temperature (depending on the function selected). ^ Confirm with "OK". ^ Select "Start". The remaining time and time of day is displayed during the running program. ^ To stop the operation, touch the "Clear" sensor. The door is unlocked when using the microwave and can be opened at any time. The operation is interrupted and will be continued once the door is closed. ^ To end a running program, touch the On/Off sensor.

If the oven is already heated from a previous cooking process, let it cool to room temperature before using it again. The cooking times and results could be affected by the heat. 30 ( Start MICROWAVE Range: 0 - 10min Power Level ) ( Duration min:sec MICROWAVE Please Start Power Level ) Add to favorites ) ( Duration min:sec Selecting cooking times The oven can be programmed to turn on and off automatically. If a combination function is selected, "Duration" can be selected. If a solo function is selected the following settings can be selected: + Delay Start With this function you can program the oven to turn on at a desired time.

+ Duration Enter the cooking time. After the time has elapsed, the oven will turn off automatically. + End Time With this function you can program the oven to turn off automatically. To automatically turn a cooking program on or off the cooking times can be entered by the, duration and end time. duration and start time. The time not entered will be determined automatically but cannot be adjusted. Delay Start: Select ( Start time ( Duration ( End time hh:mm hh:mm hh:mm OK ) 12:23 31 Selecting cooking times The entered program can be saved as its own program with "Add to favorites". See "Favorites" for more information. The start time will be displayed until the oven is turned on. Once the program has started, the remaining time will be displayed. After the program has completed "Ready" will be displayed and a signal will sound. Checking and adjusting entered cooking times Entered cooking times can be checked or adjusted at any time by selecting the respective setting. Deleting entered cooking times ^ Touch the "Clear" sensor. All data will be deleted during a power failure.

32 Timer The timer can be used to time any activity in the kitchen and can be set independently of a cooking function. Two timers (Timer 1 and 2) can be used individually or simultaneously. A maximum time of 59 minutes and 59 seconds can be selected. Setting a timer ^ Touch the "Timer" control. ^ Use the keypad to enter the desired time in minutes and seconds. ^ Press "OK" or the timer will start automatically after a few seconds. The second timer can be set in the same way as the first. The countdown of Timer 1 and 2 is shown in the lower area of the display. At the end of the timed period, a tone will sound. ^ Touch "Clear" to cancel the timer tone.

Timer 1: min:sec OK ) Timer 2: min:sec ) Enter duration Canceling a timer ^ Touch the "Clear" control. ^ Touch the control for the timer to be canceled or to cancel both timers and a running function touch "All Functions". ^ Select "OK". 33 Functions Solo functions Convection Bake to bake or cook food with heated air fanned throughout the interior. Broil to broil flat cuts of food. Broiling is done with the oven door closed. Convection Broil to broil large cuts of meat or poultry. Convection broiling is done with the oven door closed. Microwave to defrost, heat and cook food in a short period of time. Defrost Auto Roast to sear then roast food automatically. Convection Roast to roast food with heated air fanned throughout the interior. Combination functions Combination Bake Combination Auto Roast Combination Broil Micro Broil For a combination of the microwave function with a solo function. These functions allow for fast heating, cooking and browning of food. Convection Bake is usually the most suitable. Since the heat immediately gets to the food, the time and energy efficiency is greatest. Do not cover the food in combi functions. @@@@Use the 2nd and 3rd level when baking several trays at a time. Default temperature . . .

. @@@@Any heat-resistant cookware is suitable, e.g. casserole dish, china, earthenware. However shiny, thin pans are not recommended. @@This prevents it from drying out. Do not cover food which is supposed to crisp, e.g. meat. ^ Place the food into the oven. The program will start automatically. ^ Adjust the temperature if necessary. @@The heat will better distribute. Default temperature . . .

. . @@@@ dough, cake, cheesecake, etc. This function combines the programs Microwave and Convection Bake. @@@@Do not use metal cake pans with this function.

@@@@Be sure that the pan does not touch the walls. ^ Select a power level and temperature if desired. Confirm with "OK". ^ Select a duration. @@@@The program will start automatically. If possible allow the oven to preheat for 5 minutes. ^ Place the combi rack in the glass tray and place the food on it.



[You're reading an excerpt. Click here to read official MIELE H 4080 BM user guide](http://yourpdfguides.com/dref/4310543)  
<http://yourpdfguides.com/dref/4310543>

@@. . .

@@@@@^ Adjust the temperature if desired. The program will start automatically. If possible allow the oven to preheat for 5 minutes. ^ Place the combi rack on the glass tray and place the food on it. ^ Insert the glass tray on the 1st level runner from the bottom. @@@@^ Select a duration. ^ Select a power level if desired. Confirm with "OK". ^ Press "Start". ^ Place the combi rack on the glass tray and place the food on it.

Insert the glass tray on the 2nd level runner from the bottom. @@. . . @@^ Select a duration.

^ Select a power level and temperature if desired. Confirm with "OK". ^ Press "Start". If possible allow the oven to preheat for 5 minutes. ^ Place the combi rack in the glass tray and place the food on it.

@@@@@ color, texture and taste of food are not impaired. Microwave Solo There are seven microwave power levels available. MICROWAVE ( Lower Adjust power level w Higher ) OK ) The power levels are shown in a bar. A full bar shows the maximum power. If only two bars are shown the minimum power is displayed. Microwave Combination There are four microwave power levels available. Select a lower microwave power level (bar half filled) to bake food. To cook, roast and broil select the maximum microwave power level. COMBINATIONS ( Lower Adjust power level v Higher ) OK ) The power levels are shown in a bar. The full bar shows the maximum power.

If only four segments are shown the minimum power is displayed. 39 Microwave ,Do Not Operate the Microwave empty! The oven will get damaged. Only use microwave safe cookware. No metal! In all microwave functions the power level and cooking time can be selected. Combined microwave functions will shorten the cooking time and give a browned finish to the food. Combination Bake See "Bake" for more information. Combination Broil See "Broil" for more information. Micro Broil See "Broil for more information. Microwave tips Food with a thick skin or peel, such as potatoes and sausage, should be pierced several times before cooking to allow steam to vent and prevent the food from bursting. Boil eggs in shell only in a specially designed microwave egg boiling device, otherwise the eggs may burst even once taken from the oven.

Eggs can be cooked without their shells in the microwave oven only if the yolk has been punctured. The pressure could otherwise cause the egg yolk to explode. Do not cover the food when using combination functions. Add a little water when cooking vegetables that are not fresh in the microwave. Fresh vegetables cook quicker.

Food from the fridge needs a longer cooking time than food at room temperature. Microwave The function Microwave is suitable for cooking casseroles, rice pudding, etc. ^ Place the food in a microwave-safe dish and cover. ^ Set the cookware in the middle of the glass tray on the 1st level runner from the bottom. If the food is set directly on the oven floor it will not defrost / cook / heat evenly since the microwaves cannot reach the food from below.

^ Select a duration. ^ Select a power level. Confirm with OK. ^ Press "Start". ^ Stir and turn food at least once during cooking. 40 Microwave Defrosting The function Microwave defrosts food gently and fast. The following microwave power levels are recommended for defrosting: 2 bars for defrosting delicate food such as heavy cream, butter, cheese, etc. 4 bars for defrosting all other foods. ^ Take the frozen food from the packaging and put it in a microwave safe container. ^ Set the cookware onto the middle of the glass tray on the 1st level runner from the bottom.

^ Select a cooking time and a power level. ^ Press "Start". Defrosting tips When defrosting larger amounts of food, e.g. 4 lbs (2 kg) of fish, the glass tray can be used as a defrosting container on the 1st runner level from the bottom. After defrosting allow the food to stand at room temperature long enough to distribute the heat evenly throughout the food. 41 Microwave Reheating The microwave is useful for reheating food. To reheat select a power level of: full bar for drinks, 10 to 12 bars for food, 8 bars for baby food. ^ Place the food in the microwave on the 1st level runner from the bottom. ^ Select a cooking time and a power level.

^ Press "Start". The time required depends on the food, its initial temperature and the amount to be heated. ^ Stir the food halfway through reheating.

@@@@@breaded foods. Remove the lid from glass containers e.

g. baby food jars. Remove the lid or nipple from baby bottles before heating. To heat a liquid, insert the boiling wand into the container. Take care that the baby food is at a safe temperature when served.

@@@@@Frozen meals can be defrosted and then reheated or cooked. Consult the manufacturer's instructions. @@^ Select a cooking time and power level. ^ Press "Start". @@Separate and turn slices of meat half-way through the program. @@@@^ Set the glass tray in the 2nd runner level. Do not cover the food. @@^ Select a duration. ^ Select the maximum microwave power level. Confirm with "OK".

^ Adjust the temperature if necessary. ^ Press "Start". If the food is not sufficiently browned, next time set the glass tray on the combi rack and set it in the 1st runner level. This will bring the food closer to the heating element creating a more browned finish. 43 Master Chef The "Master Chef" function contains an easy to use list of preset functions for commonly cooked foods e.g. pizza, chicken, etc. ^ Pay attention to notes in the display. For example the display may show a note to insert the roast probe or to add liquid. For some programs the maximum food weight must not be exceeded.

See the "Maximum food weight" table. ^ Select "Master Chef" from the main menu. Master Chef menus + Poultry + Meat + Fish + Pizza + Baked Goods + Casseroles + Vegetables + Soup After the selection of the food group you can select between (except: Pizza, Baked Goods) + Cook + Reheat + Defrost ^ Follow the prompts until the program starts. The prompts will vary depending on the type of food selected. ^ You can toggle between pounds and kilograms by touching the "lb/kg" button.

If defrosting a large amount of food which consists of smaller portions e.g. 4 chicken breasts, enter a lower total weight than the actual total weight. This will give a more even defrosting result. ^ Include a dish height in the "Casseroles" submenu.

See "Casserole program dish heights". ^ A delayed start time can be selected, if desired. ^ The program will start automatically. A Master Chef program can only be ended ahead of time if the oven is turned off. Once a Master Chef program has started, the remaining time will be displayed. All Master Chef programs have a fixed time assigned. When using the roast probe, an estimated time is displayed.



[You're reading an excerpt. Click here to read official MIELE H 4080](http://yourpdfguides.com/dref/4310543)

[BM user guide](http://yourpdfguides.com/dref/4310543)

<http://yourpdfguides.com/dref/4310543>

After the program has ended "Ready" will be displayed and a signal will sound. If the food is not cooked to your desire, the program can be extended. When cooking with the roast probe, the core temperature can be increased.

^ Select "Extend" from the submenu. 44 Master Chef Maximum food weight Poultry Turkey Whole Whole, Stuffed Breast Goose Meat Beef Roast beef / Sirloin Tenderloin Pork Blade Roast Rack of Pork Tenderloin Veal Lamb Tenderloin Leg Saddle of Lamb Fish Steaks Fillets Whole Lobster tails max. 10 lbs (4.5 kg) without stuffing max. 12 lbs (5.5 kg) with stuffing max. 6 lbs (2.5 kg) max. 10 lbs (4.5 kg) max. 7 lbs (3 kg) each 10-11 oz. (300 g) 1.

5 - 2.2 lbs (650-1000 g) max. 5 lbs (max. 2 kg) max. 6 lbs (max. 2.5 kg) each 5 - 7 oz (150-200 g) 4.5 lbs (2 kg) max. 5.5 lbs (2.5 kg) max. 5 pieces up to 10 oz each (280 g) max. 4 pieces up to 18 oz each (500 g) Paella Fresh max. 4.5 lbs (2 kg) Casserole program dish heights Program thin Lasagna Dish height middle thick up to 1 1/2" (3.

5 cm) 1 - 1 1/2" (2 - 3.5 cm) up to 1 1/4" (3 cm) 1 3/4" - 2 1/4" (4 - 5.5 cm) 1 3/4" - 2" (4 - 5 cm) 1 1/2" - 1 3/4" (3.5 - 4.5 cm) over 2 1/2" (6 cm) 2 1/4" - 2 1/2" (5.5 - 6.5 cm) over 2" (5.5 cm) Gratin Casseroles 45 Defrost The defrost function allows you to defrost food at a consistent temperature. Warm air is distributed over the food by the fan on the rear wall of the oven. ^ Place the food in the oven.

^ Select "Delay Start" to select a cooking time. ^ Select a temperature between 75°F (25°C) and 125°F (50 °C) if desired. A lower temperature should be selected for more delicate foods, e.g. butter or cheese.

The program will start automatically. The time it takes to defrost the food depends on its type and weight. The temperature at which it was deep frozen will also make a difference. Defrosting tips During the defrosting time turn, stir or separate the food several times. As a reminder a tone sounds and a message is displayed.

Remove frozen food items from the packaging and place them in a dish. Meat and poultry should be fully thawed before cooking. Do not use the defrosting liquids. Fish does not need to be fully defrosted before cooking. Defrost so that the surface is soft enough to absorb seasonings. Cook food immediately after defrosting. 46 Roast Auto Roast Do not preheat the oven. Exception: When cooking roast sirloin or tenderloins using Auto Roast preheat the oven to the temperature recommended in the recipe. Default temperature . .

. . . 325°F (160°C) This function allows you to brown meat and poultry. Auto Roast heats the oven to a high temperature to sear the meat, retaining moisture and tenderness. The oven temperature then automatically returns to the preselected setting. Suitable cookware: Casserole dish, combi rack with glass tray, earthen cookware. The cookware must have heat-resistant handles. In this function cooking times and delay start times can be programmed. ^ Insert the glass tray with the combi rack on the 1st runner level. ^ If roasting in cookware set it directly on the glass tray, otherwise place food directly on the combi rack. The program will start automatically. ^ Select delay start if desired. Confirm with "OK". ^ Adjust the temperature if necessary. The roasting time depends on the type, size and thickness of the meat.

47 Roast Combination Auto Roast Default temperature . . . . 325°F (160°C) By combining the Microwave and Auto Roast functions the cooking time is shortened.

This function is not suitable for roast beef or tenderloins. The meat will cook before it browns. Use only heat resistant cookware. No metal! ^ Insert the glass tray with the combi rack on the 1st runner level. ^ Place the food in the oven. ^ Select a duration, temperature and power level if desired. Confirm with "OK". For meat and fish a microwave power level of 12 bars is recommended and for poultry a setting of 8 bars. ^ Press "Start". ^ After roasting let the food sit for 10 minutes.

Convection Roast Default temperature . . . . 325°F (160°C) This function is suitable to cook meat or poultry. This function works by circulating air over the heating elements and fanning it back through the opening in the back panel of the oven. Any heat-resistant cookware is suitable, e.g. casserole dish, china, earthenware. A cookware with lid is ideal for roasting.

The meat will stay moist and the oven interior stays clean. Remove the lid after half of the roasting time to allow browning. ^ Insert the glass tray with the combi rack on the 1st runner level. ^ Place the food in the oven. The program will start automatically.

^ Adjust the temperature if necessary. ^ Select a delay start time if desired. Confirm with "OK". 48 Using the roast probe The oven comes equipped with a roast probe. The roast probe allows you to monitor the cooking temperature by measuring the core temperature of the meat.

When the desired temperature is reached the oven will automatically turn off. The roast probe can be used during: All Roast functions Microwave (Solo and Combination functions) Using the roast probe ^ Prepare the meat. ^ Plug the roast probe into the socket until it clicks (see arrow). ^ Close the appliance door. ^ Select the desired function. A delayed start is possible if desired. (Not possible for Solo Microwave.) The display shows the oven default temperature and the default core temperature. ^ If desired adjust the default temperature and/or power level. ^ If desired adjust the default core temperature by pressing "Probe".

Enter the new core temperature using the keypad. ^ Select "OK". ^ Select "Start" if using a microwave function. The rising core temperature can be monitored in the display during the cooking program. The cooking time is calculated automatically. ^ Insert the roast probe half way into the food so that the tip reaches the center of the thickest part of the meat. ^ Place the food in the oven. 49 Using the roast probe Once the selected core temperature is reached: the display shows "Ready". a signal will sound. the oven turns off automatically.

the cooling fan stays on. ^ After roasting, cover the meat for about 10 minutes with aluminum foil. During this time the core temperature will rise by 5 - 10°.

Insert the roast probe into another part and repeat the cooking process if: the meat is not cooked to your desire. Raise the core temperature. the roast probe tip did not reach the center of the meat (large cuts of meat). Roast probe tips The time it takes to cook meat when using the roast probe is similar to that of cooking by time. When using broiling bags, insert the roast probe through the foil into the meat core. Fat and bones may impair the temperature measuring and can cause the oven to turn off prematurely.



[You're reading an excerpt. Click here to read official MIELE H 4080 BM user guide](http://yourpdfguides.com/dref/4310543)  
<http://yourpdfguides.com/dref/4310543>

Therefore the tip should not touch bones or be inserted into fatty areas of the meat.

Select a higher core temperature for meat with a high fat content. Meat can be roasted in a container or on the rack with the glass tray. Core temperatures  
Pot Roast Roast beef/Tenderloin - rare - medium - well done Pork roast Pork filet / chops Veal roast Leg of lamb Poultry Game Fish 176 - 194 °F 104 - 122  
°F 122 - 145 °F 147 - 158 °F 176 - 194 °F 158 - 176 °F 167 - 176 °F 167 - 176 °F 185 - 194 °F 176 - 194 °F 167 - 185 °F 80 - 90 °C 40 - 50 °C 50 - 63 °C 64  
- 70 °C 80 - 90 °C 70 - 80 °C 75 - 80 °C 75 - 80 °C 85 - 90 °C 80 - 90 °C 75 - 85 °C 50 Favorites If you often cook a recipe with the same settings (function,  
time, temperature) you can save it as a Favorite for easy recall. Saving a favorite ^ Enter the function, temperature and cooking time of the recipe. The oven  
will begin heating. ^ Touch the "Add to Favorites" control. Your Favorite must be named before it can be saved into memory. ^ Enter the letters and numbers  
of the name by touching the controls left and right of the alpha-numeric list. Confirm each character entry by touching the "Select" control. ^ Select the "OK"  
control when naming is complete to save the "favorite" to memory.

^ Touch "Clear" to cancel the running function if you are not cooking. Your Favorite can now be recalled from the "Favorites" list. When selected the oven  
will automatically use the saved settings. CONVECTION BAKE 325°F Preheating 60°F 12:23 Temperature ) ( Delay Start Add to Favorites ) Add to  
Favorites:.....

.....

.....

..... ( Space ( Select Backspace) OK ) ( ABCDEFGHIJKLMNOPQRSTUVWXYZ-012) 51 Favorites Selecting Favorites ^ Select "Favorites" from the main  
menu. ^ Select the desired Favorite from the menu. Depending on the function saved you may need to press "Start" to begin the program. Follow the prompts.

^ Select and start your personal recipe. Delete Favorites ^ Select "Favorites" from the main menu. ^ In the submenu select "Clear Favorites". ^ Select the  
desired favorite and delete. 52 Cleaning and Care Oven Interior Let the oven cool before cleaning the interior, the inside door and the gasket. Danger of  
burns! Clean the oven after every use, accumulated soiling makes cleaning difficult and could damage the appliance. Never use abrasive cleaners, scouring  
pads or steel wool on any part of the oven. They will damage the surfaces. Do not use caustic (oven) cleaners when the oven is hot, even if the cleaner  
instructions state otherwise. Caustic cleaners sprayed on hot metal surfaces will discolor the oven.

Only use caustic oven cleaners on a cool surface. Do not spray oven cleaners into any openings Do not use the Microwave function if the door or gasket is  
damaged. Call Technical Service. ^ Clean the interior, the inside of the door and gasket with a sponge and a solution of warm water and nonabrasive liquid  
detergent. Avoid using too much water, this could penetrate the openings.

^ Dry with a soft cloth. ^ Check the door and gasket at regular intervals for any sign of damage. Stainless steel surfaces The interior is made of stainless steel.  
Due to the high temperatures radiated the stainless steel may darken. This will not affect the performance of the oven.

Stainless steel surfaces can be cleaned using a non-abrasive stainless steel cleaner. Cleaning tips Juices and cake mixtures Soiling such as spilled juices and  
cake mixtures are best removed while the oven or tray is still warm. Spilled fruit juices may cause lasting discoloration of the surfaces but will not affect the  
performance of the oven. Hard-to-clean spills Place a heat-resistant cup of water in the oven and bring it to a boil. The steam will condensate on the interior  
walls making it easier to clean. Neutralizing odors Place a heat-resistant cup of water and lemon juice in the oven and simmer for a few minutes. 53 Cleaning  
and Care Interior ceiling To clean the interior ceiling, the upper heating element can be lowered. Wait for the upper heating element to cool before lowering  
it. Danger of burns. Appliance front ^ All external surfaces and controls can be cleaned with warm water and liquid dish soap applied with a sponge.

^ Dry with a soft cloth. Glass surfaces Glass surfaces are not scratch proof. Never use abrasive cleaners, scouring pads, steel wool or oven cleaners on glass  
surfaces. They will cause damage. Do not use a shielded scraper blade to clean the door glass surface. ^ Unscrew the nut. Stainless steel Stainless steel  
surfaces can be cleaned using a non-abrasive stainless steel cleaner. To help prevent resoiling, a conditioner for stainless steel can also be used. Apply  
sparingly with even pressure. ^ Lower the upper heating element.

Do not use force! It may cause damage. ^ After cleaning move the upper heating element back to its original position. Tighten the nut. 54 Cleaning and Care  
Oven accessories Combi rack The rack should be washed and dried after each use. It is easier to clean if it is soaked in a solution of hot water and liquid dish  
soap.

Remove stubborn soils with a stainless steel cleaner. Glass tray Clean the glass tray in the dishwasher or wash it by hand. Do not use abrasive cleaning  
agents, they will damage the surface. Boiling wand The boiling wand can be washed in the dishwasher or by hand. Roast probe Clean the roast probe with a  
damp cloth.

Do not submerge the roast probe in water or wash it in the dishwasher. 55 Frequently asked questions Installation work and repairs should only be performed  
by a qualified technician in accordance with all applicable codes and standards. Repairs and other work by unqualified persons could be dangerous and may  
void the warranty. The following faults can be corrected without contacting the Miele Service Department: Why is the display dark when the oven is first  
turned on? Possible fault The appliance is not correctly plugged in. The circuit breaker has tripped. The display setting is set to "Off". What if the oven does  
not heat? Possible fault The door is not shut completely. The settings are not programmed. Fix Close the door firmly. Select a power level and time setting for  
the microwave function.

Select a power level and a time setting for the microwave and a temperature setting for a solo function. Fix Check the plug. Check the breaker. See "Settings -  
Clock". Why is there no noise when the oven door is opened? This is normal. If the door is opened during operation, a safety contact switch causes the  
heating elements and the fan to shut off. 56 Frequently asked questions Why is a noise heard after turning the oven off? This is normal. The fan will continue  
to run for a short time to cool the oven. When the oven has cooled sufficiently, the fan will turn off automatically. The fan will stop if the door is opened during  
the cooling phase.



[You're reading an excerpt. Click here to read official MIELE H 4080  
BM user guide  
http://yourpdfguides.com/dref/4310543](http://yourpdfguides.com/dref/4310543)

The fan will continue when the door is closed again until the cooling phase is complete. Why does the oven operate but the light is off? Possible fault The interior light has been turned off. The light bulb is bad. Fix See "Settings - Oven light". To reduce the risk of electric shock, disconnect the appliance from the power supply.

^ Loosen the screw of the light cover and take the cover off. ^ Remove the bulb and replace it with a new one. Only use a 12 V, 10 W, 572°F (300°C) heat resistant, Osram Type 64418, W271 bulb. ^ Do not touch the new light bulb with your fingers, this will reduce its life. Follow the manufacturer's instructions.

^ Restore power. Why is the food not adequately defrosted, heated or cooked at the end of the selected process? Possible Fault The program was interrupted.

The power and/or time settings are incorrect. Fix After interrupting a program the microwave must be started again. @@@@Possible fault Oven temperature too high. Shiny or thin pans were used. Fix Use a lower cooking temperature. @@@@If food is cooked at a high power level it is possible that the heat may not have reached the center of the food. At the temperature equalization time the food will become hot in the inside and warm on the outside.

When heating a meal, select a lower power level and a longer cooking time.

Why are there strange noises when the microwave oven is being used? Possible fault Sparks are created by the use of dishware with a metallic finish.

@@Remove the aluminum foil. @@Fix Remove the roast probe from the outlet. The message will disappear. @@Fix The length of time depends on the function and temperature. Turn the oven off and on again. @@Do not open the outer casing of the appliance. The appliance must only be repaired by a qualified service technician.

58 Technical Service In the event of a fault which you cannot easily fix yourself, please contact the Miele Technical Service Department at the phone number on the back of this booklet. MieleCare MieleCare, our Extended Service Contract program, gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership.

MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance. Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele. Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home. To learn more about MieleCare Extended Service Contracts, please contact your appliance dealer or visit us online at: <http://store.miele.com>

When contacting Technical Service please quote the serial number and model of your oven. This information is visible on the silver data plate along the right side of the oven. 59 60 Installation Instructions Electrical connection, CAUTION: Before servicing, disconnect the power supply by either removing the fuse, shutting off the power main or manually "tripping" the circuit breaker. Installation work and repairs should only be performed by a qualified technician in accordance with all applicable codes and standards.

Repairs and service by unqualified persons could be dangerous and the manufacturer will not be held responsible. Before connecting the appliance to the power supply, make sure that the voltage and frequency listed on the data plate correspond with the household electrical supply. This data must correspond in order to prevent machine damage. Consult an electrician if in doubt. Only operate the appliance after it has been installed into cabinetry. The appliance must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances. Power supply The oven comes equipped with a 7.2 ft. (2.2 m) power cord with a NEMA 14-30 P molded plug ready for connection to a: 208 V, 20 A, 60 Hz power supply.

or 240 V, 20 A, 60 Hz power supply. WARNING: THIS APPLIANCE MUST BE GROUNDED Installer: Please leave these instructions with the consumer. 62 Installation Installation options The appliance is designed for installation under a countertop, in a tall cabinet or in a tall cabinet in combination with an oven. Installation under a countertop When installed under a cooktop regard the installation instructions and dimensions of the cooktop. 63 Installation Installation in a tall cabinet Installation in a tall cabinet in combination with an oven 64 Installation Installation If there are side handles, please remove them. Programming the oven When the oven is first connected to the electrical supply you will be prompted to set the time of day. See "Settings Clock". Do not test the unit empty! The oven will get damaged. ^ Connect the oven to the electrical supply. ^ Set the oven into the cabinet niche, push it all the way in and align it, right-angled.

^ Open the oven and fix the appliance with the two supplied screws at the side panels of the cabinet. Do not use the appliance until it has been properly installed. 65 66 67 Alteration rights reserved / 1308 M.-Nr. 06 894 670 / 05 For the most updated manual see the Miele web site.



[You're reading an excerpt. Click here to read official MIELE H 4080](http://yourpdfguides.com/dref/4310543)

[BM user guide](http://yourpdfguides.com/dref/4310543)

<http://yourpdfguides.com/dref/4310543>