




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE S 514 S OLARIS TURBO PLUS MIDS IZE CANIS TER. You'll find the answers to all your questions on the MIELE S 514 S OLARIS TURBO PLUS MIDS IZE CANIS TER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE S 514 S OLARIS TURBO PLUS MIDS IZE CANIS TER
User guide MIELE S 514 S OLARIS TURBO PLUS MIDS IZE CANIS TER
Operating instructions MIELE S 514 S OLARIS TURBO PLUS MIDS IZE CANIS TER
Instructions for use MIELE S 514 S OLARIS TURBO PLUS MIDS IZE CANIS TER
Instruction manual MIELE S 514 S OLARIS TURBO PLUS MIDS IZE CANIS TER

Miele

Operating Instructions

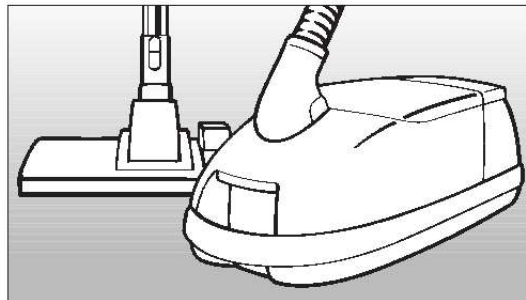

Vacuum Cleaner
S 500 - S 548

To prevent accidents
and appliance damage,
read these instructions
before
installation or use.

HS05
HS06

en - US, CA

M.-Nr. 07 319 300



[You're reading an excerpt. Click here to read official MIELE S 514 S OLARIS TURBO PLUS MIDS IZE CANIS TER user guide](http://yourpdfguides.com/dref/3353705)
<http://yourpdfguides.com/dref/3353705>

Manual abstract:

en - US, CA M.-Nr. 07 319 300 2 Contents IMPORTANT SAFETY INSTRUCTIONS.

.
.
.

. 4 Guide to the vacuum cleaner

.
.
.

.
.

8 Before using for the first time.

.
.

.
.

. 10 Included accessories.

.
.

.
.

.
.

13 Using the included accessories

.
.

.
.

.
.

. . . 15 Crevice nozzle

.
.

.
.

.
.

.
.

. 15 Dusting brush

.
.

.
.

.
.

.
.

.
.

. 16 Upholstery nozzle

.
.

.
.

.
.

.
.

16 Operation

.
.

.
.

.
.

.....
.....
17 Power cord.....
.....

.....
.....
.....
.....
17 Turning the vacuum on and off.....
.....
.....

.....
.....
..... 18 Adjusting the suction .
.....

.....
.....
.....
.....
..... 19 Blower connection socket.....
.....
.....

.....
.....
..... 21 Transportation and storage .
.....

.....
.....
.....
.....
..... 22 Maintenance and care .
.....
.....

.....
.....
..... 23 Purchasing new dustbags and filters .
.....
.....

.....
.....
... 23 Which dustbags and filters are the right ones? . .
.....

.....
.....
23 When to change the dustbag.....
.....

.....
.....
.....
..... 24 Replacing the dustbag.....
.....
.....

.....
.....

.....
25 Replacing the exhaust filter

.....
.....

.....
.....
.. 26 Replacing the "Air Clean" filter

.....
.....
.....
.....

.. 27 Replacing the "Active Air Clean" filter and the "Active HEPA" filter

..... 28 Replacing one type of filter with another .

.....
.....

.....
.....
. 29 When to change the dust compartment filter (motor protection).

.....

30 Replacing the dust compartment filter (motor protection).

.....
.....

.... 30 When to change the thread catcher pads .

.....
.....

.....
.....
31 Cleaning and care

.....
.....
.....
.....

..... 32 Technical Service . .

.....
.....
.....

..... 33 Optional accessories

.....
.....
.....
.....

..... 34 Caring for the environment . .

.....
.....

.....
.....
.....

.... 40 3 IMPORTANT SAFETY INSTRUCTIONS When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE WARNINGTo reduce the risk of fire, electric shock or injury: ~ To reduce the risk of electric shock, Before using ~ Check the voltage rating of the vacuum cleaner before connecting the power cord to an electrical outlet. Your power source should correspond with the voltage rating plate located on the underside of the vacuum. Use only household AC outlets. Never use DC power sources. If you are not sure of your home's voltage supply, consult a qualified electrician. Connecting the vacuum cleaner to a higher voltage than indicated in these instructions may result in damage to the vacuum cleaner or injury.

this appliance has a polarized plug (one blade is wider than the other.) This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not alter the plug in any way. dangerous. Check the packaging, vacuum cleaner and accessories for any signs of damage. Do not use a damaged appliance. ~ A damaged vacuum cleaner can be ~ Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors or submerged in water, bring it to a service center.

@@@Only dry surfaces should be vacuumed. manual. @@@@~ Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used near children. @@Otherwise it could be damaged.

~ If a dustbag is not inserted, the dust compartment lid will not close. Do not force it shut. ~ Do not leave the vacuum plugged in. Unplug it from the outlet when not in use and before servicing. handpiece is a metal insert designed to absorb static electricity.

Please make certain that your hand remains around this metal insert when vacuuming. pick up liquids or damp dirt. This could impair the electrical safety of the vacuum cleaner. Wait for freshly shampooed carpets to dry. burning or smoking such as cigarettes, matches or hot ashes. The vacuum cleaner could catch fire. such as that used in printers and photocopiers can conduct electricity. or combustible liquids, such as gasoline, or use in areas where they may be present. The vacuum cleaner could explode. ~ Do not vacuum anything that is ~ Do not vacuum toner dust.

Toner, ~ Do not use to pick up any flammable ~ On the underside of the vacuum ~ Do not vacuum up items which are heavy, hard or have sharp edges. They could cause a blockage and damage the appliance. the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces. ~ Do not pull or carry by the cord, use ~ Persons which lack physical, sensory or mental abilities or experience with the machine should not use it without supervision or instruction by a responsible person. 5 IMPORTANT SAFETY INSTRUCTIONS ~ Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord. ~ Do not handle the plug or vacuum with wet hands. ~ Keep the power cord, hair, loose clothing, fingers and all parts of the body away from openings and moving parts.

~ Do not place anything into the openings of the vacuum cleaner. Do not use if any openings are blocked; keep them free of dust, lint, hair, or anything that may reduce air flow. ~ This appliance is equipped with a power cord reel. Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.

~ Turn off all controls before unplugging. stairs. ~ Monitor the dustbag change indicator and inspect all filters regularly. For best performance, the dustbag and filters should be replaced when necessary. A full bag or blocked filter will reduce the vacuum cleaner's suction power.

A temperature limiter automatically switches the vacuum cleaner off if it gets too hot, see "Frequently asked questions". Using accessories ~ The hose and the telescopic wand contain electrical wires. Do not use the vacuum cleaner if these parts are damaged, cut or punctured. Avoid picking up sharp objects. Danger of electric shock! accessories, especially the Turbobrush, and Powerbrush. vacuuming with a Miele Power or Turbobrush do not touch the rotating roller brush. Danger of injury. ~ Unplug the vacuum when changing ~ To avoid the risk of injury when ~ Use extra care when cleaning on ~ Floor attachments, accessories and wands must not be used at head level to avoid injury to eyes and ears. 6 IMPORTANT SAFETY INSTRUCTIONS ~ The socket on the vacuum cleaner (depending on model) must only be used for the Miele Powerbrush specified for use with this appliance.



[You're reading an excerpt. Click here to read official MIELE S 514 SOLARIS TURBO PLUS MIDS IZE CANIS TER user guide](http://yourpdfguides.com/dref/3353705)
<http://yourpdfguides.com/dref/3353705>

~ Danger of injury.

The Miele Powerbrush is a motor driven accessory for use only with Miele vacuum cleaners. The vacuum cleaner must not be used with another manufacturer's powerbrush. ~ Do not use the vacuum cleaner without an accessory attached. The rim could be damaged and injuries could result from sharp edges. ~ Miele dustbags are disposable and intended to be used only once. Do not attempt to reuse. An over stuffed dustbag will reduce the efficiency of the vacuum cleaner. ~ Only use genuine Miele dustbags with the Miele quality signet and original Miele filters and accessories. Only then will the manufacturer guarantee its safety. Cleaning, maintenance and repairs ~ The electro-suction hose and the telescopic wand contain electrical wires.

The plug connectors must not come in contact with water. These items may only be cleaned with a dry cloth, no moisture can touch them. Danger of electric shock. an authorized service agent in accordance with national and local safety regulations. Unauthorized repairs could cause injury or machine damage. should be replaced along with a new cable reel by Miele Technical Service. ~ Repairs must only be performed by ~ If the power cord is damaged it Disposing of an old appliance ~ Before discarding an old vacuum cleaner, please cut off the power cord and render the plug useless. Ensure the appliance presents no danger to children while being stored for disposal. SAVE THESE INSTRUCTIONS ~ Turn the vacuum cleaner off after each use and before every cleaning / maintenance. Pull the plug from the outlet.

~ Never submerge the vacuum cleaner in water. Clean only with a dry cloth or slightly damp cloth when disconnected from the mains supply. If moisture gets into the appliance there is a risk of electric shock. 7 Guide to the vacuum cleaner 8 Guide to the vacuum cleaner 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 Handpiece Air inlet valve Locking button Telescopic wand * Telescopic wand release button * Electrobrush socket* Dust compartment lid release Dust compartment filter (motor protection) Dustbag Floor brush* Carrying handle Park-system Exhaust filter* Power cord Cord rewind switch Suction power selector* Park-System Exhaust filter change indicator (Reset button 7)* Thermo indicator* On / Off switch Accessory compartment Airflow indicator Accessory compartment lid release Elbow Suction hose The illustration shows the maximum number of features available in this series of Miele vacuum cleaners. Those features marked * depend on the model and may vary or not be available on your model. Some models are supplied with a Miele Electrobrush or Turbobrush as standard (not illustrated). Separate operating and maintenance instructions are supplied with these brushes. 9 Before using for the first time Attaching the suction hose ^ Slide open the dust compartment shutter. The dust compartment shutter is designed for hygienic handling and prevents dust and odors from escaping. If you remove the suction hose from the vacuum cleaner for storage purposes, close the dust compartment shutter before storing.

^ Insert the elbow into the suction socket. Removing the suction hose ^ Press the release buttons on the sides of the elbow and lift the hose from the socket. 10 Before using for the first time Connecting the suction hose and the telescopic wand ^ Using the inlet guides, fit the handpiece of the suction hose firmly into the wand until they lock with a click. ^ To release the handpiece from the telescopic wand, press the locking button (see arrow) and pull apart. Adjusting the telescopic wand One section of the telescopic wand is located inside the other and can be adjusted to your height for comfortable vacuum cleaning. ^ Press the telescopic wand release button (see arrow) to release the tubes and adjust to the required controls vary from model to model, and are described on the following pages. 19 Operation Rotary selector ^ Turn the selector knob to the desired suction power setting. Opening the air inlet valve The air inlet valve is designed to provide a quick, convenient reduction of suction power, e.g. when moving from a carpet to an area rug.

@@@These parts are also available to order from the online Miele store. @@Miele dustbags are disposable and made to be used only once. Do not attempt to reuse. @@@^ Turn the vacuum cleaner on and select the highest power setting. ^ Lift the floor brush slightly off the floor.

@@@@@@@If the bag is bulging with pet fur, hair, carpet fluff, etc. the indicator may not register "full". @@@@The dustbag has a flap which closes automatically when the dustbag is removed to prevent any dust from escaping. ^ Dispose the dustbag with the normal household waste. ^ Insert the new dustbag as far as it will go into the dustbag holder.

Do not unfold the dustbag when taking it out of the box. ^ Unfold the dustbag in the dust compartment. ^ Close the dust compartment lid until it clicks into place. Take care not to jam the dustbag in the lid. An empty-operation-barrier blocks the dust compartment lid from closing if no dustbag is inserted or if it is not inserted all the way. Do not force it closed. 25 Maintenance and care Replacing the exhaust filter Depending on the model, the vacuum cleaner will be equipped with one of the following exhaust filters: a "Air Clean" filter b "Active Air Clean" filter c "Active HEPA" filter "Air Clean" filter A "Air Clean" filter is supplied with every box of Miele dustbags. It should be replaced each time a new box of bags is started. "Active Air Clean" or the "Active HEPA" filter An "Active Air Clean" or "Active HEPA" filter should be changed approximately once a year. Change the filter sooner if it is obviously soiled or no longer effective.

It is helpful to make a note of the date directly on the filter as a reminder for when to next change it. See "Optional Accessories" for filter descriptions. 26 Maintenance and care Replacing the "Air Clean" filter ^ Open the dust compartment lid. ^ Release the filter frame. Raise it up and remove the filter. Do not use more than one filter at a time. ^ Insert a new "Air Clean" filter. It can be inserted with either side up. ^ Lower and secure the filter frame back into place. ^ Close the dust compartment lid firmly until it clicks into place.

If you wish to replace the Air Clean filter with an Active Air Clean filter or Active HEPA filter see "Maintenance and care - Replacing one type of filter with another". 27 Maintenance and care Replacing the "Active Air Clean" filter and the "Active HEPA" filter ^ Open the dust compartment lid. ^ Release the catch and remove the filter. Do not use more than one filter at a time. ^ Insert the new filter so that it engages at the back, then close the catch.



[You're reading an excerpt. Click here to read official MIELE S 514 SOLARIS TURBO PLUS MIDS IZE CANIS TER user guide](http://yourpdfguides.com/dref/3353705)
<http://yourpdfguides.com/dref/3353705>

^ Close the dust compartment lid firmly until it clicks into place. If you wish to replace the Active Air Clean filter or Active HEPA filter with a Air Clean filter see "Maintenance and care - Replacing one type of filter with another". 28 Maintenance and care Replacing one type of filter with another Depending on the model, the vacuum cleaner is fitted with one of the following exhaust filters: a "Air Clean" b "Active Air Clean" c "Active HEPA" Please note 1. If you wish to replace the a "Air Clean" filter with the b "Active Air Clean" filter or the c "Active HEPA" filter, you must remove the filter frame before inserting the new type of filter. 2.

If you use the exhaust filter a you have to insert it in a filter frame *. * Filter frame - see "Optional accessories" Do not use more than one filter at a time. 29 Maintenance and care When to change the dust compartment filter (motor protection) Replace the dust compartment filter every time you start a new box of dustbags. A dust compartment filter is supplied inside each box of Miele dustbags. Replacing the dust compartment filter (motor protection) ^ Open the dust compartment lid. ^ Open the filter frame, remove the old filter and replace with a new one. ^ Close the filter frame. 30 Maintenance and care When to change the thread catcher pads Check the thread catchers on the bottom of the standard floor brush and the upholstery nozzle, from time to time. Replace the thread catchers if the pile is worn. Replacing the thread catchers ^ Use a knife or similar object to remove the thread catchers from the slots.

^ Insert the new thread catchers. Servicing the floor roller ^ Use a coin to release the roller pin and pull it out. ^ Push and take out the roller axle. ^ Take out the roller. ^ Remove all threads, hair, etc. and reassemble the parts. Spare parts are available from your Miele vacuum dealer or Miele. 31 Cleaning and care ,Turn off the vacuum and unplug it from the outlet before performing any maintenance work. Vacuum cleaner and accessories External surfaces of the vacuum cleaner and accessories can be cleaned with a slightly damp cloth or with a cleaner specifically for plastics. ,Do not use abrasive, glass or allpurpose cleaners! They will damage the surface.

Dust compartment The dust compartment can, if necessary, be cleaned using another vacuum, a dry cloth or brush. Monitor the dustbag change indicator and inspect all filters regularly. Clean or replace them when necessary according to the Operating Instructions. ,Do not submerge the vacuum cleaner in water! If moisture gets into the appliance, there is the risk of an electric shock. 32 Technical Service In the event of a fault which you cannot fix yourself please contact the Miele Service Department at the phone number on the back of this booklet.

^ Please quote the model type of your appliance. This can be found on the data plate on the bottom of the vacuum. 33 Optional accessories Each model may be accessorized with one or more of the following tools. Observe the cleaning instructions of the floor manufacturer. Powerbrush SEB 217-3 (EB02) The Powerbrush is intended for intensive cleaning and restoration of robust carpeting.

It is particularly suitable for cleaning and restoring crushed carpet pile of floor coverings subject to hard wear, especially in high traffic areas. Turbobrush - Turbo Comfort-3 The turbobrush is recommended for cleaning short to medium pile carpeting. It is mechanically driven by the suction power of the vacuum.

In addition to dust particles it also removes stubbornly adhered threads, hairs and carpet fluff. Hand Turbobrush - Turbo Mini The Hand Turbobrush is intended for vacuuming upholstery, mattresses, car seats, carpeted stairs and other areas inaccessible with the standard Turbobrush. 34 Optional accessories Floor brush - Hardfloor-3 To vacuum sturdy hard floors, e.g. tiles and stone floors. Floor brush - Parquet-3 Special brush with natural bristles intended for cleaning parquet and laminate floors, especially those susceptible to scratching. The parquet floor brush can be cleaned with the vacuum cleaner using the crevice nozzle if necessary.

Floor brush - Parquet Twister with swiveling head For cleaning all hard flooring, e.g. parquet and tiles. Especially suitable for vacuuming niches and tight spaces. Floor brush - Parquet Twister XL with swiveling head Similar to the Parquet Twister except it is 3 9/16" (90 mm) wide, making it ideal for cleaning large spaces. 35 Optional accessories Dust brush with natural bristles For dusting particularly delicate objects. Universal brush For dusting books, shelves, etc. Radiator brush (only usable with the crevice nozzle) For cleaning radiators, narrow shelves and crevices. 36 Optional accessories Mattress tool For cleaning deep crevices, mattresses and upholstery. 12" (300 mm) Crevice nozzle For cleaning in folds, crevices and corners.

37 Optional accessories MicroSet This set is specially designed for cleaning small objects and difficult to reach areas (such as PC keyboards, stereo equipment, carved furniture, ornaments, models, etc). @@@@In addition to meeting OSHA standards for air filtration, it will also absorb any odors existing in the dustbag. The "Active HEPA" filter can be used in place of the "Air Clean" filter. Filter frame The filter frame is needed if you would like to exchange a SuperAirClean filter with an Active Air Clean or HEPA filter, see "Maintenance and care Exchanging exhaust filters". 39 Caring for the environment Disposal of the packing materials The cardboard box and packing materials protect the appliance during shipping.

They have been designed to be biodegradable and recyclable. Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. These items pose a danger of suffocation. Disposing of the dustbag and filters Genuine Miele dustbags and filters are made of environmentally friendly materials.

They can be thrown out with the household trash provided the vacuum cleaner has been used only for normal household dust. 40 41 42 43 Alteration rights reserved / 4909 M.-Nr. 07 319 300 / 01 For the most updated manual see the Miele web site. .



[You're reading an excerpt. Click here to read official MIELE S 514 SOLARIS TURBO PLUS MIDS IZE CANIS TER user guide](http://yourpdfguides.com/dref/3353705)
<http://yourpdfguides.com/dref/3353705>