



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE S 5380 GEMINI DELUXE, FULLS IZE CANIS TER. You'll find the answers to all your questions on the MIELE S 5380 GEMINI DELUXE, FULLS IZE CANIS TER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual MIELE S 5380 GEMINI DELUXE, FULLS IZE CANIS TER**

**User guide MIELE S 5380 GEMINI DELUXE, FULLS IZE CANIS TER**


**Operating instructions MIELE S 5380 GEMINI DELUXE, FULLS IZE CANIS TER**

**Instructions for use MIELE S 5380 GEMINI DELUXE, FULLS IZE CANIS TER**

**Instruction manual MIELE S 5380 GEMINI DELUXE, FULLS IZE CANIS TER**

**Miele**

Operating instructions

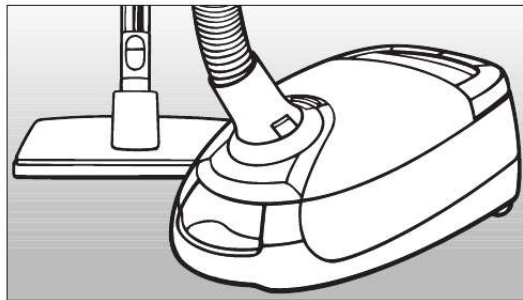

Vacuum cleaner  
S 5000

To prevent accidents  
and machine damage,  
read these instructions  
**before** installation and use.

HS11

en - US, CA

M.-Nr. 07 176 490



[You're reading an excerpt. Click here to read official MIELE S 5380 GEMINI DELUXE, FULLS IZE CANIS TER user guide](http://yourpdfguides.com/dref/3353732)  
<http://yourpdfguides.com/dref/3353732>

**Manual abstract:**

-Nr. 07 176 490 2 Contents IMPORTANT SAFETY INSTRUCTIONS. ....

.....  
.....  
.....

.... 4 Guide to the vacuum cleaner .....

.....  
.....  
.....

..... 8 Before using the vacuum cleaner .

.....  
.....

..... 10 Included accessories.

.....  
.....  
.....  
.....

..... 13 Use .....

.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 16 Power cord. ....

.....  
.....  
.....  
.....  
.....  
.....

16 Turning the vacuum On and Off .....

.....  
.....  
.....

..... 16 Adjusting the suction ..

.....  
.....  
.....  
.....  
.....

..... 18 Opening the air inlet valve .....

.....  
.....  
.....  
.....

..... 20 Transport and storage ..

.....  
.....  
.....

.....  
.....  
.....

... 21 Maintenance and care .....

.....  
.....  
.....  
.....

..... 23 Purchasing new dustbags and filters ..

.....  
.....  
.....

.. 23 Which dustbags and filters are the right ones? ...

.....  
.....

..... 23 When to change the dustbag .

.....  
.....  
.....

.....  
.....

.... 24 How to change the dustbag .

.....  
.....  
.....  
.....  
.....

25 When to change the exhaust filter .....

.....  
.....  
.....

..... 26 Exhaust filter change indicator ...

.....  
.....  
.....

.....  
.....

. 27 Replacing the "Super Air Clean" filter ....

.....  
.....  
.....  
.....  
.....

@@.....

. 29 Exchanging Exhaust Filters .....

.....  
.....  
.....

.....

... 30 When to change the dust compartment filter ..

.....  
.....  
.....  
. 31 How to change the exhaust filter . . . .  
.....  
.....  
.....  
.....  
. . . . 31 When to change the thread catcher .  
.....  
.....  
.....  
. . . . 32 Maintenance and care . . . . .  
.....  
.....  
.....  
.....  
. . . . . 33 Frequently asked questions .  
.....  
.....  
.....  
.....  
. . . . 34 Technical Service.  
.....  
.....  
.....  
.....  
. . . . . 35 Optional accessories . .  
.....  
.....  
.....  
. . . . 36 Caring for the environment . . . . .  
.....  
.....  
.....

. . . . @@@@Use only household AC outlets. Never use DC power sources. If you are not sure of your home's voltage supply, consult a qualified electrician. Connecting the vacuum cleaner to a higher voltage than indicated in these instructions may result in damage to the vacuum cleaner or injury. this appliance has a polarized plug (one blade is wider than the other.) This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not alter the plug in any way. dangerous.

Check the packaging, vacuum cleaner and accessories for any signs of damage. Do not use a damaged appliance. ~ A damaged vacuum cleaner can be ~ Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors or submerged in water, bring it to a service center. with a 15 A fuse.

~ The electrical outlet must be fitted 4 IMPORTANT SAFETY INSTRUCTIONS Use ~ Unwind the cord completely to aid the vacuum in dissipating heat. entrap or retain any hazardous materials. surfaces. Only dry surfaces should be vacuumed. manual. Use only Miele recommended accessories. ~ Do not use on people or animals. ~ Do not use outdoors or on wet ~ Use only as described in this ~ This vacuum should not be used to ~ Do not use the vacuum cleaner to ~ The manufacturer cannot be held responsible for damage caused by non-compliance with these Important Safety Instructions. This appliance is intended strictly for household use only. ~ Do not allow the vacuum cleaner to be used as a toy.

Close attention is necessary when used near children. ~ Never use the vacuum cleaner without the dustbag or filters in place. Otherwise it could be damaged. ~ If a dustbag is not inserted, the dust compartment lid will not close. Do not force it shut. ~ Do not leave the vacuum plugged in. Unplug it from the outlet when not in use and before servicing. handpiece is a metal insert designed to absorb static electricity. Please make certain that your hand remains around this metal insert when vacuuming. pick up liquids or damp dirt.

This could impair the electrical safety of the vacuum cleaner. Wait for freshly shampooed carpets to dry. burning or smoking such as cigarettes, matches or hot ashes. The vacuum could catch fire. such as that used in printers and photocopiers can conduct electricity. or combustible liquids, such as gasoline, or use in areas where they may be present. ~ Do not vacuum anything that is ~ Do not vacuum toner dust. Toner, ~ Do not use to pick up any flammable ~ Do not vacuum up items which are heavy, hard or have sharp edges. They could cause a blockage and damage the appliance. the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners.

Do not run the appliance over the cord. Keep the cord away from heated surfaces. ~ On the underside of the vacuum ~ Do not pull or carry by the cord, use ~ Persons which lack physical, sensory or mental abilities or experience with the machine should not use it without supervision or instruction by a responsible person. 5 IMPORTANT SAFETY INSTRUCTIONS ~ Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord. ~ Do not handle the plug or vacuum with wet hands. ~ Keep the power cord, hair, loose clothing, fingers and all parts of the body away from openings and moving parts. ~ Do not place anything into the openings of the vacuum. Do not use if any openings are blocked; keep them free of dust, lint, hair, or anything that may reduce air flow. ~ This appliance is equipped with a power cord reel.

Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding. ~ Turn off all controls before unplugging. stairs. ~ Monitor the dustbag change indicator and inspect all filters regularly. For best performance, the dustbag and filters should be replaced when necessary. A full bag or blocked filter will reduce the vacuum cleaner's suction power. A temperature limiter automatically switches the vacuum cleaner off if it gets too hot, see "Frequently asked questions". Using accessories ~ The hose and the telescopic wand contain electrical wires. Do not use the vacuum cleaner if these parts are damaged, cut or punctured.

Avoid picking up sharp objects. Danger of electric shock! accessories, especially the Turbobrush, and Powerbrush. vacuuming with a Miele Power or Turbobrush do not touch the rotating roller brush. Danger of injury. ~ Unplug the vacuum when changing ~ To avoid the risk of injury when ~ Use extra care when cleaning on ~ Floor attachments, accessories and wands must not be used at head level to avoid injury to eyes and ears.

6 IMPORTANT SAFETY INSTRUCTIONS ~ The socket on the vacuum cleaner (depending on model) must only be used for the Miele Powerbrush specified for use with this appliance. ~ Danger of injury. The Miele Powerbrush is a motor driven accessory for use only with Miele vacuum cleaners.



[You're reading an excerpt. Click here to read official MIELE S 5380 GEMINI DELUXE, FULLS IZE CANIS TER user guide](http://yourpdfguides.com/dref/3353732)  
<http://yourpdfguides.com/dref/3353732>

The vacuum must not be used with another manufacturer's powerbrush. ~ Do not use the vacuum without an accessory attached. The rim could be damaged and injuries could result from sharp edges. intended to be used only once. Do not attempt to reuse them. An over stuffed dustbag will reduce the efficiency of the vacuum cleaner. with the Miele quality signet and original Miele filters and accessories. Only then will the manufacturer guarantee its safety. ~ The electro-suction hose and the telescopic wand contain electrical wires. The plug connectors must not come in contact with water. These items may only be cleaned with a dry cloth, no moisture can touch them. Danger of electric shock.

an authorized service agent in accordance with national and local safety regulations. Unauthorized repairs could cause injury or machine damage. The manufacturer cannot be held responsible for unauthorized work. should be replaced along with a new cable reel by Miele Technical Service. ~ Repairs may only be performed by ~ Miele dust bags are disposable and ~ If the power cord is damaged it Disposing of an old appliance ~ Only use genuine Miele dustbags ~ Before discarding an old vacuum cleaner, please cut off the power cord and render the plug useless. Ensure the appliance presents no danger to children while being stored for disposal. Cleaning, maintenance and repairs each use and before every cleaning / maintenance. Pull the plug from the outlet. ~ Turn the vacuum cleaner off after SAVE THESE INSTRUCTIONS ~ Never submerge the vacuum cleaner in water. Clean only with a dry cloth or slightly damp cloth when disconnected from the mains supply.

If moisture gets into the appliance there is a risk of electric shock. 7 Guide to the vacuum cleaner Some models come standard with one of the following accessories, which are not shown in this figure. A separate Operating manual of the respective accessory is supplied with the vacuum. Powerbrush Turbobrush 8 Guide to the vacuum cleaner a Handpiece (depending on model) \* b Suction power buttons + / \* c Standby button for vacuum pauses \* d LED \* e Locking button f Telescopic wand \* g Telescopic wand release button \* h Elbow i Powerbrush outlet \* j Dust compartment lid release k Dust compartment filter (motor protection) l Dust bag m Floor tool \* n Carrying handle o Fastener for the Powerbrush outlet cap p Park-System (on both sides of the vacuum) q Exhaust filter \* r Foot switch for cord rewind s Suction power selector \* t Power cord with plug u Exhaust filter change indicator (Reset button) \* v Thermo indicator , \* w Park-System x Standby indicator \* y Foot switch On/Off s z Accessory compartment lid release { Airflow indicator The features marked \* may vary or not be available on your model. 9 Before using the vacuum cleaner Attaching the suction hose ^ Insert the elbow into the suction socket until it clicks. Use the inlet guides to direct insertion. Removing the suction hose ^ Press the release buttons at the sides of the elbow and lift the hose from the socket. 10 Before using the vacuum cleaner Connecting the handpiece and the telescopic wand ^ Insert the handpiece into the telescopic wand until it clicks. Use the inlet guides to direct insertion. ^ To release the handpiece from the telescopic wand press the locking button (see arrow) and pull the handpiece away from the telescopic wand.

Adjusting the telescopic wand One section of the telescopic wand is fitted inside the other and can be adjusted to your height for comfortable vacuum cleaning. ^ Press the telescopic wand release button (see arrow) to release the tubes and adjust to the required height. 11 Before using the vacuum cleaner Connecting the rug/floor tool (depending on model) ^ is inlay when vacuuming fine dust, flour or sawdust as these materials are more likely to create a static discharge. To further prevent static discharge while vacuuming, pull the vacuum along by the hose with one hand while continuing to hold the handpiece in the other hand. The controls vary from model to model, and are described on the following pages. 18 Use Rotary selector ^ Turn the rotary selector to the desired suction power setting. On some models the symbol of the selected power level lights green. + / controls Press and hold the respective foot switch until the display lights the symbol of the desired power green. ^ Press the + control to select a higher setting. ^ Press the control to select a higher setting.

"Auto" level If the Automatic setting is chosen the vacuum cleaner automatically adjusts the suction power to suit the surface being cleaned. ^ Keep pressing the control until the Automatic setting is activated. ^ Press the + control to deactivate the Automatic setting. ,Do not use the Automatic setting to vacuum lightweight materials or curtains. Excessive suction may cause damage. 19 Use Opening the air inlet valve The air inlet valve is designed to provide a quick, convenient reduction of suction power, e.g. when moving from a carpet to an area rug. ^ Open the air inlet valve far enough to reduce the power. Opening the air inlet valve reduces the power to the tool being used.

20 Transport and storage Park-System (Unable to use with the Powerbrush SEB 236) A Park-System has been designed to conveniently park the telescopic wand at the vacuum cleaner during pauses. ^ A special parking attachment is fitted to all floor brushes. Insert the lower clip on the floor brush into the slot on the end of the vacuum cleaner from above. Turning on and off with the Park-System Some models are equipped with an On/Off switch in the Park-System. Parking the floor brush while vacuuming automatically turns the vacuum off.

Lifting the floor brush out of the Park-System turns the vacuum back on. If your vacuum cleaner is equipped with +/- suction power selector controls you can activate or deactivate the Park-System's On-Off feature. ^ In both cases turn the vacuum off with the foot switch On/Off s. @ @ @ @ This makes the vacuum easier to carry or store. @ @ The Miele filter system consists of the following three components.

@ @ @ @ @ @ @ @ Miele dust bags are disposable and made to be used only once. Do not attempt to reuse. @ @ @ @ ^ Turn the vacuum cleaner on and select the highest power setting. ^ Lift the floor brush slightly off the floor. @ @ @ @ @ @ @ @ If the bag is bulging with pet fur, hair, carpet fluff, etc. the indicator may not register "full". @ @ @ @ @ @ @ @ Do not unfold the dustbag when taking in out of the box. @ @ ^ Close the dust compartment lid until it clicks into place. @ @ @ @ b Active Air Clean (black) c Active HEPA (blue) These filters should be changed approximately once a year. Change the filter sooner if it is obviously soiled or no longer effective.

Make a note of the date on the filter. See "Optional Accessories" for descriptions of these two filters. 26 Maintenance and care Exhaust filter change indicator Some models are equipped with an exhaust filter change indicator (Reset button) which is designed to alert the user when to change the "Active Air Clean" or "Active HEPA" filter.



[You're reading an excerpt. Click here to read official MIELE S 5380 GEMINI DELUXE, FULLS IZE CANIS TER user guide](http://yourpdfguides.com/dref/3353732)  
<http://yourpdfguides.com/dref/3353732>

The indicator will light after about 50 hours of operation which is equivalent to a year of average use. The vacuum cleaner can still be used with the exhaust filter indicator lit. However, the suction power will be reduced as will the effectiveness of the filter if it is not replaced. If a SUPER air clean filter, a, is being used, the filter change indicator can be disregarded but should be reset when it does light. The indicator goes out when the reset button is pressed. You can replace the exhaust filter supplied with the vacuum cleaner with one of the other types of filters (see "Optional accessories"). 27 Maintenance and care

Replacing the "Super Air Clean" filter ^ Open the dust compartment lid.

^ Open the filter frame until it locks into place and remove the used "Super Air Clean" filter by the clean corner (see arrow). Do not use more than one filter at a time. ^ Insert the new filter (either way up). ^ Close the filter frame. If you wish to replace the SUPER air clean filter with an ActiveAirClean filter or Active HEPA filter see "Maintenance and care Exchanging exhaust filters".

^ Close the dust compartment lid firmly until it clicks into place. 28 Maintenance and care Replacing the "Active Air Clean" filter and the "Active HEPA" filter ^ Open the dust compartment lid. Do not use more than one filter at a time. ^ Lift and remove the filter. ^ Insert a new filter and press it downwards. If you wish to replace the ActiveAirClean filter or the Active Hepa filter with a SUPER air clean filter see "Maintenance and care Exchanging exhaust filters". ^ Close the dust compartment lid firmly until it clicks into place. Resetting the filter change indicator The filter change indicator (Reset button) must be reset each time the filter is replaced. To do this, the vacuum cleaner must be plugged in. ^ Press and hold the filter change indicator light until it goes out. The display is now reset. The indicator is only reset if pressed while lit. If the indicator is pressed while not lit, it will not be reset. 29 Maintenance and care Exchanging Exhaust Filters Your model can have either: a Super Air Clean b Active Air Clean (black) c Active HEPA (blue) Please note 1. If you wish to replace the a Super Air Clean filter with the b ACTIVE air clean filter or the c Active HEPA filter, you must remove the filter frame before inserting the new type of filter.

2. If you use the a Super Air Clean filter you have to insert it into a filter frame \*. Do not use more than one filter at a time. \* Filter frame - see "Optional accessories" Some models are equipped with an exhaust filter reset button. This button is designed for the changing cycle of the Active Air Clean filter and the Active HEPA filter. If a Super Air Clean filter is used, the reset button can be disregarded. The Super Air Clean filter should be changed whenever a new box of Miele dustbags is opened. The indicator goes out when the reset button is pressed. 30 Maintenance and care When to change the dust compartment filter Change the filter each time you open a new box of genuine Miele dustbags. A filter is supplied with every box of Miele dustbags.

How to change the exhaust filter ^ Open the dust compartment lid. ^ Lift the filter frame and remove the used exhaust filter at the clean side (see arrow). ^ Insert the new filter. ^ Close the filter frame. 31 Maintenance and care When to change the thread catcher The thread catcher pads on the bottom of the rug and floor tool and the upholstery tool should be replaced as soon as they appear worn.

Changing the thread catcher ^ Use a knife or similar object to remove the thread catcher pads from the slots. ^ Press the new thread catchers into the slots. Servicing the floor roller ^ Use a coin to release the roller pin and pull it out. ^ Push and take out the roller axle. ^ Take out the roller.

^ Remove all threads, hair, etc. and reassemble the parts. Spare parts are available from your Miele vacuum dealer or Miele. 32 Maintenance and care ,Turn off the vacuum and unplug it from the outlet before performing any maintenance work. Vacuum cleaner and accessories The vacuum cleaner and other plastic accessories can be cleaned with a damp cloth or a cleaner suitable for plastics. ,Do not use abrasive, glass or all purpose cleaners! They will damage the surface. Dust compartment The dust compartment can, if necessary, be cleaned using a dry cloth, dusting brush or a second vacuum to remove any dust. Monitor the dustbag change indicator and inspect all filters regularly. Clean or replace them when necessary according to these Operating Instructions. ,Do not submerge the vacuum in water! If moisture gets into the appliance there is the risk of electric shock.

33 Frequently asked questions What if the vacuum turns off automatically or a warning light , comes on? The vacuum has overheated. The temperature limiter automatically turns the vacuum off. Some models also have a warning light , which comes on to indicate that the vacuum has overheated. This can occur if, for instance, large articles block the suction tube or when the filter bag is full or contains particles of fine dust. @@Turn the vacuum off and pull the plug from the outlet. @@^ Please quote the model type of your appliance. @@@@To use a powerbrush the SES 119 or SES 130 electrical hose and SET 210 electric wand must be obtained. Powerbrush SEB 217-3 The Powerbrush is intended for intensive cleaning and restoration of robust carpeting. It is particularly suitable for cleaning and restoring crushed carpet pile of floor coverings subject to hard wear, especially in high traffic areas. Powerbrush SEB 236 This Powerbrush is 3" (60 mm) wider and more powerful than the SEB 217-3 model.

It includes: a height adjustment a light a multifunction indicator. 36 Optional accessories Turbobrush Observe the cleaning instructions of the floor manufacturer. The turbobrush is recommended for cleaning short to medium pile carpeting. It is mechanically driven by the suction power of the vacuum. In addition to dust particles it also removes stubbornly adhered threads, hairs and carpet fluff.

Hand Turbobrush The Hand Turbobrush is intended for vacuuming upholstery, mattresses, car seats, carpeted stairs and other areas inaccessible with the standard Turbobrush. 37 Optional accessories Hard floor brush SBB 235-3 To vacuum sturdy hard floors, e.g. tiles and stone floors. Parquet floor brush SBB Parquet-3 Special brush with natural bristles intended for cleaning parquet and laminate floors, especially those susceptible to scratching.

The parquet floor brush can be cleaned with the vacuum cleaner using the crevice nozzle if necessary. Floor tool SBB 300-3 For cleaning all hard flooring. Especially suitable for vacuuming niches and tight spaces. 38 Optional accessories Universal brush For dusting books, shelves, etc. Radiator brush (only usable with the crevice nozzle) For cleaning radiators, narrow shelves and crevices.



[You're reading an excerpt. Click here to read official MIELE S 5380 GEMINI DELUXE, FULLS IZE CANIS TER user guide](http://yourpdfguides.com/dref/3353732)  
<http://yourpdfguides.com/dref/3353732>

39 *Optional accessories Mattress tool For cleaning deep crevices, mattresses and upholstery. Crevice nozzle 12" (300 mm) For cleaning in folds, crevices and corners. 40 Optional accessories MicroSet This set is specially designed for cleaning small objects and difficult to reach areas (such as PC keyboards, stereo equipment, carved furniture, ornaments, models, etc). Accessory set consists of: Micro hose with combi nozzle (crevice nozzle and dust brush) Micro dust brush Micro crevice nozzle Extension CarClean Set Plus Specially designed for cleaning car interiors. Accessory set consists of: Hand Turbobrush Microhose with combi nozzle Crevice tool 12" (300 mm) Accessory carrying case 10 ft (3 m) long suction hose with holder.*

41 *Optional accessories Active Air Clean filter (black) A special active charcoal filter which absorbs odors from the dust collected in the dustbag, helping to prevent odors. The "ACTIVE air clean filter" can be used in place of the existing exhaust filter. There is no difference in the fine dust performance of the "Active Air Clean" and the "Super Air Clean" filter. Active HEPA filter (blue) The "Active HEPA" filter combines activated charcoal and HEPA filtration in one. The active charcoal layer absorbs odors from the dust collected in the dustbag. Vacuum cleaners equipped with this exhaust filter are particularly suitable for allergy sufferers and those concerned with a high level of hygiene because of its ability to trap respirable particles and allergens. Filter frame The filter frame is needed if you would like to exchange a SuperAirClean filter with an Active air Clean or HEPA filter, see "Maintenance and care Exchanging exhaust filters". 42 Caring for the environment Disposal of the packing materials The cardboard box and packing materials protect the appliance during shipping. They have been designed to be biodegradable and recyclable. Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. These items pose a danger of suffocation. Disposing of the dustbag and filters Genuine Miele dustbags and filters are made of environmentally friendly materials. They can be thrown out with the household trash provided the vacuum cleaner has been used only for normal household dust. 43 All rights reserved / 1108 M. -Nr. 07 176 490 / 01 For the most updated manual see the Miele web site. .*



[You're reading an excerpt. Click here to read official MIELE S 5380 GEMINI DELUXE, FULLS IZE CANIS TER user guide](http://yourpdfguides.com/dref/3353732)  
<http://yourpdfguides.com/dref/3353732>