




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE S2180 ATLANTIS. You'll find the answers to all your questions on the MIELE S2180 ATLANTIS in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE S2180 ATLANTIS
User guide MIELE S2180 ATLANTIS
Operating instructions MIELE S2180 ATLANTIS
Instructions for use MIELE S2180 ATLANTIS
Instruction manual MIELE S2180 ATLANTIS

Miele

Operating Instructions

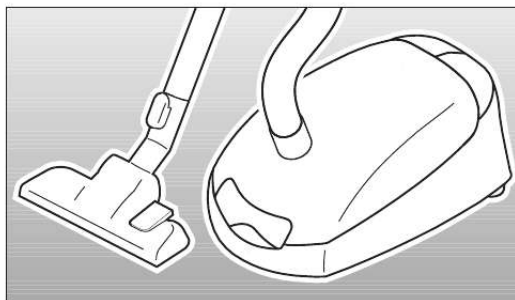

Vacuum Cleaner
S 2000

To prevent accidents
and machine damage,
read these instructions
before
installation and use.

HS12

en, fr - US, CA

M.-Nr. 07 821 160



[You're reading an excerpt. Click here to read official MIELE S2180 ATLANTIS user guide](http://yourpdfguides.com/dref/4311090)
<http://yourpdfguides.com/dref/4311090>

Manual abstract:

23 When to change the thread catcher on the standard floor brush . 29 3 IMPORTANT SAFETY INSTRUCTIONS When using an electrical appliance, basic precautions should always be followed, including the following: READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE WARNING To reduce the risk of fire, electric shock or injury: Before Using ~ To reduce the risk of electric shock, ~ Check the voltage rating of the vacuum cleaner before connecting the power cord to an electrical outlet. Your power source should correspond with the voltage rating plate located on the underside of the vacuum. use only household AC outlets. Never use DC power sources. If you are not sure of your home's voltage supply, consult a qualified electrician. Connecting the vacuum cleaner to a higher voltage may result in damage to the vacuum cleaner or injury. This appliance has a polarized plug (one blade is wider than the other.)

This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician to install the proper outlet. Do not alter the plug in any way. dangerous. Check the packaging, vacuum cleaner and accessories for any signs of damage. do not use a damaged appliance.

~ A damaged vacuum cleaner can be ~ Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors or submerged in water, bring it to a service center. Only dry surfaces should be vacuumed. manual. Use only Miele recommended accessories described in this manual.

~ Do not use on people or animals. @@ entrap or retain any hazardous materials. @@~ Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used near children. @@Otherwise, it could be damaged. @@ do not force it shut. ~ Do not leave the vacuum plugged in. Unplug it from the outlet when not in use and before servicing. ~ On the underside of the vacuum hand piece is a metal insert designed to absorb static electricity.

Please make certain that your hand remains around this metal insert when vacuuming.

~ Persons who lack physical, sensory, or mental capabilities or experience with the machine should not use it without supervision or instruction by a responsible person. pick up liquids or damp dirt. This could impair the electrical safety of the vacuum cleaner. The vacuum could catch fire. @@@@Heavy, hard or have sharp edges. They could cause a blockage and damage the appliance. @@Do not run the appliance over the cord. Keep the cord away from heated surfaces. ~ Do not vacuum anything that is ~ Do not vacuum toner dust. Toner, ~ Do not use the vacuum to pick up ~ Do not vacuum up items which are ~ Do not pull or carry by the cord, use ~ Do not unplug by pulling the cord.

~ Do not handle the plug or vacuum with wet hands. To unplug grasp the plug, not the cord. 5 IMPORTANT SAFETY INSTRUCTIONS ~ Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts. Vacuuming, do not reach into the moving beater bar of the Powerbrush. danger of injury.

Using accessories ~ The hose and telescopic wand ~ To avoid risk of injury while contain electrical wires. Do not use the vacuum cleaner if these parts are damaged, cut or punctured. avoid picking up sharp objects. There is the risk of electric shock. Accessories, especially when using the Powerbrush. Only to be used for the Miele Powerbrush. ~ Do not place anything into the openings of the vacuum. Do not use if any openings are blocked; keep them free of dust, lint, hair or anything that may reduce air flow. power cord reel. Hold the plug when rewinding onto cord reel. Do not allow plug to whip when rewinding. ~ Unplug the vacuum when changing ~ The socket on the vacuum cleaner is ~ The Miele Powerbrush is a ~ This appliance is equipped with a ~ Turn off all controls before unplugging. ~ Use caution when vacuuming on stairs. ~ Floor attachments, accessories and wands must not be used at head level to avoid injuries to the eyes and ears. Motor-driven accessory for use only with Miele vacuum cleaners.

The vacuum must not be used with another manufacturer's Powerbrush. accessory attached. The rim could be damaged and injuries could result from sharp edges. An over stuffed dustbag will reduce the efficiency of the vacuum cleaner. @@Only then will the manufacturer guarantee its safety. connecting or disconnecting either hose or motorized nozzle. @@Pull the plug from the outlet. ~ Never submerge the vacuum cleaner in water. @@@@A temperature limiter automatically switches the vacuum cleaner off if it gets too hot, see "Frequently asked questions". ~ The hose and telescopic wand contain electrical wires.

They should not come in contact with water. These items may only be cleaned with a dry cloth. danger of electric shock. ~ Repairs during the warranty period should only be performed by an authorized service agent in accordance with national and local safety regulations. Unauthorized repairs could cause injury or machine damage and may void the warranty.

~ Before discarding an old vacuum cleaner, please cut off the power cord, and render the plug useless. Ensure the appliance presents no danger to children while being stored for disposal SAVE THESE INSTRUCTIONS 7 Guide to the vacuum cleaner 8 Guide to the vacuum cleaner a Hand piece b On/Off switch for the Powerbrush c Lock release button d Electro Telescopic wand SET 220 e Elbow f Plug for Electro-accessories g Electro Telescopic wand release button h Dust compartment lid release i Suction power selector j Powerbrush SEB 217-3/EB02 (not shown in these Operating Instructions) / SEB 228/EB03 A separate Operating manual for the respective accessory is supplied with the vacuum. K Carrying handle l Socket for Electro-accessories m D dustbag n Dust compartment filter (pre-motor filter) o Exhaust filter p On/Off s foot switch q Park-system r Power cord s Cord rewind switch t Airflow indicator u Accessory clip with three tools v Suction hose SES 116 Optional accessories are available from your Miele dealer or Miele. Com 9 Before using the vacuum cleaner Connecting the Electro hose a Insert the elbow into the suction socket until it clicks into place. B Insert the plug into the socket on the inside of the carrying handle.

Disconnecting the Electro hose c Remove the plug from the socket. D Press the two release buttons at the sides of the elbow and lift the hose from the socket. Connecting the hand piece and the Electro Telescopic wand ^ Insert a the hand piece into the electro telescopic wand until it clicks into place. use the inlet guides to direct insertion. ^ To release the hand piece from the telescopic wand press the locking button (see arrow) and pull b the hand piece away from the telescopic wand. 10 Before using the vacuum cleaner Using the Powerbrush Observe the cleaning instructions of the floor manufacturer. @@The Powerbrush can also be used on smooth floor surfaces. @@The brush could come into contact with the floor and cause damage.



[You're reading an excerpt. Click here to read official MIELE S2180](http://yourpdfguides.com/dref/4311090)

[ATLANTIS user guide](http://yourpdfguides.com/dref/4311090)

<http://yourpdfguides.com/dref/4311090>

@@There is a danger of the threads being pulled out. @@@@^^ To separate the parts b, press the locking button.

@@@@@Accessory clip ^ Press onto the elbow until it clicks into place. @@@^^ Do not run the appliance over the cord. Keep the cord away from heated surfaces. Do not unplug by pulling the cord. To unplug grasp the plug, not the cord. This appliance is equipped with a power cord reel. Hold the plug when rewinding onto cord reel. Do not allow plug to whip when rewinding. Unwinding ^ Hold the plug and pull a out the power cord. @@This plug will fit in a polarized outlet only one way.

@@Do not alter the plug in any way. danger of overheating and damage. Rewinding ^ Unplug the vacuum from the outlet. @@Hold the plug so that it does not whip around when rewinding. @@@@15 Use Turning the vacuum On/Off ^ Press the On/Off foot switch s.

@@By reducing the suction power the floor brush can be pushed easier. @@@^^ If the bag is bulging with pet fur, hair, carpet fluff, etc. The indicator may not register "full". This is because the air flow of the dustbag may still be high enough not to activate the marker to show maximum. The dustbag should still be changed.

20 Maintenance and care Replacing the dustbag ^ Pull a the plug from the socket. ^ Open b the dust compartment lid and raise until it clicks into place. The dustbag has a closing flap which closes automatically when the dust compartment lid is raised to prevent any dust from escaping. ^ Grasp the finger grip and pull a the dustbag out of the holder. ^ Insert b the new dustbag as far as it will go into the dustbag holder. Do not unfold the dustbag when taking it out of the box. ^ Unfold the dustbag in the dust compartment. ^ Close the dust compartment lid until it clicks into place. Take care not to jam the dustbag in the lid. ,An empty-operation-barrier blocks the dust compartment lid from closing if no dustbag is inserted.

do not force it closed. 21 Maintenance and care When to change the dust compartment filter (Pre-motor filter) Change the filter each time you open a new box of genuine Miele dustbags. a dust compartment filter is supplied with each box. Replacing the dust compartment filter (Pre-motor filter) ^ Open the dust compartment lid. @@@^^ Replacing the Air Clean filter Do not use more than one filter at a time. ^ Open the dust compartment lid. ^ Open the filter frame until it clicks, grasp the clean corner (see arrow) and remove the used filter a. 22 Maintenance and care Exchanging exhaust filters Depending on the model, there may also be an Active HEPA exhaust filter included which can be used instead of the standard Air Clean exhaust filter. In order to use the Active HEPA filter the Air Clean filter and filter frame must be removed. When to change the Active HEPA exhaust filter Change this filter approximately once a year.

You can make a note of the date directly on the exhaust filter. Replacing the Active HEPA exhaust filter ^ Open the dust compartment lid. 23 Maintenance and care When to change the thread catcher on the standard floor brush The thread catcher on the floor brush should be replaced as soon as they appear worn. Changing the thread catcher ^ Using a knife or similar object, lift the thread catcher out of the slot by the red marking on the side a. ^ Insert a new thread catcher into the slots b.

New thread catcher pads can be purchased from an.



[You're reading an excerpt. Click here to read official MIELE S2180 ATLANTIS user guide](http://yourpdfguides.com/dref/4311090)
<http://yourpdfguides.com/dref/4311090>