




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE S624. You'll find the answers to all your questions on the MIELE S624 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE S624
User guide MIELE S624
Operating instructions MIELE S624
Instructions for use MIELE S624
Instruction manual MIELE S624

Miele

Operating Instructions

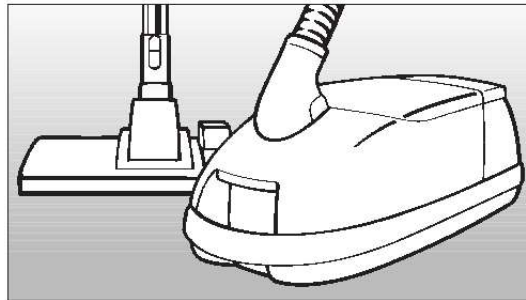

Vacuum Cleaner
S 500 - S 548

To prevent accidents
and appliance damage,
read these instructions
before
installation or use.

HS05
HS06

en - US, CA

M.-Nr. 07 319 300



[You're reading an excerpt. Click here to read official MIELE S624 user guide](#)

<http://yourpdfguides.com/dref/4311058>

Manual abstract:

en - US, CA M.-Nr. 07 319 300 2 Contents IMPORTANT SAFETY INSTRUCTIONS.

.
.
.

. 4 Guide to the vacuum cleaner

.
.
.

.
.

8 Before using for the first time.

.
.

.
.

. 10 Included accessories.

.
.

.
.

.
.

13 Using the included accessories

.
.

.
.

.
.

. . . 15 Crevice nozzle

.
.

.
.

.
.

.
.

. 15 Dusting brush

.
.

.
.

.
.

.
.

.
.

. 16 Upholstery nozzle

.
.

.
.

.
.

.
.

16 Operation

.
.

.
.

.
.

.....
.....
17 Power cord.....
.....

.....
.....
.....
.....
17 Turning the vacuum on and off.....
.....
.....

.....
.....
..... 18 Adjusting the suction .
.....

.....
.....
.....
.....
..... 19 Blower connection socket.....
.....
.....

.....
.....
..... 21 Transportation and storage .
.....

.....
.....
.....
.....
..... 22 Maintenance and care .
.....
.....

.....
.....
..... 23 Purchasing new dustbags and filters .
.....
.....

.....
.....
... 23 Which dustbags and filters are the right ones? . .
.....

.....
.....
23 When to change the dustbag.....
.....

.....
.....
.....
..... 24 Replacing the dustbag.....
.....
.....

.....
.....

.....
25 Replacing the exhaust filter

.....
.....

.....
.....
.. 26 Replacing the "Air Clean" filter

.....
.....
.....
.....

.. 27 Replacing the "Active Air Clean" filter and the "Active HEPA" filter

..... 28 Replacing one type of filter with another .

.....
.....

.....
.....
. 29 When to change the dust compartment filter (motor protection).

.....

30 Replacing the dust compartment filter (motor protection).

.....

.... 30 When to change the thread catcher pads .

.....
.....

.....
.....
31 Cleaning and care

.....
.....
.....
.....

..... 32 Technical Service . .

.....
.....
.....

..... 33 Optional accessories

.....
.....
.....
.....

..... 34 Caring for the environment . .

.....
.....
.....

.....
.....
.....

.... 40 3 IMPORTANT SAFETY INSTRUCTIONS When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE WARNINGTo reduce the risk of fire, electric shock or injury: ~ To reduce the risk of electric shock, Before using ~ Check the voltage rating of the vacuum cleaner before connecting the power cord to an electrical outlet. Your power source should correspond with the voltage rating plate located on the underside of the vacuum. Use only household AC outlets. Never use DC power sources. If you are not sure of your home's voltage supply, consult a qualified electrician. Connecting the vacuum cleaner to a higher voltage than indicated in these instructions may result in damage to the vacuum cleaner or injury.

this appliance has a polarized plug (one blade is wider than the other.) This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not alter the plug in any way. dangerous. Check the packaging, vacuum cleaner and accessories for any signs of damage. Do not use a damaged appliance. ~ A damaged vacuum cleaner can be ~ Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors or submerged in water, bring it to a service center.

@@@Only dry surfaces should be vacuumed. manual. @@@@~ Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used near children. @@Otherwise it could be damaged.

~ If a dustbag is not inserted, the dust compartment lid will not close. Do not force it shut. ~ Do not leave the vacuum plugged in. Unplug it from the outlet when not in use and before servicing. handpiece is a metal insert designed to absorb static electricity.

Please make certain that your hand remains around this metal insert when vacuuming. pick up liquids or damp dirt. This could impair the electrical safety of the vacuum cleaner. Wait for freshly shampooed carpets to dry. burning or smoking such as cigarettes, matches or hot ashes. The vacuum cleaner could catch fire. @@@@Toner, ~ Do not use to pick up any flammable ~ On the underside of the vacuum ~ Do not vacuum up items which are heavy, hard or have sharp edges. They could cause a blockage and damage the appliance. the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the appliance over the cord.

Keep the cord away from heated surfaces. ~ Do not pull or carry by the cord, use ~ Persons which lack physical, sensory or mental abilities or experience with the machine should not use it without supervision or instruction by a responsible person. 5 IMPORTANT SAFETY INSTRUCTIONS ~ Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord. ~ Do not handle the plug or vacuum with wet hands. ~ Keep the power cord, hair, loose clothing, fingers and all parts of the body away from openings and moving parts. ~ Do not place anything into the openings of the vacuum cleaner. Do not use if any openings are blocked; keep them free of dust, lint, hair, or anything that may reduce air flow. ~ This appliance is equipped with a power cord reel. Hold plug when rewinding onto cord reel.

Do not allow plug to whip when rewinding. ~ Turn off all controls before unplugging. stairs. ~ Monitor the dustbag change indicator and inspect all filters regularly. For best performance, the dustbag and filters should be replaced when necessary.

@@@@@Avoid picking up sharp objects. Danger of electric shock! accessories, especially the Turbobrush, and Powerbrush. @@@@~ Danger of injury. @@@@~ Do not use the vacuum cleaner without an accessory attached. The rim could be damaged and injuries could result from sharp edges.

~ Miele dustbags are disposable and intended to be used only once. Do not attempt to reuse. An over stuffed dustbag will reduce the efficiency of the vacuum cleaner. ~ Only use genuine Miele dustbags with the Miele quality signet and original Miele filters and accessories. Only then will the manufacturer guarantee its safety. Cleaning, maintenance and repairs ~ The electro-suction hose and the telescopic wand contain electrical wires. The plug connectors must not come in contact with water. These items may only be cleaned with a dry cloth, no moisture can touch them. Danger of electric shock. an authorized service agent in accordance with national and local safety regulations.

Unauthorized repairs could cause injury or machine damage. should be replaced along with a new cable reel by Miele Technical Service. ~ Repairs must only be performed by ~ If the power cord is damaged it Disposing of an old appliance ~ Before discarding an old vacuum cleaner, please cut off the power cord and render the plug useless.



[You're reading an excerpt. Click here to read official MIELE S624 user guide](http://yourpdfguides.com/dref/4311058)

<http://yourpdfguides.com/dref/4311058>

Ensure the appliance presents no danger to children while being stored for disposal. **SAVE THESE INSTRUCTIONS** ~ Turn the vacuum cleaner off after each use and before every cleaning / maintenance. Pull the plug from the outlet. ~ Never submerge the vacuum cleaner in water. Clean only with a dry cloth or slightly damp cloth when disconnected from the mains supply. If moisture gets into the appliance there is a risk of electric shock. 7 Guide to the vacuum cleaner 8 Guide to the vacuum cleaner 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 Handpiece Air inlet valve Locking button Telescopic wand * Telescopic wand release button * Electrobrush socket* Dust compartment lid release Dust compartment filter (motor protection) Dustbag Floor brush* Carrying handle Park-system Exhaust filter* Power cord Cord rewind switch Suction power selector* Park-System Exhaust filter change indicator (Reset button 7)* Thermo indicator* On / Off switch Accessory compartment Airflow indicator Accessory compartment lid release Elbow Suction hose The illustration shows the maximum number of features available in this series of Miele vacuum cleaners.

Those features marked * depend on the model and may vary or not be available on your model. Some models are supplied with a Miele Electrobrush or Turbobrush as standard (not illustrated). Separate operating and maintenance instructions are supplied with these brushes. 9 Before using for the first time Attaching the suction hose ^ Slide open the dust compartment shutter. @@@@ when moving from a carpet to an area rug. @@@@ These parts are also available to order from the online Miele store. @@ Miele dustbags are disposable and made to be used only once. Do not attempt to reuse. @@@^ Turn the vacuum cleaner on and select the head catcher pads Check the thread catchers on the bottom of the standard floor brush and the upholstery nozzle, from time to time. @@@^ Push and take out the roller axle. ^ Take out the roller. ^ Remove all threads, hair, etc. and reassemble the parts. @@ They will damage the surface. Dust compartment The dust compartment can, if necessary, be cleaned using another vacuum, a dry cloth or brush. Monitor the dustbag change indicator and inspect all filters regularly. Clean or replace them when necessary according to the Operating Instructions. ,Do not submerge the vacuum cleaner in water! If moisture gets into the appliance, there is the risk of an electric shock. 32 Technical Service In the event of a fault which you cannot fix yourself please contact the Miele Service Department at the phone number on the back of this booklet. ^ Please quote the model type of your appliance.

This can be found on the data plate on the bottom of the vacuum. 33 Optional accessories Each model may be accessorized with one or more of the following tools. @@@@ It is mechanically driven by the suction power of the vacuum. @@ tiles and stone floors. Floor brush - Parquet-3 Special brush with natural bristles intended for cleaning parquet and laminate floors, especially those susceptible to scratching. The parquet floor brush can be cleaned with the vacuum cleaner using the crevice nozzle if necessary. Floor brush - Parquet Twister with swiveling head For cleaning all hard flooring, e.g. parquet and tiles. Especially suitable for vacuuming niches and tight spaces.

Floor brush - Parquet Twister XL with swiveling head Similar to the Parquet Twister except it is 3 9/16" (90 mm) wide, making it ideal for cleaning large spaces. 35 Optional accessories Dust brush with natural bristles For dusting particularly delicate objects. Universal brush For dusting books, shelves, etc. Radiator brush (only usable with the crevice nozzle) For cleaning radiators, narrow shelves and crevices. 36 Optional accessories Mattress tool For cleaning deep crevices, mattresses and upholstery.

12" (300 mm) Crevice nozzle For cleaning in folds, crevices and corners. 37 Optional accessories MicroSet This set is specially designed for cleaning small objects and difficult to reach areas (such as PC keyboards, stereo equipment, carved furniture, ornaments, models, etc). @@@@ In addition to meeting OSHA standards for air filtration, it will also absorb any odors existing in the dustbag. The "Active HEPA" filter can be used in place of the "Air Clean" filter. Filter frame The filter frame is needed if you would like to exchange a SuperAirClean filter with an Active Air Clean or HEPA filter, see "Maintenance and care Exchanging exhaust filters".

39 Caring for the environment Disposal of the packing materials The cardboard box and packing materials protect the appliance during shipping. They have been designed to be biodegradable and recyclable. Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. These items pose a danger of suffocation. Disposing of the dustbag and filters Genuine Miele dustbags and filters are made of environmentally friendly materials. They can be thrown out with the household trash provided the vacuum cleaner has been used only for normal household dust. 40 41 42 43 Alteration rights reserved / 4909 M.-Nr. 07 319 300 / 01 For the most updated manual see the Miele web site.



[You're reading an excerpt. Click here to read official MIELE S624 user guide](http://yourpdfguides.com/dref/4311058)
<http://yourpdfguides.com/dref/4311058>