




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE S6270. You'll find the answers to all your questions on the MIELE S6270 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE S6270
User guide MIELE S6270
Operating instructions MIELE S6270
Instructions for use MIELE S6270
Instruction manual MIELE S6270

Miele

Operating Instructions

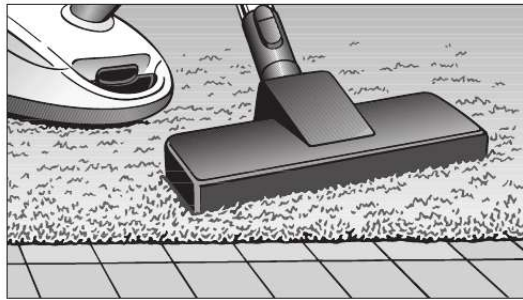

Vacuum Cleaner
S 6000

To prevent accidents
and machine damage,
read these instructions
before
installation and use.

HS14

en - US, CA

M.-Nr. 07 968 171



[You're reading an excerpt. Click here to read official MIELE S6270 user guide](#)

<http://yourpdfguides.com/dref/4311346>

Manual abstract:

en - US, CA HS14 M.-Nr. 07 968 171 2 Contents **IMPORTANT SAFETY INSTRUCTIONS** Guide to the vacuum cleaner Before using the vacuum cleaner
Using the included accessories Operation Power cord.

.
.
.

. 14 Turning the vacuum on and off . . .

.
.
.

. 15 Adjusting the suction

.
.
.

. . . 16 Opening the air inlet valve

.
.
.

. 17 Park-System

.
.
.

.
.
.

17 Maintenance and care Purchasing new dustbags and filters

.
.
.

. . . . 18 Which dustbags and filters are the right ones?

.
.
.

. 18 When to change the dustbag

.
.
.

. 19 Replacing the dustbag

.
.
.

.
.
.

. 20 Replacing the exhaust filter

.....
.....
.....
.....

..... 21 Replacing the "Air Clean" filter ..

.....
.....
.....

... 21 Replacing the "Active Air Clean" filter and the "Active HEPA" filter ..

.....
.....
.....

22 Exchanging exhaust filters.

.....
.....
.....

... 23 When to change the dust compartment filter (motor protection) .

.....

..... 24 Replacing the dust compartment filter (motor protection) . .

.....
.....

. 24 When to change the thread catcher pads of the standard floor brush

..... 25 Replacing the thread catchers

.....
.....
.....
.....

... 25 Cleaning and care Frequently asked questions Optional accessories Technical Service Caring for the environment 3 IMPORTANT SAFETY INSTRUCTIONS When using an electrical appliance, basic precautions should always be followed, including the following: READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE WARNING To reduce the risk of fire, electric shock or injury: ~ To reduce the risk of electric shock, Before using ~ Check the voltage rating of the vacuum cleaner before connecting the power cord to an electrical outlet. Your power source should correspond with the voltage rating plate located on the underside of the vacuum. Use only household AC outlets. Never use DC power sources. If you are not sure of your home's voltage supply, consult a qualified electrician. Connecting the vacuum cleaner to a higher voltage than indicated in these instructions may result in damage to the vacuum cleaner or injury. this appliance has a polarized plug (one blade is wider than the other.) This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not alter the plug in any way. dangerous. Check the packaging, vacuum cleaner and accessories for any signs of damage. @@@@ Only dry surfaces should be vacuumed. @@ ~ Do not use outdoors or on wet ~ Use only as described in this ~ Unwind the cord completely to aid the vacuum in dissipating heat. entrap or retain any hazardous materials. ~ This vacuum should not be used to ~ Do not use the vacuum cleaner to ~ This appliance is intended strictly for household use only. ~ Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used near children. ~ Never use the vacuum cleaner without the dustbag or filters in place. Otherwise it could be damaged. @@ Do not force it shut. ~ Do not leave the vacuum plugged in. @@@@ This could impair the electrical safety of the vacuum cleaner. Wait for freshly shampooed carpets to dry. burning or smoking, such as cigarettes, matches, or hot ashes. The vacuum cleaner could catch fire.

such as that used in printers and photocopiers can conduct electricity. combustible liquids, such as gasoline, or use in areas where they may be present. The vacuum cleaner could explode. heavy, hard or have sharp edges. They could cause a blockage and damage the appliance. the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces. ~ Do not vacuum anything that is ~ Do not vacuum toner dust. Toner, ~ Do not use to pick up flammable or ~ On the underside of the vacuum ~ Do not vacuum items which are ~ Do not pull or carry by the cord, use ~ Persons which lack physical, sensory or mental abilities or experience with the machine should not use it without supervision or instruction by a responsible person.

5 IMPORTANT SAFETY INSTRUCTIONS ~ Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord. with wet hands. Using accessories ~ The hose and the telescopic wand ~ Do not handle the plug or vacuum ~ Keep the power cord, hair, loose clothing, fingers and all parts of the body away from openings and moving parts. ~ Do not place anything into the openings of the vacuum cleaner. Do not use if any openings are blocked; keep them free of dust, lint, hair, or anything that may reduce air flow. ~ This appliance is equipped with a power cord reel. Hold the plug when rewinding onto cord reel. Do not allow the plug to whip when rewinding. ~ Turn off all controls before unplugging. ~ Use extra care when cleaning on stairs. @@@@ Avoid picking up sharp objects. Danger of electric shock! accessories, especially the Turbobrush, and Powerbrush. @@ Danger of injury. @@ The Miele Powerbrush is a motor driven accessory for use only with Miele vacuum cleaners. The vacuum cleaner must not be used with another manufacturer's powerbrush. accessory attached. The rim could be damaged and injuries could result from

sharp edges. intended to be used only once. Do not attempt to reuse.

An over stuffed dustbag will reduce the efficiency of the vacuum cleaner. with the Miele quality signet and original Miele filters and accessories. Only then will the manufacturer guarantee its safety. ~ Do not use the vacuum without an ~ Monitor the dustbag change ~ Miele dust bags are disposable and ~ Only use genuine Miele dustbags 6 IMPORTANT SAFETY INSTRUCTIONS Cleaning, maintenance and repairs Disposal ~ Turn the vacuum cleaner off after each use and before every cleaning / maintenance. Pull the plug from the outlet. ~ Never submerge the vacuum cleaner in water. Clean only with a dry cloth or slightly damp cloth when disconnected from the mains supply. If moisture gets into the appliance there is a risk of electric shock. ~ Monitor the dustbag change indicator and inspect all filters regularly. @@@@A temperature limiter automatically switches the vacuum cleaner off if it gets too hot, see "Frequently asked questions".

~ Repairs must only be performed by an authorized service agent in accordance with national and local safety regulations. Unauthorized repairs could cause injury or machine damage. The manufacturer cannot be held responsible for unauthorized work. @@@@Use inlet guides to direct insertion.

@@@@@Observe the cleaning instructions of the floor manufacturer.

@@To clean hard flooring: ^ Press the foot switch marked ä or).



[You're reading an excerpt. Click here to read official MIELE S6270 user guide](http://yourpdfguides.com/dref/4311346)

<http://yourpdfguides.com/dref/4311346>

@@@For dusting particularly delicate objects. @c Crevice nozzle For cleaning in folds, crevices and corners. @@@@These parts are also available to order from the online Miele store. @Miele dustbags are disposable and made to be used only once.

Do not attempt to reuse. @@@^ Turn the vacuum cleaner on and select the highest power setting. ^ Lift the floor brush slightly off the floor.

@@@@@@@If the bag is bulging with pet fur, hair, carpet fluff, etc. the indicator may not register "full". @@@@Do not unfold the dustbag when taking it out of the box. ^ Unfold the dustbag in the dust compartment. ^ Close the dust compartment lid until it clicks into place. @@@@It should be replaced each time a new box of bags is started. @@Change the filter sooner if it is obviously soiled or no longer effective.

Replacing the "Air Clean" filter Do not use more than one filter at a time. ^ Open the dust compartment lid. ^ Open the filter frame and remove the used "Air Clean" filter with the clean corner (see arrow). ^ Insert the new filter. If you wish to replace the Air Clean filter with an Active Air Clean filter or Active HEPA filter see "Maintenance and care - Exchanging exhaust filters". ^ Close the dust compartment lid firmly until it clicks into place. 21 Maintenance and care Replacing the "Active Air Clean" filter and the "Active HEPA" filter Do not use more than one filter at a time. ^ Open the dust compartment lid. ^

Remoother areas inaccessible with the standard Turbobrush. Floor brush Hard floor - 3 To vacuum sturdy hard floors, e.

g. tiles and stone floors. Floor brush Parquet - 3 Special brush with natural bristles intended for cleaning parquet and laminate floors, especially those susceptible to scratching. Floor brush Parquet Twister with swiveling head For cleaning all hard flooring, e.g.

parquet and tiles. Especially suitable for vacuuming niches and tight spaces. @@@@Powerbrush SEB 228 (EB03) This Powerbrush is similar to the SEB 217-3 with the addition of a height adjustable brush, allowing it to also be used on smooth floor surfaces. Powerbrush SEB 236 (EB01) This Powerbrush is similar to the SEB 228 except it also includes a headlight and multifunction indicator. 28 Optional accessories Other accessories MicroSet For cleaning small objects and difficult to reach areas (such as PC keyboards, stereo equipment, carved furniture and ornaments, models, etc).

CarCare accessory case For cleaning car interiors. Cat&Dog accessory case For cleaning the homes of pet owners. Active HEPA filter SF-AH 50 HomeCare

accessory case For cleaning your home. Universal brush For dusting books, shelves, etc. @@Radiator brush For cleaning radiators, narrow shelves or crevices. Mattress tool For cleaning deep crevices, mattresses and upholstery. @@@@Crevice nozzle 22" (560 mm) For cleaning hard to reach areas.

Upholstery tool 7 1/2" (190 mm) For cleaning upholstered furniture, mattresses and pillows. Filters Active Air Clean filter SF-AAC 50 This charcoal filter absorbs odors from the dust collected in the dustbag. 29 Technical Service After sales service In the event of a fault which you cannot fix yourself please

contact the Miele Service Department at the phone number listed on the back of this booklet.

^ Please quote the model type of your appliance. This can be found on the data plate on the bottom of the vacuum. 30 Caring for the environment Disposal of packing materials The cardboard box and packing materials protect the appliance during shipping. Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. These items pose a danger of suffocation. Disposing of the dustbag and filters These are made from environmentally friendly materials and can be placed in the regular household garbage. However, if the dustbag contains prohibited waste, contact your local waste collection center for disposal instructions. 31 Alteration rights reserved - 2311 M.-Nr.

07 968 171 / 01 INFORMATION IS SUBJECT TO CHANGE. PLEASE REFER TO OUR WEBSITE TO OBTAIN THE MOST CURRENT PRODUCT SPECIFICATIONS, TECHNICAL & WARRANTY INFORMATION. .



[You're reading an excerpt. Click here to read official MIELE S6270 user guide](http://yourpdfguides.com/dref/4311346)

<http://yourpdfguides.com/dref/4311346>