




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE S7580. You'll find the answers to all your questions on the MIELE S7580 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE S7580  
User guide MIELE S7580  
Operating instructions MIELE S7580  
Instructions for use MIELE S7580  
Instruction manual MIELE S7580

**Miele**

## Operating Instructions

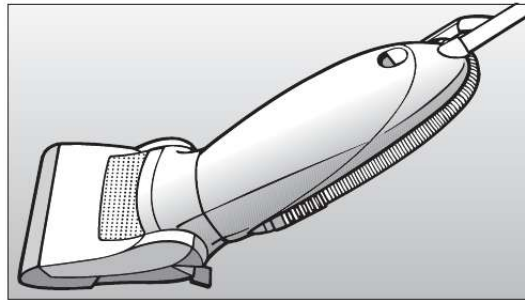

### Upright Vacuum Cleaner S 7000

ONLY MIELE DUSTBAGS, FILTERS AND ACCESSORIES  
WITH THE "ORIGINAL MIELE" LOGO CAN BE USED  
WITH THIS VACUUM CLEANER.  
USE OF NON-MIELE COMPONENTS MAY VOID THE WARRANTY.

To prevent accidents  
and machine damage,  
read these instructions  
**before**  
installation and use.

HS08

en - US, CA

M.-Nr. 07 450 381



[You're reading an excerpt. Click here to read official MIELE S7580 user guide](#)

<http://yourpdfguides.com/dref/4639533>

**Manual abstract:**

.....  
.....  
.....  
.....

*. 4 Guide to the vacuum cleaner . . . . .*

.....  
.....  
.....

*. 7 Before the first use . . . . .*

.....  
.....

.....  
.....  
.....

*. . . . . 9 Included accessories.*

.....  
.....  
.....  
.....

*10 Use . . . . .*

.....

.....  
.....  
.....  
.....

*12 Power cord. . . . .*

.....

.....  
.....  
.....  
.....

*12 Turning the vacuum cleaner On/Off . . . . .*

.....  
.....

.....  
.....

*14 Selecting the suction power setting. . . . .*

.....

.....  
.....  
.....

*. 15 "Automatic" setting . . . . .*

.....  
.....  
.....  
.....

.....  
*17 Vacuum hose* .....

.....  
.....

.....  
.....

.....  
.....

... *18 Telescopic wand* .....

.....  
.....  
.....

.....  
.....

.....  
.....

... *19 Powerbrush* .....

.....  
.....  
.....  
.....

.....  
.....

.. *20 Maintenance and care* ..

.....

.....  
.....

.....  
.....

.. *22 Purchasing new dustbags and filters* .....

.....  
.....  
.....

..... *22 Which dustbags and filters are the right ones?* .....

.....  
.....  
.....

... *22 When to change the dustbag* .....

.....  
.....  
.....

... *23 Changing the dustbag* ..

.....  
.....

.....  
.....

.....  
.....

..... *24 When to change the dust compartment filter (pre-motor filter)* .

... *25 Changing the dust compartment filter* .

.....  
.....

.....  
.....

... 25 When to change the exhaust filter . . .

.....  
.....  
.....

..... 26 Exhaust filter change indicator .....

.....  
.....  
.....

..... 26 Replacing the "Air Clean" filter .....

.....  
.....

..... 27 Replacing the "Active Air Clean" filter and the "Active HEPA" filter.

.....

..... 28 Exchanging exhaust filters. . .

.....  
.....  
.....

..... 29 Removing hair and threads from the Powerbrush .....

.....  
.....

..... 30 Cleaning and care .....

.....  
.....

..... 32 Frequently asked questions .....

.....  
.....  
.....

..... 33 Technical service .....

.....  
.....

..... 34 Optional Accessories .....

.....  
.....  
.....

..... 35 Caring for the environment . . .

.....  
.....

.....  
.....

... 39 3 **IMPORTANT SAFETY INSTRUCTIONS** When using an electrical appliance, basic precautions should always be followed, including the following:  
**READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE WARNING**To reduce the risk of fire, electric shock or injury: ~ To reduce the risk of electric shock, Before using ~ Check the voltage rating of the vacuum cleaner before connecting the power cord to an electrical outlet. The power source should correspond with the voltage rating plate of the vacuum cleaner.

Use only household AC outlets. Never use DC power sources. If you are not sure of your home's voltage supply, consult a qualified electrician. Connecting the vacuum cleaner to a higher voltage may result in damage or injury. this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not alter the plug in any way. with a 15 A fuse.

~ The electrical outlet must be fitted ~ A damaged vacuum cleaner can be dangerous. Check the packaging, vacuum cleaner and accessories for any signs of damage. Do not use a damaged appliance. ~ Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors or submerged in water, bring it to a service center. **4 IMPORTANT SAFETY INSTRUCTIONS** Use surfaces. Only dry surfaces should be vacuumed. ~ Do not use on people or animals. ~ Do not use outdoors or on wet ~ Do not vacuum anything that is burning or smoking such as cigarettes, matches or hot ashes. The vacuum cleaner could catch fire.

such as that used in printers and photocopiers, can conduct electricity. @@heavy, hard or have sharp edges. They could cause a blockage and damage the appliance. @@Do not run the appliance over the cord. Keep the cord away from heated surfaces.

by pulling on the cord. To unplug, grasp the plug, not the cord. cleaner with wet hands. ~ Do not vacuum toner dust. @@Close attention is necessary when used near children.

~ Be aware, the cord clip can become loose over time. Do not allow children to come in contact with this small part. Choking hazard. ~ Never use the vacuum cleaner without the dustbag or filters in place. It may cause damage. compartment lid will not close. Do not force it shut. ~ Do not vacuum items which are ~ Do not pull or carry by the cord, use ~ If a dustbag is not inserted, the dust ~ Do not leave the vacuum cleaner ~ Do not unplug the vacuum cleaner ~ Do not handle the plug or vacuum ~ Keep the power cord, hair, loose clothing, fingers and other parts of the body away from openings and moving parts. openings of the vacuum cleaner. Do not use if any openings are blocked; keep them free of dust, lint, hair, or anything that may reduce air flow.

plugged in. Unplug it from the outlet when not in use and before servicing. used to entrap or retain any hazardous materials. pick up liquids or damp dirt. This could impair the electrical safety of the vacuum cleaner. Wait for freshly shampooed carpets to dry. ~ This vacuum cleaner should not be ~ Do not use the vacuum cleaner to ~ Do not place anything into the **5 IMPORTANT SAFETY INSTRUCTIONS** ~ Turn off all controls before unplugging. ~ Use extra care when cleaning on stairs. ~ The hose, wand and accessories must not be used at head level to avoid injury to eyes and ears. inspect all filters regularly.

For best performance, the dustbag and filters should be replaced when necessary. A full bag or blocked filter will reduce the vacuum cleaner's suction power. A temperature limiter automatically switches the vacuum cleaner off if it gets too hot, see "Frequently asked questions". Cleaning, maintenance and repairs ~

Turn the vacuum cleaner off after each use and before every cleaning/ maintenance. Pull the plug from the outlet.

cleaner in water. Clean only with a dry or slightly damp cloth when disconnected from the mains supply. If moisture gets into the appliance there is a risk of electric shock. an authorized service agent in accordance with national and local safety regulations. Repairs by unqualified persons could be dangerous.

The manufacturer cannot be held responsible for unauthorized work. should be replaced with a genuine Miele cord by Technical Service. ~ Monitor the airflow indicator and ~ Never submerge the vacuum ~ Repairs must only be performed by Using accessories ~ Unplug the vacuum cleaner when changing accessories. vacuuming do not touch the beater bar. Danger of injury. telescopic wand without an accessory attached. @@Do not attempt to reuse them.

@@@@@@@@@@@@@@@@@@@@The brush head can be turned to attain the optimal cleaning position. 11 Use Power cord The lower cord hook can be rotated. ^ Rotate the hook upward to release the power cord.



[You're reading an excerpt. Click here to read official MIELE S7580 user guide](http://yourpdfguides.com/dref/4639533)

<http://yourpdfguides.com/dref/4639533>

*Rewinding the power cord* When the vacuum cleaner is not in use, the power cord can be wound around the two cord hooks. ^ To prevent the cord from unwinding press it into the locking groove of the plug (see insert). 12 *Use Plug in the vacuum cleaner* ^ Guide the power cord through the notch at the side and over the upper cord hook (see illustration). This will keep the cord in an optimal position so that it will not interfere with vacuuming. It also keeps the power cord from becoming caught in the handle. Release the vacuum cleaner ^ Briefly press the foot pedal and recline the body of the vacuum cleaner to a comfortable position. 13 *Use Turning the vacuum cleaner On/Off* Always follow the flooring manufacturer's cleaning and care instructions. ^ Press the On/Off button on the handle. The vacuum cleaner turns on. *ComfortLine Models: The "On" indicator on the control panel lights yellow.*

*PremiumLine Models: The so vacuum these types of floor coverings and use only low suction power. Do not use the Powerbrush on floors with a variable or uneven surface. The brush could come in contact with the floor and cause damage.* 20 *Use Turning the Powerbrush On/Off* The beater bar in the Powerbrush is driven by a separate motor, which can be switched on and off. ^ Press the "Carpet/Floor" button on the handle.

The Powerbrush turns on. The indicator on the control panel lights yellow. You can also use the button to switch off the Powerbrush while vacuuming, for example when moving from carpet to hard floors. The Powerbrush automatically shuts off anytime the body of the vacuum cleaner is placed into the full upright position. ^ For best results, move the Powerbrush slowly back and forth over the area you wish to clean.

21 *Maintenance and care*, Turn off and unplug the vacuum Purchasing new dustbags and filters Original Miele dustbags and filters can be purchased from an authorized Miele vacuum dealer or by visiting the Miele store at [htchanging](http://htchanging) exhaust filters Depending on the model, your vacuum cleaner will use one of the following standard exhaust filters: a Air Clean b Active Air Clean (black) c Active HEPA (blue) If you wish, you can use one of the alternative filters instead of the standard filter supplied with your appliance. Each filter offers different characteristics (see section "Optional accessories"). Important 1. If you replace exhaust filter a with exhaust filter b or c, you must be sure to remove the filter frame before inserting the new filter type. 2. If you replace exhaust filter b or c with exhaust filter a, be sure to place the new filter in a filter frame \*. Do not use more than one filter at a time \* Filter frame - see "Optional accessories" Some models are equipped with an exhaust filter reset button. This button indicates when to change the Active Air Clean filter and the Active HEPA filter. If an Air Clean filter is used, the reset button can be disregarded. @@@@^ Release the body of the vacuum cleaner and lower it to the floor.

@@@ Guide the scissors along the guide track on the beater bar. @@@^ Click the vacuum cleaner into the full upright position. @@A Undo the suction hose in the direction of the arrow. B Pull the suction hose connector off the swivel elbow. ^ Remove all blockages ^ Put the connector back on and click it shut. @@@B Pry the service flap free. ^ Remove all blockages. @@@@^@ ComfortLine Models: The "On" indicator lights red. PremiumLine Models: The "\$" Thermo indicator lights red. Possible fault Solution The vacuum cleaner has overheated.

- Turn the vacuum cleaner and Powerbrush off and pull the plug from The temperature limiter automatically the outlet. turns the vacuum cleaner off. @@@@minutes. @@@@^ Possible fault The blockage protection feature has been activated. @@@@Solution - Turn off the Powerbrush, then switch off and unplug the vacuum cleaner.

- Remove the blockage. The vacuum cleaner is now ready for use. What if the Powerbrush automatically shuts off and the indicator displays a yellow light? Possible fault The temperature limiter in the Powerbrush has been triggered because of overheating, for example due to a blockage in the vacuum hose/wand. Solution - Turn off the Powerbrush, then turn off and unplug the vacuum cleaner. - Inspect the vacuum hose/wand and all filters.

It is important to allow the Powerbrush to cool. To speed up the process: - Plug in the vacuum cleaner and turn it on. - Vacuum for approx. 10 minutes, but leave the Powerbrush off. This helps cool off the Powerbrush so that it can be switched on again. 33 *Technical service* In the event of a fault you cannot easily fix yourself please contact the Miele Technical Service Department using the information on the back of this manual. ^ Please quote the model number on the data plate located on the bottom of the Powerbrush. 34 *Optional Accessories* Certain models come with one or more of the following accessories. Attach the desired accessory onto the handle of the vacuum hose or onto the telescopic wand. Floor brush Hardfloor To vacuum sturdy hard floors, e.

g. tile and stone. Floor brush Parquet Special brush with natural bristles for use on parquet, laminate and hardwood-type floors especially those susceptible to scratching. @@ Especially suited to clean niches and tight spaces. @@@@ Active Air Clean exhaust filter This special active charcoal filter absorbs odors collected in the dustbag. The filter effectively controls most odors. The Active Air Clean filter can be exchanged with the existing exhaust filter. Active HEPA filter The "Active HEPA" filter combines activated charcoal and HEPA filtration in one. The active charcoal layer absorbs odors from the dust collected in the dustbag. Vacuum cleaners equipped with this exhaust filter are particularly suitable for allergy sufferers and those concerned with a high level of hygiene because of its ability to trap respirable particles and allergens.

38 *Caring for the environment* Disposal of packing materials The cardboard box and packing materials protect the appliance during shipping. Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. These items pose a danger of suffocation. Disposing of the dustbag and filters These are made from environmentally friendly materials and can be placed in the regular household garbage.

However, if the dustbag contains prohibited waste, contact your local waste collection center for disposal instructions. 39 *Alteration rights reserved / 1612 M.-Nr. 07 450 381 / 03 INFORMATION IS SUBJECT TO CHANGE. PLEASE REFER TO OUR WEBSITE TO OBTAIN THE MOST CURRENT PRODUCT SPECIFICATIONS, TECHNICAL & WARRANTY INFORMATION.*



[You're reading an excerpt. Click here to read official MIELE S7580 user guide](http://yourpdfguides.com/dref/4639533)  
<http://yourpdfguides.com/dref/4639533>