



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE S8390. You'll find the answers to all your questions on the MIELE S8390 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE S8390
User guide MIELE S8390
Operating instructions MIELE S8390
Instructions for use MIELE S8390
Instruction manual MIELE S8390

Miele

Operating Instructions



Vacuum Cleaner
S 8000

Only Miele dustbags, filters and accessories with the "Original Miele" logo can be used with this vacuum. Only then can the suction power of the vacuum cleaner reach its optimum potential creating the best possible cleaning results.

To prevent accidents and machine damage, read these instructions **before** installation and use.

HS15

en - US, CA

M.-Nr. 09 257 881



[You're reading an excerpt. Click here to read official MIELE S8390 user guide](#)

<http://yourpdfguides.com/dref/4639531>

.....
.. 20 Parking, transport and storage.....

.....
.....
.....
.....

22 Maintenance and care.....

.....
.....
.....

24 Purchasing new filter bags and filters.....

.....
.....

..... 24 Which filter bags and filters are the right ones? .

.....
.....

24 When to change the filter bag.....

.....
.....

..... 25 How to change the filter bag.....

.....
.....
.....
.....

..... 26 When should I change the dust compartment filter?.....

.....
.....

..... 27 How to change the dust compartment filter .

.....
.....
.....

..... 27 When should I change the exhaust filter? . .

.....
.....
.....

..... 28 Filter change indicator .

.....
.....
.....
.....

28 How to replace the Air Clean exhaust filter?.....

.....
.....

..... 29 How do I change the Active Air Clean or the Active HEPA exhaust filter? .

.....

30 Exchanging exhaust filters.

sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces. ~ Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.

~ Do not handle the plug or vacuum with wet hands. ~ Keep the power cord, hair, loose clothing, fingers and all parts of the body away from openings and moving parts. openings of the vacuum cleaner. Do not use if any openings are blocked; keep them free of dust, lint, hair, or anything that may reduce air flow. ~ Monitor the filter bag change indicator and inspect all filters regularly. For best performance, the filter bag and filters should be replaced when necessary. A full bag or blocked filter will reduce the vacuum cleaner's suction power. A temperature limiter automatically switches the vacuum cleaner off if it gets too hot, see "Frequently asked questions". Using accessories ~ The socket on the vacuum cleaner is only to be used with the Miele Powerbrush. ~ Do not place anything into the ~ Unplug the vacuum when changing ~ The Miele Powerbrush is a accessories, especially when using the Powerbrush.



[You're reading an excerpt. Click here to read official MIELE S8390 user guide](http://yourpdfguides.com/dref/4639531)
<http://yourpdfguides.com/dref/4639531>

motor-driven accessory for use only with Miele vacuum cleaners. The vacuum must not be used with another manufacturer's Powerbrush. accessory attached. The rim could be damaged and injuries could result from sharp edges. intended to be used only once. Do not attempt to reuse them. An over stuffed filter bag will reduce the efficiency of the vacuum cleaner. ~ This appliance is equipped with a power cord reel. Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.

unplugging. ~ Do not use the vacuum without an ~ Turn off all controls before ~ Use extra care when cleaning on stairs. ~ Floor attachments, accessories and wands must not be used at head level to avoid injury to eyes and ears. ~ Miele filter bags are disposable and 6 IMPORTANT SAFETY INSTRUCTIONS ~

@@@Only then will the manufacturer guarantee its safety. @@@Only then will the manufacturer guarantee its safety.

~ The hose contains electrical wires. Do not use when damaged, cut, or punctured. Avoid picking up sharp objects. @@@@Pull the plug from the outlet. ~ Never submerge the vacuum cleaner in water.

@@@@@Unauthorized repairs could cause injury or machine damage. @@Unwinding ^ Pull the cord out to the desired length (max. approx. 21.4 ft. / 6.5 m). @@@@@@When you reduce the speed and select the highest power level. ^ Lift the floor brush slightly off the floor. @@@@@@@@@@@@@@@@@@If the bag is bulging with pet fur, hair, carpet fluff, etc.

the indicator may not register "full". @@@@@@Note: Do NOT unfold the filter bag when you take it out of the box. ^ Unfold the filter bag in the dust compartment when possible. @@@@@@^ Grasp the finger grip and pull the filter bag out of the holder. @@^ Insert a new dust compartment filter. ^ Close the filter frame. ^ Insert the new filter bag into the blue holder as far as it will go. ^ Close the dust compartment lid until it clicks into place. 27 Maintenance and care When should I change the exhaust filter? Depending on the model, your vacuum cleaner will use one of the following standard exhaust filters: a Air Clean Change the exhaust filter each time you open a new box of Miele filter bags. A new Air Clean exhaust filter is included in every box of Miele filter bags. b Active Air Clean SF-AAC 50 (black) c Active HEPA SF-AH 50 (blue) Replace this exhaust filter after approx. one year. You can write down the date on the exhaust filter. Filter change indicator Certain models are equipped with a filter change indicator to show you when to change the Active Air Clean b or Active HEPA c filter. The indicator and the reset button will light after approximately 50 hours of operation, which is equivalent to an average of one year of use.

Once the indicator light comes on, you can still continue to use the vacuum cleaner. However, the filter performance and suction power will be reduced. If you use the Air Clean a exhaust filter instead, lighting of the filter change indicator and reset button can be disregarded as you simply replace the Air Clean filter every time you open a new box of Miele filter bags. The indicator lights turn off when the reset button is pressed. 28 Maintenance and care How to replace the Air Clean exhaust filter? Make sure that only one exhaust filter is inserted in the frame.

^ Open the dust compartment lid. ^ Squeeze the release for the filter frame and open until it clicks. ^ Grasp one of the two clean corners (see arrow) to remove the used Air Clean exhaust filter. ^ Insert a new Air Clean exhaust filter. But if you want to install an Active Air Clean or Active HEPA filter, you must heed the section "Maintenance and care - Exchanging exhaust filters". ^ Close the filter frame. ^ Close the dust compartment lid until it clicks into place. 29 Maintenance and care How do I change the Active Air Clean or the Active HEPA exhaust filter? Make sure that only one exhaust filter is inserted in the frame. ^ Open the dust compartment lid. ^ Lift the exhaust filter and remove it.

^ Install the new Active Air Clean or Active HEPA exhaust filter and press it downwards. If you want to install an Air Clean exhaust filter, you must adhere to the section "Maintenance and care Exchanging exhaust filters". ^ Close the dust compartment lid until it clicks into place. Resetting the filter change indicator

If your vacuum cleaner has a filter change indicator, it must be pressed each time the exhaust filter is changed. To do this, the vacuum cleaner must be plugged in. ^ Press the reset button. The filter change indicator and the reset button will go out and return to its initial position. The indicator is only reset if pressed while lit. If the indicator is pressed while not lit, it will not be reset. 30 Maintenance and care Exchanging exhaust filters Depending on the model, your vacuum cleaner will use one of the following standard exhaust filters: a Air Clean b Active Air Clean SF-AAC 50 (black) c Active HEPA SF-AH 50 (blue) Important 1.

If you replace exhaust filter a with exhaust filter b or c, you must be sure to remove the filter frame before inserting the new filter type. 2. If you replace exhaust filter b or c with exhaust filter a, you must be sure to place the new filter in the filter frame *. * Filter frame - see section on "Optional accessories" Make sure that only one exhaust filter is inserted in the frame. Certain models are equipped with a filter change indicator to show you when to change the Active Air Clean or Active HEPA filter.

If you use an Air Clean exhaust filter instead, lighting of the filter change indicator and reset button can be disregarded as you simply replace the exhaust filter every time a new box of Miele filter bags is opened. The indicator lights turn off when the reset button is pressed. 31 Maintenance and care Changing the batteries on the LED handle You will need three AAA (1.5V) batteries. a Loosen the screws on the cover.

@@@@@Two indents are provided for this purpose. ^ Insert the new thread catcher. @@^ Insert the new thread catcher. @@b Push and take out the roller axle. c Take out the roller. ^ Remove all threads, hair etc. @@@@@@A warning light \$ comes on to indicate overheating. @@@@This problem can occur if, for example, an object is blocking the suction hose or the filter bag pores have become clogged with fine dust. The cause could also be a heavily soiled exhaust or dust compartment filter. If this happens, turn off the vacuum cleaner (press the On/Off foot switch s) and unplug the power plug from the electrical outlet.

Once the cause has been addressed, allow the vacuum cleaner to cool for approx. 20 - 30 minutes before resuming vacuuming. Technical service In the event of a fault which you cannot fix yourself please contact the Miele Service Department at the phone number listed on the back of this booklet. ^ Please quote the model type of your appliance. This can be found on the data plate on the bottom of the vacuum. 35 Optional accessories Turbo/Floor brushes Always follow the flooring manufacturer's cleaning and care instructions.



[You're reading an excerpt. Click here to read official MIELE S8390 user guide](http://yourpdfguides.com/dref/4639531)
<http://yourpdfguides.com/dref/4639531>

You can order these and many other products via the Miele website. Some models come with the one or more of the following accessories. Turbobrush Turbo Comfort (STB 205-3) For cleaning low carpet and textile floorings. Floor brush Hardfloor (SBB 235-3) To vacuum sturdy hard floors, e.g. tiles. Powerbrush SEB 236 (EB01) Compared to the SEB 228, this Powerbrush also has a multifunction control light and LEDs for illuminating the work area. With natural bristles for use on hardwood-type floors that may be susceptible to scratching, such as parquet and laminates. Floor brush - Parquet Twister with swiveling head (SBB 300-3) For vacuuming all hard flooring and tight spaces. Floor brush - Parquet Twister XL with swiveling head (SBB 400-3) For vacuuming large areas of hard flooring and tight spaces. Powerbrushes To connect a Powerbrush, you also need : – Electro telescopic wand SET 220 – Electro hose SES 121 36 Optional accessories Other accessories Accessory case MicroSet (SMC 20) Accessories for use on small or hard-to-reach items (stereos, keyboards, models, etc). Accessory case CarCare (SCC 10) Accessories for cleaning the interior of vehicles. Accessory case Cat&Dog (SCD 10) Accessories for cleaning homes with pets. Accessory case HomeCare (SHC 10) Accessories for cleaning living areas. Universal brush (SUB 20) For dusting books, shelves etc. Crevice nozzle 22" (560 mm) (SFD 20) Flexible crevice nozzle for vacuuming hard to reach places. Upholstery nozzle, 7 1/2" (190 mm) (SPD 10) Extra wide upholstery nozzle for cleaning upholstered furniture, mattresses and pillows. Flexible hose extension (SFS 10) For extending the suction hose by approx. 5 ft. / 1.5 m. Filter Active Air Clean exhaust filter (SF-AAC 50) Absorbs odors from the dirt in the filter bag. Active HEPA exhaust filter (SF-AH 50) Exceptional exhaust filter for purest exhaust air. Especially suitable for those with allergies.

Filter frame Required if you want to use an Air Clean exhaust filter instead of an Active Air Clean or Active HEPA exhaust filter. 37 Caring for the environment Disposal of the packing material The cardboard box and packaging protect the appliance during shipping. These materials are biodegradable and recyclable. Please recycle. Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! Disposal of an old machine Old appliances may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials. 38 39 Alteration rights reserved / S 8310 - S 8790 / 2512 M.-Nr.

09 257 881 / 00 INFORMATION IS SUBJECT TO CHANGE. PLEASE REFER TO OUR WEBSITE TO OBTAIN THE MOST CURRENT PRODUCT SPECIFICATIONS, TECHNICAL & WARRANTY INFORMATION. .



[You're reading an excerpt. Click here to read official MIELE S8390 user guide](http://yourpdfguides.com/dref/4639531)
<http://yourpdfguides.com/dref/4639531>