



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE SEB 236. You'll find the answers to all your questions on the MIELE SEB 236 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE SEB 236
User guide MIELE SEB 236
Operating instructions MIELE SEB 236
Instructions for use MIELE SEB 236
Instruction manual MIELE SEB 236

Miele

Operating instructions
Powerbrush

Instructions d'utilisation
Électrobrosse

Instrucciones de operación
Cepillo eléctrico

SEB 234
SEB 236

EB01

USA CDN CDN/F MX

M.-Nr. 06 723 240



[You're reading an excerpt. Click here to read official MIELE SEB 236 user guide](http://yourpdfguides.com/dref/3602185)
<http://yourpdfguides.com/dref/3602185>

Manual abstract:

The powerbrush is a motorized accessory, only for use with a Miele vacuum cleaner. do not connect the powerbrush to a non-Miele vacuum. The powerbrush must only be used for household purposes to vacuum and brush dry floor surfaces. Do not use on people or animals. Do not let the vacuum cleaner get wet. The electro-suction hose and the telescopic wand contain electrical wires. The plug connectors must not come in contact with water. These items may only be cleaned with a dry cloth, no moisture must touch them. Electrical parts inside could cause an electric shock. Repairs may only be carried out by a suitably qualified and competent person in accordance with national and local safety regulations.

Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held responsible for unauthorized work. This data must correspond to prevent injury and machine damage. do not use the powerbrush , the electro-suction hose or the telescopic wand if damaged. Damaged parts are a safety risk.

Turn the vacuum off after each use and before every cleaning / maintenance. Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used by or near children. do not vacuum up liquids or damp dirt. This will cause damage and seriously impair the functioning and electrical safety of the vacuum cleaner.

the electric shock protection can be damaged. Wait until freshly cleaned or shampooed carpets or floor coverings are completely dry before attempting to vacuum. Never touch the roller brush while it is rotating. injuries could result. The powerbrush should not be used at head level. long hair , ties , scarves , etc.

Could be sucked in and become entangled in the roller brush. Do not vacuum up items which are heavy, hard or have sharp edges. they could cause a blockage and damage the appliance. Do not vacuum up ashes or coal, whether glowing or apparently extinguished.

the powerbrush and the vacuum could catch fire. Do not vacuum up any flammable liquids or explosive materials or areas where such materials are stored.

An old powerbrush should be made unusable. SEB 234 with plug, power cord and cord clips 2.

The protective cap may need to be removed from the outlet. the powerbrush is turned on. If you return the intake socket back to the vertical start position while vacuuming, the powerbrush will be turned off. To achieve the best results, slowly pass the powerbrush back and forth over the carpet. When vacuuming rug fringes, place the powerbrush on the rug and pull it over the fringe onto the floor. Never push the powerbrush over fringes, as they may become entangled in the roller brush.

This gives the option of using the "vacuum only" instead of brushing the carpet. This function is useful when moving from hard floors to Berber or other delicate carpeting. The block protection has been activated because the roller brush is blocked by a vacuumed up item. Turn off the vacuum immediately and unplug it from the outlet. The reset function resets the block protection back to the start position.

Plug in the vacuum and turn it on. Turn off the vacuum and unplug it from the outlet. Cut any threads or hairs that have become entangled on the roller brush with a pair of scissors. Run the scissors along the guideway along the roller. The cut pieces will be drawn in by the suction power of the vacuum cleaner the next time it is used.



[You're reading an excerpt. Click here to read official MIELE SEB 236 user guide](http://yourpdfguides.com/dref/3602185)