



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE WT 2780. You'll find the answers to all your questions on the MIELE WT 2780 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE WT 2780
User guide MIELE WT 2780
Operating instructions MIELE WT 2780
Instructions for use MIELE WT 2780
Instruction manual MIELE WT 2780

Miele
HONEYCOMB CARE 



Operating instructions
Washer-dryer
WT 2780

To avoid the risk of accidents
or damage to the machine
it is **essential** to read
these instructions before it is
installed and used for the first time.

en - GB

M.-Nr. 07 661 240



[You're reading an excerpt. Click here to read official MIELE WT 2780 user guide](http://yourpdfguides.com/dref/3021701)
<http://yourpdfguides.com/dref/3021701>

Manual abstract:

@@Danger of suffocation! @@Disposal of your old appliance Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste. Please dispose of it at your local community waste collection / recycling centre or contact your Dealer for advice. Ensure that it presents no danger to children while being stored for disposal. It should be unplugged or disconnected from the mains electricity supply by a competent person. 2 Contents Caring for the environment

*.
.
.*

. . . . 2 Warning and safety instructions . .

*.
.
.*

. 6 Guide to the machine

*.
.
.*

*.
11 Control panel*

*.
.
.*

. 11 Display

*.
.
.*

. 12 Use

*.
.
.*

. 12 Before using for the first time.

*.
.
.*

. 13 Calibrating the load size sensor to zero

*.
.
.*

. 14 Washing and drying environmentally and economically

.....
..... 15 WASHING ..

.....
.....
.....
.....

.....
.....
.....

... 16 Short instructions

.....
.....
.....
.....

.....
... 16 Separate washing ..

.....
.....

.....
.....
.....
.....

.. 16 Extra options

.....
.....
.....

.....
.....
.....

..... 21 Short

.....
.....
.....
.....

.....
.....
.....

.. 21 Water plus

.....
.....
.....
.....

.....
.....
.....

21 Stains

.....
.....

.....
.....
.....

.. 21 Further extras

.....

.....
.....
.....
.....

... 21 Extra quiet.....

.....
.....

.....
.....

..... 21 Extra rinse ...

.....
.....
.....

.....
.....

22 Pre-wash.....

.....
.....
.....

.....

... 22 Soak .

.....

.....
.....
.....

.....

. 22 Rinse hold.....

.....

.....
.....
.....

... 22 Adding or removing laundry after a programme has started.....

.....

22 Final spin speed.....

.....
.....
.....

.....

23 Rinse and interim spin.....

.....

.....
.....
.....
... 23 To omit the final spin (Rinse hold)

.....
.....
.....
..... 23 To omit the spin between rinses and the final spin ...

.....
.....
... 23 Programme chart ..
.....

.....
.....
.....
.....

..... 24 Programme sequence ..
.....
.....
.....

.....
.....
.....
..... 28 Garment care label symbols

.....
.....
.....
.....

..... 30 Detergent

.....
.....
.....
.....

. 31 Water softeners.
.....
.....
.....

.....
.....
.....
32 Washing with several components

.....
.....
.....
.... 32 Fabric conditioner and liquid starch.

.....
.....
.....
..... 33 Colour run and dye removers/dyes ...

.....
.....

.....
.....

33 DRYING.....

.....
.....
.....

.....
.....
.....

..... 34 Separate drying...

.....
.....
.....

.....
.....

... 34.3 Contents Extras...

.....
.....
.....
.....

.....
.....

.. 37 Low temperature...

.....
.....
.....
.....

..... 37 Thermospin.....

.....
.....
.....

.....
.....
.....

..... 37 Adding or removing laundry after a programme has started...

... 37 Programme chart...

.....
.....
.....
.....
.....

... 38 WASHING AND DRYING.....

.....
.....
.....

.....
.....

. 43 Washing and drying in a continuous sequence....

.....

.....
.. 43 After each washing or drying programme ...

.....
.....

.....
... 44 Rinse out fluff programme ..

.....
.....

.....
.....
.....
.....
..... 45 Changing the programme sequence

.....
.....
.....

..... 46 To cancel a programme ...

.....
.....
.....
.....

..... 46 Interrupting a programme.

.....
.....
.....

.....
.....
.....

46 Changing a programme

.....
.....
.....
.....

.. 46 Safety lock

.....
.....
.....

.....
.....
.....

.... 47 Delay start

.....
.....
.....
.....

.....
.....

.... 48 Cleaning and care .

.....
.....
.....
.....
.....

..... 49 Cleaning the machine ...

.....
.....
.....
.....
.....
.....
.....
... 49 Cleaning the filter in the water inlet

.....
.....
.....
.....
. 51 Problem solving guide .

.....
.....
.....
.....
.....
.....
... 52 The programme does not start .

.....
.....
.....
. . . 52 A fault message appears in the display

.....
.....
.....
. 53 Problems with the load size indicator

.....
.....
.....
. 54 General problems .

.....
.....
.....
.....
.....
.....
... 55 An unsatisfactory wash result . .

.....
.....
.....
. 56 An unsatisfactory drying result . .

.....
.....
.....
.....
.....
.....
. 57 The drum door cannot be opened by pressing the Door button . .

.....
.....
. 58 Opening the drum door in the event of a blocked drain outlet and/or power failure

.....
.....
.....

.....

.....
..... 59 *After sales service* .

.....
.....

.....

.....

.....

.. 61 *Future updates (PC)*

.....

.....

.....

.....

.....

.. 61 *Appliance guarantee* ...

.....

.....

.....

.....

. 61 *Optional accessories*

.....

.....

.....

.....

.....

61 *Installation and connection*

.....

.....

.....

.....

..... 62 *Front view*

.....

.....

.....

.....

.....

.....

.....

. 62 *Rear view*

.....

.....

.....

.....

.....

.....

.. 63 4 *Contents Installation surface* ...

.....

.....

.....

.....

.....

..... 64 Installing the washer-dryer

.....
.....
.....

... 64 Removing the transit fittings

.....
.....

..... 64 Levelling the machine

.....
.....

66 Screwing out and adjusting the feet

.....
.....

... 67 Building under a continuous worktop / in a kitchen run

.....

..... 67 The Miele water protection system

.....
.....

... 68 Connection to the water supply

.....
.....

.. 69 Connection to the drainage system

.....
.....

..... 70 Electrical connection U.K.

.....
.....

... 71 Consumption data

.....
.....

. 72 Notes for test institutes:

.....

.....
.....
.....
... 72 *Technical data* ...
.....
.....

..... 73 *Settings menu*

..... 74 *Language J*

..... 74 *Buzzer*

..... 74 *Time* ...

.. 75 *Temperature unit* ...



[You're reading an excerpt. Click here to read official MIELE WT 2780 user guide](http://yourpdfguides.com/dref/3021701)
<http://yourpdfguides.com/dref/3021701>

.....
.....
.....
..... 77 Distribution controller .

.....
.....
.....
.....
.....
.....
. 77 Drying levels

.....
.....
.....
.....
.....
.....
..... 78 Extended cool down .

.....
.....
.....
.....
..... 78 Door lock

..... his ~ This washer-dryer must only be connected to the on-site water supply using a new hose kit. Old hoses must not be re-used. replaced by genuine Miele original spare parts. Only when these parts are fitted can the safety standards of the machine be guaranteed.

must only be replaced by a Miele approved service technician to protect the user from danger. ~ Faulty components must only be ~ If the connection cable is faulty it ~ Do not connect the machine to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the washer-dryer (e.g. danger of overheating). ~ Unauthorised repairs could result in unforeseen dangers for the user, for which the Miele cannot accept liability. Repairs should only be undertaken by a Miele approved service technician. Ensure current is not supplied to the machine until after maintenance or repair work has been carried out. 7 Warning and safety instructions ~ This washer-dryer may only be used in mobile installations such as ships if a risk assessment of the installation has been carried out by a suitably qualified engineer. ~ In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the machine and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee. ~ Do not make any alterations to the washer-dryer, unless authorised to do so by Miele. Correct use ~ Flooding danger. If hooking the drain hose into a wash basin, check that the water can drain off quickly enough to prevent the sink from overflowing. Make sure the drain hose is secure, so that the force of the water flowing out of the hose does not dislodge it. objects (e.g. nails, pins, coins, paper clips) do not find their way into the machine with the laundry. These may damage components of the machine (e.g. suds container, drum), which in turn can result in damage to the laundry. dispensed, the machine should not need to be descaled. If, however, you do wish to descale the machine only use proprietary non-corrosive descaling agents and strictly observe the instructions on the packaging. A special descaling agent is available to order from the Miele Spare Parts Department or via the internet at www.miele-shop.com. ~ Take care to ensure that foreign ~ If the correct amount of detergent is ~ Do not install your washer-dryer in rooms where temperatures below freezing may occur. Frozen hoses may burst or split. The reliability of the electronic control unit may be impaired at temperatures below freezing point. ~ Before using the washer-dryer for the first time, check that the transit bars at the rear of the machine have been removed (see section on "Installation and connection").

During spinning, a transit fitting which is still in place may result in damage to both the machine and adjacent furniture or appliances. ~ Turn off the stopcock if the machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain (gully) in the immediate vicinity. 8 Warning and safety instructions ~ To prevent the risk of fire, the following must not be dried in this washer-dryer: items which have not been washed. items, such as workwear, which have not been thoroughly cleaned and which are still soiled with grease, oil or other deposits (such as cosmetics, lotions etc). If items have not been thoroughly cleaned there is a danger that these might ignite when heated, even after they have been removed from the washer-dryer at the end of the programme. items which have been treated with inflammable cleaning agents or which contain residues of acetone, alcohol, benzine, petrol, stain remover, turpentine, wax and wax remover or other chemicals (e.g. mops and floor cloths). items which have been splashed with hair lacquer, hair spray, nail varnish remover or similar substances. When washing such heavily soiled items, ensure that you use sufficient detergent and select a high temperature. If in doubt, wash the items several times. ~ To prevent the risk of fire, the following must not be dried in this washer-dryer: items which have been cleaned using chemicals (e.g. professional dry-cleaning agents). fabrics which contain a large proportion of rubber, foam rubber or rubber-like materials. For example, products made from latex foam rubber, shower caps, waterproof textiles, rubberised articles and items of clothing and pillows with foam rubber filling. damaged items which contain padding or fillings (e.g.

pillows, jackets). When damaged, the filling can get out with the risk of igniting in the washer-dryer. ~ In many programmes, the heating phase is followed by a cooling down phase to ensure that the items are not too hot to handle when you remove them (this also avoids the danger of the laundry self-igniting). The programme is not finished until the cooling down phase has been completed. Ensure that you always wait until the end of the programme before removing the laundry. washer-dryer off before the end of a drying programme. If this was done and the laundry was then removed immediately it could give off a great amount of heat. products must be used according to the instructions on the manufacturer's packaging. 9 ~ Warning: Do not switch the ~ Fabric conditioner and similar Warning and safety instructions ~ Only use dyes specified by the manufacturer as being suitable for use in a domestic washing machine. Always observe the manufacturer's instructions carefully.

~ Colour run and dye removers contain sulphur compounds which can cause damage such as corrosion. Do not use these products in this machine. etc. are removed from laundry before the drying programme. These dispensers can melt during the drying programme and cause damage to the machine and the laundry. Do not use liquid dispenser balls or similar if you are planning to wash and then dry in one continuous sequence. ~ Take care, the metal cap is hot after drying. Open the door wide after the drying cycle. Do not touch the metal cap located on the inside of the door glass.



[You're reading an excerpt. Click here to read official MIELE WT 2780 user guide](http://yourpdfguides.com/dref/3021701)
<http://yourpdfguides.com/dref/3021701>

It will still be hot and could cause a burn.

Accessories ~ Make sure that any dispensing balls ~ Accessory parts may only be fitted when expressly approved by Miele. If other parts are used, guarantee, performance and product liability claims will be invalidated. ~ Textiles which have been pre-treated in solvent based cleaning agents must be thoroughly rinsed in clean water before being washed in the washer-dryer. ~ Never use solvent based cleaning agents, e.g.

those containing benzene, in this machine, as this may result in damage to component parts and create toxic fumes. Such agents also pose a fire and explosion hazard. Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions. 10 Guide to the machine Control panel a Start/Stop button For starting the programme selected and cancelling a programme once it has started. b Display with X, OK and Y buttons See the

following page for more information.

c + button For selecting delay start. d PC / Optical interface This is used by Miele service technicians during servicing work for testing purposes. e Load % / Detergent % button For displaying the load size or the recommended amount of detergent, and for calibrating the load size sensor to zero. f Extra option buttons g Programme selector For selecting washing and drying programmes. h Washing/Drying button for selecting: Washing Drying Washing and Drying. i K button For switching the washer-dryer on and off. To save energy, the machine will switch itself off automatically 15 minutes after the end of the programme/anti-crease phase or after being switched on if no other selection is made. j Door button Opens the machine door. 11 Guide to the machine Display Use This washer-dryer can be used: to wash separately Maximum load (depending on programme) 5.5 kg; to dry separately Maximum load (depending on programme) 3.

0 kg; The display is operated using the X, OK and Y buttons. The value or option currently selected will appear highlighted. Press button X to decrease a value in the display or to scroll down to the next option. Press button Y to increase a value in the display or to scroll up to the next option. Press the OK button to confirm the value or option highlighted in the display. With the programme selector at the Further programmes / Settings position, you can change display settings (see "Settings menu") and select the additional programmes (see "Programme chart"). The display is also used for selecting the wash temperature, spin speed, soak duration, delay start, safety lock and to cancel a programme. or to wash and dry in a continuous sequence Maximum load (depending on programme) 3.0 kg; 12 Before using for the first time Setting the language Before using the machine for the first time ensure that it is correctly installed and connected. Also check that the drain filter is securely tightened to prevent the risk of water leakage during use.

See "Installation and connection". Language deutsch english ; , This washer-dryer has undergone a complete functional test at the factory and there will be some residual water in the drum from this process. The washer-dryer has a sensor which measures the amount of laundry in the drum. This determines the amount of detergent required. To allow the load size indicator to function correctly, you must first run a wash programme without any laundry and without detergent.

^ Open the stopcock. ^ Press the K button. If the machine is being switched on for the first time, the Miele Willkommen welcome screen will appear. The welcome screen will not appear again once a programme lasting longer than 1 hour has been completed. After a few seconds the display will change to show the screen for selecting your language.

^ Use the X and Y buttons to select the language you want and confirm your selection by pressing the OK button. Setting the time of day The display for setting the time will then appear. Time 12:00 ^ Set the hour with the X and Y buttons and confirm your setting by pressing the OK button. Then do the same to set the minutes. After you have confirmed the minute setting, the display will change to show the reminder to remove the transport bars. Reminder to remove transport bars ,To avoid the risk of damage, the transport bars must be removed before the washer-dryer is used for the first time. See "Installation and connection" for instructions on how to do this. ^ After removing the transport bars (if this has not already been done by your fitter) press the OK button. 13 Before using for the first time Running your first programme Your washer-dryer is now ready for the first programme to be run. ^ Turn the programme selector to Cottons.

^ Press the Start/Stop button. ^ At the end of the programme switch the machine off. After running the first programme, the load sensor has to be calibrated to zero (as you would with bathroom scales). Calibrating the load size sensor to zero ^ Switch the machine on. ^ Open the drum door. ^ Turn the programme selector to Cottons. ^ Press and hold the Load % / Detergent % button in until the following message appears in the display: Zero setting OK ^ Switch the machine off. The machine is now ready for use. 14 Washing and drying environmentally and economically Energy and water consumption Water consumption and energy usage are determined by the size of the load. To make the most out of your machine, load the maximum amount for the programme you are using.

Use the Automatic plus and Express 20 programmes for small loads. When smaller amounts of laundry are washed using the Cottons programmes, the automatic load recognition system will reduce the amount of water, time and energy used. This may mean that the time left shown in the display is adjusted during the course of the wash programme. Using the Cottons 60°C programme instead of the Cottons 95°C programme will give energy savings of between 35% and 45%. This is sufficient for most levels of soiling.

For stubborn or old soiling use the Soak extra option. Detergent Do not exceed the amounts of detergent recommended by the manufacturer on the packaging. Reduce the amount of detergent for smaller loads. Use the Load % / Detergent % button. Choosing the correct extra option (Pre-wash, Soak, Short) Select: A wash programme together with the Short extra option for light to normal soiling where there are no obvious marks.

A wash programme without any extra options for normal to heavy soiling. A wash programme together with the Soak extra option for very heavily soiled laundry. The Pre-wash extra option for laundry with large amounts of dirt (e.g. dust, sand). When drying straight after washing Select a high spin speed for the wash programme, as well as for the Thermospin to save time and energy. 15 WASHING Short instructions The headings numbered A, B, C, .



[You're reading an excerpt. Click here to read official MIELE WT](http://yourpdfguides.com/dref/3021701)

[2780 user guide](http://yourpdfguides.com/dref/3021701)

<http://yourpdfguides.com/dref/3021701>

. . show the operating sequence and can be used as brief instructions.

,Do not use solvent-based cleaning agents in this machine. Separate washing A Sort the laundry ^ Sort the laundry by colour and by care label. Most garments have a textile care label in the collar or side seam. Curtains: Remove lead weights first or place in a laundry bag. Underwiring and collar stiffeners: Any loose wiring in bras, shirt collar stiffeners, etc. should be removed or sewn in. Close any zips, fasten hooks and eyes etc before washing. Wash light and dark coloured items separately. ^ Empty all pockets. ,Foreign objects (e.g. nails, coins, paper clips, etc.) can cause damage to textiles and to components in the machine. ^ Badly soiled areas, stains etc. should be cleaned as soon as possible, preferably whilst still fresh.

Spillages should be carefully dabbed off using a soft, colourfast cloth. Do not rub! Badly soiled areas can be pre-treated with liquid detergent, stain removers etc. first, following the manufacturer's instructions. You can also use the "Stains" extra option. With particularly stubborn stains ask your dry cleaner for advice.

Fasten duvet covers, pillow cases etc. to prevent small items from being rolled up inside them. Do not wash items in this machine which are specified by the manufacturer as not washable on the care label. 16 WASHING B Switch the machine on The interior drum lighting will come on. The drum lighting will go out automatically after five minutes. Press the Door button to switch the drum lighting back on again. C Select a programme confirm your selection by pressing the OK button. ^ Press the Washing/Drying button repeatedly until only the Washing indicator light is lit up. The Drying indicator light must not be lit up as well as this would mean that the washing programme would be followed immediately by the relevant drying programme. Cottons 60°C 1600 rpm Duration: 1:49 h ^ Select the programme you want.

The programme selected will appear in the display. Cottons 60°C 1600 rpm ^ Use the X or Y button to alter the temperature. Press the OK button to confirm the temperature selected and move on to the spin speed option. Cottons 40°C 1600 rpm Duration: 2:04 h Duration: 1:49 h ^ Use the X or Y button to alter the spin speed or to select No spin (No .). Further programmes: Turn the programme selector to Further programmes/Settings to display a list of other programmes that the machine has to offer. Further programmes Settings ! Dark garments ; , ^ Use the X or Y button to highlight the programme you wish to select and 17 WASHING D Select Extra option(s) The Low temperature option is only available for a drying programme. E Load the drum ^ Press the Door button to open the drum door. The load size indicator display will appear. Load ^ Press the appropriate button to select Short or Water plus.

The relevant indicator light will come on. ^ Then select any Further extras or the Stains option: Example: Further extras 8 Extra quiet 8 Extra rinse 8 < 25% The display shows the amount of laundry loaded in the drum as a % (in 25% steps) of the maximum load permissible for the programme selected. ^ Unfold the laundry and load loosely into the drum. Mixing both large and small items gives better wash results and also helps distribute the load evenly during spinning. The most efficient use of energy and water is achieved when a full load is washed.

However, do not overload as this causes creases and reduces cleaning efficiency. Make sure that no items are caught between the drum door and seal. ^ Shut the door with a gentle swing. ; , ^ Use the X or Y button to highlight the Extra you wish to select and confirm your selection by pressing the OK button. A tick 9 will appear to show which Extra has been selected.

If you wish to deselect the Extra with a tick against it press the OK button again. Press the Further extras button again to come out of the Extras menu. You can only select extra options which are compatible with the programme being used. If the Extras or Stains option cannot be selected it is not compatible with the programme you are trying to use it with. 18 WASHING F Add detergent The detergent dispenser display will now appear. Detergent A burden to the environment. 7 100% The percentage shown relates to the amount of detergent recommended by the manufacturer on the packaging. 40% Add slightly less than half the recommended amount . . .

Add half the recommended amount . . . Add slightly more than half the recommended amount . . . Add three quarters of the recommended amount . . . Add the recommended amount 50% ^ Pull out the detergent drawer and add detergent to the compartments as follows: i = Detergent for the pre-wash (1/3 of the total amount recommended).

j = Detergent for the main wash including Soak, if selected \$ = Fabric conditioner or liquid starch 60% 75% 100% You also need take the level of soiling and water hardness into account. Too little detergent results in: Laundry not getting properly clean and with time it may become grey and hard to the touch. Greasy particles clinging to laundry. Limescale deposits on the heater elements. Too much detergent results in: Excessive foam which causes a low level of agitation and poor wash, rinse and spin results.

High water consumption (an additional rinse cycle will automatically switch in). ^ Close the detergent drawer. See "Detergent" for further information. 19 WASHING G Select Delay start If required please refer to "Delay start" for more information. H Start the programme ^ Press the flashing Start/Stop button. The estimated programme duration will start counting down in one minute steps. During the first few minutes the machine measures how much water is being absorbed by the laundry. The programme duration may be longer or shorter depending on this absorbency rate. The programme sequence is also shown in the display. The washer-dryer shows you when each section of the programme is reached. The drum lighting switches off once the programme has started. I

Remove the laundry when the programme has finished The anti-crease phase starts as soon as the programme finishes. The machine will switch off automatically 15 minutes after the end of the anti-crease phase. You will need to press the K button to switch it back on again. ^ Turn the programme selector to the Stop position.

^ Open the drum door and remove the laundry. Check that all items have been removed from the drum. Items left in the drum could discolour other items in the next wash or become discoloured themselves. Important: Always remove the laundry before switching the machine off. This is important to ensure that the load size indicator works correctly. ^ Switch the machine off using the K button. See "After each washing or drying programme" in "WASHING AND DRYING" for further information.



[You're reading an excerpt. Click here to read official MIELE WT](http://yourpdfguides.com/dref/3021701)

[2780 user guide](http://yourpdfguides.com/dref/3021701)

<http://yourpdfguides.com/dref/3021701>

After washing a full load If you have washed a full load of laundry and you wish to dry the laundry in the washer-dryer afterwards you will have to remove half the load. Carry out the drying procedure in two batches. 20 WASHING Extra options You can use the Extra option buttons to augment the basic wash programmes.

Short For light to normal soiling with no visible staining. The duration of the main wash is reduced. Water plus The water level in the main wash and the rinses will be increased. Stains ^ Press the Stains button. There is a choice of various types of stains for achieving the optimum wash results. With some stains, a tip about pre-treating the stain will appear in the display. You can select a maximum of three stains for a wash programme. If the Short extra option has been selected, it will be deselected automatically. Press the Stains button again to come out of the Stains sub-menu. Further extras ^ Press the Further extras button.

Select the Further extras you want. Press the Further extras button again to come out of the Extras menu. Extra quiet If using your machine during quiet periods, you can reduce the noise levels even more. The buzzer will not sound. If the Extra quiet extra option is selected, the machine will activate the Rinse hold extra option and not spin. The programme duration is longer. To deactivate Rinse hold ^ Press the Further extras button and use the X or Y button to select Rinse hold. To deactivate Rinse hold press the OK button. The following will appear in the display. : Delay start can be used to delay the spin Use Delay start to begin the final spin at a convenient time.

21 WASHING Extra rinse This extra option introduces an extra rinse. Pre-wash For laundry with large amounts of dirt (e.g. dust, sand). Soak For heavily soiled items with protein stains. A length of time of between 30 minutes and 6 hours can be chosen, in 30 minute periods, for the "Soak" process. Soak duration Adding or removing laundry after a programme has started ^ Press the Door button to open the drum door. ^ Add or remove items. ^ Close the drum door. The programme will continue automatically.

Please note: Once a programme has started the machine cannot recognise any adjustment to the load. For this reason, if laundry is added or removed after the start of a programme, the machine will always complete the programme cycle assuming a full load. This can alter the programme running time shown in the display. The door cannot be opened, if: the suds temperature is above 55°C. the water is above a certain level. the programme has reached the Final spin stage. the safety lock has been activated. 0:30 h:min (0:00 - 6:00 h) ^ Use the X or Y button to highlight the Soak duration you wish to use and confirm your selection by pressing the OK button. To delete the soak duration ^ Press the Further extras button and use the X or Y button to select Soak. To deactivate Soak press the OK button.

Rinse hold The laundry will not be spun and will remain suspended in the final rinse water. This reduces creasing if the laundry is not going to be removed from the drum immediately after the end of the programme. 22 WASHING Final spin speed Programme Cottons Minimum iron Denim Woollens Express 20 Shirts Automatic plus Dark garments Delicates Sportswear Trainers Outerwear Proofing Soft toys Hygiene First wash Silks Pillows Curtains Separate rinse Starch Drain / Spin rpm 1600 1200 900 1200 1600 600 1200 1200 600 1200 1000 800 1000 900 1600 1200 600 1200 600 1600 1600 To omit the final spin (Rinse hold) ^ Select the Rinse hold Extra. To start the final spin: The machine will display the previously set spin speed. You can change this to a different spin speed if you wish. Start the final spin by pressing the Start/Stop button. To end the programme: Press the Door button. The water will drain away. Press the Door button again to open the door. To omit the spin between rinses and the final spin ^ Select the No u option.

The laundry is not spun after the final rinse. The water will drain away and the machine will go straight into the anti-crease stage. With some programmes an additional rinse is introduced if this setting is selected. You can reduce the final spin speed. However, you cannot select a final spin speed higher than that shown in the chart above. Rinse and interim spin There is a spin after the main wash and between the rinses. A reduction in the final spin speed will also reduce the interim spin speed. In some programmes, an additional rinse is introduced if a spin speed of less than 700 rpm is selected. 23 WASHING Programme chart Cottons 968E76* Suitable for cold to 95°C Max. load 5.

5 kg Cotton, linen or cotton mix fabrics, e.g. T-shirts, underwear, table linen. Extra options Short, Water plus, Stains, Extra quiet, Extra rinse, Pre-wash, Soak, Rinse hold Note for test institutes: Short programme: 3 kg load and Short extra option Minimum iron 43218E76* Suitable for cold to 60°C Max. load 3. 0 kg Synthetics and mixed fibre garments as well as easy care cottons. Extra options Short, Water plus, Stains, Extra quiet, Extra rinse, Pre-wash, Soak, Rinse hold Denim Note cold to 60°C Max. load 3.0 kg Wash denim inside out. Denim often contains excess dye and may run during the first few washes. Wash light and dark coloured items separately. cold to 40°C Max. load 2.0 kg Extra options Short, Stains, Extra quiet, Pre-wash, Soak, Rinse hold Woollens / ac* Suitable for Machine and hand-washable wool or wool blend garments. If the care label does not specify a temperature, wash using the cold setting. cold to 40°C Max. load 3.0 kg Extra options Rinse hold Express 20 76* Suitable for Extras Shirts Note Small loads of lightly soiled cotton garments Water plus, Extra quiet, Extra rinse, Rinse hold; the Short option is activated automatically. cold to 60°C Max. load 1.

5 kg Pre-treat collars and cuffs if necessary. Wash silk blouses and shirts in the Silks programme. Extra options Short, Water plus, Stains, Extra quiet, Extra rinse, Pre-wash, Soak, Rinse hold * Please note that the "buckets" represent garment care label symbols. See "Garment care label symbols". 24 WASHING Automatic plus 7621* Suitable for Note cold to 40°C Max. load 4.5 kg Mixed loads of garments suitable for the Cottons and Minimum iron programmes. Sort according to colour. The wash parameters are adjusted automatically in this programme to ensure the best possible care and wash results for each item. cold to 40°C Max.

load 3.0 kg Extra options Stains, Extra quiet, Rinse hold Dark garments Suitable for Note Wash inside out. cold to 60°C Max. load 1.5 kg Dark garments made from cotton or mixed fibres.

Extra options Short, Water plus, Stains, Extra quiet, Pre-wash, Soak, Rinse hold Delicates 4321ac* Suitable for Note Sportswear Suitable for Note Delicate garments made of synthetic fibres, mixed fibres, rayon and easy care cottons.



[You're reading an excerpt. Click here to read official MIELE WT](#)

[2780 user guide](#)

<http://yourpdfguides.com/dref/3021701>

Select No u for items which crease easily. cold to 60°C Max. load 2.0 kg Extra options Short, Stains, Extra quiet, Pre-wash, Soak, Rinse hold Sportswear such as singlets and leggings as well as microfibre and fleece garments.

Do not use fabric conditioner. Please observe the instructions on the wash care label. Extra options Short, Water plus, Stains, Extra quiet, Extra rinse, Pre-wash, Soak, Rinse hold Trainers Suitable for Note cold to 40°C Trainers (do not use for leather shoes) Observe the manufacturer's care label. Remove coarse soiling with a brush before washing. Do not use fabric conditioner. A pre-wash without detergent is carried out automatically to remove dust. Max. 2 pairs of shoes Extra options Rinse hold; pre-wash is activated automatically. * Please note that the "buckets" represent garment care label symbols. See "Garment care label symbols".

25 WASHING Outerwear Suitable for Note cold to 40°C Max. load 2.0 kg Outerwear made from membrane fabrics such as Gore-Tex®, SYMPATEX®, WINDSTOPPER® etc. Zip up jackets before washing. Do not use fabric conditioner. Extra options Short, Water plus, Stains, Extra quiet, Extra rinse, Pre-wash, Soak, Rinse hold Proofing Suitable for Note 40°C Max. load 2.0 kg Treating microfibre fabrics, skiwear, and table linen made from mainly synthetic fibres with a water and stain resistant finish. The items should be colour sorted and freshly laundered and spun or dried before proofing. For optimum results the proofing agent should be heat-treated by drying the garment in the drying cycle or by ironing it.

cold to 40°C Do not wash soft toys stuffed with straw. 30 to 95°C Max. load 5.5 kg Max. load 1.

0 kg Extra options Extra quiet, Rinse hold Soft toys Suitable for Note Hygiene Suitable for Soft toys, specified as machine-washable by the manufacturer. Extra options Stains, Extra quiet, Extra rinse, Rinse hold Cotton and linen fabrics which have been in direct contact with the skin, e.g. underwear, nappies, towelling, bed linen, pillow and mattress covers or where high standards of hygiene are required. If possible select a temperature above 40°C Observe instructions given on the care label.

Note Extra options Water plus, Stains, Extra quiet, Extra rinse, Pre-wash, Soak, Rinse hold First wash Suitable for Note cold to 40°C Max. load 3.0 kg New items made of cotton, towelling and polyester fabrics. Use this programme to wash any chemical residues out of new items. Extra options Water plus, Extra quiet, Extra rinse, Rinse hold 26 WASHING Silks / Note Extras Pillows cold to 30°C Place socks, tights, bras etc. in a washing bag. Water plus, Extra rinse, Rinse hold cold to 95°C 2 pillows (40x80 cm) or 1 pillow (80x80 cm) Max. load 1.0 kg Suitable for Silks and other handwashable fabrics with no wool content Suitable for Washable pillows with feather, down or synthetic fillings. Note Extras Curtains Please observe the instructions on the wash care label.

Water plus, Stains, Extra quiet, Extra rinse, Rinse hold cold to 40°C Max. load 1.0 kg Suitable for Curtains, including net curtains, specified as machine-washable by the manufacturer. Note For curtains which crease easily, reduce the spin speed or deselect the spin. Remove weights from curtains. A pre-wash without detergent is carried out automatically to remove dust. Water plus, Stains, Extra quiet, Extra rinse, Rinse hold: Pre-wash is activated automatically.

Max. load 5.5 kg Extras Separate rinse Suitable for Hand washed items which only need airing.

Note Extras Starch Suitable for Starching table cloths, serviettes and workwear Note Reduce the spin for items which crease easily. Extra quiet, Rinse hold Max. load 5.5 kg The laundry should be washed but not treated with fabric conditioner. Reduce the spin for items which crease easily.

Extra quiet, Rinse hold Max. load 5.5 kg Drain only: Select No spin u. Make sure you select the appropriate spin speed. Extras Drain / Spin Note 27 WASHING Programme sequence Main wash Water level Cottons Minimum iron Denim Woollens Express 20 Shirts Automatic plus Dark garments Delicates Sportswear Trainers Proofing Soft toys Hygiene First wash Silks Pillows 5) Curtains Starch 6) 6) Rinses Water level (e e d e d e d (e (((e e d e Rinses 2-41)2) 2-3 3 2 2-3 2 2-3 3 3 2 2 3 3 3-4 2 2 3 3 2) 3) 3) 3) Spin Interim spin L d ((e d e ((e d e e (e d e ((Outerwear L L L Separate rinse Please see next page for description of the symbols 28 WASHING d = Low water level (= Medium water level e = High water level a = Intensive rhythm b = Normal rhythm c = Gentle rhythm d = Sensitive rhythm e = Ultra sensitive rhythm f = Handwash rhythm This machine has fully electronic controls with automatic load recognition.

It takes in the right amount of water required for the programme depending on the amount of laundry and its absorbency rate. This means that programme cycles and durations can vary. The programme sequences outlined in the chart are based on the basic programme with a full load. Extra options which can be selected have not been taken into account. The display shows the stage the programme has reached. The door can be opened and laundry removed at any time during the anti-crease phase. 1) Special features in the programme sequences: Anti-crease: At the end of the programme, the drum continues to turn at intervals for up to 30 minutes to help prevent creasing. Exception: There is no anti-crease phase in the Woollens programme. A second rinse is carried out when a temperature of 60°C to 95°C has been selected. A third rinse is carried out when a temperature below 60°C is selected.

An third or fourth rinse is carried out if: 2) there is too much foam in the drum a spin speed lower than 700 rpm has been selected No u has been selected. 3) A third rinse is carried out if: No u has been selected. 4) There is a spin only after the main wash. Run-up to spin: A run-up to spin is carried out before the wash process begins to deflate the pillows. Pre-wash: A pre-wash is carried out automatically to remove dust. 5) 6) 29 WASHING Garment care label symbols Ironing Washing The figure quoted in the bucket is the maximum temperature the garment can be washed at. The number of bars under the symbol indicates the level of agitation permitted. 9 4 c / No bar under the symbol: = normal agitation One bar under the symbol: = reduced agitation Two bars under the symbol: = much reduced agitation Hand wash (if no temperature is specified use the lowest temperature or cold) Do not wash J The number of dots indicates the ironing temperature I H G Hot iron (max sole plate temp).



[You're reading an excerpt. Click here to read official MIELE WT 2780 user guide](http://yourpdfguides.com/dref/3021701)
<http://yourpdfguides.com/dref/3021701>

To achieve the usual finish, double the amount of starch should be used. New dark coloured garments should be washed and dried separately from light coloured garments to avoid the danger of colours running and discolouring other garments. Dark coloured fibres can also settle on light coloured garments and vice versa. A Sort the laundry ^ Sort the laundry according to type of fibre / weave and the residual moisture content. This will help achieve an even drying result.

^ Before drying check the drying symbol on the care label. q Dry at normal temperature r Dry at a low temperature (select the Low temperature extra option) s Do not tumble dry If the care label does not have a drying symbol on it, the item should only be dried in a programme named as suitable for it. 34 DRYING B Switch the machine on C Select a programme The Washing indicator light must not be lit as well as this would mean that the relevant washing programme would begin before the drying process. Cottons Normal 1600 rpm Duration: 1:28 h ^ Select the drying programme you want. The programme selected will appear in the display. Cottons 60°C 1600 rpm ^ Use the X or Y button to alter the drying level. Press the OK button to confirm the drying level selected and move on to the thermospin speed option. Cottons Normal 1600 rpm Duration: 1:28 h Duration: 1:49 h ^ Use the X or Y button to alter the spin speed. The thermospin is not carried out if a drying time is selected. ^ Select the Low temperature extra option if required.

@@^ Select Delay start, if required. Further programmes: Turn the programme selector to Further programmes/Settings to display a list of other programmes that the machine has to offer. Further programmes Settings ! Dark garments ; , ^ Use the X or Y button to highlight the programme you wish to select and confirm your selection by pressing the OK button. ^ Press the Washing/Drying button repeatedly until only the Drying indicator light is lit up. 35 DRYING D Load the drum ^ Open the drum door.

^ Load the laundry loosely into the drum. See the drying programme chart for maximum loads. Overloading can cause unnecessary wear and tear to the laundry and give a disappointing drying result. E Close the drum door Make sure that no garments are caught between the drum door and seal. will count down by the minute in the display.

The programme sequence and the drying level reached will also be shown in the display. G Remove the laundry when the programme has finished The anti-crease phase starts as soon as the programme finishes. The machine will switch off automatically 15 minutes after the end of the anti-crease phase. You will need to press the K button to switch it back on again. ^ Turn the programme selector to the Stop position. ^ Open the drum door and remove the laundry. Check that all items have been removed from the drum. If items are left in the dryer, they could be damaged by overdrying when the dryer is next used. Make sure you have removed any detergent dispensing aids, e.g.

plastic dispenser balls, before drying. These dispensers can melt during the drying programme and cause damage to the machine and the laundry. The stopcock must be open even if you are only using the machine for drying. F Start the programme ^ Press the flashing Start/Stop button. The estimated programme duration will appear in the display. The electronics continually assess the residual moisture content of the laundry and adjust the estimated time remaining for a more accurate reading. Because of this, the time displayed can alter during the course of a programme. The time left 36 Important: Always remove the laundry before switching the machine off. This is important to ensure that the load size indicator works correctly. ^ Switch the machine off. See "After each washing or drying programme" in "WASHING AND DRYING" for further information. DRYING Extras Low temperature The temperature is reduced during the drying programme. For all delicate or minimum iron fabrics with the r symbol on the care label (e.g. acrylic garments).

@@Because the temperature is reduced when the Low temperature extra option has been selected, the programme duration is longer. The Low temperature extra option is only available for a drying programme. @@The thermospin is not carried out if a drying time is selected. @@@@^ Close the drum door. The programme will continue automatically.

@@@@ the programme has reached the Thermospin stage. @@@@Low temperature, thermospin Max. @@table linen, bed linen, starched laundry etc. @@Low temperature, thermospin Max. @@tops, blouses, skirts and table cloths. @@jeans, jackets, skirts, shirts. Extras Woollens 3 minutes Suitable for Wool and wool blend fabrics. Note This programme only fluffs up woollen garments. They are not dried completely by this programme. @@Thermospin Max.

load 1.0 kg* Low temperature, thermospin Max. @@@@Max. load 3.0 kg* 1) 2) 1) Max. @@Thermospin Max. @@Extras Freshen up Thermospin Max.

@@@@ Select the Water plus extra for very absorbent fabrics. Normal: For garments that are required immediately. @@@@load 3.0 kg* Suitable for Cotton and linen fabrics. Minimum iron items made of mixed fibres, cotton or synthetic fabrics @@ They are not completely dried in this programme to make them easier to iron. Remove garments as soon as the programme finishes. Select the Water plus extra for very absorbent fabrics. Max. load 3.0 kg* 2) Warm air Timed drying Note Suitable for For drying or airing individual items. Do not select the longest drying time to start with. Check the items as you are drying them to find the optimum time. Further programmes Dark garments Normal+, Normal, Hand ironr, Smoothing+ , Timed drying Suitable for Dark garments made from cotton or mixed fibres.

Extras Delicates Normal, Hand iron r, Timed drying 2) 1) Max. load 3.0 kg* 2) Low temperature, thermospin Max. load 1.0 kg* Suitable for For delicate fabrics made of synthetic fibres, mixed fibres, easy care cotton shirts and blouses. * Weight of dry laundry 40 DRYING Sportswear Normal+, Normal, Hand ironr, Smoothing+ , Timed drying Suitable for Sportswear that is suitable for tumble drying Extras Trainers Timed drying Note 2) 1) Max. load 2.0 kg* 2) Thermospin Max. 2 pairs of shoes Suitable for Trainers, specified as machine-washable by the manufacturer. The drum does not rotate during this programme.

Insoles should be removed and placed in the drum with the shoes. Max. load 1.5 kg* 1) 2) Outerwear Normal+, Normal, Hand ironr, Smoothing+ , Timed drying Extras Proofing Normal Thermospin Suitable for Outerwear which is suitable for drying in a tumble dryer. Max. load 1.5 kg* Suitable for Thermally fixing textiles which are suitable for drying in a tumble dryer and have been treated with a proofing agent. Soft toys Timed drying Note Hygiene Normal Suitable for Cottons and linen fabrics which are in direct contact with the skin, e.



[You're reading an excerpt. Click here to read official MIELE WT](http://yourpdfguides.com/dref/3021701)

[2780 user guide](http://yourpdfguides.com/dref/3021701)

<http://yourpdfguides.com/dref/3021701>

g. underwear, nappies, towelling, bed linen, pillow and mattress covers.

Important Extras Because the temperature is held for longer the laundry will feel drier. Thermospin 2) Max. load 1.0 kg Suitable for Soft toys that can tolerate being dried in a tumble dryer. Observe the manufacturer's care label.*

Max. load 3.0 kg * Weight of dry laundry 41 DRYING First wash Normal+, Normal, Hand ironr, Smoothing+ , Timed drying Extras Silks 5 minutes Suitable for Silks (suitable for drying in a tumble dryer), e.g. blouses and shirts.*

Note Smooths out creasing. Garments are not totally dried in this programme. Remove garments immediately at the end of the programme. 2 pillows (40x80 cm) or 1 pillow (80x80 cm) 2) 1) Max. load 3.0 kg 2) Suitable for New items made of cotton, towelling and polyester fabrics. Thermospin Max. load 1.0 kg* Pillows Timed drying Suitable for Pillows suitable for drying in a tumble dryer, with feather, down or synthetic fillings. Note Please observe the instructions on the care label.*

Pillows can still feel damp after being dried. You can use this programme several times until the pillow feels dry. Max. load 3.0 kg Cool air Timed drying2) Suitable for Any item which only needs airing. * Weight of dry laundry Smoothing+: Garments are dampened before the programme starts to help reduce creasing. Textiles are not completely dried in this programme to make them easier to iron. The drying temperature is determined by the programme being used. Timed drying: Timed dring is particularly suitable for small loads and for drying individual items. Garments are dried in warm air (times of between 15 minutes and 2 hours can be selected).*

The drying temperature is determined by the programme being used. Do not select the longest drying time to start with. Check the items as you are drying them to find the optimum time. 2) 1) 42 WASHING AND DRYING Washing and drying in a continuous sequence Where the amount of laundry to be washed and dried in one programme does not exceed the maximum weight permitted for the drying programme, washing and drying in one continuous sequence is recommended. To avoid the laundry forming a ring against the drum at the end of the washing programme, the spin speed is limited to a maximum of 1200 rpm when washing and drying in a continuous sequence.

^ Select the drying level or drying time you require. ^ Now select extra options, if required. It is very important to read both the "Washing" and "Drying" sections before proceeding. A Sort the laundry into colours and fabric types B Switch the machine on C Select a programme ^ Turn the programme selector to the required programme. ^ Press the Washing/Drying button repeatedly until both the Washing and Drying indicator lights are lit up.

Cottons 60°C 1600 rpm The spin speed displayed for washing will be adopted for the thermospin. If you select Extra quiet, spinning will not exceed 900 rpm.

@@^ Select Delay start, if required. Normal 2:52 h ^ Select the temperature, spin speed and drying level and confirm with OK. 43 WASHING AND DRYING D Load the drum ^ Open the drum door and load the laundry loosely in the drum. Follow the load size indicator and do not overload. After each washing or drying programme ^ Open the drum door fully. ,Caution, the metal cap located on the inside of the door glass is very hot after drying. Do not touch it. It will be hot.

Danger of burning! Do not use detergent dispensing aids, e.g. plastic dispenser balls, for washing followed immediately by the drying programme. These dispensers can melt during the drying programme and cause damage to the machine and the laundry. E Close the drum door F Add detergent Follow the detergent percentage display. G Start the programme ^ Press the Start/Stop button. H Remove the laundry when the programme has finished ^ Turn the programme selector to the Stop position. ^ Open the drum door and remove the laundry. See "After each washing or drying programme" for further information. ^ Remove the laundry.

^ Check the folds in the door seal for any small articles, e.g. buttons, which might be lodged there. Remove any fluff remaining from around the door seal and porthole glass after drying. Check that all items have been removed from the drum.

Items left behind could colour run, shrink or be damaged in the next washing or drying programme. Important: Always remove the laundry before switching the machine off. This is important to ensure that the load size indicator works correctly. ^ Switch the machine off using the On/ Off button K. Close the door.

Otherwise there is the danger of objects being placed inadvertently in the drum. If these remained unnoticed and were washed in the next load, they could damage the laundry. 44 Rinse out fluff programme The fluff which occurs during drying can collect in the drum and also in the suds container. Run the Rinse out fluff programme before the machine is used again so that fluff cannot be deposited on the next load (e.g. fluff from dark garments being deposited on lighter coloured items) or cause a blockage. The Rinse out fluff programme must not be used for rinsing laundry. Make sure that there are no items of laundry in the drum before starting this programme. ^ Switch the machine on. ^ Turn the programme selector to the Rinse out fluff programme.

If there is a lot of fluff in the machine select the Water plus extra option. ^ Press the Start/Stop button. The fluff will be rinsed out after a few minutes. ^ Remove any fluff remaining from around the door seal and porthole glass. ^ Switch the machine off. The load sensor will have to be recalibrated after running the Rinse out fluff programme. See "Before using for the first time". 45 Changing the programme sequence To cancel a programme You can cancel a programme at any time after it has started. ^ Press the Start/Stop button and select Cancel programme or turn the programme selector to Stop. .

.. During washing: The suds will be pumped away and the washing programme is cancelled. ...

. During drying: The garments will be cooled down before the door can be opened. If you want to remove the laundry: ^ Press the Door button. If you want to select a different programme: ^ Switch the machine off using the K button. ^ Check that there is still detergent in the detergent drawer.

Add detergent if necessary. ^ Switch the machine back on again and select a new programme. Interrupting a programme ^ Switch the machine off using the K button. To continue with the same programme: ^ Switch the machine back on again with the K button. ,Do not switch the washer-dryer off before the end of a drying programme. If this was done and the laundry was then removed immediately it could give off a great amount of heat. Changing a programme After the start of a programme it is no longer possible to select a different programme. You will need to cancel the current programme before you can select a new one.

Altering the temperature You can alter the temperature of a washing programme up to 5 minutes after the programme has started.



[You're reading an excerpt. Click here to read official MIELE WT 2780 user guide](http://yourpdfguides.com/dref/3021701)
<http://yourpdfguides.com/dref/3021701>