



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MITSUBISHI SPACE RUNNER. You'll find the answers to all your questions on the MITSUBISHI SPACE RUNNER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MITSUBISHI SPACE RUNNER
User guide MITSUBISHI SPACE RUNNER
Operating instructions MITSUBISHI SPACE RUNNER
Instructions for use MITSUBISHI SPACE RUNNER
Instruction manual MITSUBISHI SPACE RUNNER

SPACE RUNNER SPACE WAGON

WORKSHOP MANUAL

FOREWORD

This Workshop Manual contains procedures for service mechanics, including removal, disassembly, inspection, adjustment, reassembly and installation. Use the following manuals in combination with this manual as required.

TECHNICAL INFORMATION MANUAL PYDE9802
WORKSHOP MANUAL ENGINE GROUP PWEE□□□□ (Looseleaf edition)
ELECTRICAL WIRING BODY REPAIR MANUAL PHDE9802 PBDE9802
PARTS CATALOGUE SPACE RUNNER B60B509A□
SPACE WAGON B60B509A□

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.



"GDI" is the trade mark which Mitsubishi Motors Corporation holds.

© Mitsubishi Motors Corporation Aug. 1988

0010920812

General	00
Engine	11
Engine Lubrication	12
Fuel	13
Engine Cooling	14
Intake and Exhaust	15
Engine Electrical	16
Engine and Emission Control	17
Clutch	21
Manual Transmission	22
Automatic Transmission	23
Propeller Shaft	25
Front Axle	26
Rear Axle	27
Wheel and Tyre	31
Power Plant Mount	32
Front Suspension	33
Rear Suspension	34
Service Brakes	35
Parking Brakes	36
Steering	37
Body	42
Exterior	51
Interior and Supplemental Restraint System (SRS)	52
Chassis Electrical	54
Heater, Air Conditioner and Ventilation	55



[You're reading an excerpt. Click here to read official MITSUBISHI SPACE RUNNER user guide](http://yourpdfguides.com/dref/3007559)
<http://yourpdfguides.com/dref/3007559>

Manual abstract:

.....
.....
.....
... Engine

.....
.....
... Engine Lubrication ..
.....

. Fuel

.....
... Intake and Exhaust ..
.....
..... Engine Electrical

.....
Engine and Emission Control Clutch .
.....
.....

..... Manual Transmission .
.....
.....

Automatic Transmission Propeller Shaft ..

.....
.....
Front Axle

..... Rear Axle ...
.....

..... Wheel and Tyre .

.....
.....
. Power Plant Mount
.....

Front Suspension

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. @@. . . .

.....
.....
Service Brakes

.. Parking Brakes ...
.....

.... Steering

..... Body ..

.....
.....
.....
..... Exterior

.....
.....
.... Interior and Supplemental Restraint System (SRS) .
..... Chassis Electrical ..

.....
. @1998 Heater, Air Conditioner and Ventilation
.....
.....

... WARNING! @@@@SRS-ECU, air bag module, clock spring and side impact sensor: 93_C or more Seat belt with pre-tensioner: 90_C or more (3)
Service or maintenance of any SRS component and seat belt with pre-tensioner or SRS-related component must be performed only at an authorized
MITSUBISHI dealer. @@.



[You're reading an excerpt. Click here to read official MITSUBISHI
SPACE RUNNER user guide
http://yourpdfguides.com/dref/3007559](http://yourpdfguides.com/dref/3007559)