




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA CD930. You'll find the answers to all your questions on the MOTOROLA CD930 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MOTOROLA CD930
User guide MOTOROLA CD930
Operating instructions MOTOROLA CD930
Instructions for use MOTOROLA CD930
Instruction manual MOTOROLA CD930

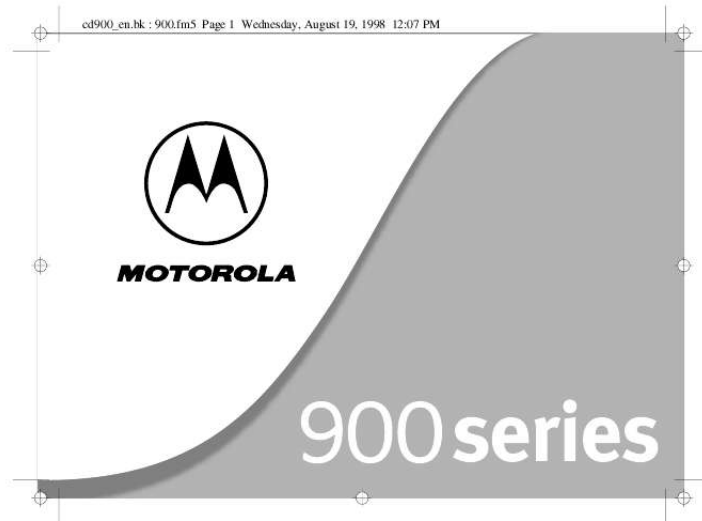

[You're reading an excerpt. Click here to read official MOTOROLA CD930 user guide](http://yourpdfguides.com/dref/2310959)
<http://yourpdfguides.com/dref/2310959>

Manual abstract:

.. C Press to reject call, setting, option,... E Press to enter the Quick Access features. @@@@2 Press O to call the number. One-Touch Dialling Press and hold the appropriate digit key 1 to 9. Making a Call Enter CO. Receiving a Call Press O or open the flip (only on models with flip when the Key Answer Only' feature is set to Off).

Storing Numbers in the Phone Book Press E2 to store a number on the SIM card. Recalling a Number from the Phone Book Press the Smart button (=) and then use the volume keys to scroll to the stored number, or press the appropriate digit key to skip to a particular letter. To make the call, either hold down = for 1.5 seconds or press O. Ending a Call Press O or close the flip (models with flip only).

Making an Emergency Call Enter 1120. The call will be directed to a central emergency operator. Dialling Phone Book Numbers Enter G>O Stopping a Call Alert Press either of the volume buttons when the phone is ringing or vibrating. This will stop the alert but not answer the call. Quick Access Features Press E followed by the appropriate key, or press E, scroll to the feature and press O to select.

Adjust Ringer Volume Press E followed by the appropriate volume button to either increase or decrease the ringer volume. English cd900_en.bk : intro.fm5 Page 1 Wednesday, August 19, 1998 12:07 PM Introduction Welcome to the 900 Series Congratulations on your purchase of a 900 Series phone from Motorola, the world leader in cellular technology. The 900 Series phones are packed with features that put you in control and give you unrivalled power, whilst remaining discrete. Control · Customisable Quick Access Menu E - Place nine of your most frequently used features in your own personal menu so that they can be accessed with just two key presses. Icons make each feature easy to identify. · VoiceNotes™ feature J - Allows you to record a number of personal voice messages or to record part of a phone call useful when you haven't got pen and paper to hand for taking down directions or a message. Discretion · VibraCall™ L - In locations where you don't want your phone to ring, or which are too noisy to hear your phone ring, your phone can vibrate to alert you of a call. · Wearable Holster - Wear your phone in a stylish holster on your belt.

It is small enough and light enough to keep with you almost anywhere. · Stop Call Alert - Press either of the volume buttons when the phone is ringing or vibrating. This will stop the alert but not answer the call. Power · Superb battery performance G - Each phone is capable of several hours conversation or several days standby, but is still small and light. · Dual Band - 'cd' versions of the 900 Series include the powerful dual band feature which means that they can use both 900 and 1800 MHz bands for greater call success and allow wider roaming opportunities. Personality™ This cellular telephone incorporates Personality™. Unique to Motorola, Personality™ removes the complexity of cellular communications by guiding you through the features and presenting you with simple choices every step of the way. Personality™ also allows you to personalise the way you use your phone - for example, different ringer tones, a phone book and network selection preferences - all presented with clarity and simplicity. In this manual, each of the Personality™ features is identified with an j symbol to indicate that it is customisable to meet your requirements. ! Before you use your phone, please see the 'Your Battery' section for important information on charging a new battery.

Introduction 1 English cd900_en.bk : intro.fm5 Page 2 Wednesday, August 19, 1998 12:07 PM Understanding this Manual Many of your phone options are accessed by a simple menu system. A full description of the menus and how to move around them is covered in the next section Menu Navigation. When the manual describes the use of each menu item, it will be assumed that you are familiar with the menu system.

Entering Information When you are requested to enter information, such as the number of the phone you wish to call, this is represented in bold type. For example: C - enter the required telephone number. A - enter your Personal Identification Number. B - enter your unlock code. G - enter the Phone Book location number.

Key Presses Key presses are represented in this manual using symbols so that you may locate and use the required sequence quickly. A sequence of key presses may be shown as follows: MOC This means that you should press the M key followed by the O key and then the C key, in sequence, not simultaneously. Note that on models without a flip, the menu key is a rocker key and can be pressed on either the right or left. Therefore in this manual the following notation is used: Key Shown On Flip models press... Either Menu key Left Menu key Right Menu key On Flipless models press... Either side of Menu key Left side of Menu key Right side of Menu key Prompts and Messages Your phone responds to key presses by displaying either easy to understand prompts that guide you to the next action, or simple messages confirming that your action is complete.

Prompts and messages are represented in this manual in LCD style, for example: Enter PIN or Completed. Other Symbols You will find the following symbols used throughout this manual: AA Note contains additional information which is relevant to the feature/item. ! A Caution contains important additional information which is relevant to the efficient and/or safe usage of your phone. j This symbol indicates that the feature is a Personality™ feature that can be customised to meet your requirements. i This symbol indicates a short key sequence for the feature. M () English 2 Introduction cd900_en.bk : intro.fm5 Page 3 Wednesday, August 19, 1998 12:07 PM Menu Navigation A large number of your phone's options are accessed by using menus which use a common approach for selection, change and cancellation. Please read this section carefully before attempting to access a menu option. When you understand the common approach to menu navigation and how the menus are shown on the page, you will be able to access and change options with ease.

Menus and Sub-menus A menu is a simple list of options. Some of these options provide access to a further list of options called a sub-menu. When navigating through the menus you may find it is helpful to think in terms of menu levels - the 'parent' menu being on one level and its sub-menus being on a lower level.

Entering the Menus Two different keys (three on flip phones) are used to access the menus: M E enters the Options menu whilst in standby mode; enters the In-call menu during a call. enters the Quick Access menu.

Moving To and Selecting a Menu Option To move from one option to another on the same level, use the scroll keys: the) key scrolls forwards and the (key scrolls backwards.



[You're reading an excerpt. Click here to read official MOTOROLA CD930 user guide](http://yourpdfguides.com/dref/2310959)
<http://yourpdfguides.com/dref/2310959>

When you find the option you want, press the O key to select it. Depending on the option you select, one of three things will happen: · either a brief message will be displayed confirming an action, for example Completed. · or a prompt will be displayed requesting you to enter information, for example Enter PIN or Enter Name. · or the first option of a sub-menu will be displayed.

You can select this option using the O key or browse through the other options using the scroll keys. To leave an option or sub-menu, press the C key. This will take you back to the parent menu item. Once entered, the menu uses the M, <, >, O and C keys in a common manner to access, select and change individual options. Leaving the Menus To leave any of the menus, you can either press and hold the C key or repeatedly press the C key. Both of these actions will return your phone to the standby mode. i Alternatively, a quicker way to leave the menus is to press EC. Menu Options with Security Codes Some options are protected from misuse by requiring you to enter one of the security codes. To use these options, you must enter the requested code before proceeding.
Introduction 3 English cd900_en.

bk : intro.fm5 Page 4 Wednesday, August 19, 1998 12:07 PM Menu Navigation - A Working Example The following steps will take you through how to switch the Extended Menu option on: 1 When the phone is in the standby mode, press the M key. This will access the Options menu and Phone Book will be displayed.# 2 Press the) key three times to go to the Phone Setup menu item. 3 Press the O key to select the sub-menu. 4 Press the) key repeatedly until the Extended Menu sub-menu item is shown in the display. 5 Press the O key to select this item. You can now select between On or Off, the current setting will be shown with a z character. If the z character is next to Off, press) and then O to switch on the Extended Menus. If the z character is next to On, press C to leave the setting as it is.

If your service provider has added their own menu, the Phone Book menu will not be the first item in the Options menu. Availability depends on the type and settings of the SIM card, and/or your subscription to these features. English 4 Introduction cd900_en.bk : intro.fm5 Page 5 Wednesday, August 19, 1998 12:07 PM j Short, Extended and Personalised Menu With PersonalityTM you can personalise the menus by choosing which features you want readily available.

The features that are less frequently used can be stored out of sight. The menu diagrams in this manual show the condition of the menu settings when you first receive your phone. Some features are in the Short Menu and are shown in bold type. Other features are in the Extended Menu and appear in italics. You can change which features appear in the Short and Extended Menus, and therefore personalise the menus, to suit your requirements.

If you want to move a feature from the Short Menu to the Extended Menu (or from the Extended Menu to the Short Menu), go to the feature and then hold down the O key until a prompt appears offering the following choices: · Add the current feature to the Short Menu/Extended Menu. · Leave the current feature in the Short/Extended Menu. Select the option you want by pressing the O key. The settings for some menu features cannot be changed. Introduction 5 English cd900_en.bk : intro.fm5 Page 6 Wednesday, August 19, 1998 12:07 PM Total Customer Satisfaction At Motorola, Total Customer Satisfaction is a top priority. If you have a question, a suggestion or a concern about your Motorola Cellular Phone, Motorola wants to hear from you. Please contact the Motorola Cellular Response Centre by fax on: +44 (0) 131 458 6732, or use one of the local phone numbers in the following countries: Austria Belgium Denmark Egypt Eire Finland France Germany Greece Italy Jordan Kuwait Lebanon Luxembourg Netherlands Norway Oman Portugal Qatar 0660 7246 0800 72 370 43 43 15 56 02 3411800 01 402 6887 0800 117 036 0801 63 67 03 0180 35050 00800 441 28150 02 696 333 16 06 863750 484 2000 Ext 1177 01 744156 0800 21 99 0800 022 27 43 22 55 10 04 790925 01 318 0051 418999 Saudi Arabia South Africa Spain Sweden Switzerland Turkey UK United Arab Emirates 01 2303294 0800 11 48 49 902 100 077 08 445 1210 0800 553 109 0212 2729090 0500 55 55 55 04 32 11 66 For e-mail queries contact: mrc@ei.csg.

mot. com For Internet queries contact: <http://www.mot.com> Motorola's Warranty Your Cellular Phone is warranted by Motorola to be of satisfactory quality, fit for its purpose and comply with applicable Motorola specifications for a period of twelve (12) months from the date you bought it (verified by reference to your proof of purchase). This warranty does not apply if the phone has: 1 been mishandled, misused, wilfully da FCC regulations. Phone Operation Normal Position: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder. Tips on Efficient Operation: For your phone to operate most efficiently: · Extend your antenna fully. · Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Safety 9 English cd900_en.bk : safety.fm5 Page 10 Wednesday, August 19, 1998 12:07 PM Batteries ! All batteries can cause property damage, injury or burns if a conductive material such as jewellery, keys or beaded chains touches exposed terminals. The material may complete an electrical circuit and become quite hot. To protect against such unwanted current drain, exercise care in handling any charged battery, particularly when placing it inside your pocket, purse or other container with metal objects. When the battery is detached from the phone, your batteries are packed with a protective battery cover; please use this cover for storing your batteries when not in use.

Pacemakers The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers: · Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned on. · Should not carry the phone in a breast pocket. · Should use the ear opposite the pacemaker to minimise the potential for interference.

If you have any reason to suspect that interference is taking place, turn your phone OFF immediately. Hearing Aids Some digital wireless phones may interfere with some hearing aids. In the event of such interference you may want to consult your hearing aid manufacturer to discuss alternatives. Other Medical Devices If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy.



[You're reading an excerpt. Click here to read official MOTOROLA CD930 user guide](http://yourpdfguides.com/dref/2310959)
<http://yourpdfguides.com/dref/2310959>

Your physician may be able to assist you in obtaining this information. Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy. Driving Check the laws and regulations on the use of wireless telephones in the areas where you drive. Always obey them. Also, if using your phone while driving, please: · give full attention to driving - driving safely is your first responsibility · use hands-free operation, if available · pull off the road and park before making or answering a call if driving conditions so require.

Electronic Devices Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. English 10 Safety cd900_en.bk : safety.fm5 Page 11 Wednesday, August 19, 1998 12:07 PM Vehicles RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle. Potentially Explosive Atmospheres Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked.

They include fuelling areas such as petrol stations; below decks on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine. Posted Facilities Turn your phone OFF in any facility where posted notices so require. Aircraft FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft. Blasting Areas To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "turn off twoway radio".

Obey all signs and instructions. For Vehicles Equipped with an Air Bag An air bag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If invehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result. APPROVED for connection to telecommunications systems specified in the instructions for use subject to the conditions set out in them.

S/1357/4/V/503894 Safety e 11 English cd900_en.bk : safety.fm5 Page 12 Wednesday, August 19, 1998 12:07 PM European Union Directives Conformance Statement This product is in conformance with the requirements of the applicable EU Council Directives. Declarations of Conformance with the requirements are located at: Motorola Ltd. European Cellular Subscriber Division Midpoint, Alençon Link Basingstoke, Hampshire RG21 7PL United Kingdom English 12 Safety cd900_en.bk : abtphone.fm5 Page 13 Wednesday, August 19, 1998 12:07 PM About Your Phone, Battery and SIM Card Special Keys S O C E M <> Turns the phone on and off. Accept call, setting, option. Reject call, setting, option. Enter the Quick Access menu.

Enter the Options menu and scroll backward and forward through the entries. Press both simultaneously to lock the keypad on flipless models; also use to scroll left and right. If you are using the optional headset, you can also use the Smart button to make, answer and end calls as follows: · To answer a call, press = for 1.5 seconds. · To end a call, press = for 1.5 seconds and then quickly press = again. · To make a call, enter or recall a number and then press and hold = for 1.5 seconds. Volume Buttons The Volume buttons (up - +, down - -) are on the left-hand side of your phone, above and below the Smart button. The buttons are used for adjusting the keypad, earpiece and ringer volume.

A volume meter will display the current volume setting. The meter will disappear after a short time, or if you press O or C. · To adjust the keypad and earpiece volume, press the buttons with no other features selected. · To adjust the ringer volume, first select the 'Adjust Ring Volume' option in the Phone Setup Menu and then use the buttons to set the required volume. The volume buttons can also be used to scroll through the Phone Book entries after pressing the Smart button.

If you receive a call and you do not want to answer it immediately, you can press either of the volume buttons to stop the phone from ringing or vibrating.

This will not answer the call. The Flip (if fitted) Opening the flip answers a call (when the 'Key Answer Only' feature is set to Off, the default position).

Closing the flip ends a call. The Smart Button The Smart button (=) is on the left hand side of your phone in-between the two volume keys.

Press it to quickly access all your Phone Book entries, and then either scroll through the entries using the volume buttons or press one of the alphanumeric keys to search for a specific name - for example, press 7 to search for the name Pam, or press 7 four times to search for the name Sam. If a Phone Book entry does not have a name, it will not be displayed. About Your Phone, Battery and SIM Card 13 English cd900_en.bk : abtphone.fm5 Page 14 Wednesday, August 19, 1998 12:07 PM l n Roam. Displayed when you are registered on a system other than your home system. Home Zone. Availability depends on your service provider. Short Message Service. Displayed when the phone has received a message.

The symbol will flash when your message storage area is full. Voicemail Waiting Indicator. Displayed when you have a voice message waiting. The availability of this feature depends on your service provider. Ringer On. Displayed when the call ringer is selected. If you select the No Ring or Vibrate or the Vibrate Only options this symbol will not be displayed. Icons are displayed when you are in the Quick Access menu. A scroll bar will appear on the right of the display when you are in a list/menu. The button on the scroll bar indicates where you are in the list.

Indicates that a menu item is currently selected. Real Time Clock. The real time clock can display the time in either a 12-hour or 24-hour format. The Start/Stop Record Button The Start/Stop Record button (?) is on the right hand side of your phone. Press it to start and stop recording VoiceNotes™.

Refer to Using VoiceNotes™ for more information. o p h The Display The display on your phone can show alphanumeric characters as well as useful information symbols.



[You're reading an excerpt. Click here to read official MOTOROLA CD930 user guide](http://yourpdfguides.com/dref/2310959)

<http://yourpdfguides.com/dref/2310959>

The various elements of the display are as follows: B...

K s z 12:00 ABC123 q rx k Characters are used to display messages and telephone numbers. Battery Charge Indicator. The more segments displayed, the greater the battery charge. Signal Strength. The more segments displayed in the bar graph, the better the signal strength. In Use. Displayed when a call is in progress. In addition, when you are expected to press the O key, a prompt will appear in the display, for example Entry Complete?. Low Temperature Use The liquid crystal display used in your phone will behave differently at extremely low temperatures. You may notice that the display responds slowly to key presses; this is to be expected and does not affect the phone operation in any way.

English 14 About Your Phone, Battery and SIM Card cd900_en.bk : abtphone.fm5 Page 15 Wednesday, August 19, 1998 12:07 PM Looking After Your Phone · Never leave your phone or battery in extreme temperatures (over 60°C), for example behind glass in very hot, direct sunlight. · To clean your phone, use a moistened or antistatic cloth. Do not use a dry or electrostatically charged cloth. Your Battery Charging a New Battery New batteries are supplied in a totally uncharged state. To ensure maximum battery performance, a new battery (or battery that has not been used for several months) should be charged for at least 14 hours before use. AA new battery will require several full charge/discharge cycles in order to achieve its optimum performance. The Status Indicator The status indicator on the top of the phone provides you with the following information: Incoming Call In Service No Service Roaming Alternate Red/Green Flashing Green Flashing Red Flashing Yellow AA new battery, or a battery that has not been used for several months, may cause a premature fully charged indication. Ignore this indication and let the battery charge for several more hours, remove and re-insert the battery into the charger, and charge for an additional 14 hours.

Important Battery Information ! Always treat your batteries with care. See 'Batteries', at the beginning of this manual. ! Never leave your battery in extremely high temperatures (over 60°C), for example behind glass in very hot, direct sunlight. ! Only Motorola Original Accessory batteries can be charged in the phone or the optional desktop charger. This is to protect you and your phone from the risks of incorrect charging.

ADo not use lithium ion batteries at extremely low temperatures as the maximum standby/talk time will not be available when cold. About Your Phone, Battery and SIM Card 15 English cd900_en.bk : abtphone.fm5 Page 16 Wednesday, August 19, 1998 12:07 PM To ensure that you enjoy maximum battery life and use your battery to its fullest capacity: · The battery should be at or near room temperature when charging. Removing Your Battery ! Switch off your phone before removing the battery.

Failure to do so may damage your phone memory. 1 Press the release catch on the battery compartment and lift off the cover. 2 Push the battery towards the top of the phone and lift the battery out from the bottom end. Battery Performance and Maintenance · Best battery performance will be achieved when you regularly charge and discharge batteries as instructed in this manual. · Battery performance is greatly affected by network coverage. · Set Battery Saving Mode to On (see 'Phone Setup Menu') and/or Frequency of Search to Slow or Medium (see 'Network Selection Menu'). · If left unused, a fully charged battery will discharge itself in approximately one month. · When not in use, store your battery uncharged in a cool, dark and dry place. Low Battery Warning When the battery level is low and only a few minutes of talk time remain, a warning signal (two double beeps) will sound, the border of the battery symbol will begin to flash, and Low Battery will be displayed. When the battery is completely discharged, your phone will turn off.

English 16 About Your Phone, Battery and SIM Card cd900_en.bk : abtphone.fm5 Page 17 Wednesday, August 19, 1998 12:07 PM Fitting Your Battery 1 Remove the battery compartment cover. 2 Align the connections on the battery with the connections on the phone. 3 Press the battery towards the connections and push it downwards until it clicks into place. Replace the cover. 2 Connect the travel charger to the phone. AThe connector is keyed and can only be inserted one way. Charging Your Battery Using the Travel Charger The travel charger can power the phone and charge a fitted battery. ! Ensure that the local mains voltage at your location matches that of your travel charger.

Fit a battery onto your phone. To charge your battery: 1 Attach the correct adapter plug to the travel charger. 3 Insert the travel charger plug into a suitable mains power socket. A beep-tone is heard and the battery icon flashes when charging begins. AYour phone can be either on or off during charging.

The state of charging is monitored and displayed by your phone. See 'Battery Meter Indicators' later in this section for details. About Your Phone, Battery and SIM Card 17 English cd900_en.bk : abtphone.fm5 Page 18 Wednesday, August 19, 1998 12:07 PM Desktop Charging Your Battery AThe Desktop Charger is an optional accessory that allows you to charge both the battery fitted in your phone and a spare battery at the same time.

Batteries charge in about 2 to 3 hours, depending on the battery. AIt is normal for batteries to become warm during charging. 1 Connect the travel charger to the desktop charger socket. (The connector is keyed and can only be inserted one way.) 2 Plug the travel charger into a standard mains socket. 3 Insert your phone into the desktop charger as shown. A spare battery can be charged on its own or at the same time as your phone. Insert the battery into the desktop charger as shown. AFor maximum NiMH battery charging, you should double the charge time. ACharge times will increase if you make or receive phone calls while charging.

English 18 About Your Phone, Battery and SIM Card cd900_en.bk : abtphone.fm5 Page 19 Wednesday, August 19, 1998 12:07 PM Battery Indicators Your Motorola cellular phone includes the Motorola Expert Performance (€) charging system. This enables the charging circuits in both the phone and the optional (€) desktop charger to communicate directly with the battery. Based on this communication, the charger can implement the optimum charging cycle for best performance and determine the level of charge. Your phone monitors and displays information about your battery. The following message will appear on the display, as the condition occurs: Low Battery Insert Battery Invalid Battery The battery charge is low. The battery should be recharged. No battery fitted; external power connected Battery Meter Indicators The battery meter displays different messages depending on the batteries attached, and whether or not there is an external power source.



[You're reading an excerpt. Click here to read official MOTOROLA CD930 user guide](http://yourpdfguides.com/dref/2310959)

<http://yourpdfguides.com/dref/2310959>

The battery meter is found in the Call Related Features part of the Options Menu.

Charging Battery Fast Charge Complete Invalid Battery The battery is being charged. Fast charging is complete. Battery may be defective, or may not be a Motorola original battery. This message is accompanied by a single beep. Your phone is alerting you that you do not have charging capabilities with this battery even though the battery may be able to power the phone.

The most likely reason why your charging system does not recognise the battery is that the battery you have purchased is not a Motorola original battery and therefore does not have the communications technology built into it. All Motorola original batteries include this communications technology. It is recommended that you use only Motorola original batteries, chargers and other accessories. About Your Phone, Battery and SIM Card 19 English cd900_en.bk : abtphone.

fm5 Page 20 Wednesday, August 19, 1998 12:07 PM Your SIM Card Your SIM (Subscriber Identity Module) card was supplied by your Cellular Service Provider when you bought your phone. You will not be able to make or receive calls if you do not have a SIM card inserted in your phone. ASome networks allow you to make emergency calls without a SIM card inserted. The SIM card is a 'Smart Card' that contains your phone number, service details and memory for storing Phone Book numbers and messages. You can therefore use your SIM card in someone else's GSM phone and you will be charged for the call. Like a bank or credit card, you should keep your SIM card secure. Do not bend or scratch your card and avoid exposure to static electricity or water. ! Switch off your phone before inserting or removing the SIM card. Failure to do so may damage the memory on your SIM card. 4 Insert the SIM card into the holder as shown.

The SIM card should be inserted with the notch at the top and facing towards the base of the phone. SIM Card Insertion/Removal 1 Switch off your phone by pressing and holding the S key, remove the battery cover and the battery. 2 Slide the SIM holder towards the right and lift up the left side of the holder. 3 Remove the SIM card from the holder if necessary. 5 Replace the holder and press and slide it to the left to lock it into place. 6 Replace the battery and battery cover. If the SIM card is inserted the wrong way round, or damaged, the Check Card message may be displayed. Remove the SIM card, check that it is the right way round and then re-insert it into the phone. If either of the Bad Card See Supplier or Blocked See Supplier messages are displayed, then you will need to contact your Cellular Service Provider. English 20 About Your Phone, Battery and SIM Card cd900_en.

bk : usephone.fm5 Page 21 Wednesday, August 19, 1998 12:07 PM Making and Receiving Phone Calls Switching the Phone On and Off To switch the phone on or off, press and hold the S key. If VibraCall™ is selected, the phone will vibrate when it is switched on. If you switch the phone on and there is no SIM card inserted, you will be asked to insert one. Once inserted, the phone will check that the SIM card is valid.

A number of messages will then be displayed: · Enter PIN - a request to enter the SIM card PIN code (if required). · Enter Phone Unlock Code - a request to enter the phone unlock code (if required). · Searching...

followed by a network name - as the phone searches and then finds a suitable network to connect to. ! If the PIN number is entered incorrectly three times in a row, your phone will automatically lock-up and the Blocked message will be displayed. See 'Unlocking Your Phone' for details on unblocking your phone.

The PIN code can be changed, see 'Change SIM PIN Code' in the Phone Setup Menu section for more details. j Entering Your Unlock Code If your phone displays the message Enter Phone Unlock Code you must enter your unlocking code by entering BO. The unlock code is a four digit number which is set at manufacture to 1234. The code can be changed, see 'Change Unlock Code' in the Phone Setup Menu section for more details. If you forget your unlock code, press the M key. This will display the 'Change Unlock Code' option. Enter O D, enter a new unlock code, and press O.

Entering Your SIM Card PIN Code To enter the PIN code, enter AO. As you type in each digit of the PIN code a * character will be displayed. If you make a mistake, press and release the C key to remove the last digit. Holding the C key down will remove the entire entry. When the PIN code is complete press the O key. If the PIN code entered is incorrect, the warning message Wrong PIN will be displayed, followed by Enter PIN. Making and Receiving Phone Calls 21

English cd900_en.bk : usephone.fm5 Page 22 Wednesday, August 19, 1998 12:07 PM Making a Phone Call To make a phone call, your phone must be switched on and unlocked. It will not be possible to make a phone call unless you are in an area where there is a GSM900 or GSM1800 service.

When a service has been found, a series of rising bars, x, will show the signal strength. There are a number of different ways to make a phone call: · Using the digit keys. · Using automatic redial. · Redialling the last number called. · One-touch dialling a Phone Book entry*.

· Dialling a Phone Book entry*: · Calling an embedded number in a message. · Using the Smart button (=). A*Your phone contains a 'phone book' that can be used to store names and telephone numbers. See 'What is the Phone Book?' for further details.

The simplest method of making a phone call is to enter the number using the digit keys then press O. AIf you make a mistake, press and release the C key to remove the last digit. Holding the C key down will remove the entire number. Your phone will then attempt to make the phone call. The display will show

Calling to show the call attempt is being made. If the call is not answered, pressing O, or closing the flip (models with flip only), at this point will end the attempt. When the phone call is answered, the display will change to Connected for a few seconds, followed by End Call?. To end your call press O, or close the flip (models with flip only). Automatic Redial If your call attempt does not succeed, the message Redial? will be displayed for five seconds. Pressing O at this point will automatically redial the phone number.

When the call is answered, you will hear a short ring tone. The maximum number of redial attempts is set by your Cellular Service Provider. If the phone call cannot be connected within this maximum, the message Redial Failed will be shown. English 22 Making and Receiving Phone Calls cd900_en.bk : usephone.fm5 Page 23 Wednesday, August 19, 1998 12:07 PM Redialling the Last Number Called i When in standby mode, press OO. Alternatively, you can retrieve the last number dialled using the 'Last Ten Calls' feature in the Phone Book menu.



[You're reading an excerpt. Click here to read official MOTOROLA](http://yourpdfguides.com/dref/2310959)

[CD930 user guide](http://yourpdfguides.com/dref/2310959)

<http://yourpdfguides.com/dref/2310959>

j One-Touch Dialling Phone Book Numbers To quickly retrieve and dial a number stored in the first nine locations of your Phone Book1, press and hold the appropriate digit key. For example, pressing and holding 2 will dial the phone number stored in location 2 of your Phone Book. AYou do not need to press O to call the number.

j Dialling Phone Book Numbers i Press the Smart button (=) and use the volume buttons to scroll to the stored number, or press the appropriate digit key to skip to a particular letter. To make the call, either hold down = for 1.5 seconds or press O. Alternatively, enter the phone book location number followed by >O. Calling an Embedded Number in a Message Details on how to call a number embedded in a message are given in the Messages Menu section.

International Phone Calls To make an international phone call press and hold the 0 key. After a couple of seconds the international dialling prefix + will appear in the display, this allows you to call from any country without knowing the local international access code. Now enter the country code, followed by the phone number. The country code follows the conventional format, 49 for Germany, 44 for the UK, 46 for Sweden, etc. Just like a conventional international call, remove the leading '0' of the area code when you dial.

Inserting Pauses Into Phone Numbers To obtain a three second 'pause' character in a phone number, press and hold the < key for a couple of seconds, the pause symbol Û will appear. The pause character produces a three second delay whenever it is used. However, the first pause character in a phone number is a special case, it will not begin its delay until the call is answered. Pause - A Working Example. If, for example, you have a tone-based voicemail system on 555-6911, with a mailbox number 1066 and password 2001. Then you may dial the following number: 5556911Û1066Û2001 O. The first part of the number would be used to call the voicemail system. When the call is answered the first pause will produce a delay of three seconds before the tones for 1066 are sent to select the mailbox. 1. The Phone Book entries that you are able to access will depend on the One-Touch Dial Setting option in the Phone Book menu.

There will be a second pause of three seconds before the tones for 2001 are sent as the password. Making and Receiving Phone Calls 23 English cd900_en.bk : usephone.fm5 Page 24 Wednesday, August 19, 1998 12:07 PM GSM Emergency Calls The world-wide GSM standard provides a single, uniform number,

112, to dial in cases of emergency. Provided that your phone has found a network, you will be able to make an emergency call. The call can be made regardless of any security codes and, depending on the network, with or without a SIM card inserted. The emergency call will be directed to a central emergency operator. To dial the GSM emergency number, press 112O. While the emergency call is being made and connected, the display will show Emergency Calling . AEmergency calls can be made without a battery fitted if the phone is powered by the travel charger.

Receiving a Phone Call To receive a phone call: · Your phone must be switched on and unlocked. · You must be in an area where there is GSM 900/1800 service. · Your Call Diversion and Call Barring settings should not be set to divert or bar incoming calls. When your phone receives a call, it will ring or vibrate and the display will show the Call message (if you have Caller Line Identification, the caller's number or name will be displayed instead). To answer the call, press O or open the flip (only on models with a flip when the Key Answer Only' feature is set to Off).

If you do not wish to answer a call you can either: Press and release the C key. If you have enabled the 'Detailed Diverting - If Busy' or 'Divert when unavailable' options in the Options Menu, the caller will be diverted to the forwarding number, otherwise the caller will hear the busy tone. or Press and hold the C key. This will reject the incoming call. No call divert option will be offered.

If your phone rings and you do not answer it, the message Unanswered Call will be displayed to show you that a call attempt was received. Ending a Phone Call To end a phone call, press O or close the flip (models with flip only). English 24 Making and Receiving Phone Calls cd900_en.bk : usephone.fm5 Page 25 Wednesday, August 19, 1998 12:07 PM In-Call Menu The "In-Call" menu provides access to additional functionality during a call. Entering the In-Call Menu The "In-Call" menu is accessed by pressing the M key during a call. Leaving the In-Call Menu To leave the "In-Call" menu press the C key. In-Call Menu Options The options listed in the "In-Call" menu will dynamically change depending on the current call state. The following list contains all of the possible options in the "In-Call" menu. AOnly some of the options will appear at any given time.

The order of the options may vary. Handsfree On/Off This option is used to switch between Handsfree and normal operation if the phone is installed in a car kit that does not have an automatic presence detector. Hold Call This option will put the active call on hold. Make a New Call This option allows you to make another call. Restrict My Number This option allows you to make a call without the remote user getting advanced warning of the number. End Active Call

This option terminates the active call, and makes the call that was previously on hold, the active call. Making and Receiving Phone Calls 25 English cd900_en.bk : usephone.fm5 Page 26 Wednesday, August 19, 1998 12:07 PM End Held Call This option will terminate a held call. End Active And Held This option will terminate all connected calls.

Switch This option allows you to switch between the active call and the call that is on hold. Conference Call This option connects you with up to five other telephones on one call (see Making a Conference Call'). Transfer Call This option transfers a call to another telephone (see Transfer Call' later in this section). Split Call This option allows you to separate an individual from the main Conference Call. Reject Waiting Call This option will reject a waiting call. Reconnect This option will make the call on hold the active call. Reconnect Held Call This option is similar to Reconnect but will appear if you have a call on hold, and a call waiting. Reconnect Held Call will make the call on hold the active call. Turn Mute On or Off Temporarily turns the microphone off during a phone call. Reselect this option to resume your conversation.

j Call Holding and Call Waiting Your phone supports the GSM options of Call Holding and Call Waiting. Using these options you can place a current phone call on hold and accept an incoming call or start a second call (See 'Call Waiting' in the 'Call Related Features' menu for details of how to control this feature).



[You're reading an excerpt. Click here to read official MOTOROLA CD930 user guide](http://yourpdfguides.com/dref/2310959)

<http://yourpdfguides.com/dref/2310959>

Call Holding and Call Waiting Scenarios The display will automatically change according to the status of your current call (or calls) and will propose the option that you are most likely to want. Press O to accept this option or press M to scroll through the "In-Call" menu for the alternative options. By following this procedure you will find that even the triple combination of an active call, a held call, and a call waiting is easy to manage. The following points summarise the more common situations: · To put an active call on hold, press M, the display will show Hold Call Select? - press O to put the call on hold. To reconnect the call, press O. · To put an active call on hold and make another call, first put the active call on hold, then press M and select the Make New Call option1. · To switch between an active call and a held call press O at the Two Calls Switch? prompt. 1.

A quicker method of making another call is to enter the number to be called directly and press O. Your phone will place the current call on hold and attempt to call the number entered. English 26 Making and Receiving Phone Calls cd900_en.bk : usephone.fm5 Page 27 Wednesday, August 19, 1998 12:07 PM · To accept a waiting call during an active call, press O at the Call Waiting Answer? prompt. The active call will be placed on hold. If you prefer to end the active call before accepting the waiting call, press M and select the End Active Call option. · To reject a waiting call, press M and select the Reject Call Waiting option (or simply press the C key). If you have an active call, a call on hold and a call waiting, you cannot accept the waiting call until you end either the active call or the held call, or join the active and held calls. Call Holding and Call Waiting Messages During Call Holding and/or Call Waiting operations, your phone may display one or more of the following messages: Trying A request to hold the active call, swap the active with a held call, or add a member to a Conference Call, has been made.

or A request to reconnect the held call has been made. Hold Failed The request to hold a call has been unsuccessful. Cannot Hold Second Call A call is already on hold, you cannot place two calls on hold at the same time. Connection Failed The held call could not be made active again. Busy Try Later Your phone is still working on a previous command.

Wait a short time before repeating the command. Anonymous The person who is calling you has blocked their number from appearing on your phone.

Unavailable The network is unable to provide the caller's number. Conference Unsuccessful The request for Conference Call has been unsuccessful.

Transferring Call A request to transfer a call has been made.

Transfer Unsuccessful The request to transfer a call has been unsuccessful. Making and Receiving Phone Calls 27 English cd900_en.bk : usephone.fm5 Page 28 Wednesday, August 19, 1998 12:07 PM Making a Conference Call This option joins the active call with a held call. With Conference Call, you can have a conference with up to five other telephones. At any time during your call, you can add, disconnect or separate individuals from the Conference Call using other "In-Call" menu options. A You must subscribe to both Conference Call and Call Waiting Supplementary Services to be able to use this feature. Initiating a Conference Call To initiate a Conference Call, place the active call on hold, and dial another phone number. You will then have one active call and one call on hold. Press the M key to enter the "In-Call" menu and select Conference Call .

The currently active call and the call on hold will then join into one Conference Call. Managing a Conference Call While in a Conference Call, you will have the option to add new calls to the Conference Call or separate one of the members from the Conference Call. Adding a New Call There are a number of different ways to add new calls to the Conference Call: · Using the digit keys. · Using the Make New Call option from the "In-Call" menu. · Recalling a Phone Book Entry using Quick Access. · Answer Call Waiting. No matter which method is chosen to add a new call, the original Conference Call will be first placed on hold while the new call is being connected. You must then enter the "In-Call" menu and select Conference Call to join the New Call with the original Conference Call in progress. Separate One of the Members in the Conference During a Conference Call, you will also have the option to separate a selected member from the main Conference Call. A In order to separate a member from the main Conference Call, there must not be any calls on hold.

Press M during a Conference Call and select Split Call. You will then be presented with the phone number or name of all members of the Conference Call.

Use the scroll keys to find the selected member of the Conference Call. Once the desired member is selected, press the O key and select Split Call. At this point, the selected call will be separated from the main Conference Call and private conversation between you and the selected member is possible.

To re-join all the parties again, select Conference Call from the "In-Call" menu. English 28 Making and Receiving Phone Calls cd900_en.bk : usephone.fm5 Page 29 Wednesday, August 19, 1998 12:07 PM Transfer Call Transfer Call transfers a call to another telephone. There are two ways to transfer a call; before or after the third party is connected.

A You must subscribe to both Conference Call and Call Waiting Supplementary Services to be able to use this feature. Initiating Transfer Call Before the Third Party is Connected To transfer a call to another telephone, press the M key and select Transfer Call from the "In-Call" menu. Enter the number where the call will be transferred and press O. Your phone will then attempt to transfer the call. The display will show Transferring Call followed by Call Transferred. When the call has been successfully transferred, you will be disconnected automatically. Initiating Transfer Call After the Third Party is Connected If you already have an active call and a call on hold, press the M key and select Transfer Call from the "In-Call" menu. Your phone will then attempt to transfer the active call to the call on hold. The display will show Transferring Call followed by Call Transferred . Once the call has been successfully transferred, you will be disconnected automatically.

Making and Receiving Phone Calls 29 English cd900_en.bk : usephone.fm5 Page 30 Wednesday, August 19, 1998 12:07 PM English 30 Making and Receiving Phone Calls cd900_en.bk : voice.fm5 Page 31 Wednesday, August 19, 1998 12:07 PM Using VoiceNotes™ The VoiceNotes™ feature allows you to record up to 3 minutes of personal voice messages or to record part of a phone call. This is useful when you don't have a pen and paper to hand for taking directions or a message.



[You're reading an excerpt. Click here to read official MOTOROLA CD930 user guide](http://yourpdfguides.com/dref/2310959)

<http://yourpdfguides.com/dref/2310959>

Recording is available during the following call scenarios: · Phone idle (no calls). · Single active call (includes conference calls). · Active call plus waiting call. VoiceNote™ Storage Capacity The 'Show Time Available' option in the Messages, VoiceNotes™ menu displays the amount of recording time available, see 'Messages Menu'.

During recording, ten seconds before the recording capacity is reached you will hear a warning tone. If you do not stop recording within the time limit, recording will automatically stop and a single, one second tone will be heard, accompanied by the Storage Full message. Recording a VoiceNote™ To record a VoiceNote™, press the Start/Stop Record button (?). You will hear a short tone to indicate that recording has started and the display will show the message Recording and the remaining recording time available. If you are recording during a call, the person you are speaking to will hear a tone every 10 seconds to warn them that you are recording the call.

ADuring the recording of an active call, only the person you are talking to is recorded. To stop recording a call, press the Start/Stop Record button (?) or O; on models with a flip you can also close the flip, although this will end the call. The display shows the message VoiceNote XX Stored where XX is the number of the storage location. VoiceNotes™ are stored in sequential locations. Recording is immediately aborted with no further notification if: · you choose to accept an incoming call while you are recording (the Call Waiting alert is played) · you choose to initiate a call during recording a VoiceNote™.

Playing VoiceNotes™ To play your VoiceNotes™, select the 'Play VoiceNotes' option in the Messages, VoiceNotes™ menu or the Quick Access menu item (j). The first VoiceNote™ will begin to play after two seconds. The display will show VoiceNote XX playing... Go to next ? Press C to stop playing a VoiceNote™. A message showing the current VoiceNote™ is displayed (VoiceNote XX), together with a prompt Go to next?. Press M to skip to the next VoiceNote™. AIf you selected 'Play VoiceNotes' from the Quick Access Menu, the phone will simply return to its idle state. If you press M during playback, the message will start to replay from the beginning.

Press M twice rapidly to skip back to the previous message. Press M to play the next VoiceNote™. To skip to the next VoiceNote™ during playback, press O. Using VoiceNotes™ 31 English cd900_en.bk : voice.fm5 Page 32 Wednesday, August 19, 1998 12:07 PM To play a VoiceNote™ stored at a specific location, press the appropriate digit key 1 to 9. AIt is not possible to playback VoiceNotes™ during a call. Erasing VoiceNotes™ To erase your VoiceNotes™, select the 'Erase All VoiceNotes' option in the Messages, VoiceNotes™ menu. You will be requested to confirm the deletion with the message Erase All VoiceNotes - Select? . Press O to confirm the deletion.

The confirmation message VoiceNotes Erased is displayed. AYou cannot erase individual VoiceNotes™. English 32 Using VoiceNotes™ cd900_en.bk : opt_menu.fm5 Page 33 Wednesday, August 19, 1998 12:07 PM Using the Options Menu Using the Options Menu 33 English cd900_en.bk : opt_menu.fm5 Page 34 Wednesday, August 19, 1998 12:07 PM The Phone Book Menu AIf your service provider has added their own menu, the Phone Book menu will not be the first item in the Options menu. English 34 Using the Options Menu cd900_en.bk : opt_menu.fm5 Page 35 Wednesday, August 19, 1998 12:07 PM j What is the Phone Book? You can store names and telephone numbers as entries in an electronic 'Phone Book'.

These entries are stored in the Personal Numbers list in your phone or SIM card's memory, and in the Fixed Dial list1 on your SIM card. Once stored, a number can be quickly retrieved and dialed. Your phone can store 100 entries and the SIM card can store up to 155 entries in the Personal Numbers list. The number of SIM card entries will vary depending upon the type of SIM card issued by your Cellular Service Provider. You can also store up to 40 entries in a Fixed Dialling list if you have this feature. Fixed Dialling allows you to limit use of your phone to particular numbers, or, if you wish, to country codes, area codes, or other prefixes of your choosing. Each Phone Book entry comprises: · A telephone number. Up to 32 digits can be stored, but this is reduced to 20 digits for SIM card locations. · A name. Up to 16 characters for phone locations.

Up to 50 characters for SIM card locations, but typically 10 or less. · A location label - from 1 to 255 in your Personal Numbers list, or 1 to 40 in your Fixed Dial list. Postscripting This allows you to make use of area codes and other prefixes previously stored in your Phone Book when making a call. To use postscripting, select the Phone Book entry containing the prefix and then simply enter the rest of the number and press O to make the call. You can also use postscripting if you want to call a number similar to one you have stored in your Phone Book. Retrieve the number from the Phone Book, delete the relevant digits and then enter the new number. APostscripting a number does not overwrite the entry in the Phone Book. APostscripting is not available when accessing the Phone Book using the Smart button. 1. Availability of the Fixed Dialling feature depends on the type of SIM card you have.

Using the Options Menu 35 English cd900_en.bk : opt_menu.fm5 Page 36 Wednesday, August 19, 1998 12:07 PM How to Enter Alphabetic Characters The 0, 1,...

...,8 and 9 keys are used to enter alphabetic characters, for example when storing names in the Phone Book or when creating messages. For example, if you press the 5 key, the first displayed character will be J.

If this is not the required character, then you can press the same key again to show K. Another press will display L, another... ..will display 5. Your phone will continue to scroll through the characters available on the selected key with each new key press. A long press of any of the keys will switch all the characters to lower case, a second long press will switch back to upper case.

To enter the next character press the appropriate key. If, however, the next character is on the same key as the previous character you will first need to press the > key. Pressing the > key a second time will produce a space. If a mistake has been made, you can go back to the incorrect character by pressing <.

Characters can be removed from the display by pressing the C key. The character before the cursor (Ö) is the character which will be deleted. Press the O key to store the information. Available Characters Press the appropriate keys to get the following characters: 1 2 3 4 5 6 7 8 9 0 Space . 1 ? ! , Y Ä & : " () ' ` @

% j € Space . 1 ? ! , Y Ä & : " () ' ` @ % j € ABC2[®±¼¾© abc2{~±½¾© DEF3°;æ² def3°æ² GHI4Ä\$ ghi4Ä\$ JKL5Á jkl5Á MNO6]«~µ mno6}]~µ PQRS7Á¾, pqr7Á¾, TUV8ª; tuv8ª; WXYZ9º. wxyz9º. +-0x*/=><# +-0x*/=><# The top line for each key shows the upper case characters, the lower line shows the lower case.



[You're reading an excerpt. Click here to read official MOTOROLA](http://yourpdfguides.com/dref/2310959)

[CD930 user guide](http://yourpdfguides.com/dref/2310959)

<http://yourpdfguides.com/dref/2310959>

English 36 Using the Options Menu cd900_en.bk : opt_menu.fm5 Page 37 Wednesday, August 19, 1998 12:07 PM Personal Numbers The Personal Numbers sub-menu is used for creating and managing your list of personal numbers. Find Entry By Name i Press the Smart button (=) and use the volume buttons to scroll to the stored number, or press the appropriate digit key to skip to a particular letter. To make the call, either hold down = for 1.

5 seconds or press O. This option is used to select a telephone number from a list of alphabetically sorted Phone Book names. Once selected, this option will display the message Enter Name. You can enter a maximum of three characters from a name but you do not need to enter all three characters to begin a search. The Phone Book entries will be searched and the first alphabetically matching entry will be displayed.

If there isn't a name matching your entry, the nearest alphabetically matching entry will be displayed. If you do not enter any name information, the first alphabetical entry will be displayed. If there are no names stored, No Names Stored will be displayed. To display adjacent Phone Book entries use the (and) keys. When the desired name is displayed press the O key to select it. The phone will now enter the 'Call Number', 'Modify Name Or Number' or 'Erase Name And Number' options submenu. Find Entry By Location i G> This option is used to select a telephone number from a list of numerically sorted Phone Book locations. Once selected, this option will display the message Enter Location. You can now enter a location number. If the entered location is not valid, a timed message Range 1-XXX will be displayed and the phone will return to the Enter Location menu item.

The Phone Book entries will be searched and an entry will be displayed. If you enter a location number for which there is no entry, Location Empty will be displayed and the nearest non-empty location will be selected instead. If you did not enter a location, the first numerical entry will be displayed. If there are no numbers stored, No Numbers Stored will be displayed. To display adjacent Phone Book entries use the (and) keys. When the desired name is displayed press the O key to select it. The phone will now enter the 'Call Number', 'Modify Name Or Number' or 'Erase Name And Number' options submenu. Using the Options Menu 37 English cd900_en.bk : opt_menu.fm5 Page 38 Wednesday, August 19, 1998 12:07 PM Call Number, Modify Name or Number or Erase Name And Number Options Once a Phone Book entry has been selected, it can be called, modified or deleted.

Call Number This option is used to call the selected Phone Book telephone number. Modify Name or Number This option is used to change the selected Phone Book entry. The entry's current telephone number and name will be presented, in turn, for modification. You can accept the current settings or modify as required. Erase Name and Number This option is used to erase the selected Phone Book entry.

Simply press the O key when the phone displays the message Erase Name And Number . The option will display the timed message Erased XXX and then return to the Find Entry menu item. Add Entry This option is used to add (store) entries to the Phone Book. You can choose to add the new entry to either the phone or SIM card memory locations. Add To Phone Memory, Add To SIM Card Memory Once you have selected the destination of the new entry, you will be asked to enter the telephone number, name and location number of the new entry.

The last telephone number displayed will be presented by default; it can be used or discarded as required. If the entered location is not valid, a timed message Range YYY-ZZZ will be displayed and the phone will return to the Enter Location prompt. If the chosen location is currently used by another entry, you will be asked for confirmation that the location can be overwritten. If you do not supply a location number, the next available location will be used. When the new entry has been entered, a timed message Stored XXX will be displayed. English 38 Using the Options Menu cd900_en.bk : opt_menu.fm5 Page 39 Wednesday, August 19, 1998 12:07 PM Check Capacity This option is used to check the number of free Phone Book entries in the phone or SIM card memory areas.

Check Phone Capacity, Check SIM Capacity Once selected, a timed message XX Unused Locations displays the requested information. Prevent Access This option enables you to prevent access to the Personal Numbers list.

To SIM Card Memory, To Phone Memory, To Phone & SIM Memory, No Memory Restrictions You can prevent access to all entries in the SIM card memory, the phone memory or both the phone and SIM card memory. To cancel all access restrictions use the No Memory Restrictions option. When you change the restrictions, you will be requested to enter the Security Code before the change is made. Last Ten Calls These options can be used to call the most recently used phone numbers. Once an option has been selected, use the (and) keys to scroll through the list of phone numbers. Press the O key to call the displayed number. AYou can use postscripting to modify a number once you have retrieved it from either of the Last Ten Calls lists. Last Calls Made This option can be used to redial the phone number of any one of the last ten calls made. Last Calls Received This option can be used to redial the phone number of any one of the last ten calls received. AYou will only see numbers in the Last Calls Received list if you have Caller Line Identification.

Erase All Numbers This option erases all the numbers stored in your Last Ten Calls Made and Last Ten Calls Received lists. AThe Last Ten Calls lists will be erased when a new SIM is inserted in the phone. Show Services This option displays a list of phone numbers and services provided by your Cellular Service Provider. AAvailability depends on the type and settings of the SIM card, and/or your subscription to this feature. Using the Options Menu 39 English cd900_en.

bk : opt_menu.fm5 Page 40 Wednesday, August 19, 1998 12:07 PM My Phone Number(s) This option allows you to access your cellular phone, fax and data numbers so that you can retrieve or modify them when required. For example, if you have difficulty remembering your cellular phone number, store it with the name My Phone and then you will be able to retrieve the number as required. The My Phone Number(s) list is stored on your SIM card. When you select this item, the first location will be displayed.

Use the (and) keys to scroll through the phone numbers stored. To enter or change a number, scroll to the location and press O. You will be prompted to enter a phone number and then a name. Press O to store the information. ADepending on your Cellular Service Provider, you may find that one or more of the entries in the My Phone Number(s) list will have been defined. @@@@ You will not be able to make fax or data calls.



[You're reading an excerpt. Click here to read official MOTOROLA CD930 user guide](http://yourpdfguides.com/dref/2310959)
<http://yourpdfguides.com/dref/2310959>