



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA D203. You'll find the answers to all your questions on the MOTOROLA D203 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MOTOROLA D203
User guide MOTOROLA D203
Operating instructions MOTOROLA D203
Instructions for use MOTOROLA D203
Instruction manual MOTOROLA D203



[You're reading an excerpt. Click here to read official MOTOROLA D203 user guide](http://yourpdfguides.com/dref/2347482)
<http://yourpdfguides.com/dref/2347482>

Manual abstract:

4. 5. @@Handset and base menu settings 12 Handset earpiece 12 Handset ringer volume 12 Handset speaker 12 Press or to select the volume you want, then press to confirm. 12 Handset ringer type 12 Auto answer 12 Alarm 13 Handset Label 13 Base ringer volume 13 Base ringer type 13 Call barring 14 9. Settings menu 14 Tones 14 Flash 14 Changing the flash time 14 Dial mode 14 Registering a new handset 15 De-register a handset 15 Base PIN code 15 Selecting a base 16 Resetting your phone 16 10. Default settings 16 11. Network services 17 Caller ID 17 Calls log 17 View the calls log 17 English 1 Allegro_CID.book Page 2 Tuesday, January 15, 2008 3:07 PM Dial a calls log number 17 Copy a calls log number to the phonebook 17 Delete calls log entries 18 View details of the calls log 18 Message Waiting 18 12. Using extra handsets 18 Register your handset to another base 19 Call another handset (internal call) 19 Transferring a call 19 Conference call 19 13. Simple solutions 19 Handset/Base 20 Caller ID 20 14.

General information 20 Safety 20 Replaceable batteries 21 Cleaning 21 Environmental 21 Product disposal instructions 22 Warranty Information 22 Technical Information 22 R&TTE 23 Declaration of Conformance 23 Connecting to a switchboard 23 Inserting a pause 23 Recall 23 2 English Allegro_CID.book Page 3 Tuesday, January 15, 2008 3:07 PM Follow these simple steps to prepare your phone ready for use. Finding a location Make sure your phone is: · Within 1.8 metres of a power and phone socket so that the cords will reach. · At least 1 metre away from other electrical appliances, to avoid interference.

· Not located in humid or damp conditions, e.g. in a bathroom. Connecting your phone Connect the base power supply into the socket on the back of the base. Plug the other end into the mains power socket.

WARNING Use only the power supply that came with your phone. Only use the power supply TEN PAO G060040D25, 6V DC (center plus mark) 400mA 2.4VA . Using another power supply could seriously damage your phone and invalidate your warranty. Do not connect the telephone line cord until your handset is fully charged. This will prevent the risk of the phone being answered before the batteries are charged. Answering the phone before the batteries are fully charged may prevent them from reaching their optimum capacity. **WARNING** Under no circumstances should non-rechargeable batteries be used. Only use the supplied batteries or you will invalidate your guarantee and may damage the telephone. Battery low warning If the empty battery symbol is displayed on the handset, or if you hear the low battery tone during a call, you will need to recharge your handset.

NOTE If you set the "BATTERY LOW" tone to off, the low battery tone will not sound. We recommend that you place the handset back on the base between use to ensure that it is always fully charged. Battery Performance The handset may become warm during charging, but this is normal. The handset will give 10 hours talk time and 170 hours standby time on a full charge. New NiMH batteries do not reach its full capacity until they has been fully charged. Preparing the handsets Installing and charging the handset batteries 1. On the handset: Remove the battery compartment cover. English 3 1. Setting up Press down on the semi-circle indent and slide the cover off. Connect the supplied batteries with the correct polarity.

Slide the battery cover back until it clicks securely into place. 2. To charge the battery, place the handset on the base. The charging light in the base illuminates. When the handset is fully charged all the bars of the battery symbol will be filled. If the charging light does not come on, reposition the handset in the base, ensuring that the charging points contact. You must charge each handset for 16-20 hours before use. Allegro_CID.book Page 4 Tuesday, January 15, 2008 3:07 PM English Over time, as the batteries wear out, the charge capacity will reduce, so reducing the talk/standby time of the handset. Eventually the batteries will need to be replaced.

2. Your Handset Controls & Functions Handset Speaker (back) Up/down Setting the date and time The phone uses the 12 or 24 hour clock. In standby mode: 1. Press 2. Press 3. Press 4. Press 5. Press 6. Press . 7.

Press . 8. Press or until "SET TIME" is displayed and press . . or to select "24 - HOUR" or "12 - HOUR" and press or or or or . to select "HS SETTINGS" and press to select "DATE & TIME" and press to select "DATE FORMAT" and press to select "MM - DD" or "DD - MM" and press until "TIME FORMAT" is displayed and press Earpiece/Receiver Menu/OK Display Hook Cancel Speaker/Pause Phonebook Intercom Redial/Flash 9.

Enter Hour and Minute using the keypad, and press Connecting the telephone line cord Connect the telephone line cord into the TEL LINE socket on the back of the base. Connect the telephone line cord adapter to the other end and plug into the telephone wall socket. Only use the telephone line cord supplied or your phone may not work correctly. Setup is now complete. You can make and receive calls on your phone.

Temporary Tone Microphone #/Lock 4 Allegro_CID.book Page 5 Tuesday, January 15, 2008 3:07 PM Cancel · Use to delete incorrect digits or letters. · Press to go back to the previous menu · Press and hold to turn off the snooze temporarily. · Press to mute the conversation. Hook · Press to make and receive calls.

· Press to end calls. Down · Press during a call to decrease the earpiece volume. · Use to scroll through the phonebook, menu, redial list, or caller ID log. · Press to decrease the handset ringer volume when the phone rings. Phonebook · Use to access the phonebook list. Up · Press during a call to increase the earpiece volume. · Use to scroll through the phonebook, menu, redial list, or caller ID log. · Press to increase the handset ringer volume when the phone rings Redial / Flash (recall) · Use to access the redial list and menu options. · Press and hold for flash function. Menu/OK · Press to access the menus.

· Press to confirm a setting. · Press and hold to power on/off the handset. · Use with # to switch the handset keypad lock On/Off. Intercom · Use when making internal calls, conference calls or for transferring calls (if you have more than one handset registered to your base). #/Lock · Use with Menu/OK key to switch the handset keypad lock On or Off. * (Temporary Tone) · When the dial mode is pulse, press and hold to switch to tone temporarily. · Use to set up the conference call. Speaker/Pause · Used for hands free mode. · Press and hold to enter a pause. 3.

Your base Find handset · Press to make the handset ring. English 5 Allegro_CID.



You're reading an excerpt. Click here to read official MOTOROLA D203 user guide
<http://yourpdfguides.com/dref/2347482>

book Page 6 Tuesday, January 15, 2008 3:07 PM Base English 4. Your handset display The following figure shows the layout of icons on your handset display. Symbol Explanation Menu Indicates more characters to display to the left Indicates more characters to display to the right Indicates new CID & CID full (flashing) Displayed when viewing the phonebook list or in the phonebook menu.

Flashes when the phonebook is full. Always displayed when your handset is on, shows the battery status. Displayed when you have subscribed to a message waiting service and you have a new message waiting. Remains steady when the line is in use. External call in progress Internal call in progress LED Lens Find Handset 6 Allegro_CID.

book Page 7 Tuesday, January 15, 2008 3:07 PM Indicates the alarm has been set. Always displayed when your handset is on. If it flashes and you hear a warning tone during a call if the handset moves out of range, you will need to move closer to the base for clearer reception. Displayed when the keypad has been locked. Talk by speaker phone Standby Display Once charged, your handset display will be as below, displaying the handset name and number, and time. This is referred to as 'standby mode'. For example: Preparatory call Adjust earpiece volume End a call Receive a call Redial Mute Store phonebook number Enter number, During a call, Phone rings, , then number, During a call, a call press or . or or . or . .

or place handset on base. to display . To resume again. , , select "PHONEBOOK", , select "ADD ENTRY", enter name, , enter number, , Select tone, . , then . or , or Dial phonebook number HS 1 0 0 -- 0 0 Handset ringer melody You can personalise your handset with your name (see page 13). 5. Quick Guide Function Make a call Button press or , enter number. Make internal call , select "HS SETTINGS", . Select "RING SETUP", . Select "INT RING" or "EXT RING", . Select "MELODY", , and select a melody. . , enter internal handset number. English 7 Symbol Explanation Function Button press Allegro_CID.

book Page 8 Tuesday, January 15, 2008 3:07 PM English 6. Using your phone Make a call Press . The symbol is displayed. When you hear the dial tone, dial the number you want. The number is shown in the display.

After a short delay the call timer will start timing the call. Hands free mode You can use hands free mode to talk to your caller without holding the handset to your ear. You can speak into the handset microphone and listen over the loudspeaker. Hands free also enables other people in the room to listen in to the conversation. During a call: 1. Press mode. 2. Press . The symbol is displayed while in hands free Adjust the earpiece/receiver volume during a call Press or to adjust the volume. There are five levels.

again to go back to the normal talk mode. Call timer When you make or receive a call, a short while after the line is connected the call timer will show the duration of the call in the display in hours, minutes and seconds. End a call Press . Or Place the handset back on the base. Preparatory dialling (pre-dial) 1. In standby mode, enter the number to be dialled. The number is displayed. You can enter numbers up to 32 digits. Press any incorrect digits. Press and hold 2. Press to delete all digits. to dial the displayed number. to delete Handset range The handset range is up to 300 metres outdoors and up to 50 metres indoors (in ideal conditions). If the handset is too far away from the base, during standby, "Searching" appears and the symbol will flash. During a call you will hear a warning tone and the call is terminated.

You will need to mover closer to the base for clearer reception and to avoid being disconnected. Receive a call When you receive a call the handset and base will ring. The icon will flash in the handset display. If you ect digit. to confirm the number.

7. Using the phonebook You can store your 50 frequently used names and numbers in the phonebook for easy dialling. Press to exit the phonebook menu and return to standby at any time. Store a phonebook name/number Phonebook entries are stored alphabetically. 10 1. Press . 6. "MELODY 1" is displayed. Press or to select a type and press . The phonebook entry is now stored.

Entering a pause in a stored number You may need to enter a pause in some international or charge card numbers or if you are connected to a switchboard.

When Allegro_CID.book Page 11 Tuesday, January 15, 2008 3:07 PM View and dial a phonebook entry 1. Press , and the first alphabetical entry is displayed. 2. Press or to scroll through the entries and display the entry you want. Or Search alphabetically for the entry. To search alphabetically Enter the first letter of the name you want using the keypad. E.g.

for HELEN, press twice, then use the exact entry you want. 3. Press Or Press 1. Press 2. Press Press 3.

Press or . or to select "CHANGE ENTRY". Press . to dial the number. to exit and return to standby.

. to select "PHONEBOOK". or to display 7. The number is displayed. Press repeatedly to delete any incorrect digits, and enter the correct number using the keypad and press . 8. Select a melody type and press 1. Press 2. Press Press 3. Press .

4. If you select "DELETE ENTRY", press or to display the name for the entry you want (or search alphabetically). Press . 5. "CONFIRM ?" is displayed. Press . or . or to select "DELETE ENTRY" or "DELETE ALL". Press . to select "PHONEBOOK".

Delete a phonebook name/number Edit a phonebook name/number Phonebook status This allows you to show how many entries are stored in the phonebook. 1. Press 2. Press or .

to select "PHONEBOOK". Press . . The 4. Press or to display the name for the entry you want (or search alphabetically).

5. Press to access the phonebook menu. 3. Press or to select "PB STATUS". Press phonebook status is displayed. English 11 storing a number, at the point where you want a pause, press and hold . A P will be shown in the display. 6. Press repeatedly to delete any incorrect letters, then enter the correct letters using the keypad and press . Allegro_CID.

book Page 12 Tuesday, January 15, 2008 3:07 PM English 8. Handset and base menu settings Handset earpiece There are 5 earpiece volumes to choose from. 1. Press 2. Press 3. Press 4. Press 5. Press or or or to access the main menu. to select "HS SETTINGS" and press to select "AUDIO SETUP" and press to select "EARPIECE V" and press . .

. Handset speaker There are 5 speaker volumes to choose from. 1. Press 2. Press 3.

Press 4. Press Press or or or to access the main menu. to select "HS SETTINGS" and press to select "AUDIO SETUP" and press to select "SPEAKER V." and press . .

. or to select the volume you want, then press to confirm. or to select the volume you want, then press to confirm.



[You're reading an excerpt. Click here to read official MOTOROLA D203 user guide](http://yourpdfguides.com/dref/2347482)

<http://yourpdfguides.com/dref/2347482>

Handset ringer type There are 10 handset ringer melodies. You can select different ring tones for external calls and internal calls. 1. Press 2. Press 3. Press 4. Press .

or or or to access the main menu. to select "HS SETTINGS" and press to select "RING SETUP" and press . . Handset ringer volume There are 5 ringer volumes to choose from. You can also select volume Off if you do not want to be disturbed. You can set a different ringer volume for each handset registered to your base. 1. Press 2. Press 3. Press 4.

Press . 5. Press or to select "VOLUME" and press . Select the volume you want (you will hear a sample of each as you scroll through). Press . or or or to access the main menu. to select "HS SETTINGS" and press to select "RING SETUP" and press . . to select "INT RING" or "EXT RING" and press to select "INT RING" or "EXT RING" and press 5. Press or to select "MELODY" and press .

Select the melody you want (you will hear a sample of each as you scroll through), then press to confirm. Auto answer Auto answer lets you answer the phone just by picking it up from the cradle. If you switch auto answer off, you have to press to answer a call, even if a handset is on the base. The default setting is On. 12 Allegro_CID.book Page 13 Tuesday, January 15, 2008 3:07 PM 2. Press 3. Press 4. Press or or to select "HS SETTINGS" and press to select "AUTO ANSWER". Press to select "ON" or "OFF".

Press . . . 3. Press or to select "HS LABEL". Press . . 4. Enter the name using the number keypad. Press Base ringer volume There are 5 volume levels to choose from or you can select volume Off.

1. Press . 2. Press 3. Press 4.

Press or or or to access the main menu. to select "BS SETTINGS" and press to select "RING SETUP" and press . . . Alarm Your phone allows you to set an alarm.

1. Press 2. Press 3. Press or or to access the main menu. to select "HS SETTINGS" and press to select "ALARM". Press . 4. Press or to select "ON" or "OFF". Press . 5.

Enter time for the alarm using the number keypad. 6. Press 7. Press . or to select "SNOOZE ON" or "SNOOZE OFF". Press to confirm. until "BS VOLUME" is displayed and press 5. Press or to select the volume you want (you will hear a sample of each as you scroll through), and press to confirm. Base ringer type There are 5 base ringer melodies to choose from. 1.

Press 2. Press 3. Press 4. Press or or or to access the main menu. to select "BS SETTINGS" and press to select "RING SETUP" and press to select "BS MELODY" and press .

. . The appears, showing that the alarm is set to on. When the reminder occurs, your phone will ring. To stop the alarm tone, press any key on the handset. To turn off the snooze temporarily, press and hold . Handset Label You can change the name your phone displays on the screen. @@1. Press to access the main menu. 5. Press or to select the melody you want. You will hear a sample of each as you scroll through the melodies. 6. @@to English 13 1. Press to access the main menu.

2. @@1. Press 2. Press or to access the main menu. to select "HS SETTINGS". @@@@Press or to select "BARRING". Press . 4. "PIN ?" is displayed. Enter the PIN code using the number keypad.

Press . 5. Press or to select "ON" or "OFF". @@@@1. Press 2.

Press . 3. Press 4. @@. or to access the main menu.

until "BS SETTINGS" is displayed and press 9. @@@@@1. Press 2. Press 3. Press or or to access the main menu. to select "HS SETTINGS". Press to select "TONE SETUP". Press to select the option you want . @@@@@@@1. Press 2.

Press or . to access the main menu. until "BS SETTINGS" is displayed and press 4. @@@@@@@The pre-set PIN code is 0000. If you wish to change this code, see page 15. Each handset can only be registered to one base at a time. @@On the handset you want to register: 1. Press 2. Press or to access the main menu. @@@@1.

On a handset not to be de-registered, press access the main menu. 2. Press . 3. Press or to display "TERMINATE HS" and press .

. 4. "PIN ?" is displayed. Enter your PIN code and press or to 3. Press or to select your base number.

On your base: 4. Press and hold until you hear the registration tone. You are now in 'subscription mode'. @@See the next section for de-registering handsets. On the handset you want to register: 5. Press . 6. Enter the base PIN code. The pre-set base PIN code is 0000. 7.

Press . until "BS SETTINGS" is displayed and press 5. Press or to display the handset you want to de-register and press . If the handset has been de-registered from the base successfully, you will hear a confirmation tone. Base PIN code You need to enter the base PIN code when you are registering handsets. For security reasons you may wish to change the PIN code. You can choose a PIN code up to 4 digits long. If you reset the base from the handset, the base PIN code will be 0000. English 15 3. Press or to select "DIAL MODE" and press .

You will hear a confirmation tone when registration is complete. When in standby mode, the new handset number will be displayed. The handset will automatically be allocated with the next available handset number. If the registration fails, the handset display returns to the display of before the registration. Allegro_CID.

book Page 16 Tuesday, January 15, 2008 3:07 PM English Always keep a record of your base PIN code. Note your PIN code and keep it in a safe place. If you change the PIN code you will need to use the new code for any handset registered to your base. 1. Press 2.

Press or to access the main menu. to select "BS SETTINGS" and press . For the base: 1. Press 2. Press 3. Press or or to access the main menu. to select "BS SETTINGS" and press to select "BS DEFAULT" and press . . 3. Press or to select "MODIFY PIN" and press .

4. Enter the current PIN code using the number keypad . 5. "NEW PIN" appears. Enter a new PIN code and press 6. "CONFIRM ?" appears. Re enter new PIN code. Press . . 4.

"PIN ?" appears. Enter your PIN code. Press . The base will reset and the handset will return to standby mode. For the handset: 1.

Press 2. Press 3. Press or or to access the main menu. to select "HS SETTINGS" and press to select "HS DEFAULT" and press . .

. Selecting a base You can register a handset to up to 4 bases, e.g. one at work and one at home, and switch between them. Once your handset is registered with other bases, you can specify the base you want to use. 1. Press 2. Press 3. Press 4. Press Press or or or .

to access the main menu. to select "HS SETTINGS". Press to select "SELECT BASE". Press to select the base number. . . 4. "PIN ?" appears. Enter your PIN

code.



[You're reading an excerpt. Click here to read official MOTOROLA D203 user guide](#)

<http://yourpdfguides.com/dref/2347482>

Press The handset will reset and the handset will beep.

10. Default settings Ringer Volume Earpiece Volume Speaker Volume Base Ringer Type Internal/External Ringer Type Alarm Tone 2 3 3 1 1 OFF Key Tone Battery Low Range Alarm Resetting your phone If you reset your phone, both the base and handset will return to their pre-set (default) settings. If you have more than one handset registered to your base and you complete the following procedure, only the handset you reset and the base will go back to the default settings. ON ON ON 16 Allegro_CID.book Page 17 Tuesday, January 15, 2008 3:07 PM Auto Answer Language Dial Mode Flash Time Base PIN ON ENGLISH TONE SHORT 0000 View the calls log 1.

Press to access the main menu. 2. Press or to select "CID BOOK" and press . The latest calls log entry is displayed (or "EMPTY" if there are no entries). 3. Press 4. Press Or Press 1. Press or or to scroll through the calls log. to continue viewing other calls log entries. 11. Network services To use caller ID or any other services detailed in this section, you must first contact your network provider and subscribe to the relevant service. Caller ID With caller ID the caller's number is shown in the handset display as you receive an incoming call so you can see who is calling before you pick up the phone. Only the first 12 digits of the number are displayed. If the number has more than 12 digits you will see the symbol. If your caller's number is stored in the phonebook and an exact number match is found, the caller's name will be displayed instead of the number.

Only the first 12 letters of the caller's name are displayed to exit and return to standby. to access the main menu. . The latest Dial a calls log number 2. Press or to select "CID BOOK" and press calls log entry is displayed. 3. Press or 4. Press to dial the entry displayed. Calls log To view the Calls log, press , select "CID BOOK" and press or to scroll. The calls log stores details of the last 40 incoming calls.

It can store numbers up to 20 digits long and names up to 12 characters long. When you have new calls, the number of message appears in the display. when the phone is in standby mode. Use to scroll and display the entry you want. Copy a calls log number to the phonebook 1.

Press to access the main menu. . The latest 2. Press or to select "CID BOOK" and press calls log entry is displayed. English 17 If the caller has withheld their number, "WITHHELD NUM" will be displayed or, if the number is unavailable the display will show "UNAVAILABLE".

You will not be able to dial back an entry with one of these messages. When the calls log is full, a new call will replace the oldest call. Allegro_CID.book Page 18 Tuesday, January 15, 2008 3:07 PM English 3. Press . 4. Press or or to scroll to the number you want. Press to select "ADD TO PB". Press . 2.

Press or to select "CID BOOK" and press calls log entry is. 3. Press 4. Press or or . The latest . to scroll through the calls log. Press to select "DETAILS". 5. Enter a name using the keypad and press to confirm. If you enter a name that is already stored in the phonebook, you will be prompted to enter another name. 6. The number is displayed. To confirm and save the entry to the phonebook, press . If necessary, you can edit the number, using to delete any incorrect digits and entering new ones using the keypad. 7.

Press or to select a distinctive ring. Press The entry is now saved in the phonebook. . Press . The date and time of the call will be displayed.

Message Waiting If you have subscribed to a message waiting service through your network provider, and you have a message waiting in your mailbox, the symbol will be displayed on the handset. To listen to your waiting messages, you should call your voice mailbox as instructed by your network provider. When you have listened to your messages, the no longer be displayed. symbol will Delete calls log entries 1. Press to access the main menu. . The latest 2. Press or to select "CID BOOK" and press calls log entry is displayed. 12. Using extra handsets If you purchased a multi-pack, all your handsets come preregistered to the base.

Your phone is GAP compatible, which means you can register other DECT (Digitally enhanced cordless telephone) GAP compatible handsets to your base and register your handset to other GAP compatible bases. You can use a total of 5 handsets with your base. Your handset can only be used with one base at any time. To register a handset to your base, see page 15. To de-register a handset from your base, see page 15. 3. Press or to scroll to the entry you want. If you want to delete all calls log, skip this step. 4. Press 5.

Press 6. Press or . . . to select "DELETE ?" or "DELETE ALL ?".

7. "CONFIRM ?" is displayed. Press 1. Press View details of the calls log 18 to access the main menu. Allegro_CID.

book Page 19 Tuesday, January 15, 2008 3:07 PM If you already have 5 handsets registered to your base and you want to register a new handset, you will first need to deregister one of your existing handsets, see 'De-registering a handset', page 15. With more than one handset you can make internal calls, transfer calls and hold conference calls. If the called handset does not answer, press the external caller. to return to Conference call You can hold a 3-way conversation (conference call) between your handset, an external caller and another internal handset user. During an external call: 1. Press . The external caller is put on-hold. 2. Enter the number of the handset you want to have a conference call with using the number keypad. The called handset will ring.

3. When the called handset answers, press on the initiating handset to start your conference call. 4. Any handset can press conference call. at any time to leave the Register your handset to another base Follow the procedure for registering shown in the other manufacturer's user guide. Call another handset (internal call) 1. Press . The symbol and are displayed and you will hear the internal call dialling tone. 2. Enter the number of the handset you want to call using the number keypad.

Answer an external call while on an internal call During an internal call, if an external caller is trying to get through, you will hear a series of short beeps to alert you to the call. If you have caller ID, the caller's information will also be displayed. 1. To end the internal call, press 2. Press .

to take the external call. 13. Simple solutions The most common problems often have the simplest solutions. We hope that you will not experience any problems with your product, but in the event that you do, this section hopes to overcome any problems quickly and with minimum effort. Firstly, check that: . the telephone line cord is correctly connected.

. the mains power cord is correctly connected and switched on.



[You're reading an excerpt. Click here to read official MOTOROLA D203 user guide](http://yourpdfguides.com/dref/2347482)
<http://yourpdfguides.com/dref/2347482>

· the batteries is charged and not in need of replacing. Transferring a call You can transfer an external caller from your handset to another internal handset. During an external call: 1. Press . The external caller is put on-hold. 2. Enter the number of the handset you want to have a conference call with using the number keypad. English 19 3. When the called handset answers, press or place the handset backs on the base to transfer the call.

Allegro_CID.book Page 20 Tuesday, January 15, 2008 3:07 PM English If you have more than one handset registered to your base remember to check the connections of these too. If you are still experiencing a problem, you are likely to find a solution below. equipment if it is placed too close. We recommend you leave a distance of at least one metre to avoid this. Cannot make a call · Is Call Barring set? - see page 14. Handset/Base No dial tone · Is the handset registered to the base? see page 15. · Is the symbol flashing and can you hear a beep during a call? if so, move closer to the base as you are out of range. Cannot dial out · Is symbol displayed? - if so, the keypad lock is on, see page 10. Handset does not ring · The ringer volume may be set to off, see page 12. · Is the symbol flashing? - if so, move closer to the base as you are out of range. Handset is not charging properly · Check that the charge light is on and that the handset is sitting correctly in the base. Clean the charging contacts with a dry cloth. · Are you using the power adaptor supplied with your phone? Handset will not link up with the base · Is the symbol flashing? - if so, move closer to the base as you are out of range. · Is the handset registered to the base? - see page 15.

· Buzzing noise on my radio, TV, computer or hearing aid? Sometimes your phone may interfere with other electrical Caller ID Caller's details are not displayed · Have you subscribed to a caller ID service? If not, contact your network provider. · The caller may have withheld their details. · Let the phone ring a couple of times as there may be a delay in receiving the caller ID information. Caller's name is not displayed even though it is stored in the phonebook · Have you stored the telephone number with the full STD (dialling) code in the phonebook? The name will only be displayed if an exact number match is found. 14.

General information IMPORTANT This equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services. This product is intended for connection to analogue public switched telephone networks and private switchboards in the European Union. Safety · Only use the power supply suitable for this model. Using an unauthorised power supply will invalidate your guarantee and may damage the telephone. 20 Allegro_CID.book Page 21 Tuesday, January 15, 2008 3:07 PM · Use only the approved rechargeable batteries supplied. · Do not open the handset (except to replace the handset batteries) or the base. This could expose you to high voltages or other risks. · Radio signal transmitted between the handset and base may cause interference to hearing aids.

· It is recommended that advice from a qualified expert be sought before using this product in the vicinity of emergency/intensive care medical equipment. · It is recommended that if you have a pacemaker fitted you check with a medical expert before using this product. · Your product may interfere with other electrical equipment, e.g. TV and radio sets, clock/alarms and computers if placed too close. It is recommended that you place your product at least one metre away from such appliances to minimise any risk of interference. · Never dispose of batteries in a fire. There is a serious risk of explosion and/or the release of highly toxic chemicals. This marking or statement shall include the following or similar text: CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Compliance is checked by inspection. Cleaning · Clean the handset and base (or charger) with a damp (not wet) cloth, or an anti-static wipe. Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock. Environmental · Do not expose to direct sunlight. · The handset may become warm when the batteries are being charged or during prolonged periods of use. This is normal. However, we recommend that to avoid damage you do not place the product on antique/veneered wood. · Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces. @@@@ with some lithium batteries).

The following applies: if the battery is placed in an OPERATOR ACCESS AREA, there shall be a marking close to the battery or a statement in both the operating and the servicing instructions; if the battery is placed elsewhere in the equipment, there shall be a marking close to the battery or a statement in the servicing instructions. English 21 Allegro_CID.book Page 22 Tuesday, January 15, 2008 3:07 PM English Product disposal instructions The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life. The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimize the impact on the environment, treat any hazardous substances and avoid the increasing landfill. Product disposal instructions for residential users When you have no further use for it, please remove any batteries and dispose of them and the product per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased. Product disposal instructions for business users Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal. warranty will not apply if the type or serial numbers on the product have been altered, deleted, removed, or made illegible. What Is Not Covered By The Warranty · Defects or damage resulting from use of the Product in other than its normal and customary manner or by not following the instructions in this user manual. · Defects or damage from misuse, accident or neglect.

· Defects of damage from improper testing, operation, maintenance, adjustment, or any alteration or modification of any kind.



[You're reading an excerpt. Click here to read official MOTOROLA D203 user guide](http://yourpdfguides.com/dref/2347482)
<http://yourpdfguides.com/dref/2347482>

· Products disassembled or repaired in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify any warranty claim. · Defects or damage due to range. · Defects or damage due to moisture, liquid or spills. · All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use. · Products rented on a temporary basis. · Periodic maintenance and repair or replacement of parts due to normal usage, wear and tear. **Warranty Information** The authorized Motorola dealer or retailer where you purchased your Motorola product will honour a warranty claim and/or provide warranty service. Please return your telephone to your dealer or retailer to claim your warranty service. Do not return your telephone to Motorola.

In order to be eligible to receive warranty service, you must present your receipt of purchase or a comparable substitute proof of purchase bearing the date of purchase. The telephone should also clearly display the serial number. **The Technical Information** How many telephones can I have? All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your telephone has a REN of 1. A total REN of 4 is allowed.

If the total REN of 4 is exceeded, the telephones may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 4. 22 Allegro_CID.book Page 23 Tuesday, January 15, 2008 3:07 PM R&TTE This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC, including compliance with ICNIRP standard electromagnetic energy exposure.

You may need to use the recall function if you are connected to a switchboard/PBX (Private Branch Exchange).

Contact your PBX supplier for further information. **Declaration of Conformance** Hereby, Motorola declares that this telephone is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The Declaration of Conformance for this telephone is published on the website: <http://www.motorola.com/eu/radios/technicaldocumentation> **Connecting to a switchboard** This product is intended for use within the European Union for connection to the public telephone network and compatible switchboards, which support tone and pulse dialling and timed break recall. If in doubt please consult your service provider. **Inserting a pause** With some switchboards, after dialling the access code you may have to wait for a moment while the switchboard picks up an outside line so you will need to enter a pause in the dialling sequence. Press and hold Spkr/Pause button to insert a pause (P) before entering the telephone number. You may also need to enter a pause when storing international numbers or charge card numbers. English 23 Any additional handsets and chargers that you register have a REN of 0.

Recall Allegro_CID.book Page 24 Tuesday, January 15, 2008 3:07 PM 24 English Allegro_CID.book Page 25 Tuesday, January 15, 2008 3:07 PM English 25 Back-Cover.fm Page 26 Tuesday, January 15, 2008 4:55 PM , the Stylised M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. © Reg. U.S. Pat. & Tm. Off.

© Motorola, Inc. 2008 Printed in P.R.C Part Number: 6864308V01 *6864308V01* UCZZ01912ZZ(0).



[You're reading an excerpt. Click here to read official MOTOROLA D203 user guide](#)

<http://yourpdfguides.com/dref/2347482>