



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA D213. You'll find the answers to all your questions on the MOTOROLA D213 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual MOTOROLA D213**  
**User guide MOTOROLA D213**  
**Operating instructions MOTOROLA D213**  
**Instructions for use MOTOROLA D213**  
**Instruction manual MOTOROLA D213**



[You're reading an excerpt. Click here to read official MOTOROLA D213 user guide](http://yourpdfguides.com/dref/2347493)  
<http://yourpdfguides.com/dref/2347493>

**Manual abstract:**

4. 5. 6. @@Answering machine 13 Select and record your OGM 13 Ring delay 14 Toll Saver mode (economy setting) 14 Record a memo 14 Play back a memo directly 14 Listening to your messages 14 Recording time available 15 Delete all old messages and memo 15 TAM Alert 15 Call screening 15 Answering Mode 15 Remote operation 16 Remote operation table 16 10. Handset and base menu settings 17 Handset earpiece 17 Handset speaker 17 Handset ringer volume 18 Handset ringer type 18 Auto answer 18 Alarm 18 Handset Label 19 Base ringer volume 19 Base ringer type 19 Call barring 19 11. Settings menu 19 English 1 Allegro\_CID TAD.book Page 2 Tuesday, January 15, 2008 4:30 PM 12. 13. 14. 15.

16. 2 Tones 19 Flash 20 Changing the flash time 20 Dial mode 20 Registering a new handset 20 De-register a handset 21 Base PIN code 21 Selecting a base 21 Resetting your phone 22 Default settings 22 Network services 22 Caller ID 22 Calls log 23 View the calls log 23 Dial a calls log number 23 Copy a calls log number to the phonebook 23 Delete calls log entries 23 View details of the calls log 24 Message Waiting 24 Using extra handsets 24 Register your handset to another base 24 Call another handset (internal call) 24 Transferring a call 25 Conference call 25 Simple solutions 25 Handset/Base 25 Caller ID 26 General information 26 Safety information 26 Replaceable batteries 27 Cleaning 27 Environmental 27 Product disposal instructions 27 Warranty Information 28 Technical Information 28 R&TTE 28 Declaration of Conformance 29 Connecting to a switchboard 29 Inserting a pause 29 Recall 29 English Allegro\_CID TAD.book Page 3 Tuesday, January 15, 2008 4:30 PM Follow these simple steps to prepare your phone ready for use. Finding a location Make sure your phone is:

· Within 1.8 metres of a power and phone socket so that the cords will reach.  
· At least 1 metre away from other electrical appliances, to avoid interference. · Not located in humid or damp conditions, e.g. in a bathroom. Connecting your phone Connect the base power supply into the socket on the back of the base.

Plug the other end into the mains power socket. WARNING Use only the power supply that came with your phone. Only use the power supply TEN PAO G060040D25, 6V DC (center plus mark) 400mA 2.4VA Using another power supply could seriously damage your phone and invalidate your warranty. Do not connect the telephone line cord until your handset is fully charged. This will prevent the risk of the phone being answered before the batteries are charged.

Answering the phone before the batteries are fully charged may prevent them from reaching their optimum capacity. WARNING Under no circumstances should non-rechargeable batteries be used. Only use the supplied batteries or you will invalidate your guarantee and may damage the telephone. Battery low warning If the empty battery symbol is displayed on the handset, or if you hear the low battery tone during a call, you will need to recharge your handset.

NOTE If you set the "BATTERY LOW" tone to off, the low battery tone will not sound. We recommend that you place the handset back on the base between use to ensure that it is always fully charged. Battery Performance The handset may become warm during charging, but this is normal. The handset will give 10 hours talk time and 170 hours standby time on a full charge. New NiMH batteries do not reach their full capacity until they have been fully charged. Preparing the handsets Installing and charging the handset batteries 1. On the handset: Remove the battery compartment cover. English 3 1. Setting up Press down on the semi-circle indent and slide the cover off. Connect the supplied batteries with the correct polarity.

Slide the battery cover back until it clicks securely into place. 2. To charge the battery, place the handset on the base. The charging light in the base illuminates. When the handset is fully charged all the bars of the battery symbol will be filled. If the charging light does not come on, reposition the handset in the base, ensuring that the charging points contact. You must charge each handset for 16-20 hours before use. Allegro\_CID TAD.book Page 4 Tuesday, January 15, 2008 4:30 PM English Over time, as the batteries wear out, the charge capacity will reduce, so reducing the talk/standby time of the handset. Eventually the batteries will need to be replaced.

10.Press . or until "DAY OF WEEK" is displayed and press Setting the answering machine date and time Your answering machine comes pre-set to 'Answer On' and is ready to answer calls and take messages. So that you know exactly when each call was received, you should set the correct date and time. 11.Press or to select day of the week and press . For further information on how to use the answering machine, see page 13. Connecting the telephone line cord Connect the telephone line cord into the TEL LINE socket on the back of the base. Connect the telephone line cord adapter to the other end and plug into the telephone wall socket. Only use the telephone line cord supplied or your phone may not work correctly.

Setup is now complete. You can make and receive calls on your phone. Setting the date and time The phone uses the 12 or 24 hour clock. In standby mode: 1. Press 2. Press 3. Press 4. Press 5. Press 6. Press .

7. Press . 8. Press or until "SET TIME" is displayed and press . .

9. Enter Hour and Minute using the keypad, and press or to select "24 - HOUR" or "12 - HOUR" and press or or or or . to select "HS SETTINGS" and press to select "DATE & TIME" and press to select "DATE FORMAT" and press to select "MM - DD" or "DD - MM" and press until "TIME FORMAT" is displayed and press . . .

4 Allegro\_CID TAD.book Page 5 Tuesday, January 15, 2008 4:30 PM Controls & Functions Handset Speaker (back) Up/down Earpiece/Receiver Menu/OK Display Hook Cancel Speaker/Pause Phonebook Intercom Redial/Flash Temporary Tone Microphone #/Lock English 5 2. Your Handset Cancel · Use to delete incorrect digits or letters during a text entry and number entry. · Press and hold to delete entire string during a text entry and number entry. · Press to go back to the previous menu during Menu operation. · Press and hold to return to standby mode during Menu operation. · Press and hold to turn off the snooze. · Press to mute the conversation. Hook · Press to make and receive calls.

· Press to end calls. Up · Press during a call to increase the earpiece and speaker volume. · Use to scroll through the list and menu options. · Press to increase the handset ringer volume when the phone rings. · Press to display CID log. Down · Press during a call to decrease the earpiece and speaker volume. · Use to scroll through the list and menu options. · Press to decrease the handset ringer volume when the phone rings.



**You're reading an excerpt. Click here to read official MOTOROLA D213 user guide**

<http://yourpdfguides.com/dref/2347493>

Phonebook · Use to access the phonebook list. · Press to exit from a text and number entry during menu operation.

Body.fm Page 6 Tuesday, January 15, 2008 5:36 PM Redial / Flash · Use to access the redial list and menu options from standby mode. · Press for flash function during talk mode. · Press and hold to access the redial list from talk mode. Menu/OK · Press to access the menus from standby mode.

· Press to confirm a setting. · Press and hold to power on/off the handset. · Use with # to switch the handset keypad lock On or Off. Intercom · Use when making internal calls, conference calls or for transferring calls (if you have more than one handset registered to your base). #/Lock · Use with Menu/OK key to switch the handset keypad lock On or Off.

\*(Temporary Tone) · When the dial mode is pulse, long press to change the following dials to the tone (Mix dialling). Speaker/Pause · Used to enter the hands free mode. · Press and hold for pause function. Base English Skip Back Play/Stop Delete Skip Forward Answer On/Off 3. Your base Find handset · Press to make the handset ring. Speaker Find Handset Volume down Volume up 6 Body.fm Page 7 Tuesday, January 15, 2008 5:36 PM Skip back · Press to replay messages. Answer On/Off · Press to switch your answering machine on and off. Volume down · Press to decrease the speaker volume. Find Handset · Press to locate a misplaced handset.

· Press and hold for registering handsets. Play/Stop · Press to play messages. · Press to stop playback. Skip forward · Press to play next message. Delete · Delete a message. Volume Up · Press to increase the speaker volume. Volume Down · Press to decrease the speaker volume. Symbol Explanation Menu Indicates more characters to display to the left Indicates more characters to display to the right Indicates new CID & CID list is full (flashing) Displayed when viewing the phonebook list or in the phonebook menu. Flashes when the phonebook is full. Always displayed when your handset is on, shows the battery status.

Flashing when you have subscribed to a message waiting service and you have a new message waiting. Remains steady when the line is in use. External call in progress Internal call in progress Indicates the alarm has been set. 5. Your handset display The following figure shows the layout of icons on your handset display.

English 7 4. Your Answering Machine Allegro\_CID TAD.book Page 8 Tuesday, January 15, 2008 4:30 PM English Symbol Explanation Always displayed when your handset is on. If it flashes and you hear a warning tone during a call if the handset moves out of range, you will need to move closer to the base for clearer reception. Displayed when the keypad has been locked.

Talk by speaker phone Displayed when you have a new message. Flashing if the answering machine is full. Function Preparatory call Adjust earpiece volume End a call Receive a call Redial Mute Dial from the Caller ID list Store phonebook number Button press Enter number, During a call, Phone rings, or or . or . or place handset on base. , select the number, . During a call, a call press Standby Display Once charged, your handset display will be as below, displaying the handset name and number, and time. This is referred to as 'standby mode'. For example: .

To resume again. . . , select "CID BOOK", select the entry, or , select "PHONEBOOK", , select "ADD ENTRY", enter name, , enter number, , select tone, . , select the entry, . ial Your handset saves the last 10 numbers called into a redial list. You can select and redial any number from the list at a later time. Each handset has its own redial list. Numbers stored in the redial list can be up to 32 digits long. From standby mode: 1. In standby mode, press to display the last number called.

6. Select distinctive ring if required. Press or to select a ringer. Press . You will hear a beep to confirm the entry is stored.

Deleting numbers from the redial list 1. In standby mode, press to display the last number called. 2. Press or to display any of the last 10 numbers called. . 3. With the number you want displayed, press 10 2. Press or to display any of the last 10 numbers called. Allegro\_CID TAD.book Page 11 Tuesday, January 15, 2008 4:30 PM 5. "CONFIRM ?" appears. Press . Press and standby mode. to unlock the keypad and return to Mute When on a call you can mute the handset microphone and speak privately to someone in the same room, without your caller hearing you. 1.

During a call, press . "CALL MUTED" is displayed while mute is on and your caller cannot hear you. 2. To resume your call, press again. 8. Using the phonebook You can store your 50 frequently used names and numbers in the phonebook for easy dialling. Press to exit the phonebook menu and return to standby at any time. Store a phonebook name/number Phonebook entries are stored alphabetically. 1. Press 2.

Press Press or . . to select "PHONEBOOK". Finding/paging handsets You can use the button on the base to locate a missing handset or page the user (paging calls cannot be answered by a handset). Press on the base.

Any handsets registered to your base will ring. To stop the paging ring: Press any key on the handset or press on the base again. If you do not stop the paging ring, it will stop automatically after 60 seconds. 3. Select "ADD ENTRY".

Press . 4. "NAME ?" appears. Enter name using the keypad, then press . Stored names can be up to 12 letters long. Press to delete an incorrect letter. Entering names For example, to enter the name JOHN: For J, press For O, press For H, press once. three times. twice. Keypad lock The keypad lock helps prevent accidental dialling when you are carrying the handset around and can also be used to stop younger children dialling out accidentally.

Switch the keypad lock ON: English 11 4. Press or to select "DELETE" to delete the number selected or "DELETE ALL" to delete all numbers in the list. Press . Press and . symbol appears. Switch the keypad lock OFF: Allegro\_CID TAD.book Page 12 Tuesday, January 15, 2008 4:30 PM English For N, press twice. . . Press 1.

Press 2. Press Press 3. Press to exit and return to standby. . or .

or to select "CHANGE ENTRY". Press . to select "PHONEBOOK". To enter a space, press Edit a phonebook name/number 5. "NUMBER ?" is displayed. Enter the number. Press Stored numbers can be up to 20 digits long. Press Press to delete an incorrect digit. to confirm the number. 6. "MELODY 1" is displayed. Press or to select a type and press . The phonebook entry is now stored. Entering a pause in a stored number You may need to enter a pause in some international or charge card numbers or if you are connected to a switchboard.



[You're reading an excerpt. Click here to read official MOTOROLA](http://yourpdfguides.com/dref/2347493)

[D213 user guide](http://yourpdfguides.com/dref/2347493)

<http://yourpdfguides.com/dref/2347493>

When storing a number, at the point where you want a pause, press and hold .

A "P" will be shown in the display. 4. Press or to display the name for the entry you want (or search alphabetically). 5. Press to access the phonebook menu. 6. Press repeatedly to delete any incorrect letters, then enter the correct letters using the keypad and press . 7. The number is displayed. Press repeatedly to delete any incorrect digits, and enter the correct number using the keypad and press .

8. Select a melody type and press 1. Press 2. Press Press 3. Press .

or . or to select "DELETE ENTRY" or "DELETE ALL". Press . to select "PHONEBOOK" .

View and dial a phonebook entry 1. Press , and the first alphabetical entry is displayed. 2. Press or to scroll through the entries and display the entry you want. Or Search alphabetically for the entry. To search alphabetically Enter the first letter of the name you want using the keypad. E.g. for HELEN, press twice, then use the exact entry you want. or to display Delete a phonebook name/number 12 3.

Press Or to dial the number. Allegro\_CID TAD.book Page 13 Tuesday, January 15, 2008 4:30 PM 5. "CONFIRM ?" is displayed. Press . Phonebook status

This allows you to show how many entries are stored in the phonebook. 1. Press 2. Press Press or . .

. to select "PHONEBOOK". 3. Press or to select "PB STATUS". Press The phonebook status is displayed.

5. Press or to select "OFF" or "ON" and press . When the answering machine is switched on, the number of messages stored in your answering machine appears. The number of messages on the base will go out when set to OFF. Outgoing message Your answering machine comes with a pre-set outgoing message (OGM) that is played to your callers when your answering machine takes a call.

The pre-set message is "Hello your call cannot be taken at the moment. Please leave your message after the tone." You can also record your own personalised OGM. This will replace the pre-set OGM. 9. Answering machine The answering machine comes pre-set to "Answer On" and is ready to answer calls and take messages once your phone is set up (see page 4). Whenever you use the answering machine, you will hear voice prompt instructions to assist you. Switch the answering machine on/off Press on the base to switch the answering machine ON or OFF. OR 1. Press 2.

Press 3. Press or or on the handset to access the main menu. to select "TAM" and press . . Select and record your OGM Your OGM can be up to 30 seconds long. If you record a new OGM, it will replace the current OGM. 1. Press 2. Press 3. Press 4.

Press 5. Press . 6. Press or to select "PLAYBACK", "RECORD", or "DEFAULT". PLAYBACK: the active outgoing message for the Answering mode option will be played.

or or or or to access the main menu. to select "TAM" and press . . . to select "TAM SETTINGS" and press to select "SET OGM" and press to select "ANS WITH REC " or "ANS NO REC" and press to select "TAM SETTINGS" and press English 13 4.

If you select "DELETE ENTRY", press or to display the name for the entry you want (or search alphabetically). Press . 4. Press or to select "TAM ON/OFF" and press . Allegro\_CID TAD.book Page 14 Tuesday, January 15, 2008 4:30 PM RECORD: Record your own outgoing message after the announcement "Please speak after the tone". To stop, press . When you are finished, press . DEFAULT: Remove any used recorded outgoing message, and set the active message back to the default setting. Press to confirm.

English Record a memo You can use your phone to record a memo message/reminder for another user of your phone. The memo can be up to 3 minutes long and can be played back with your answering machine messages. You can only store one memo at a time. 1. Press 2. Press or to access the main menu. to select "TAM" and press . Ring delay The ring delay is the number of rings after which your answering machine will take an incoming call and play your outgoing message. You can select from 2 to 9 rings or Toll Saver mode. Toll Saver mode (economy setting) Toll saver can save you the cost of a call when you ring in to access your messages remotely (see page 16 for remote operation).

If your answering machine answers after 3 rings then you have new messages. If it answers after 7 rings then there are no new messages. This means that you can hang up after 3 rings knowing you have no new messages and save yourself the cost of the call. 1. Press 2.

Press 3. Press 4. Press 5. Press press or or or or . to access the main menu.

to select "TAM" and press . . . 3. Press or to select "MEMO" and press . 4. After the announcement "Please leave your message after the tone", speak your message clearly into the handset microphone. While recording memo, "RECORDING" appears. To stop recording press . 5.

When you are finished, press . Play back a memo directly 1. Press . The memo is played back over the base speaker. The day and time memo was recorded are announced. 2. Press to stop playback at any time. To delete the memo: Press at any time during playback, after which 'Message deleted' is announced. See 'Listening to your messages', for information on how to play back answering machine messages/memos. to select "TAM SETTINGS" and press to select "SET RINGS" and press Listening to your messages When you have new messages, the number of new messages will flash on the base display, and "TAM" appears on the handset display.

When the message alert is on, and you have new messages stored on your answering machine, you will hear a tone every 60 seconds. Any new messages will be played back to select from 2-9 rings or "TOLL SAVER" and 14 Allegro\_CID TAD.book Page 15 Tuesday, January 15, 2008 4:30 PM Recording time available Up to 10 minutes of messages can be recorded. Press to play your messages. The total number of new (or old) messages is announced.

As each message is played, the day and time the message was received are announced. Use or to adjust the volume during playback. During message playback: Press to skip forwards and play the next message. Press to replay the current message. If you press while the day/time are playing back, the previous message will be played back.

Press to stop message playback. Press to delete the currently playing message. You can also play back your message from the handset by following step: 1. Press 2. Press or to access the main menu. to select "TAM" and press . Delete the message Stop playing the message Delete all old messages and memo You cannot delete new messages. You must listen to messages before they can be deleted. Press and hold . Then you will hear "All messages deleted.

" TAM Alert When the message alert is on, and you have new messages stored on your answering machine, you will hear a tone every 60 seconds.



[You're reading an excerpt. Click here to read official MOTOROLA D213 user guide](http://yourpdfguides.com/dref/2347493)

<http://yourpdfguides.com/dref/2347493>

The message alert can be set to On or Off. In standby mode: 1. Press 2. Press 3. Press 4. Press 5. Press or or or or to access the main menu. to select "TAM" and press . .

. . to select "TAM SETTINGS" and press to select "TAM ALERT" and press to select "ON" or "OFF" and press 3. Press or to select "PLAY MESSAGE" and press . While playing a message, you can skip, repeat, and delete the message by pressing the handset button.

Button Function Skip the message Repeat the message Call screening When a caller is leaving a message you can listen in over the base loudspeaker and decide if you want to take the call in person. Answering Mode You can set different answering modes. Choose from "ANS WITH REC" or "ANS NO REC". "ANS WITH REC" allows user to leave a English 15 first in the order they were received. Then you can play back all messages, new and old.

Button Function Allegro\_CID TAD.book Page 16 Tuesday, January 15, 2008 4:30 PM English message. "ANS NO REC" makes the answering machine answer calls but it won't let callers leave a message. "A" appears on the base display if you set to "ANS NO REC". In standby mode: 1. Press 2. Press 3. Press 4. Press 5. Press .

or or or or to access the main menu. to select "TAM" and press . . . to select "TAM SETTINGS" and press to select "TAM MODE" and press 5. The remote operation menu will begin to play to you. The remote operation functions are shown in the table on page 16. To stop play at any time and hear the menu options again, press . When your answering machine is on: If you left your answering machine switched on, you can ring your phone from another phone and enter your remote security code to listen to your messages. 1.

Call your phone from any external Touchtone™ phone or mobile phone. 2. When you hear your OGM, press . 3. Enter your 4-digit PIN code. The pre-set remote PIN code is 0000. If you enter the PIN code incorrectly you will hear "Enter security code". You are then given two more attempts to enter the correct PIN code before the line is disconnected. 4. The remote operation menu will begin to play to you.

To stop play at any time and hear the menu options again, press . 5. You can now control your phone remotely by pressing any of the option buttons announced. If no button is pressed for 15 seconds after the announcement, the line will be disconnected. to select "ANS WITH REC" or "ANS NO REC" and press Remote operation When your answering machine is off: If your answering machine is switched off and you are out and about, you can ring your phone from another phone to switch it on. You can then listen to any messages that have been stored. 1. Call your phone from any external Touchtone™ phone or mobile phone. 2. After 15 rings your answering machine will take the call.

3. Press . 4. Enter your 4-digit security code. The pre-set remote PIN code is 0000. If you enter the PIN code incorrectly you will hear "Enter security code". You are then given two more attempts to enter the correct PIN code before the line is disconnected. Remote operation table Button Function Play main menu options 16 Allegro\_CID TAD.book Page 17 Tuesday, January 15, 2008 4:30 PM Play messages Delete all messages Switch answering machine On/Off Record OGM Check the remote security PIN code 1. Press 2.

Press 3. Press or or to access the main menu. to select "TAM" and press . . 10.

Handset and base menu settings Handset earpiece There are 5 earpiece volumes to choose from. 1. Press 2. Press 3. Press 4.

Press 5. Press or or or to access the main menu. to select "HS SETTINGS" and press to select "AUDIO SETUP" and press to select "EARPIECE V." and press . . . to select "TAM SETTINGS" and press 4. Press or to select "SECURE CODE" and press . 5. Change the remote security PIN code using the number keypad and press .

To operate your phone remotely from another phone, you need to enter the remote PIN code. For security reasons you should change this code. Always keep a record of your remote PIN code. The remote PIN code is different from the base PIN code. @@1. Press 2. Press 3. Press 4. Press or or or to access the main menu. to select "TAM" and press .

. @@1. Press 2. Press 3. Press 4.

Press 5. Press or or or to access the main menu. @@. @@ "PIN ?" appears. Enter your base PIN code.

@@ You can also select volume Off if you do not want to be disturbed. @@1. Press 2. Press 3. Press 4. Press . 5. Press or to select "VOLUME" and press . @@ Press to confirm. or or or to access the main menu.

@@@@@The default setting is On. 1. Press 2. Press 3. Press 4. Press or or or to access the main menu. @@ Press to select ON or OFF. Press . . @@1.

Press 2. Press 3. Press or or to access the main menu. @@ Press . .

Handset ringer type There are 10 handset ringer melodies. @@1. Press 2. Press 3. Press 4.

Press . 5. Press or to select "MELODY" and press . @@ or or or to access the main menu. @@. 4. Press or to select "ON" or "OFF". Press . 5. @@6.

Press 7. Press . or to select "SNOOZE ON" or "SNOOZE OFF". @@ When the reminder occurs, your phone will ring. To stop the alarm tone, press any key on the handset. @@ @1. Press 2. Press or to access the main menu. to select "HS SETTINGS" and press . 5.

Press or to select the melody you want. @@1. Press 2. Press or to access the main menu. to select "HS SETTINGS".

Press . 3. Press or to select "HS LABEL". Press . 4.

Enter the name using the number keypad (up to 6 characters). @@1. Press 2. Press 3. Press 4. Press or or or to access the main menu. to select "BS SETTINGS" and press to select "RING SETUP" and press . . . 3.

Press or to select "BARRING". Press . 4. "PIN ?" is displayed. Enter the PIN code using the number keypad. Press . 5. Press or to select "ON" or "OFF". Press to confirm. 11.

Settings menu Tones You can switch on or off the tones for key touch, battery low, and out-of-range alarm. For example, when the key tone is set to ON, you will hear a tone each time you press a keypad button. 1. Press 2. Press .

3. Press 4. Press or or or to access the main menu. to select "HS SETTINGS". Press to select "TONE SETUP".

Press to select the option you want . . until "BS VOLUME" is displayed and press 5. Press or to select the volume you want (you will hear a sample of each as you scroll through), and press to confirm. Base ringer type There are 5 base ringer melodies to choose from. 1. Press 2. Press 3. Press or or to access the main menu. to select "BS SETTINGS" and press to select "RING SETUP" and press .

English 19 Handset Label 4. Press or to select "BS MELODY" and press . Allegro\_CID TAD.book Page 20 Tuesday, January 15, 2008 4:30 PM English "KEY TONE" "BATTERY LOW" "RANGE ALARM" Press 5.

[You're reading an excerpt. Click here to read official MOTOROLA](#)



[D213 user guide](#)

<http://yourpdfguides.com/dref/2347493>

Press . or to select "ON" or "OFF". Press to confirm. if your switchboard uses Pulse dialling or if you cannot make a call using Tone dialling. 1. Press 2. Press . 3. Press 4. Press or to select "DIAL MODE" and press to select "TONE" or "PULSE" and press . .

or to access the main menu. until "BS SETTINGS" is displayed and press Flash Recall is used when connected to certain switchboards, for transferring calls to another extension number, and for some network services. Contact your network or switchboard provider for advice on how to use the (flash) button.

Registering a new handset When you register a new handset to your base, you will be asked to enter the base PIN code. The pre-set PIN code is 0000. If you wish to change this code, see page 21. Each handset can only be registered to one base at a time. Before registering, make sure the new handset is fully charged and that you have the base and handset in front of you. On your base: 1. Press and hold until you hear the registration tone. You are now in 'subscription mode'. On the handset you want to register: 2. Press to access the main menu. or to select "REGISTRATION" and press . 3.

Press Changing the flash time You can select the flash time from short or long according to your switchboard requirements. Consult your switchboard provider for advice if unsure which setting you need. 1. Press 2. Press . 3. Press 4. Press or to select "FLASH TIME" and press to select "SHORT" or "LONG" and press . . or to access the main menu.

until "BS SETTINGS" is displayed and press Dial mode You can set your phone to use either Tone or Pulse dialling. The pre-set setting is TONE dialling, where you will hear a tone beep each time you dial a number. Most modern exchanges and switchboards use Tone dialling, so you should not need to change this setting. Only change it 20 4. Press or to select your base number.

If the base already has the maximum number of handsets (5) registered to it, you will hear the reject tone and you will need to de-register one of the existing handsets before you can register the new handset. See the next section below for de-registering handsets. Allegro\_CID TAD.book Page 21 Tuesday, January 15, 2008 4:30 PM On the handset you want to register: 5. Press .

6. "PIN ?" appears. Enter the base PIN code. The pre-set base PIN code is 0000. 7. Press . You will hear a confirmation tone when registration is complete. When in standby mode, the new handset number will be displayed. The handset will automatically be allocated with the next available handset number. If the registration fails, the handset display returns to the display of before the registration.

Base PIN code You need to enter the base PIN code when you are registering handsets. For security reasons you may wish to change the PIN code. You can choose a PIN code up to 4 digits long. If you reset the base from the handset, the base PIN code will be 0000. Always keep a record of your base PIN code. Note your PIN code and keep it in a safe place. If you change the PIN code you will need to use the new code for any handset registered to your base. 1. Press 2. Press or to access the main menu.

to select "BS SETTINGS" and press . De-register a handset If you have more than one handset registered to your base, you can de-register a handset. Before de-registering, make sure all handsets and the base are in standby mode. 1. On a handset not to be de-registered, press access the main menu. 2. Press . 3. Press or to display "TERMINATE HS" and press . .

4. "PIN ?" is displayed. Enter your PIN code and press 5. Press or and press or to 3. Press or to select "MODIFY PIN" and press . 4. Enter the current PIN code using the number keypad and press . 5. "NEW PIN" appears. Enter a new PIN code and press 6.

"CONFIRM" appears. Re enter a new PIN code. Press . . until "BS SETTINGS" is displayed and press Selecting a base You can register a handset to up to 4 bases, e.g. one at work and one at home, and switch between them. Once your handset is registered with other bases, you can specify the base you want to use. 1. Press 2.

Press 3. Press or to access the main menu. to select "HS SETTINGS". Press to select "SELECT BASE". Press .

. to display the handset you want to de-register . English 21 If the handset has been de-registered from the base successfully, you will hear a confirmation tone. Allegro\_CID TAD.book Page 22 Tuesday, January 15, 2008 4:30 PM English 4.

Press Press or . to select the base number. Resetting your phone If you reset your phone, both the base and handset will return to their pre-set (default) settings. If you have more than one handset registered to your base and you complete the following procedure, only the handset you reset and the base will go back to the default settings. For the base: 1. Press 2. Press 3. Press or to access the main menu. to select "BS SETTINGS" and press to select "BS DEFAULT" and press . .

Speaker Volume Base Ringer Type Alarm Tone 4. "PIN ?" appears. Enter your PIN code. Press . The base will reset and the handset will return to standby mode. For the handset: 1. Press 2. Press 3. Press or to access the main menu. to select "HS SETTINGS" and press to select "HS DEFAULT" and press .

. Auto Answer Language Dial Mode Flash Time Base PIN Answering Machine Answer ON/OFF Message Alert Ring delay Remote operation PIN Guidance Language 3 1 OFF Key Tone Battery Low Range Alarm ON ENGLISH TONE SHORT 0000 ON ON 4 rings 0000 English ON ON ON 13. Network services To use caller ID or any other services detailed in this section, you must first contact your network provider and subscribe to the relevant service. 4. "PIN ?" appears.

Enter your PIN code. Press . The handset will reset and the handset returns to the standby. Caller ID With caller ID the caller's number is shown in the handset display as you receive an incoming call so you can see who is calling before you pick up the phone. 12.

Default settings 22 Ringer Volume Earpiece Volume 2 3 Allegro\_CID TAD.book Page 23 Tuesday, January 15, 2008 4:30 PM Only the first 12 digits of the number are displayed. If the number has more than 13 digits you will see the symbol . If your caller's number is stored in the phonebook and an exact number match is found, the caller's name will be displayed instead of the number. 4. Press to dial the entry displayed. Copy a calls log number to the phonebook 1. Press to access the main menu. . The latest 2.

Press or to select "CID BOOK" and press calls log entry is displayed. 3. Press . 4. Press or to select "ADD TO PB". Press . 5. Enter a name using the keypad and press to confirm. If you enter a name that is already stored in the phonebook, you will be prompted to enter another name.



[You're reading an excerpt. Click here to read official MOTOROLA D213 user guide](http://yourpdfguides.com/dref/2347493)  
<http://yourpdfguides.com/dref/2347493>

6.

The number is displayed. To confirm, press . If necessary, you can edit the number, using to delete any incorrect digits and entering new ones using the keypad. 7. Press or to select a distinctive ring.

Press The entry is now saved in the phonebook. . or Calls log To view the Calls log, press , select "CID BOOK" and press or to when the phone is in standby mode. Use scroll. The calls log stores details of the last 40 incoming calls.

It can store numbers up to 20 digits long and names up to 12 characters long. When you have new calls, the number of message appears in the display. When the calls log is full, a new call will replace the oldest call. to scroll to the number you want. Press View the calls log 1. Press to access the main menu. 2. Press or to select "CID BOOK" and press . The latest calls log entry is displayed (or EMPTY if there are no entries). 3.

Press 4. Press 1. Press or or to scroll through the calls log. to continue viewing other calls log entries. to access the main menu. . The latest Delete calls log entries 1. Press to access the main menu. . The latest 2.

Press or to select "CID BOOK" and press calls log entry is displayed. Dial a calls log number 2. Press or to select "CID BOOK" and press calls log entry is displayed. 3. Press or to scroll to the entry you want.

If you want to delete all calls log, skip this step. English 23 3. Press or to scroll and display the entry you want. Allegro\_CID TAD.book Page 24 Tuesday, January 15, 2008 4:30 PM English 4.

Press 5. Press 6. Press or . to select "DELETE ?" or "DELETE ALL". . . 7. "CONFIRM ?" is displayed. Press 1. Press View details of the calls log to access the main menu.

. The latest . 2. Press or to select "CID BOOK" and press calls log entry is displayed. 3. Press 4. Press or or to scroll through the calls log. Press to select "DETAILS". Your phone is GAP compatible, which means you can register other DECT (digitally enhanced cordless telephone) GAP compatible handsets to your base and register your handset to other GAP compatible bases. You can use a total of 5 handsets with your base.

Your handset can only be used with one base at any time. To register a handset to your base, see page 20. To de-register a handset from your base, see page 21. If you already have 5 handsets registered to your base and you want to register a new handset, you will first need to deregister one of your existing handsets, see 'De-registering a handset', page 21. With more than one handset you can make internal calls, transfer calls and hold conference calls.

Press . The date and time of the call will be displayed. Register your handset to another base Follow the procedure for registering shown in the other manufacturer's user guide. Message Waiting If you have subscribed to a message waiting service through your network provider, and you have a message waiting in your mailbox, the symbol will flash on the handset. To listen to your waiting messages, you should call your voice mailbox as instructed by your network provider.

When you have listened to your messages, the no longer be displayed. symbol will Call another handset (internal call) 1. Press . The symbol and are displayed and you will hear the internal call dialling tone. 2. Enter the number of the handset you want to call using the number keypad. Answer an external call while on an internal call During an internal call, if an external caller is trying to get through, you will hear a series of short beeps to alert you to the call. If you have caller ID, the caller's information will also be displayed. 1. To end the internal call, press .

14. Using extra handsets 24 If you purchased a multi-pack, all your handsets come preregistered to the base. Allegro\_CID TAD.book Page 25 Tuesday, January 15, 2008 4:30 PM Transferring a call You can transfer an external caller from your handset to another internal handset. During an external call: 1. Press . The external caller is put on-hold. 2. Enter the number of the handset you want to transfer a call with using the number keypad. 3.

When the called handset answers, press or place the handset back on the base to transfer the call. If the called handset does not answer, press the external caller. to return to Handset/Base No dial tone · Is the handset registered to the base? - see page 20. · Is the symbol flashing and can you hear a beep during a call? - if so, move closer to the base as you are out of range. Cannot dial out · Is symbol displayed? - if so, the keypad lock is on, see page 11.

Handset does not ring · The ringer volume may be set to off. - see page 18. · Is the symbol flashing? - if so, move closer to the base as you are out of range. Handset is not charging properly · Check that the charge light is on and that the handset is sitting correctly in the base. Clean the charging contacts with a dry cloth.

Conference call You can hold a 3-way conversation (conference call) between your handset, an external caller and another internal handset user. During an external call: 1. Press . The external caller is put on-hold. 2. Enter the number of the handset you want to have a conference call with using the number keypad. The called handset will ring. 3. When the called handset answers, press on the initiating handset to start your conference call. 4.

Any handset can press conference call. at any time to leave the 15. Simple solutions The most common problems often have the simplest solutions. We hope that you will not experience any problems English 25 2. Press or to take the external call. with your product, but in the event that you do, this section hopes to overcome any problems quickly and with minimum effort. Firstly, check that: · the telephone line cord is correctly connected. · the mains power cord is correctly connected and switched on. · the batteries are charged and not in need of replacing. If you have more than one handset registered to your base remember to check the connections on these too.

If you are still experiencing a problem, you are likely to find a solution below. Allegro\_CID TAD.book Page 26 Tuesday, January 15, 2008 4:30 PM English · Are you using the power adaptor supplied with your phone? Handset will not link up with the base · Is the symbol flashing? - if so, move closer to the base as you are out of range. · Is the handset registered to the base? - see page 20. · Buzzing noise on your radio, TV, computer or hearing aid? Sometimes your phone may interfere with other electrical equipment if it is placed too close.

We recommend you leave a distance of at least one metre to avoid this. Cannot make a call · Is Call Barring set? - see page 19. · Try switching the mains power off for 15 minutes, then switching on again. Cannot record a memo · Does the symbol appear?: if so, the answering machine may be full.



[You're reading an excerpt. Click here to read official MOTOROLA](http://yourpdfguides.com/dref/2347493)

[D213 user guide](http://yourpdfguides.com/dref/2347493)

<http://yourpdfguides.com/dref/2347493>



You will need to delete some messages, see page 15.

Cannot access my phone remotely · Have you entered the correct remote PIN code? You can only access your phone remotely from a Touchtone™ phone.  
16. General information IMPORTANT This equipment is not designed for making emergency telephone call when the power fails. Alternative arrangements should be made for access to emergency services. This product is intended for connection to analogue public switched telephone networks and private switchboards in the European Union. Caller ID Caller's details are not displayed · Have you subscribed to a caller ID service? If not, contact your network provider. · The caller may have withheld their details. · Let the phone ring a couple of times as there may be a delay in receiving the caller ID information. Caller's name is not displayed even though it is stored in the phonebook · Have you stored the telephone number with the full STD (dialling) code in the phonebook? The name will only be displayed if an exact number match is found. Safety information · Only use the power supply suitable for this model.

Using an unauthorised power supply will invalidate your guarantee and may damage the telephone. · Use only the approved rechargeable batteries supplied. · Do not open the handset (except to replace the handset batteries) or the base. This could expose you to high voltages or other risks. · Radio signal transmitted between the handset and base may cause interference to hearing aids. Answering machine Cannot record messages · Does the symbol appear?: if so, the answering machine may be full. You will need to delete some messages, see page 15. 26 Allegro\_CID TAD.book Page 27 Tuesday, January 15, 2008 4:30 PM · It is recommended that advice from a qualified expert be sought before using this product in the vicinity of emergency/intensive care medical equipment. · It is recommended that if you have a pacemaker fitted you check with a medical expert before using this product.

· Your product may interfere with other electrical equipment, e.g. TV and radio sets, clock/alarms and computers if placed too close. It is recommended that you place your product at least one metre away from such appliances to minimise any risk of interference. · Never dispose of batteries in a fire. There is a serious risk of explosion and/or the release of highly toxic chemicals. · Clean the handset and base (or charger) with a damp (not wet) cloth, or an anti-static wipe. Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock. Environmental · Do not expose to direct sunlight.

· The handset may become warm when the batteries are being charged or during prolonged periods of use. This is normal. However, we recommend that to avoid damage you do not place the product on antique/veneered wood. · Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces. · Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms. · Do not expose your product to fire, explosive or other hazardous conditions. · There is a slight chance your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm. Replaceable batteries If equipment is provided with a replaceable battery, replacement by an incorrect type could result in an explosion (e.g.

with some lithium batteries). @@@@DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS. @@@@Product disposal instructions for residential users When you have no further use for it, please remove any batteries and dispose of them and the product per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased. Product disposal instructions for business users Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal. · Defects of damage from improper testing, operation, maintenance, adjustment, or any alteration or modification of any kind. · Products disassembled or repaired in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify any warranty claim. · Defects or damage due to range. · Defects or damage due to moisture, liquid or spills. · All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use.

· Products rented on a temporary basis. · Periodic maintenance and repair or replacement of parts due to normal usage, wear and tear. English Warranty Information The authorized Motorola dealer or retailer where you purchased your Motorola product will honour a warranty claim and/or provide warranty service. Please return your telephone to your dealer or retailer to claim your warranty service. Do not return your telephone to Motorola.

In order to be eligible to receive warranty service, you must present your receipt of purchase or a comparable substitute proof of purchase bearing the date of purchase. The telephone should also clearly display the serial number. The warranty will not apply if the type or serial numbers on the product have been altered, deleted, removed, or made illegible. What Is Not Covered By The Warranty · Defects or damage resulting from use of the Product in other than its normal and customary manner or by not following the instructions in this user manual. · Defects or damage from misuse, accident or neglect.

Technical Information How many telephones can I have? All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your telephone has a REN of 1. A total REN of 4 is allowed. If the total REN of 4 is exceeded, the telephones may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 4. Any additional handsets and chargers that you register have a REN of 0. R&TTE This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC, including compliance with ICNIRP standard electromagnetic energy exposure. 28 Allegro\_CID TAD.book Page 29 Tuesday, January 15, 2008 4:30 PM Hereby, Motorola declares that this telephone is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The Declaration of Conformance for this telephone is published on the website: <http://www.motorola.com/eu/radios/technicaldocumentation>

Connecting to a switchboard This product is intended for use within the European Union for connection to the public telephone network and compatible switchboards, which support tone and pulse dialling and timed break recall.



[You're reading an excerpt. Click here to read official MOTOROLA D213 user guide](http://yourpdfguides.com/dref/2347493)

<http://yourpdfguides.com/dref/2347493>

If in doubt please consult your service provider. Inserting a pause With some switchboards, after dialling the access code you may have to wait for a moment while the switchboard picks up an outside line so you will need to enter a pause in the dialling sequence. Press and hold Spkr/Pause button to insert a pause (P) before entering the telephone number. You may also need to enter a pause when storing international numbers or charge card numbers. Recall You may need to use the recall function if you are connected to a switchboard/PBX (Private Branch Exchange). Contact your PBX supplier for further information. English 29 Declaration of Conformance Allegro\_CID TAD.book Page 30 Tuesday, January 15, 2008 4:30 PM , the Stylised M Logo and , the Stylised M Logo and l othe trademarks ndicate s uc h he n a e aalllother trademarks iindicateddaasssuh h ereriein rare trademarrks of Motorola,Inc.

® ReegU.S. Pat. & & Tm.fOff.

tradema ks of Motorola, nc. ® R g. . U.S.

Pat. Tm. O f. © Motorola,, Inc. 2008 © Moto o a Inc. 2008 Printed n P. Printed iin P.R.C Part Number: 6864310V01 \*6864310V01\* UCZZ01913ZZ(0) .



[You're reading an excerpt. Click here to read official MOTOROLA D213 user guide](http://yourpdfguides.com/dref/2347493)  
<http://yourpdfguides.com/dref/2347493>