



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA D811. You'll find the answers to all your questions on the MOTOROLA D811 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MOTOROLA D811
User guide MOTOROLA D811
Operating instructions MOTOROLA D811
Instructions for use MOTOROLA D811
Instruction manual MOTOROLA D811



MOTOROLA

Motorola D800 Series

Digital Cordless Phone

Warning EN
Use only rechargeable batteries.
Charge the handset for 24 hours before use.

Téléphone numérique sans fil FR
Avvertimento
Utilisez exclusivement des piles rechargeables.
Laissez le téléphone en charge pendant 24 heures avant une première utilisation.

Digitales Schnurlos-Telefon DE
Warning
Verwenden Sie nur wiederaufladbare Batterien.
Laden Sie das Mobilteil mindestens 24 Stunden vor der Verwendung.

Telefono Cordless Digitale IT
Avvertenza
Servirsi unicamente di batterie ricaricabili.
Caricare il portatile per 24 ore prima dell'uso.

Téléfono inalámbrico digital ES
Aviso
Utilice únicamente baterías recargables.
Cargue el terminal durante 24 horas antes de su uso.



[You're reading an excerpt. Click here to read official MOTOROLA D811 user guide](http://yourpdfguides.com/dref/2441515)
<http://yourpdfguides.com/dref/2441515>

Manual abstract:

@@@ Make internal calls, transfer external calls, hold 3-way conversation between two internal callers and an external caller. You must subscribe to your network provider's Caller Display Service for text messaging to work and you must not withhold your telephone number. a quarterly fee may be payable. Some other network provider lines may not be compatible with this text messaging service. 2. You must subscribe to your network provider's Caller Display or Call Waiting service for these features to work. a quarterly fee may be payable. @@Alternative arrangements should be made for access to emergency. @@@Before you make your first call you will need to set up your phone. @@IMPORTANT Only use the telephone line cord supplied.

This equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services. Mains power adaptor for the base Mains power adaptor for the charger Telephone line cord Wall mounting screws and wall plugs If you have purchased a D801 multiple pack you will also have the following additional items: · Getting started 4 Location 4 Setting up 4 Connecting up the large base 4

Connecting the handset and charger 4 Setting up your D801 4 Set date and time manually 5 2. Getting to know your phone 5 Overview of your handset 5

Handset Display 5 Display icons 6 Overview of the base 6 Navigating the menus 6 Menu map 7 Character map 8 3. Using the phone 8 Switch the handset on / off 8 Make a call 8 Preparatory dialling 8 End a call 8 Receive a call 8 Adjust the earpiece/receiver volume 8 Secrecy 8 Call another handset 8 Transfer a

call 8 3-way conference call 8 Make a handsfree call 9 Answer a call in handsfree 9 Redial a number from the redial lists 9 Save a number from the redial list to the phonebook 9 Delete a redial number/delete all redial 9 To lock the keypad 9 Paging/Find handset 9 Store a name and number 9 View an entry 9 Dial an entry 9 Edit a name and number 9 Edit ringtone 10 Delete an entry 10 Delete entire phonebook 10 Copy an entry to another handset 10 Copy the entire phonebook to another handset 10 Memory status 10 Copy an entry to a SIM card 10 Copy all entries to or from a SIM card 10 Change the dialling code 10

Handset settings 11 Handset ringtone 11 Handset ringer volume 11 Receiver volume 11 Handset name 11 Display language 11 Wallpaper 11 Menu colour 11 Screensaver 11 Light timeout 11 Display contrast 11 Auto talk 11 Key beep 11 PABX access code 12 Base settings 12 Base ringtone 12 Base ringer volume 12

Dialling mode 12 Ring priority 12 Recall mode 12 First ring 12 System PIN 12 Restore default settings 13 ECO mode 13 Clock & alarm 13 Date & time 13 Set alarm 13 Alarm on /off 13 Switch off alarm ring 13 Time format 13 Agenda 14 Add a new event 14 Switch off agenda ring 14 Show agenda details 14 Edit agenda 14 Send agenda as a text message 14 Delete agenda 14 Delete all agendas 14 Calls lists 14 Caller Display 14 Calls lists 14 New calls alert 14 View new missed calls 14 View and dial from a Calls list 15 Copy a Calls list number to the phonebook 15 Send a text message to a Calls list number 15 Delete an entry 15 Delete all entries 15 Call Waiting 15 Voicemail 15 Text messaging 16 Subscribe to the text messaging service 16 Send a text message 16 Standard text entry 16 Receiving and reading text messages 16 Read a new message 16 Read, forward, delete, view and save numbers of texts in the Inbox 16 Edit or send texts in the Drafts box 17 Forward or delete texts in the Outbox 17 Edit templates 17 Deleting texts 17 Add or change Service Centre numbers 17 Set send centre 17 Message alert tone 17 Set message size 17 Add a user mailbox 18 Open and read a mailbox text 18 Edit a user mailbox 18 Delete a user mailbox 18 Set common mailbox sub address 18 Using additional handsets 19 Registering an additional handset 19 Select a base 19 De-register a handset 19 Help 19 General information 20 Safety information 20 Cleaning 20 Environmental 20 Product disposal instructions 21 Warranty Information 21 Declaration of Conformance 21 Inserting a pause 21 Recall 21 Wall mounting 22 Do not place your D801 in the bathroom or other humid areas.

After 24 hours, plug the telephone line cord from the large base into the telephone wall socket. If the icon flashes in the display, you will need to recharge the handset before you can use it again. You need to place your D801 base within 2 metres of the mains power socket and telephone socket so that the cables will reach. Make sure it is at least 1 metre away from other electrical appliances to avoid interference. Your D801 works by sending radio signals between the handset and base.

The strength of the signal depends on where you site the base. putting it as high as possible ensures the best signal. To wall mount your D801 base, see "Wall mounting" on page 22. In ideal conditions, fully charged batteries should give about 10 hours talk time or 100 hours standby time on a single charge. Note that new batteries do not reach full capacity until they have been in normal use for several days. To keep your batteries in the best condition, leave the handset off the base for a few hours at a time. Running the batteries right down at least once a week will help them last as long as possible. The charge capacity of rechargeable batteries will reduce with time as they wear out, giving the handset less talk/standby time. Eventually they will need to be replaced.

After charging your handset for the first time, subsequent charging time is about 68 hours a day.

Batteries and handset may become warm during charging. The D801 has a range of 300 metres outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and handset either indoors or outdoors, the range will normally be up to 50 metres. Thick stone walls can severely affect the range. Plug the large mains power cable into the socket marked on the underside of the base and plug the other end into the mains power wall socket and switch the power on. If you have purchased a multiple pack, this process will need to be carried out for all handsets and chargers: 1. Plug the small mains power cable into the socket marked on the underside of the charger. The icon on your handset indicates when you are in range. When out of range of the base, the screen shows Searching.

The flashes and the handset gives an out-of-range warning tone every minute. This tone is repeated until you move back into range. If you are on a call, the line will hang up. The handset and base will reset to load the correct settings. The standby screen is then displayed and your phone is ready to use You can still make and receive calls without first selecting your country and network operator, however the Welcome screen will re-appear until you have configured your phone country settings.

The base station must be plugged into the mains power at all times.



[You're reading an excerpt. Click here to read official MOTOROLA](#)

[D811 user guide](#)

<http://yourpdfguides.com/dref/2441515>

Do not connect the telephone line cord into the wall socket until the handset is fully charged. Only use the power and telephone cables supplied with the product. The power adaptor with a clear connector is for the base unit and the power adaptor with a red colour connector is for the charger unit. Then slide the compartment cover into place.

Providing you have subscribed to your network's Caller Display service, the date and time is set automatically for all handsets when you receive your first call. If you do not have a Caller Display service you can set the date and time manually. Enter the date using the format DD/MM/YY e. Enter the time in 12 or 24 hour time format. Your D801 is now ready for use. Flashes when out of range or not registered Getting to know your phone Getting to know your phone When storing an entry in the phonebook, press and hold to enter a Pause, page 21. F Talk/ Handsfree In standby mode, press to make and receive calls, page 8. In talk mode, press to switch handsfree on and off, page 8. When off, press to switch the handset back on. I * Press and hold to switch between Tone and Pulse dialling, page 12 J #/ Lock Press and hold to lock the keypad, page 9.

M Wired Headset Socket Please use 2 pin headset with 2. * For this feature to work you must subscribe to your network provider's Caller Display service. Then use or buttons to scroll through the available options. To return to the previous menu level, press Back. . To exit the menu and return to standby, press If no buttons are pressed for 30 seconds, the handset returns to standby automatically. When the memory for TAM, SMS or voicemail messages is full, a white line will appear below their corresponding reminder icon. Flashes if you move out of range. Press and hold to enter registration mode when registering handsets, page 19. N SIM card slot Insert your mobile phone SIM card here to copy to and from the phonebook.

The approximate power levels of your battery are indicated as below: Battery is fully charged. Your D801 has an easy to use menu system. Each menu has a list of options, which you can see on the menu map on the following page. Getting to know your phone Agenda If there is an Event, the following options will be displayed. *If there is already an event on the list, "Event" is displayed.

Getting to know your phone Using the phone The handset display shows the call duration both during and for a few seconds after your call. If you have more than one handset registered to the base, you can make internal calls between two handsets. 1. Press then the number (1-5) of the handset you want to call.

When an internal call is received, the display shows Internal Call Handset X (where X is the calling handset) and the handset number.

Make a call When you receive an external call, the phone rings. The display shows External Call and the caller's number or, if the number matches an entry stored in the phonebook, the name is displayed. During a call, press or to increase or decrease the volume. During a call, press Secrecy. The display shows Secrecy On and your caller cannot hear you. 2. Press Off to return to your caller. Handsfree lets you talk to your caller without holding the handset. It also enables other people in the room to listen to your conversation over the loudspeaker. During a call, you can talk to someone nearby without your caller hearing.

Short press to switch between Abc, abc, ABC and 123 mode long press to switch between input You can hold a 3-way conference call between 2 internal callers and 1 external caller. During a call to an external caller: 1. Press then the handset number (1-5) you want. When the other handset answers you can announce the caller. If you make a mistake press Clear to delete the last digit. When off, press to switch back on. You can transfer an external call to another handset registered to the base. during your call: 1. Press then the handset number (1-5) you want. 2.

Press OK to dial or press End to cancel the calls request and return to the caller. 3. When the other handset answers you can announce the caller. 4. Press to complete the transfer or to switch back and forth between both callers.

If the other handset does not answer, press End to return to your original caller. Using the phone Press on the base again to stop the ringing or, on any handset, press Stop or any button on the handset to stop all handsets ringing. Use the keypad letters to enter names, e. g. To store TOM: Press once to enter T.

Press three times to enter O. Once to enter M. press Press Clear to delete the last character or digit. Or to move backwards or forwards through Press character/digits. Press to switch between upper and lower case. You must enter a name to go with a number. Answer a call in handsfree Enter the first letter of the name you want. The first name beginning with that letter is displayed. If you subscribe to a Caller Display Service and want the name of your caller displayed instead of the number, save the full telephone number including the dialling code to your phonebook. Yower it just by lifting your handset from the charger.

You do not need to press . This sets the standard volume level for the handset earpiece. There are 8 levels to choose from. @@The screensaver comes on when the screen backlight switches off in standby mode. When you press a button on the D801 handset you hear a beep. You can switch this on or off. If you are using more there you can add a new one. @@Or If events are already stored, they are listed. Enter the subject and press Save. If Annually is selected, then the alarm will sound at the event's time.

7. @@If you select a silent reminder, the event subject is displayed on screen but no alarm will sound. If Annually is selected, then the alarm will sound at the event's time. 7. @@To use Caller Display you must first subscribe to the service from your network provider.

a quarterly fee may be payable. To ensure the caller's name is displayed, make sure you have stored the full telephone number, including the dialling code in the phonebook. If the call is from an international number, International will be displayed. If the call is from the operator, Operator will be displayed. If the call is from a payphone, Payphone will be displayed.

If the call is from a ringback request, Ringback will be displayed. If you have subscribed to a Caller Display Service, you will be able to see your caller's number on your handset display (provided it is not withheld) prior to answering the call. If your caller's name and number are stored in the phonebook and a name/number match is found, you will see the caller's name on the display instead. Each handset can hold details of up to 30 answered or unanswered calls and 20 dialled calls. The caller's details are stored in a Calls list whether you answered the call or not. @@@@View new missed calls When you see the new calls alert, press View. You can now scroll or through the Missed Calls list. @@@@Write the message then press Options.



[You're reading an excerpt. Click here to read official MOTOROLA](http://yourpdfguides.com/dref/2441515)

[D811 user guide](http://yourpdfguides.com/dref/2441515)

<http://yourpdfguides.com/dref/2441515>

@@Enter a name then press OK. the number is displayed , press Save.

@@@If you have new voicemail, You have new voicemail is displayed. @@@You can now scroll or through the list. @@@@If these are not available, the display shows Call Waiting. 2. Press to put your current caller on hold and speak to the new caller. 3. @@ 4. Press to finish the current call or to end both calls. @@@@Press Template you want then press Insert. @@If you have Set-Up problems, please check with your Network provider.

@@@@Use the keypad to enter your message. @@ maximum number of characters in a text message is 160. @@@@Phonebook then scroll to the number you want and press Select. Write your reply then press Options and select Send. @@@@Press or to highlight the symbol you want then press Insert.

@@@@@If you have two text phone base stations plugged into one line, you are likely to experience problems receiving text messages. Normally, only one SMS enabled base unit (DECT or cordless) can be plugged into any line. If you do want to use two base units and still receive written text you must delete receive service centre number from one of the base stations. To do this on your D801, see page 17. This will allow you to send text via either base station but texts will only be received on the product with the active receive centre number.

If the base unit with the active receive centre number is a DECT product then all handsets registered to will be able to receive text messages. If the text mailboxes are full when you attempt to write a new message the display shows Memory Full Delete Messages. You must delete messages before you can write and send a new one. Read a new message Received messages are stored in the Inbox. If you press Back the message is stored in the Inbox for reading later. 2. In the Inbox scroll (to more recent messages) or (to earlier list of messages) through the list of messages. 3. Highlight the message you want to read and press Read or press Back to return to Text messaging menu. You can set the templates to your preferred message, up to a maximum of 32 characters.

If you save a message to complete or send later it will be stored in the Drafts box. Only one message can be saved in each user's Drafts box. @@ You can set a message to be up to 612 characters and the message will be sent as up to 4 linked messages each up to 160 characters long. When the Outbox is full, a new message replaces the oldest. To send and receive text messages you need the telephone number of your Network's text Centre. If you accidentally delete the Outgoing or Incoming Service Centre numbers you will need to re-enter them in order for your text Service to work. You can enter up to 4 Service Centre numbers two incoming and two outgoing. If you have more than one 'Server Centre' stored on your D801 you will need to select which one you want to use for sending (see next section). Press Select and enter the number or press Search Your D801 is pre-set to make all text messages available to every user, with all messages sent from and received at a If you delete a template without replacing the text it is marked as Empty. These beeps can be switched on or off. Press Select again to choose Set Send Centre. Press Select to call the sender OR to save the number, scroll to Save and press Select. Enter a name and press

OK, edit the number if required then press Save. scroll or to the ringtone and press Select. The number is saved in the phonebook.

You can see who sent the message and then call them. press Select the sender's number is displayed. Press Dial if you want to call the number. Enter the number for the centre and press Save. To return to standby, close the cover or press .

Press Select and enter a number or search for the number then press Send. When the number is entered, press Send. You can also keep a common box sub address for incoming messages that do not need to be kept private. If you set-up personal user boxes you must tell people your user area number.

@@@@@Enter the password again and press Save. @@@@ 1. The display shows You have X new messages. Mailboxes with new messages are marked with green dots. If you have previously pressed Back, the display shows . Enter the new name and press Save.

9. Enter the new one-digit mailbox number and press Save. 10. Enter the new 4-digit mailbox password and press Save. @@@@If you enter a number already in use, you hear an error beep. Enter a different number. @@@@Mailboxes with new messages are marked with green dots. Press Back to return to the previous menu level or return to standby. Your D801 handset can also be registered to up to 3 other bases. You can then select the base you would prefer to use.

@@@@You cannot de-register the handset you are using. @@Press and hold for 2 seconds until the base Power starts flashing. If the handset is new and the display shows Please Register. Scroll Or If the handset has already been registered to another base the standby display is shown. If necessary, scroll or to a new base you wish to register your D801 handset to and press 4.

The display shows Searching Base X (where X is the chosen base number) then Handset Registered. the handset is automatically assigned the next available handset number. If registration is not successful first time, please repeat the process again in case the base registration period ran out of time. if there are already 5 handsets registered to the base , the registration will fail. You must de-register another handset before you can register the new one.

If your D801 handset is registered to more than one base, you can select which base to use. You can use up to five D801 additional handsets with your D801 base to extend your phone system without needing to install extension sockets for each new phone. Phone does not work Is the telephone cord of the base plugged into the phone socket? Only use the telephone cord supplied with the phone. Cannot dial out or receive calls Has there been a power cut? If so, place the handset back on the base for 10 seconds and try again. If it still does not work disconnect the batteries and mains power for 10 minutes, then reconnect and try again. You have a dial tone, but the phone will not dial out You may need to change the dial mode from tone to pulse, see page 12. If you are connected to a switchboard, check whether you need to dial an access code. The ringer volume may be switched off, see page 11. The batteries may be flat, dead or incorrectly inserted. You hear the busy tone when you press Another handset registered to your D801 base may be on the line.

The send and receive service center numbers are preprogrammed. If you need to change them, please refer to "Add or change Service Centre numbers" on page 17 or contact your service provider. This equipment is not designed for making emergency telephone call when the power fails. Alternative arrangements should be made for access to emergency services. This product is intended for connection to analogue public switched telephone networks and private switchboards in the United Kingdom.



[You're reading an excerpt. Click here to read official MOTOROLA D811 user guide](http://yourpdfguides.com/dref/2441515)
<http://yourpdfguides.com/dref/2441515>

Have you subscribed to a Caller Display service from your network provider? The caller may have withheld their number. An exact name/number match was not found in your directory. You will not be able to receive text messages until you have first sent a message. The first message sent registers you with the text service. More than one text messaging product is plugged into the line.

You can check this by noting if your phone displays your caller's number when you receive an incoming call. If you are using personal user areas please ensure you have given people your user area number and that they are entering it to the end of your telephone number when sending you a text message. You can register a total of 5 handsets to your D801 base and you can register your D801 handset to up to 4 bases. Check that you have not exceeded the limits.

Check that you have entered the correct PIN number (default PIN 0000).

Check that you are at least one metre away from other electrical equipment to avoid interference when registering. Only use the power supply suitable for the D801 range. Using an unauthorised power supply will invalidate your guarantee and may damage the telephone. This could expose you to high voltages or other risks. Radio signal transmitted between the handset and base may cause interference to hearing aids.

It is recommended that advice from a qualified expert be sought before using this product in the vicinity of emergency/ intensive care medical equipment. It is recommended that if you have a pacemaker fitted you check with a medical expert before using this product. Your product may interfere with other electrical equipment, e. It is recommended that you place your product at least one metre away from such appliances to minimise any risk of interference. There is a serious risk of explosion and/or the release of highly toxic chemicals. Base unit does not ring, but the lights are on Have you connected the telephone line correctly? You may have a faulty line or socket. Try using another socket or line. You keep hearing an error beep You have pressed the wrong button in a sequence. Buzzing noise on my phone or on other electrical equipment nearby Sometimes your D801 can interfere with other electrical equipment if it is placed too close. It is recommended that you place your D801 at least one metre away from electrical appliances or metal obstructions to avoid any risk of interference.

The base station power supply or telephone line cord might not be properly connected. Check that the base station power supply is plugged into the mains socket and switched on and that the telephone is plugged into the telephone wall socket. There might be a fault on the line. Check your telephone line is working properly. You might have deleted the server number in error. See page 17 for instructions on how to enter the number. Clean the handset and base (or charger) with a damp (not wet) cloth, or an anti-static wipe. Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock. The handset may become warm when the batteries are being charged or during prolonged periods of use.

this is normal. However, we recommend that to avoid damage you do not place the product on antique/veneered wood. You may also need to enter a pause when storing international numbers or charge card numbers. The symbol shown here and on the product means that the product is classed as Electrical or

Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life. The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimize the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

@@@How many telephones can I have? All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. With different telephone types there is no guarantee of ringing, even when the REN is less than 4. Any additional handsets and chargers that you register have a REN of 0. The authorized Motorola dealer or retailer where you purchased your Motorola product will honour a warranty claim and/or provide warranty service. @Do not return your telephone to Motorola.

@The telephone should also clearly display the serial number. @Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms. Do not expose your product to fire, explosive or other hazardous conditions. There is a slight chance your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm. Defects or damage resulting from use of the Product in other than its normal and customary manner or by not following the instructions in this user manual. Defects of damage from improper testing, operation, maintenance, adjustment, or any alteration or modification of any kind. All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use. Periodic maintenance and repair or replacement of parts due to normal usage, wear and tear. With some switchboards, after dialling the access code you may have to wait for a moment while the switchboard picks up an outside line so you will need to enter a pause in the dialing sequence.

To insert a pause (P) before entering the Press and hold telephone number. Not apply if the type or serial numbers on the product have been altered, deleted, removed, or made illegible. Before you wall-mount your D801, check that you are not drilling into any hidden wiring. Before you drill, make sure the power and telephone line cables will reach the sockets. 1. Use the following templates to mark the drilling locations. To wall-mount the base, drill two holes in the wall 3.6cm apart horizontally using an 8mm drill bit. To wall-mount the charger, drill two holes in the wall 4cm apart horizontally using an 8mm drill bit. Pull the base/charger out of the stand and slot the holes on the back of the base over the screw heads and gently pull the base/charger down to make sure it is securely in place.

Insert the wall plugs if necessary, then insert the screws leaving about 5mm protruding from the wall on which to hang the phone. Ihr D801 kann SMS an teilnehmende Mobilnetzen und kompatiblen Festnetztelefone in Großbritannien [NOT: phone is only usable in GB? Can this be changed to Germany? Diese Produkt ist für die Verbindung mit dem öffentlichen analogen Telefonnetzwerk und privaten Telefonanlagen in Großbritannien [NOT: phone is only usable in GB? Can this be changed to Germany? Se è stato sottoscritto il servizio di mail vocale del proprio operatore, il ricevitore informa quando si riceve una nuova mail vocale.



[You're reading an excerpt. Click here to read official MOTOROLA D811 user guide](http://yourpdfguides.com/dref/2441515)

<http://yourpdfguides.com/dref/2441515>