



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA H730. You'll find the answers to all your questions on the MOTOROLA H730 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MOTOROLA H730
User guide MOTOROLA H730
Operating instructions MOTOROLA H730
Instructions for use MOTOROLA H730
Instruction manual MOTOROLA H730



[You're reading an excerpt. Click here to read official MOTOROLA H730 user guide](http://yourpdfguides.com/dref/5848118)
<http://yourpdfguides.com/dref/5848118>

Manual abstract:

More information on the Web: www.motorola.com. @@@@Note: Your battery is designed to last the life of your product. It should only be removed by a recycling facility. Any attempt to remove or replace your battery will damage your headset. Charge it 3 Basics a few essentials to get you started Turn on & off To turn on/off your headset, flip the boom to the open (extended)/closed (folded under the headset body) position. Wear it Open the boom, flex the earhook and loop it over your ear. Make sure the speaker aligns with your ear canal. Change for left ear use Open the boom and earhook and gently lift top of the earhook up and off, flip the headset over, and then hook bottom of the earhook onto the lower hinge pin and lift top of the earhook up and on to the upper hinge pin. Ear hook Hinge pin 4 Basics Pair & connect connect and go Note: The voice prompts are only in English.

Pair & connect with your phone 1 Turn off any Bluetooth® devices previously paired with your headset. 2 Turn on the Bluetooth feature on your phone. 3 Turn on your headset (see “Turn on & off” on page 4). 4 Put the headset on your ear (see “Wear it” on page 4). The status light is steadily lit in blue and you hear “ready to pair”.

5 Follow the voice prompts to connect your phone to your headset. Note: When prompted for the passkey, enter 0000. When your headset successfully pairs with your phone, you hear “pairing complete”. For daily use, make sure your headset is turned on, and your phone’s Bluetooth feature is on. Your headset and phone will connect automatically.

Pair & connect 5 Pair & connect a second phone (optional) 1 Turn off first phone and any other Bluetooth devices previously paired with your headset. 2 Turn your headset off (see “Turn on & off” on page 4). 3 Turn on the Bluetooth feature on your phone. 4 Put the headset on your ear. 5 Turn on your headset.

The status light becomes steadily lit in blue and you hear “ready to pair”. 6 Follow the voice prompts to connect your phone to your headset. Note: When prompted for the passkey, enter 0000. When your headset successfully pairs with your phone, you hear “pairing complete”. To connect to both phones, turn on both phones and then turn your headset off and back on again.

When you hear “phone 1 connected” and “phone 2 connected” you’re ready to go. The last paired phone (your second phone) is your primary phone (or “phone 1”) for voice dial functionality. 6 Pair & connect Test your connection 1 Place the headset on your ear. 2 On your phone, dial a phone number and press the Call/Send key. If your phone and headset are successfully connected, you hear ringing on the headset. Pair & connect 7 Calls it’s good to talk Note: Some features are phone/network dependent. Note: The voice prompts are only in English. to. Answer call reject call make a voice dial call redial last call mute or unmute a call end a call answer second incoming call reject second incoming call Press the Call button. Press and hold a Volume button until you hear a tone Press the Call button and you hear a tone.

Press and hold the Call button until you hear a tone. Press both Volume buttons and you hear “mute on” or “mute off”. Tip: When connected to two phones, voice prompts help manage call functions such as voice dial, redial, and end call. Follow the voice prompts to execute a function on the desired phone. 8

Calls Talk time check your chat time Note: The voice prompts are only in English.

Press both Volume buttons while not on a call. If light shows. Red purple blue and/or you hear. [battery level is low] “battery level is medium” “battery level is high” your remaining talk time is. Less than 4 hours between 4 to 9 hours more than 9 hours To save battery power, turn off the headset when not using it.

Talk time 9 Status light know your headset If light shows. Three blue flashes steady blue rapid blue/purple flashes quick blue flash quick purple flash slow blue pulse slow blue flash your headset is. Powering on/off in pairing/connect mode connecting to your phone receiving or making a call on phone 1 receiving or making a call on phone 2 on a call in standby (not on a call—connected to one phone) in standby (not on a call—connected to two phones) idle (not connected to a phone) slow green flash slow red flash 10 Status light If light shows. Slow purple pulse steady red quick red flash your headset is. Muting the call trying to connect to your phone in a low battery state Note: After 20 minutes on a call or of inactivity, the light stops flashing to conserve power, but the headset remains on. Status light 11 Settings make some changes Customize Note: The voice prompts are only in English. Voice prompts With the headset turned on, press and hold either Volume button and Call button until you hear “voice prompts on” or “voice prompts off”. volume buttons 1 Turn your headset off. 2 Press and hold the Volume button you want to assign as ‘volume up’. With your headset on, press and hold the Call button and both Volume buttons for 10 seconds until the status light is steadily lit in blue.

12 Settings Problems? We’ve got solutions Note: The voice prompts are only in English. My headset will not enter pairing mode Make sure that any devices previously paired with the headset are turned off. If the status light is not steadily lit in blue, turn off both the other device and headset, wait 10 seconds, then turn headset back on. The status light to become steadily lit in blue and you hear “ready to pair”. My phone doesn’t find my headset when searching Make sure the status light on your headset is steadily lit in blue when your phone is searching for devices. If not, press and hold the Call button and Volume button while turning the power on until you hear “ready to pair” and see the status light steady blue. My headset worked before but now it’s not working Make sure your phone is on and the Bluetooth feature is turned on in your phone. If the Bluetooth feature was turned off or was turned on only temporarily, you may need to restart the Bluetooth feature and pair your phone and headset again (see “Pair & connect” on page 5). problems? 13 Support we’re here to help If you have questions or need assistance, contact us at 1-877-MOTOBLU, or visit us at www.motorola.com. Safety Information Use & Safety for Battery-Powered Accessories

- Do not store or use your battery-powered accessory (such as a Bluetooth® headset or other device) in temperatures below -10°C (14°F) or above 60°C (140°F).

□ Do not recharge your accessory in temperatures below 0°C (32°F) or above 45°C (113°F). □ Conditions inside a parked car can exceed this range. Do not store your accessory in a parked car.



[You're reading an excerpt. Click here to read official MOTOROLA](http://yourpdfguides.com/dref/5848118)

[H730 user guide](http://yourpdfguides.com/dref/5848118)

<http://yourpdfguides.com/dref/5848118>

□ Do not store your accessory in direct sunlight. □ Storing your fully charged accessory in high-temperature conditions may permanently reduce the life of the internal battery.

• Battery life may temporarily shorten in low-temperature conditions. Approved Accessories Use of accessories not approved by Motorola, including but not limited to batteries, antennas, and convertible covers, may cause your mobile device to exceed RF energy exposure guidelines and may void your mobile device's warranty. For a list of approved Motorola accessories, visit our Web site at: www.motorola.com Driving Precautions Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle.

Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products. 15 While driving, NEVER: • Type or read texts. □ Perform any other functions that divert your attention from driving. While driving, ALWAYS: • Keep your eyes on the road. □ Use a handsfree device if available or required by law in your area. □ End your call or other task if you cannot concentrate on driving. Responsible driving practices can be found at www.motorola.com □ Avoid turning up the volume to block out noisy surroundings. □ For more information about hearing, see our Web site at direct.motorola.com

• These products are not toys and may be hazardous to small children. • Improperly handled batteries could overheat and cause a burn. Do not dispose of your battery or mobile device in a fire. See "Recycling" for more information. For indoor use only. This device complies with part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful authorities for more details.

Software Copyright Notice Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product. Software Copyright Notice Export Law Assurances This product is controlled under the export regulations of the United States of America and Canada.

The Governments of the United States of America and Canada Export Law 22 may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U. s. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Com/us/productregistration Product registration is an important step toward enjoying your new Motorola product.

Registering permits us to contact you for product or software updates and allows you to subscribe to updates on new products or special promotions. Registration is not required for warranty coverage. Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status. thank you for choosing a Motorola product. Registration Motorola Limited Warranty for the United States and Canada Warranty What Does this Warranty Cover? Subject to the exclusions contained below, Motorola Mobility, Inc. Warrants its mobile telephones ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories"), and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories, and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty: 23 Products and Accessories Products Covered Products and Accessories as defined above, unless otherwise provided for below. Ear buds and boom headsets that transmit mono sound through a wired connection. products and Accessories that are Repaired or Replaced.

Length of Coverage One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below. Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product. Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product. The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer. exclusions (Products and Accessories) Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage. batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage. 24 Use of Non-Motorola Products and Accessories.

Defects or damage that result from the use of non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage. unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.



[You're reading an excerpt. Click here to read official MOTOROLA H730 user guide](http://yourpdfguides.com/dref/5848118)

<http://yourpdfguides.com/dref/5848118>

altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage. communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage. software Products Covered Software. Applies only to physical defects in the media that embodies the copy of the software (e. Length of Coverage Ninety (90) days from the date of purchase. exclusions (Software) Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected. software NOT Embodied in Physical Media. Software that is not embodied in physical media (e. g. Software that is downloaded from the Internet), is provided "as is" and without warranty. 25 Who is Covered? This warranty extends only to the first consumer purchaser, and is not transferable. what Will Motorola Do? @@@@ How to Obtain Warranty Service or Other Information USA Canada TTY All Products, Accessories, and Software: 1-800-331-6456 All Products: 1-800-461-4575 1-888-390-6456 You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number. What Other Limitations are There? Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another. Com Note: Do not ship your product to the above address. If you need to return your product for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at: 1-800-331-6456 (United States) 1-888-390-6456 (TTY/TDD United States for hearing impaired) 1-800-461-4575 (Canada) Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details. All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. The Bluetooth trademarks are owned by their proprietor and used by Motorola Mobility, Inc. under license. All other product or service names are the property of their respective owners.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment. Si la luz muestra... rojo y/o escucha... el tiempo de conversación restante es... menos de 4 horas "battery level is low" (bajo nivel de carga de la batería) "battery level is medium" (nivel medio de carga de la batería) "battery level is high" (alto nivel de carga de la batería) púrpura entre 4 a 9 horas azul más de 9 horas Para ahorrar energía de la batería, apague el audífono cuando no lo está usando. Le voyant d'état devient bleu fixe, puis vous entendez « ready to pair » (prêt pour l'appariement). Le voyant d'état passe au bleu fixe, puis vous entendez « ready to pair » (prêt pour l'appariement). Lorsque vous entendez « phone 1 connected » (téléphone 1 connecté) et « phone 2 connected » (téléphone 2 connecté), la connexion est réussie.

Le téléphone que vous avez apparié en dernier (le second téléphone) devient le téléphone principal (ou le « phone 1 ») pour la fonction de composition vocale. Si le voyant lumineux émet/est... rouge ou vous entendez... « battery level is low » (niveau bas) « battery level is medium » (niveau moyen) « battery level is high » (niveau élevé) le temps de conversation restant est... de moins de 4 heures de 4 à 9 heures violet bleu de plus de 9 heures Pour économiser l'énergie de la batterie, désactivez l'écouteur lorsque vous ne l'utilisez pas. Messages-guides vocaux Mettez l'écouteur sous tension, maintenez une touche de volume ou la touche d'appel enfoncée jusqu'à ce que vous entendiez « voice prompts on » (messages-guides vocaux activés) ou « voice prompts off » (messages-guides vocaux désactivés). Le voyant d'état devient bleu fixe, puis vous entendez « ready to pair » (prêt pour l'appariement). Attendez d'entendre « ready to pair » (prêt pour l'appariement) et que le voyant d'état passe au bleu fixe.



[You're reading an excerpt. Click here to read official MOTOROLA H730 user guide](http://yourpdfguides.com/dref/5848118)
<http://yourpdfguides.com/dref/5848118>