




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA ME4066. You'll find the answers to all your questions on the MOTOROLA ME4066 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MOTOROLA ME4066
User guide MOTOROLA ME4066
Operating instructions MOTOROLA ME4066
Instructions for use MOTOROLA ME4066
Instruction manual MOTOROLA ME4066

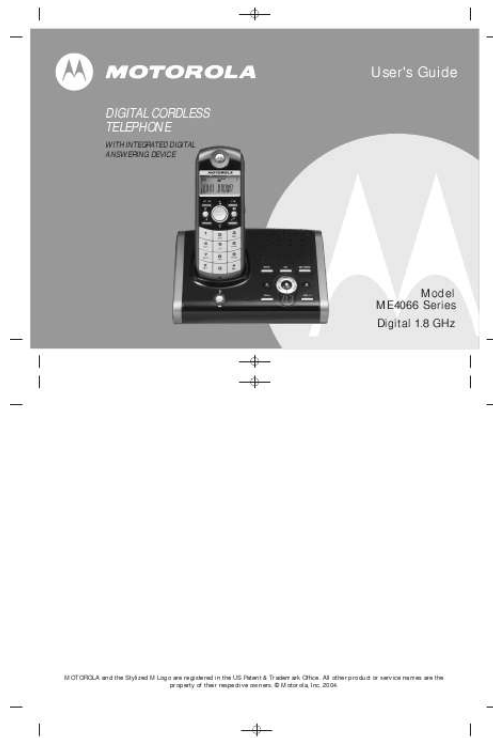

[You're reading an excerpt. Click here to read official MOTOROLA ME4066 user guide](http://yourpdfguides.com/dref/1291086)
<http://yourpdfguides.com/dref/1291086>

Manual abstract:

2004. Congratulations on your purchase of a Motorola product! @@Please retain your original dated sales receipt for your records. @@Complies with the essential protective requirements and objectives of the EC's R&TTE Directive 1999/5/EC; EC Low Voltage Directive 72/23/EEC; EC EMC Directive 89/336/EEC Copyright © 2004 Motorola, Inc. All rights reserved. No part of this publication may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation or adaptation) without written permission from Motorola, Inc. Motorola reserves the right to revise this publication and to make changes in content from time to time without obligation on the part of Motorola to provide notification of such revision or change. Motorola provides this guide without warranty of any kind, either implied or expressed, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. @@@Patent and Trademark Office. @@@Keep all slits and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator.

Ensure that proper ventilation is provided at the installation site. 2. Do not use while wet or while standing in water. 3. @@@4. Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on. 5. Never insert objects of any kind into the product slits as that may result in fire or shock. 6.

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 7. Do not disassemble this product. If service or repair work is required, contact the Warranty Service phone number found in the back of this user's guide. 8. Do not overload wall outlets and extension cords. 9. Avoid using during an electrical storm.

Use a surge protector to protect the equipment. 10. Do not use this cordless phone to report a gas leak, especially if you are in the vicinity of the gas line. Unplug this cordless phone immediately from an outlet if: The power cord or plug is damaged or frayed. Liquid has been spilled into the product. The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords. The product has been dropped or the cabinet has been damaged. The product exhibits a distinct change in performance.

Installation Guidelines 1. 2. 3. 4. Read and understand all instructions and save them for future reference.

Follow all warnings and instructions marked on the product. Do not install this product near a bath tub, sink or shower. Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company. 5. Do not place this product on an unstable cart, stand or table. This product may fall, causing serious damage to the product. 6. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation. 7. Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone. Important Safety Instructions 6 Important Safety Instructions 5 Follow these safety precautions when using your cordless phone to reduce the risk of fire, electric shock and injury to persons or property. Technical Amendments These Operating Instructions are issued for information purposes.

Their content is not the subject of a contract. All indicated data is merely nominal values. The described equipment and options may differ depending on requirements which are specific to each country This device is dedicated to be used in the analog public switched telecommunication network (PSTN).

Package Contents Base Station Mobile Handset Mains Adaptor Telephone Line Cord Rechargeable Batteries type micro AAA Charger Unit User's Guide ME4066-1 Single Pack 1 1 1 1 2 0 1 ME4066-2 Twin Pack 1 2 2 1 4 1 1 ME4066-3 Triple Pack 1 3 3 1 6 2 1 ME4066-4 Quad Pack 1 4 4 1 8 3 1 Installation Please check the contents of the package carefully. If something is missing or has become damaged in transit, you should NOT use the telephone. In such a case you should return to the dealer with your sales receipt or contact the Motorola's distributor directly. (For details, please refer to the Warranty section.)

Note: Retain the packaging of your appliance to prevent it from being damaged should you ever need to return it. Setting up the Base Station and Charger Unit Place the base station and charger unit in an easily accessible location. Make sure that the location is stable and flat and that the surface is non-slip. When choosing the location, also make sure that all cables can be routed so as to prevent people tripping over them. Furthermore, avoid placing the base station and charger unit in the immediate vicinity of other electronic appliances such as microwaves, PCs or Hi-Fi's, for example. 8 Important Safety Instructions 7 8. Use only the power supply that came with this unit. Using other power supplies may damage the unit.

9. Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out. 10. To avoid interference to nearby appliances, do not place the base of the cordless phone on or near a TV, microwave oven, or VCR. 11.

It is impossible to make emergency calls when the keypad lock is enabled. 12. This telephone complies with applicable safety requirements for exposure to radio waves (EMR). The mean power of this telephone does not exceed 20mW limit at which point testing is required. 13. The earpiece of the handset may attract small metal objects such as staples and pins. Care should be taken when placing the handset near these items. 14. Do not use the handset in an explosive hazard area such as where there is gas leaking. 15.

This telephone is not designed for making emergency telephone calls when the mains power fails. Always have a corded phone available to be able to make and receive calls to emergency services if the mains power fails. Do not expose the base station and charger unit to direct sunlight. Do not allow the base station and charger unit to become wet. They should not be set up in rooms which are subject to condensation or corrosive steam or a high concentration of dust (e.g. cellars, garages or conservatories). The room temperature must be between 00C and 350C. Connecting the Base Station and Mains Adaptor The base station does not have a power switch. Only use the mains adaptor supplied with your phone.

Connecting the Charger Unit Insert the plug of the mains adaptor in the socket on the underneath of the charger unit. Plug the mains adaptor into the mains socket. The charger unit is now ready to use. Inserting the Batteries Open the battery compartment by pushing downwards on the battery compartment cover.



[You're reading an excerpt. Click here to read official MOTOROLA ME4066 user guide](http://yourpdfguides.com/dref/1291086)
<http://yourpdfguides.com/dref/1291086>

Insert the 2 x AAA batteries supplied, observing the correct polarity.

The mobile handset will not operate if the batteries are inserted incorrectly. There is also a possibility that the handset may be damaged. Installation Replace the cover on the battery compartment and push it upwards until it clicks into place. Place the handset on the base station. You will hear a beep and the charging light comes on.

Note: When used for the first time, allow the batteries to charge for at least 14 hours without interruption. If possible, only take the handset out of the base station when the charging process has ended. This will help to guarantee optimum operation. Note: To ensure the battery charges properly, clean the charging contacts on the handset and charger with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.

Attaching the Belt Clip 10 Push the belt clip into the opening on the back of the handset. The clip will bend slightly until it clicks into place. Installation 9 1. Plug the telephone line cord into the base station socket. 2.

Route the cord underneath the base station towards the back. 3. Plug the other end into the telephone wall socket. 4. Connect the mains power supply.

Attaching the Headset You can connect headsets to the mobile handset. The 2.5mm jack plug must be inserted fully into the jack socket on the right-hand side of the handset. Technical Data Receiver impedance Microphone impedance Receiver output power Plug Microphone sensitivity 32 1.4 60mW 2.

5mm jack plug -54dB Note: The headset is not included as standard. Features Congratulations on your purchase of this high quality, cordless telephone set.

The set offers the following features: Comfortable digital cordless phone with DECT standards Call ID* function with caller list for 20 numbers or names from phone book (dependent on network) Alphanumeric LCD display Blue backlight display Phone book for 30 entries with names and numbers Extended redial TIME 4-DIAL MODE 5-CHANGE PIN 6-DEFAULT 7-DEREGISTER ENTER PIN ENTER PIN 100/250/600 TONE PULSE ENTER PIN ENTER PIN ENTER PIN HANDSET 1-4 12- DISABLE EXTERNAL NUMBER ENTER NO Menu Structure NEW PIN CONFIRM? HANDSET 1-4 REPEAT CONFIRM?

5-LANGUAGE 16 ENGLISH DEUTSCH ITALIANO FRANCAIS ESPANOL NEMET NEDERLANDS POLSKI SVENSKA TURKCE Menu Structure 15

Switching the Handset On/Off and Display Illumination When the handset is placed on the base station or charging unit, it switches on automatically and starts to charge up. Allow the batteries to be charged for 14 hours without interruption the first time they are charged. The telephone does not have an On/Off switch.

Note: The display illumination switches on automatically when the handset is removed from the charging station or pressing any key. It also lights up when calls are received. Calls If the telephone is connected to a PBX network, it is possible to put calls on hold and call other extensions or to forward calls. 1.

Press the key to put the call on hold.

2. Dial the number of the extensions (e.g. 23). 3. Press the key once more to take the call back again or the key to forward the call. Teleconference and Intercom Call Transferring After having received an external call, it is possible to include a second handset in the conversation (three-way conference). 1.

Press the key and enter the number of the corresponding handset (e.g.

2) which should be included in the call. 2. The external caller is kept on hold. As soon as handset 2 takes the call, press key to transfer the call to handset 2. Or 3. The external caller is kept on hold. as soon as handset 2 takes the call, press and hold key to activate the teleconference. 4. By pressing the key, any of the handsets can be disconnected from the teleconference and the other handset continues with the external call. Using the Telephone Entering a Dialing Pause (P) If the MOTOROLA telephone is connected to a PBX system, it may be necessary to insert a dialing pause.

To do this, press the key after entering the relevant digit, e.g. 0, for an outside line (0P...

). A 'P' appears in the display indicating a pause. The pause can also be entered when programming numbers in the phone book. 22 Using the Telephone 21 Phone Book The MOTOROLA telephone can store up to 30 entries in the phone book with name and call number.

Store Entries 1. 2. 3. 4. 5. 6. @@Press the key. Press the key. Enter the number (max. 25 digits).

Press the key. Enter the name (max.10 characters). Note: To enter the characters, press the relevant key the corresponding number of times, 1, 2, 3 or 4 times, according to the position on the key. Press the 5 key three times for an L. Delete incorrect entries by pressing the key. 7. Press the key. 8. Select the ringing tone with the 9.

Press the key. or key. Note: If certain phone book entries should appear at the start of a list, e.g. "FIRE", enter a space before the name "FIRE".

The space is entered by pressing the key. View Entries 1. Press the key repeatedly until PHONE BOOK appears. 2. 3.

4. 5. Press the Press the Press the Press the or or key. key to select LIST ENTRY. . key. key to select the required entry. key to view the number. Note: if there is no entry in the phone book, "MEM EMPTY" will display. 6.

Press the Or Press the key to dial the number. Phone Book Edit Entries 1. 2. 3. 4. 5. Press the Press the Press the Press the Press the key repeatedly until PHONE BOOK appears. key. or key to select EDIT ENTRY. key.

or key to select the required entry. key. key. key. key to select the normal ring or VIP ring.

key. Note: if there is no entry in the phone book, "MEM EMPTY" will display 6. Press the 7. Enter the number. 8.

Press the 9. Enter the name. @@Press the 2. Press the 3. Press the 4. @@or key to select DELETE. key to select the phone book entry.

@@@@@@@@Press the key twice. Press the or key to select VOLUME. Press the key.

Press the or key to select the ringer volume. (0-5 level, level 0 means ringer off) 6. Press the key to confirm the setting. 1. 2. 3. 4. @@2. 3. 4.

5. 6. Press the key as often as necessary until the HANDSET menu appears. Press the key twice. @@Press the key.

Use the or key to select the required melody. @@@@2. 3. 4. @@Press the key.

Press the or key to select the HS NAME submenu. Press the key. Enter/Change the name of the handset (e.g. MOBIL 1). 6. Press the key to confirm. Saving a Prefix It is possible to save prefix numbers in the handset. This number is then recalled after pressing the 0 key for two seconds. 1.

2. 3. 4. 5. 6. Press the key as often as necessary until the HANDSET menu appears. Press the key. Press the or key to select the PREFIX MEM submenu. Press the key. Enter the prefix number (e.

g. access code of the subscriber you call most frequently). Press the key to confirm. Switching the Key Tone On/Off 1. Press the 2.

Press the key as often as necessary until the HANDSET menu appears. key. 3. 4. 5.

6. Press the Press the Press the Press the or or key to select the KEY TONE.

[You're reading an excerpt. Click here to read official MOTOROLA ME4066 user guide](#)



<http://yourpdfguides.com/dref/1291086>

key. key to select the setting. key to confirm. Activating/Deactivating Automatic Call Answering Handset Settings The automatic call answering function enables the incoming call to be taken immediately if the handset is removed from the base station. @@1. 2. 3. 4.

5. 6. @@key. or key to select the AUTO ANS submenu. key. or key to switch automatic call answering on or off. @@@@The timer starts when the conversation begins. 1. 2. 3.

4. 5. 6. @@key. or key to select the CALL TIMER submenu.

key. or key to switch the call timer on or off. @@@@The phone book entries are retained. 1. 2.

3. 4. 5. @@key. or key to select the DEFAULT. key. @@@@Press the key as often as necessary until the HANDSET menu appears. Press the key. Press the or key to select the REGISTER submenu. Press the key.

@@(Default setting = 0000) 6. Press the key. @@@@2. 3. 4. @@@Press the key. Press the or as often as necessary to select the BARRING submenu. Press the key. Enter the PIN. Note: (Factory setting is 0000).

Press the key. Use the or key to select the handset which should be barred. Press the key. Use the or key to select DISABLE or EXTERNAL. Or or key to select NUMBER and press the , then input 10.

Use the the number(up to 5 digits) which you want to barred. 11. Press the key. 1. 2.

3. 4. 5. 6. 7. 8. @@they can still be called even if barring of any kind is set. @@@@Example: Three-digit emergency number = 123. @@2. 3.

4. @@@Press the key. Press the or as often as necessary to select the EMERGENCY submenu. Press the key. Enter the PIN. @@"DOC", "FIRE"). 6. Press the 7. Use the or 8. Press the key.

key to select the emergency number to be changed and change it. key. Changing the Flash Time 1. 2. 3.

4. 5. 6. @@key. or as often as necessary to select the FLASH TIME submenu.

key. or key to select the required flash time. key. 32 Base Station Settings 31 EXTERNAL NUMBER All external calls are barred. Define a number which should be barred, e.g. 0190. Select Dial Mode 1. 2. 3.

4. 5. 6. Press the Press the Press the Press the Press the Press the key repeatedly until BASE appears. key. or key to select DIAL MODE. key. or key to select TONE or PULSE. key to confirm the selection. Changing the PIN 1.

Press the key as often as necessary until the BASE menu appears. 2. Press the key. 3. Press the or as often as necessary to select the CHANGE PIN submenu.

4. Press the key. 5. Enter the old PIN (0000). 6.

Press the key. 7. Enter the new PIN (e.g. 1111). 8. Press the key. 9. Enter the new PIN again (e.g.

1111). 10. Press the key. Default Settings 1. 2. 3. 4. 5. 6. Press the key as often as necessary until the BASE menu appears.

Press the key. Press the or as often as necessary to select the required DEFAULT submenu. Enter the PIN. Press the key. Press the key to confirm.

Base Station Settings Delete HS If several handsets are registered on one base station, they can deregister each other mutually. The last handset cannot be deregistered. 1. 2. 3.

4. 5. 6. 7. 8. 9. Press the key as often as necessary until the BASE menu appears. Press the key. Press the or as often as necessary to select the DEREGISTER submenu. Press the key.

Enter the PIN. Note: (Factory setting is 0000). Press the key. If necessary, use the or key to select the handset. Press the key. Press the key to confirm the selection. 34 Base Station Settings 33 General Press on the base to set the options. The current setting is announced. 2. Once the desired option is reached and the current setting is announced, press or to change the setting.

to confirm your setting. 3. Press 4. At any time, press to exit setup mode. Switch Answering Machine ON/OFF (preset to ON) When you first switch on your phone, the answering machine is in the O N mode.

1. Press . When you hear the announcement, press or to switch between the On/Off setting. Clock Setting Follow the steps above to program the current D ay of the w eek , then the H o u r , and then the M i n u t e : Answering Machine Operation First, program the D a y . As you program, the display shows ' d ' and a number, 1 to 7, representing the day of the week 1 represents Monday; 2 represents Tuesday and so , on.

Press when done. Next, program the H o u r . Be careful that you program pm hour if the current time is in the afternoon or evening, or an am hour if the current time is after midnight or in the morning. Press when done. Next, program the M i n u t e . You'll be programming the 'tens' column first. Your choices are 0 through 5 , as the minutes range from 00 to 59. Press . Now, you are programming the 'ones' column, where your choices are 0 through 9 . Press to confirm.

Note: If the mains power to the base is lost, your answer machine will display "St." (Set time) to remind you adjust the clock when it is switch on. Outgoing Announcement You can record 2 different outgoing announcements: A 1 inviting your caller to leave a message (Announce Only O F F), and A 2 asking your caller to call back later (Announce Only O N). Outgoing Announcement A 1 is played when Announce Only mode is O F F . Callers can leave a message in this mode. Your answering machine is preset with Announce Only set to OFF, allowing callers to leave a message. Outgoing Announcement A 2 is played when Announce Only mode is O N . Callers c a n n o t leave a message in this mode. If you do not record your own announcements, your answering system will play a pre-programmed message to your callers: 36 Answering Machine Operation 35 1. In the idle (standby) mode, press Turn Answering Machine On / Off Set the Day and Time Record your outgoing Announcement Set your Remote Access code Set 'Announce Only' On / Off Turn audible Message Alert On / Off Set Base ringer On / Off Set number of Rings to answer Voice prompt language selection to program each of the following options: A1: A2: "Please leave your message after the beep.

" I am sorry that I am not available. @@@Press until you hear 'A n n o u n c e m e n t O n e ' 2. Press . You will hear 'Now Recording' followed by a beep. Speak toward the Base Unit.

You have up to 6 0 seconds for your announcement. Your announcement must be at least 3 seconds in length. 3. Press when finished. Your recording will be played automatically.

If you're not satisfied, record your announcement again. @@@@2. @@@3. @@@Note: The default announcement cannot be deleted. @@@@The code can be any 4-digit number, from 0 0 0 0 to 9 9 9 9 . The pre-set code is 0000. 1. @@2. Press or to set the first digit between 0-9. Press to confirm.

3. Repeat Step 2 until all 4 digits have been set. The machine announces the new code. Remote Operation 1. Call your answering machine from any touch-tone phone. 2. @@. 3. @@@These are marked M1 M2 and M3 on the answering machine. You assign mailboxes by using your outgoing message to tell callers

to press 1, 2 or 3 before they leave their message.

The message will be stored in the mailbox number they select. If no mailbox number is selected, the incoming message is automatically stored in Mailbox 1.
How to Record Your Announcement If you have assigned different mailboxes to different people, be sure to tell callers in your announcement to press "*1 ",
"*2 " or " *3 ".



[You're reading an excerpt. Click here to read official MOTOROLA
ME4066 user guide
http://yourpdfguides.com/dref/1291086](http://yourpdfguides.com/dref/1291086)

Otherwise, messages will be stored in Mailbox 1. For example: "Hello.

To leave a message for Bruce, press "*1"; for Deborah, press "*2"; and for Don, press "*3". Otherwise, leave your message after the beep. Thank you." Turn Base Ringer On / Off (preset to ON) Your Base Ringer is independent of the Handset ringer. To program this feature, follow the steps in the beginning of the Answering Machine section.

Set Number of Rings to Answer Your Answering System can answer after 2-6 rings or you can choose the To ll S a v e r option. The Toll saver option instructs the Answering System to answer after 4 rings only if there are n e w , unplayed messages; otherwise, it will answer after 6 rings. The benefit to you is if you are making a long distance call to retrieve messages, if the Answering System does not answer after 4 rings, you can hang up. There are no new messages, and you will save the expense of a long distance call. To set the number of rings to answer, follow the steps in the beginning of the S e t u p section. Voice Prompt language selection 1. Press key until display "LA" (Language) to enter Voice Prompt language selection mode. 2. After one second the display shows the language code, 1, 2 or 3 representing the three options of English, German or French. 3.

Press forward key swap language code ie "1> 2 > 3...", and unit will sound the current new message status in the selected language type. 4. Press key or key to confirm the selected language type. Answering Machine Operation You can record a memo, either at the Base Unit or from a remote location. To record a

Memo at the Base: 1. Press and hold . You will be prompted to select a M a i l b o x .

2. Select the desired M A I L B O X . You will hear 'N o w R e c o r d i n g', followed by a beep. 3. Speak towards the Base Unit.

Press when finished. Your memo is stored like a message from an outside caller. To record a memo from a remote location, follow instructions in the R e m o t e O p e r a t i o n section. Note : If memory is full while recording, the answering machine will announce "memory is full" and a beep is heard , at the same time the 7-segments LED will display "Fu" and the message count alternatively. Recording a Memo Listening to Your Messages When you have new messages, the message counter will flash, showing the number of unplayed messages.

When you have new messages, the appropriate M A I L B O X (es) will flash. If a Mailbox only contains old messages, the indicator will glow steadily. .

Recorded messages and memos are retained until you delete them. Your Answering System has approximately 40 minutes of storage capacity (or 59 messages/memos). If its capacity is full, the system will answer after 10 rings, and the caller will hear ' M e m o r y i s F u l l '. 40 Answering Machine Operation 39 Set 'Announce Only' On / Off (preset to OFF) If you want callers to leave messages, Announce Only must be set to O F F . If you do n o t want callers to leave messages, set Announce Only to O N . Follow the steps in the beginning of the S e t u p section. Turn Audible Message Alert On / Off With Message Alert programmed O N , the Base unit will beep approximately every 10 seconds, alerting you to new, unplayed messages and memos.

Follow the steps in the beginning of the S e t u p section to program this feature. Message Playback Note: If short press the MAIL BOX key, the order of playback is oldest messages first, newest last. If long press the MAIL BOX key, the order of playback is newest messages first, oldest last. Before each message is played, the day and time it was recorded is announced. 2. Press Press 3. Press to replay the current message from the beginning. twice to play the previously recorded message. to skip to the next message. 4.

Press STOP at any time to end playback. Deleting Messages To delete the message or memo currently playing, press . Answering Machine Operation To delete all old messages stored in a Mailbox: 1. In the idle mode, press and hold . You will be prompted to 'P l e a s e S e l e c t a M a i l b o x' .

2. Press the desired M A I L B O X key. All old messages will be deleted. NOTE: New, unplayed messages cannot be deleted until you play them. Once you deleted the message, it cannot be recovered.

Important information There is a total of 40 minutes of record time. This includes messages, memos, and announcements. The maximum number of messages that can be stored is 59. A message, memo, or announcement can be a maximum of 60 seconds. If a call comes in while you are listening to messages, playback automatically stops. 42 Answering Machine Operation 41 1. Press the MAIL BOX key you want - M1, M2 or M3. The prompt will tell you how many new and old messages are stored in that Mailbox. If there are one or more new messages, only the new messages will be played. After new message playback is completed, you can press the MAIL BOX key again to hear all old messages.

Using the phone Selecting the language Making internal calls Making external calls Taking calls End call Redialing Prefix dialing Dialing from the phone book View call log entries Call call log entries Delete call log entries Delete all call log entries / or // 5-LANGUAGE // 1 ... 4 / 030123... or 030123... // or / ENGLISH / press for 2 seconds / or // / or // for 2 seconds // 1-CALL LOG // 1-CALL LOG // 1-CALL LOG // or press for 2 seconds / ERASE? // 1-CALL LOG // or / ERASE ALL? / or / press / CONFIRM? @@@@4//1 .

.. 4//1 ...
@@@/ RING // 1-NEW ENTRY // ENTER NAME / ABC... @@@/ or / 3-EDIT ENTRY // 030123..
// ABC... / or / 3-EDIT ENTRY // 030123... // ABC...

// VIP RING 1 - 10 // or / 4-DELETE // 5-DELETE ALL / Edit call numbers, VIP entries / Delete call numbers Delete all call numbers Handset Settings Ringer volume Ringer melody, external Ringer melody, internal Change handset name Save prefix number Key tone on/off Automatic call answering Call timer on/off Default settings / 3-HANDSET // or / 3-HANDSET / 2-EXT RINGER // 3-HANDSET / 3-INT RINGER // 3-HANDSET // DECT... // 3-HANDSET // 030... // 3-HANDSET // or / 3-HANDSET // or / 3-HANDSET // or / 3-HANDSET // CONFIRM? // 3-HANDSET // / or or / 7-DEFAULT // 8-REGISTER / or / 6-CALL TIMER / or / 5-AUTO ANS // 1-RINGER // / 1-RINGER / or // 1-RINGER / or // / or or // 2-HS NAME // 3-PREFIX MEM // 4-KEY TONE / or or // 1-VOLUME / Quick Reference 46 Register handset Quick Reference 45 / 2-PHONE BOOK // 1-NEW ENTRY / / ENTER NO / 030123... // ENTER NAME / ABC.

.. // NORMAL RING / or / VIP RING 1 - 10 // 2-PHONE BOOK // or / 2-LIST ENTRY // or Base Settings Barring, off and external Barring, number / 4-BASE // 1-BARRING // or // 4-BASE // 1-BARRING // or // ENTER NO / 321...

@@@@/ or // 7-DEREGISTER // CONFIRM? @@@@A LIMITED WARRANTY FOR THIS PRODUCT IS PROVIDED TO YOU BY MOTOROLA'S DISTRIBUTOR ("DISTRIBUTOR") PURSUANT TO DOCUMENTATION INCLUDED WITH THIS PRODUCT.



[You're reading an excerpt. Click here to read official MOTOROLA ME4066 user guide](http://yourpdfguides.com/dref/1291086)
<http://yourpdfguides.com/dref/1291086>

PLEASE CONTACT THE DISTRIBUTOR IF YOU EXPERIENCE PROBLEMS WITH THIS PRODUCT . TO THE FULLEST EXTENT PERMITTED UNDER APPLICABLE LA W (A) MOTOROLA HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND RELATING TO THE PRODUCT THAT BIND THE MANUFACTURER, WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ANY WARRANTY AGAINST INFRINGEMENT PROVIDED UNDER ANY LA W, AND (B) IN NO EVENT SHALL MOTOROLA BE LIABLE TO YOU OR ANY OTHER PARTY FOR ANY DIRECT, INDIRECT, GENERAL, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR OTHER DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF INFORMATION OR ANY OTHER PECUNIARY LOSS), OR FROM ANY BREACH OF WARRANTY, EVEN IF MOTOROLA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. MOTOROLA SHALL NOT BE BOUND BY PRODUCT RELATED STATEMENTS NOT DIRECTLY MADE BY MOTOROLA NOR ANY WARRANTY OBLIGATIONS APPLICABLE TO THE DISTRIBUTOR. Warranty 50 Quick Reference 49 12 For details, please contact Oricom International Pty.

Limited in Australia /New Zealand on the phone number below : Oricom 1300 889 785 51 52 When the Product is used in conjunction with ancillary or peripheral equipment not supplied for this digital cordless telephone by Distributor, Distributor does not warrant the operation of the Product/peripheral combination and Distributor will not honour any warranty claim where the Product is used in such a combination and it is determined by Distributor that there is no fault with the Product. **WHAT IS NOT COVERED BY THE WARRANTY** This warranty is not valid if the defects are due to damage, misuse, tampering, neglect or lack of care and in case of alterations or repair carried out by unauthorised persons. The following are examples of defects or damage not covered by this product warranty Defects or damage resulting from use of the Product in other than its normal and customary manner. Defects or damage from misuse, access to incompatible sources, accident or neglect. Defects or damage from improper testing, operation, maintenance, installation, adjustment, unauthorised software applications or any alteration or modification of any kind. Breakage or damage to antennas unless caused directly by defects in material or workmanship. Products disassembled or repaired other than by Distributor in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify any warranty claim. Defects or damage due to range, coverage, availability, grade of service, or operation of the cellular system by the cellular operator. Defects or damage due to moist, liquid or spills of food. All plastic surfaces and all other externally exposed parts that are scratched or damaged due to customer normal use.

Products rented on a temporary basis. Periodic maintenance and repair or replacement of parts due to normal wear and tear. Note: The talk-time, stand-by time and total life cycle of the rechargeable batteries for your digital cordless telephone will depend on usage conditions and network configurations. As a consumable product, the specifications indicate that you should be able to obtain optimum performance for your digital cordless telephone within the first two months from date of purchase. The warranty for the rechargeable batteries becomes void if (i) the batteries are charged other than by original battery chargers specified for the charging of the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, (iii) the battery is used in equipment or service other than the digital cordless telephone for which it is specified. Depending on operating conditions and your usage habits, wear and tear might take place of components including mechanical problems related to Product housing, paint, assembly, sub-assemblies, displays and keyboards and any accessories which are not part of the Product's in-box configuration. The rectification of faults generated through wear and tear and the use of consumable items like batteries is considered to be your responsibility and therefore Distributor will not provide the free Warranty repair service for these items. Warranty 54 Warranty 53 Please make and retain a note of all data you have inserted into your Product for example names and phone numbers, before submitting your Product for a Warranty service as such data may be deleted or erased as part of the repair or service process. **OUT OF WARRANTY REPAIRS** If you request Distributor to repair your Product any time after the Warranty term or where this warranty does not apply due to the nature of the defect or fault, then Distributor may in its discretion carry out such repairs subject to you paying Distributor its fees for such a repair or it may refer you to an authorised third party to carry out such repairs. Warranty 56 Warranty 55 .



[You're reading an excerpt. Click here to read official MOTOROLA ME4066 user guide](http://yourpdfguides.com/dref/1291086)
<http://yourpdfguides.com/dref/1291086>