




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA MOTO VE66. You'll find the answers to all your questions on the MOTOROLA MOTO VE66 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual MOTOROLA MOTO VE66**  
**User guide MOTOROLA MOTO VE66**  
**Operating instructions MOTOROLA MOTO VE66**  
**Instructions for use MOTOROLA MOTO VE66**  
**Instruction manual MOTOROLA MOTO VE66**

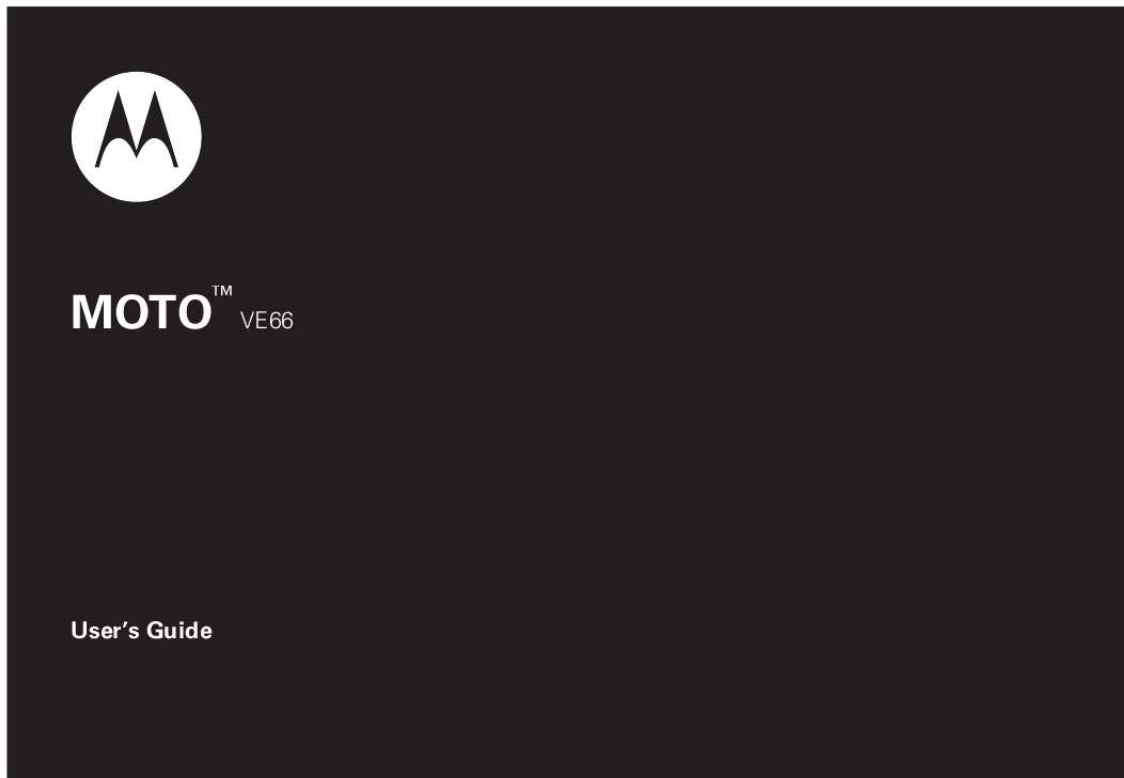

[You're reading an excerpt. Click here to read official MOTOROLA MOTO VE66 user guide](http://yourpdfguides.com/dref/3771114)  
<http://yourpdfguides.com/dref/3771114>

**Manual abstract:**

@@.....  
... 5 FCC Notice .  
.....  
.....

9 Use and Care .....  
... 10 EU Conformance .  
.....  
... 11 Recycling Information .....  
.....

. 12 get started .....  
.....  
. 13 about this guide ....  
..... 13 battery....  
.....  
..... 14 shortcuts .  
.....  
.....

. 18 basics .....  
.....  
.....

. 19 display .....  
.....

..... 19 volume .  
.....  
.....

..... 22 side select key.....  
.....

..... 22 lock key .....  
.....  
.....

. 23 voice commands .....  
.....

23 talking phone. ....  
.. 25 hands-free speaker. . .  
.....

25 codes & passwords ..... 25 lock & unlock phone . . .  
.....

... 26 lock your SIM card or applications. ....  
.....  
... 26 personalise . .  
.....

... 27 slider features.....  
.....

27 alert styles .....  
..... 27 time & date.  
.....

.....

.. 29 themes . .  
.....  
.....

30 wallpaper .....  
.....

30 screensaver .....  
..... 31 skin . .  
.....

.....

... 31 home screen shortcuts . .  
.. 31 main menu .....  
.....

.....	32 display appearance	.....
.....	32 more personalising features	.....
	.....	.....
	32 calls	.....
	.....	.....
. 34	turn off a call alert	..... 34 recent calls.
	.....	.....
.. 34	redial	..
	.....	.....
. 35	return a call	.....
.... 35	caller ID	..
	.....	.....
35	emergency calls	.....
36	hands-free	.....
	.....	.....
.... 36	answer options	.....
.... 37	call times & costs	.....
.. 37	more calling features	...
... 38	text entry	..
	.....	.....
.... 43	word mode	.....
	.....	.....
.. 44	abc mode	..
	.....	.....
.. 45	numeric mode	.....
... 46	contents 3 symbol mode	..
	.....	.....
.... 46	entertainment	.....
..... 47	videos	..
	.....	.....
..... 47	music	....
	.....	.....
.... 48	browser	..
	.....	.....
59	widgets	.....
	.....	.....
.. 62	media finder	..
	.....	.....
65	fun & games	.....
... 65	messages	..
	.....	.....
67	voicemail	.....
	.....	.....
. 67	text messages	....
..... 67	instant messaging	...
.... 69	more messaging features	... 70 tools
	.....	.....

.....	.....
.....	73 contacts .
.....	.....
.....	73 personal organiser . . . . .
.....	... 77 connections . . . . .
.....	.....
.....	80 Bluetooth wireless. .
.....	.....
.....	80 WiFi connections . . . . .
.....	... 84 cable connections. . . . .
.....	.....
.....	... 89 sync . . . . .
.....	.....
.....	.. 92 file manager . . . . .
.....	.....
.....	93 phone software updates . . . 95 SAR Data. .
.....	.....
.....	.....
.....	... 96 WHO Information . . . . .
.....	.....
.....	... 97 Privacy and Data Security . . . 98 OSS Information. .
.....	.....
.....	... 99 Driving Safety .
.....	.....
.....	. 100 index . . . . .
.....	.....
.....	.....

*@@Read this information before using your mobile device.1 Product Operation When placing or receiving a phone call, hold your mobile device just like you would a landline phone. If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case or body harness. If you do not use a body-worn accessory supplied or approved by Motorola - or if you hang your mobile device from a lanyard around your neck - keep the mobile device and its antenna at least 2.5 centimetres (1 inch) from your body when transmitting. When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimetres (1 inch) from your body. Exposure to Radio Frequency (RF) Energy Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate using your mobile device, the system handling your call controls the power level at which your mobile device transmits.*

*Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy. Operational Precautions For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions. Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our web site at: [www.motorola.com](http://www.motorola.com). External Antenna Care If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of antennas, modifications or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country. DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.*

*1 The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2007. RF Energy Interference/Compatibility Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices. Follow Instructions to Avoid Interference Problems Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff.*

*If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in-flight. Safety and General Information 5 Implantable Medical Devices If you have an implantable medical device, such as a pacemaker or defibrillator, consult your doctor before using this mobile device. Persons with implantable medical devices should observe the following precautions: ALWAYS keep the mobile device more than 20 centimetres (8 inches) from the implantable medical device when the mobile device is turned ON. DO NOT carry the mobile device in the breast pocket. Use the ear opposite the implantable medical device to minimise the potential for interference.*

*Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place. Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your health care provider. Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products. Operational Warnings Obey all posted signs when using mobile devices in public areas. Potentially Explosive Atmospheres Areas with potentially explosive atmospheres are often but not always posted and can include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities or areas where the air contains chemicals or particles, such as grain, dust or metal powders. When you are in such an area, turn off your mobile device and do not remove, install or charge batteries.*

*In such areas, sparks can occur and cause an explosion or fire. Symbol Key Your battery, charger or mobile device may contain symbols, defined as follows:*

Symbol 032374o Driving Precautions Check the laws and regulations on the use of mobile devices in the area where you drive.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO VE66 user guide](http://yourpdfguides.com/dref/3771114)  
<http://yourpdfguides.com/dref/3771114>

Always obey them. When using your mobile device while driving, please: Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue use if you cannot concentrate on driving. Use hands-free operation, if available. Pull off the road and park before making or answering a call if driving conditions so require. Do not place a mobile device in the airbag deployment area. Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola web site: Definition Important safety information follows. 032376o Do not dispose of your battery or mobile device in a fire. [www.motorola.com/callsmart](http://www.motorola.com/callsmart). 6 Safety and General Information Symbol Definition Your battery or mobile device may require recycling in accordance with local laws.

Contact your local regulatory authorities for more information. Do not throw your battery or mobile device in a rubbish bin. Your mobile device contains an internal lithium ion battery. Do not let your battery, charger or mobile device get wet. Listening at full volume to music or voice through a headset may damage your hearing.

**Choking Hazards** Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children. 032375o **Glass Parts** Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre. **Li Ion BATT** 032378o **Seizures/Blackouts** Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout. If you have experienced seizures or blackouts or if you have a family history of such occurrences, please consult with your doctor before playing video games or enabling a flashing-lights feature (if available) on your mobile device. Discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements or disorientation.

It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour and stop use if you are very tired. **Batteries and Chargers Caution:** Improper treatment or use of batteries may present a danger of fire, explosion, leakage or other hazard. For more information, see the "Battery Use & Battery Safety" section in this user's Guide. **Safety and General Information** 7 **Caution About High Volume Usage** Listening at full volume to music or voice through a headset may damage your hearing. **Repetitive Motion** When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a doctor. 8 **Safety and General Information** **FCC Notice to Users** The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo and/or an FCC ID in the format FCC-ID:xxxxx on the product label. Motorola has not ct your regional authorities for more details. 12 **Recycling Information** get started about this guide This guide shows how to locate a menu feature as follows: This guide uses the following symbols: symbols This means a feature is network, SIM card or subscription dependent and may not be available in all areas.

Contact your service provider for more information. This means a feature requires an optional accessory. Find it: s > j Multimedia > Camera This means that, from the home screen: 1 2 Press the centre key s to open the menu. Press the navigation key S to scroll to j Multimedia, and press s to select it. 3 Press S to scroll to Camera, and press s to select it.

get started 13 **battery battery charging notes** For instructions on charging the battery, see your Quick Start Guide. Notes for charging your phone's battery: When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0C (32F) or above 45C (113F) when charging.

New batteries are not fully charged. New batteries or batteries stored for a long time may take more time to charge.

Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging. Note: You can charge your battery by connecting a cable from your phone's micro USB port to a USB port on a computer. Both your phone and the computer need to be turned on, and your computer has to have the correct software drivers installed. @@These tools are also sold separately. Note: When recharging a completely dead battery, the charging time required for your phone to power up can vary, depending on the type of battery charger you use. **battery use & safety IMPORTANT: HANDLE AND STORE BATTERIES PROPERLY TO AVOID INJURY OR DAMAGE.** Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries. 14 get started **DON'Ts** Don't disassemble, crush, puncture, shred or otherwise attempt to change the form of your battery. Don't let the phone or battery come in contact with water. Water can get into the phone's circuits, leading to corrosion.

If the phone and/or battery get wet, get them checked by your carrier or contact Motorola, even if they appear to be working properly. Don't allow the battery to touch metal objects. If metal objects, such as jewellery, stay in prolonged contact with the battery contact points, the battery could become very hot. Don't place your battery near a heat source. Excessive heat can damage the phone or the battery. High temperatures can cause the battery to swell, leak or malfunction. Therefore: **DOs** Do not dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven. Avoid leaving your phone in your car in high temperatures. Do avoid dropping the battery or phone. Dropping these items, especially onto a hard surface, can potentially cause damage.

Do contact your service provider or Motorola if your phone or battery has been damaged from dropping or high temperatures. **IMPORTANT: USE MOTOROLA ORIGINAL PRODUCTS FOR QUALITY ASSURANCE AND SAFEGUARDS.** To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate get started 15 safety protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original" hologram.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO VE66 user guide](http://yourpdfguides.com/dref/3771114)  
<http://yourpdfguides.com/dref/3771114>

Motorola recommends you always use Motorola-branded batteries and chargers.

Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display, such as Invalid Battery or Unable to Charge, take the following steps: Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram; If there is no hologram, the battery is not a Motorola battery; If there is a hologram, replace the battery and retry charging it; If the message remains, contact a Motorola Authorised Service Centre. Important: Motorola's warranty does not cover damage to the phone caused by non-Motorola batteries and/or chargers. Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage or other hazard. PROPER AND SAFE BATTERY DISPOSAL AND RECYCLING Proper battery disposal is not only important for safety, it benefits the environment.

Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web: [www.motorola.com/recycling](http://www.motorola.com/recycling) [www.rbrc.org/call2recycle/](http://www.rbrc.org/call2recycle/) (in English only) Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling centre or national recycling 16 get started organisations for more information on how to dispose of batteries. Warning: Never dispose of batteries in a fire because they may explode. get started 17 shortcuts Your phone provides shortcuts to some frequently-used features. You can use the following shortcuts from the home screen.

To... change the alert style Do this... Press Shortcuts > Change Alert Style. send a text message Press Shortcuts > Create Message. change the wallpaper image create a new contact connect to a Bluetooth device Press Shortcuts > Change Wallpaper. Press Shortcuts > Create Contact.

Press Shortcuts > Find Bluetooth Devices. use widgets Press Shortcuts > Widget Library. change the alert style to vibrate only go to the dialled calls list Press . Press and hold #. To.

.. Do this...

18 shortcuts basics display The home screen appears when you turn on the phone. To dial a number from the home screen, press the number keys and . Press \ to delete numbers or return to the home screen. Press the centre key s or the Main Menu soft key to Service Provider 10:10 Clock open the main menu. When a menu is open, press \ to go back one menu. Press to exit all menus and return to the home screen. Feature Icons Date Press Shortcuts in the home screen to access some frequently-used phone features. Press the navigation key S up, down, left or right in 10/15/2009 Left Soft Key Label Shortcuts Main Menu Right Soft Key Label the home screen to open basic features. To show, hide or change feature icons in the home screen, see your Quick Start Guide. Note: Your home screen may look different, depending on your service provider.

basics 19 Status indicators appear at the top of the home screen: 3 Bluetooth/WiFi Indicator When Bluetooth power is turned on, the Bluetooth indicator shows Bluetooth status: blue = power on 1 2 3 4 5 6 7 8 9 green = connected flashing blue = discoverable 1 Signal Strength Indicator Shows the strength of the wireless network connection. The WiFi indicator l appears in red when WiFi power is turned on. The WiFi indicator turns green when your phone establishes a WiFi network connection with another device. 4 Messaging Presence Indicator Shows your instant messaging (IM) status: 2 EDGE/GPRS Indicator Shows when your phone is using a high-speed Enhanced Data for GSM Evolution (EDGE) network connection Z or General Packet Radio Service (GPRS) network connection g. 0 (green) = online Y = busy 3 (grey) = invisible to IM 2 = offline 4 = discrete 20 basics 5 Missed Event Indicator Shows when you have missed calls or unread messages. When instant messaging is active, the IM indicator 1 shows when you receive a new IM message. 8 Active Line Indicator Shows B to indicate an active call, or E to indicate when call forwarding is on. Indicators for dual-line-enabled SIM cards can include: G = line 1 active D = line 1 call forward on F = line 2 active C = line 2 call forward on 6 Message Indicator Shows when you receive a new text message. Other indicators can include: ( = voicemail message V = email message 9 When you set an alarm, the alarm indicator h appears at this location. Battery Level Indicator Vertical bars show the battery charge level.

Recharge the battery when your phone shows Low Battery. 7 Alert Style Indicator Shows the alert style setting: N = ring loud K = ring and vibrate H = vibrate only N = ring soft I = vibrate then ring J = silent basics 21 volume Press the volume keys to: turn off an incoming call ringer change earpiece or speakerphone volume during a call change playback volume for a song or video change the radio volume set your phone's alert style in the home screen (press the volume keys to scroll to an alert style, then press s or the side select key to select it) side select key The side select key gives you another way to do things. For example, when you scroll to a menu item, you can press the side select key to select it (instead of pressing s). Tip: From the home screen, press the side select key to open the Media Finder. 22 basics lock key Slide the lock key up to lock the phone keys, to prevent accidental keypresses during a call, or while playing music.

Slide the lock key down to unlock the phone keys. 2 Wait for the beep, then say the full name of the contact as it appears in your contact list (for example, "John Smith"). Your phone confirms the name and makes the call. or Say "Dial Number". Your phone prompts you to speak the digits in the phone number. Speak the digits. Your phone confirms the number and makes the call. voice commands You can use voice commands to tell your phone what to do. Note: Not all languages support voice commands. Tips: You can say a contact's name and number type together. For example, say "John Smith mobile" to call the mobile number stored for John Smith. For voice command help, press and hold , then press Help. voice dial a call You can dial a contact list entry by speaking its name, or dial any phone number by speaking its digits. 1 Press and hold . basics 23 voice activate phone functions You can use voice commands to open applications and perform many basic phone functions.

1 2 Press and hold . Wait for the beep, then say a command from the list. voice commands "<Name>" "Dial Number" "Send Message To <Name>" "Check Calendar" "Check New Message" "Check New Email" "Add New Contact" "Talking Phone" "Check Battery" "Check Signal" "Check Time" voice commands "Check Date" "Open Setup" "Open Recent Calls" "Open Theme" "Open Camera" "Open Web Access" "Set Ring Loud" "Set Vibrate" "Set Silent" "Set Aeroplane Mode" "Set Aeroplane Mode Off" Tip: Press and hold to see the list of voice commands.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO VE66 user guide](http://yourpdfguides.com/dref/3771114)

<http://yourpdfguides.com/dref/3771114>

24 basics talking phone You can set your phone to read the names of menu features or contact list entries, recite phone number digits you type in the home screen and/or read text messages or email messages you receive (in English only). concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products. codes & passwords Your phone's four-digit unlock code is originally set to 1234. The six-digit security code is originally set to 000000. If your service provider didn't change these codes, you should change them: Find it: s > u Settings > Phone Settings > Talking Phone Shortcut: Press and hold .

When the phone prompts you to say a command, say "Talking Phone". hands-free speaker During a call, press Options > Speaker On to turn the hands-free speaker on. Your display shows the speakerphone indicator until you turn it off (Options > Speaker Off) or end the call. Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you cannot Find it: s > u Settings > Security > Change Passwords You can also change your SIM PIN codes or call barring password.

If you forget your unlock code: At the Please verify the Unlock Code prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press # to enter your six-digit security code instead. basics 25 If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code or call barring password, contact your service provider. lock your SIM card or applications Note: You'll need to enter your SIM PIN code to lock or unlock the SIM card. If you forget your PIN code, contact your service provider.

lock & unlock phone You can lock your phone to keep others from using it. You'll need to enter the four-digit unlock code to lock or unlock your phone. To manually lock your phone: Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows SIM Blocked. Find it: s > u Settings > Security > Phone Lock > Lock Now To automatically lock your phone whenever you turn it off: To lock or unlock your SIM card: Find it: s > u Settings > Security > SIM PIN Lock To lock an application (such as Messages): Find it: s > u Settings > Security > Phone Lock > Lock at Power On > On Find it: s > u Settings > Security > Application Lock You'll need to enter the four-digit unlock code to see the applications list. Select an application and choose Locked to lock it. 26 basics personalise slider features slide tone Set a slide tone to play when you open or close the slider: Find it: s > u Settings > Phone Settings > Slide Closed > Continue All Tasks or End All Tasks or End Calls Only alert styles You can quickly change your phone's alert style to match your activity or environment. The alert style indicator shows at the top of the home screen. Find it: s > u Settings > Sounds and Ringtones > Slide Tone > slide tone or None Note: Slide tone volume is linked to the keypad volume setting. You won't hear the slide tone when the keypad volume is turned off. N Ring Loud K Ring and Vibrate H Vibrate Only N Ring Soft I Vibrate then Ring J Silent slide close Set your phone to continue running active applications (including calls), close active applications (including calls) or end calls when you close the slider: To change your alert style: From the home screen, press the volume keys on the side of your phone.

Or, from the home screen press Shortcuts > Change Alert Style. personalise 27 The Vibrate Only and Silent alert styles silence your phone until you set another alert style. Shortcut: From the home screen, press and hold # to quickly set the alert style to Vibrate Only. preview ringtones To preview the ringtones on your phone: Find it: s > u Settings > Sounds and Ringtones, > Ringtone > Ringtones 1 Press S up/down to scroll and listen to each ringtone in turn. 2 Press s to set the highlighted ringtone as your call alert. change alert style settings You can change the ringtones that notify you of incoming calls and other events. You can also change the keypad tone volume and slide tone. The changes you make are applied to all alert styles. Find it: s > u Settings > Sounds and Ringtones 1 Press S up/down to scroll to the setting you want to change, then press s. 2 3 Change the setting as desired.

Press Back to exit and save your changes. create a new alert style To create a new alert style with your own volume and call alert settings: Find it: s > u Settings > Sounds and Ringtones > Ring Mode > Options > Create Ring Mode 1 Press S up/down to scroll to the default alert style name, then press s to select it. 2 Change the alert style name as desired. 28 personalise 3 Press S up/down to scroll to the setting you want to change, then press s to select it. time & date Your phone can automatically update the time and date.

It uses the time and date for the Calendar. To synchronise time and date with the network: 4 5 Change the setting as desired. Press Save to save your changes. edit or delete alert styles To edit an alert style: Find it: s > u Settings > Phone Settings > Time & Date > Auto-update Time > On To manually set the time and date: Find it: s > u Settings > Sounds and Ringtones > Ring Mode, scroll to the alert style, press Options > Edit Ring Mode Note: You cannot edit the Vibrate Only or Silent alert styles. To delete a custom alert style: Find it: s > u Settings > Phone Settings > Time & Date > Auto-update Time > Off, then scroll and select Time and Date To adjust time and date, press S left/right to scroll to a setting, then press S up/down to change it.

Press Set to save your settings. To show a 12-hour or 24-hour digital clock in the home screen: Find it: s > u Settings > Sounds and Ringtones > Ring Mode, scroll to the alert style, press Options > Delete Ring Mode Find it: s > u Settings > Phone Settings > Time & Date > Time Format > 12 Hour Clock or 24 Hour Clock personalise 29 To set the date format in the home screen: wallpaper Change the background wallpaper image in the home screen: Find it: s > u Settings > Phone Settings > Time & Date > Date Format To set your time zone: Find it: s > u Settings > Display > Wallpaper > Wallpapers and Graphics > image Shortcut: From the home screen, press Shortcuts > Change Wallpaper. To apply a photo as a wallpaper image: Find it: s > u Settings > Phone Settings > Time & Date > Time Zone, then select a city in your time zone Shortcut: Press keypad keys to enter the first letters of the city you want.



**[You're reading an excerpt. Click here to read official MOTOROLA MOTO VE66 user guide](http://yourpdfguides.com/dref/3771114)**

<http://yourpdfguides.com/dref/3771114>



themes Use a phone theme to personalise the appearance and sound of your phone. Each theme uses a different wallpaper image, screensaver image and ringtone. Find it: s > j Multimedia > Media Finder > Photos > Captured, scroll to the photo, press Options > Apply to > Wallpaper To resize a wallpaper photo so it displays at the correct size: Find it: s > u Settings > Themes > theme Find it: s > u Settings > Themes, press Options > Edit 1 2 Press S right to select the images tab \$. Press S down to scroll to Wallpaper Layout, then press s to select it. 30 personalise 3 4 Scroll to Fit-to-Screen, then press Select. Press Save to save the setting. home screen shortcuts From the home screen, you can press the navigation key S up, down, left or right as shortcuts to your favourite features.

To change navigation key shortcut icons in the home screen: screensaver Change the screensaver image that appears in your phone's display after a period of inactivity: Find it: s > u Settings > Display > Screensaver > Screensavers > image To extend battery life, turn off the screensaver: Find it: s > u Settings > Display > Home Screen > NaviKey Shortcuts > Up, Down, Left or Right Select a direction, then choose the feature you want to open when you press S in that direction. To show or hide navigation key shortcut icons in the Find it: s > u Settings > Display > Screensaver > None skin A skin sets the look and feel of your phone's display. To change the skin: home screen: Find it: s > u Settings > Display > Home Screen > NaviKey Shortcuts > Icon Display > Show or Hide Note: You can press S to select the features in the home screen even when the icons are hidden. Find it: s > u Settings > Display > Skin > skin

personalise 31 main menu You can set the main menu view to appear as a grid of graphic menu icons, a text-based list or a menu icon spinner you scroll through using the left/right nav keys. From the main menu, press Options > View by > Grid or List or Spinner To change the order of the main menu features, press Options > Reorder, scroll to the feature you want to move, press Grab, scroll to the destination location, press Insert. Find it: s > u Settings > Display > Backlight Timeout more personalising features features language Set menu language: s > u Settings > Phone Settings > Language and Input > Language reset settings Reset default settings for all options except the unlock code, security code and lifetime timer: display appearance To set your display brightness: Find it: s > u Settings > Display > Brightness To save battery life, the display turns off when you're not using your phone. To set the display timeout delay interval: s > u Settings > Phone Settings > Reset > Reset All Settings 32 personalise features delete data Caution: This option erases all information you have entered (including contacts and calendar entries) and content you have downloaded (including pictures, videos and music files) stored in your phone's memory. After you erase the information, you cannot recover it. This option does not delete SIM card or memory card information. features delete memory card information Caution: This option erases all information you have entered (including contacts and calendar entries) and content you have downloaded (including pictures, videos and music files) stored on your memory card and/or SIM card.

After you erase the information, you cannot recover it. s > u Settings > Phone Settings > Reset > Delete Memory Cards s > u Settings > Phone Settings > Reset > Delete All Data personalise 33 calls turn off a call alert To turn off the ringer for an incoming call, press the volume keys on the side of your phone. Icons indicate if the call was incoming -, outgoing + or missed =. A tick mark next to the icon indicates a connected call. To call the number, press . To check if your caller left a voicemail message, see page 67. To see call details (like time and date), press s. Press Options to perform other operations on the number (send a message, save to contacts), or to set recent call options. recent calls Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. Find it: s > q Recent Calls Shortcut: Press from the home screen to go to the Dialed Calls list.

1 Press S left/right to select a call list: All Calls, Dialed Calls, Answered Calls, Missed Calls or Frequent Calls. 2 Press S up/down to scroll to a phone number. 34 calls redial 1 Press in the home screen to go to the Dialed Calls list. 2 Scroll to the number you want to call, then press caller ID Calling line identification (caller ID) shows the phone number for an incoming call. Your phone shows the caller's name and picture when they are stored in your contact list, or Incoming Call... when caller ID information isn't available. Note: Picture IDs aren't available for contacts stored on the SIM card. Tip: Want to know who's calling without even looking at your phone? To give one of your contacts a special ringtone, see page 75.

To show or hide your phone number for the next outgoing call, enter the number you want to call, then press Options > Show ID or Hide ID. To show or hide your phone number for all calls: . If you hear a busy signal and see Call Failed, press or Retry to redial the number. When the call goes through, your phone shows Connected and connects the call. return a call When your phone shows a list of calls you've missed, press S to scroll to a call, then press s to see call information. To return the call, press . Find it: s > u Settings > Call Settings > Dialling Setup > My Caller ID > All Calls > Show ID or Hide ID calls 35

emergency calls Your service provider programmes one or more emergency phone numbers, such as 999 (UK) or 112 (Europe), on your phone. Provided that the phone is switched on and in network coverage, you can make emergency calls using the programmed numbers, even when your phone is locked or the SIM card is not inserted (where allowed by the network operator). Note: Check with your service provider, as emergency numbers vary by country. Your phone's pre-programmed emergency number(s) may not work in all locations and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

Do not solely rely on your wireless phone for essential communications, such as medical emergencies. To make an emergency call: Turn your phone on, exit any open application such as games, dial the emergency number, then press to call the emergency number. hands-free Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you cannot concentrate on driving.



**You're reading an excerpt. Click here to read official MOTOROLA  
MOTO VE66 user guide**  
<http://yourpdfguides.com/dref/3771114>

Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas.

Always obey the laws and regulations on the use of these products. features auto answer (headset) Automatically answer calls when connected to a car kit or headset: *s > u Settings > Connections > Handsfree Settings > Auto-Answer* 36 calls features voice dial (headset) Enable voice dial with headset send/end key: call times & costs Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing *s > u Settings > Connections > Handsfree Settings > Voice Dial*. This time includes busy signals and ringing. The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

answer options Find it: *s > u Settings > Call Settings > In-Call Setup > Answer Options* option Any Key Answer Open To Answer Answer by pressing any key. Answer by opening the slider. features call times See call timers: Note: You can always press to answer a call. *s > q Recent Calls*, press Options > Call Times calls 37 features in-call timer Show call time information during a call: features data volumes See data volume meters: *s > u Settings > Call Settings > In-Call Setup > In-Call Timer* call costs See call cost trackers and credit information: *s > q Recent Calls*, press Options > Data Volumes more calling features features speed dial Your phone can store nine phone numbers that you can call with a single keypress. To store a speed dial phone number: *s > q Recent Calls*, press Options > Call Costs call cost setup Set a credit limit: *s > q Recent Calls*, press Options > Call Costs > Call Cost Setup data times See data call timers: *s > L Contacts*, press Options > Contacts Settings > Speed Dial List > speed dial location To call a speed dial number from the home screen, press and hold the single-digit speed dial number. *s > q Recent Calls*, press Options > Data Times 38 calls features international calls If your phone service includes international dialling, press and hold 0 to insert your local international access code (indicated by +). Then, press number keys to dial the country code and phone number. hold a call Press Options > Hold to put all active calls on hold. mute a call Press Options > Mute to put all active calls on mute. features call waiting When you're on a call, you'll hear an alert if you receive a second call.

Press to answer the new call. To switch between calls, press Switch. To connect the two calls, press Options > Link Calls. To end the call on hold, press Options > Call Waiting. To turn call waiting on or off: *s > u Settings > Call Settings > In-Call Setup > Call Waiting > On or Off* calls 39 features third call waiting When you're on a call, and have a second call on hold, your phone notifies you if you receive a third call. To end the active call, scroll and select End Active Call. To end the held call, scroll and select End Held Call. To ignore the third call, press Ignore. features transfer a call During a call: Dial next number, press , press Options > Transfer call forwarding Set up call forwarding: *s > u Settings > Call Settings > Call Forward > Voice Calls > Forward Calls > All Calls* or If Unavailable, select To, then specify the forwarding number Cancel call forwarding: To turn call waiting on or off: *s > u Settings > Call Settings > Call Forward > Cancel All* Note: The Cancel All option cancels all call forwarding, including data and fax calls. *s > u Settings > Call Settings > In-Call Setup > Call Waiting > On or Off* conference call During a call: Dial next number, press , press Options > Link Calls 40 calls features TTY calls Note: A teletypewriter (TTY) is a communication device used by people who are hard of hearing or have a speech impairment.

TTY does not work from mobile phone to mobile phone. Set up your phone for use with an optional TTY device: features network settings See network information and adjust network settings: *s > u Settings > Network Settings* fixed dial When you turn on fixed dialling, you can call only numbers stored in the fixed dial list. Turn fixed dialling on or off: *s > u Settings > Call Settings > In-Call Setup > TTY Settings > TTY* change phone line If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number: *s > u Settings > Call Settings > Fixed Dialling > On or Off* Note: You'll need to enter your SIM PIN2 code to turn fixed dialling on or off. If you forget your PIN2 code, contact your service provider. Use the fixed dial list: *s > u Settings > Call Settings > Active Line* The active line indicator shows the active phone line (see page 21).

*s > m Tools > Dialling Services > Fixed Dial* calls 41 features service dial Dial service phone numbers stored by your service provider: *s > m Tools > Dialling Services > Service Dial* DTMF tones Activate DTMF tones: *s > u Settings > Call Settings > Dialling Setup > DTMF > Long or Short* To send DTMF tones during a call, just press the number keys. 42 calls text entry Some features let you enter text. Create Message text entry modes Press # to select a text entry mode. SMS:0 Character Counter Flashing cursor indicates insertion point. "word" mode (see page 44) "abc" mode (see page 45) numeric mode (see page 46) symbol mode (see page 46) Press Options to change text entry options.

To change your global text entry language: Options Send To Find it: *s > u Settings > Phone Settings > Language and Input > Default Input Language* Change text case: In a text entry screen, press 0 to change text case to all capital letters (.), next letter capitalised (.) or next letter lowercase (no symbol). text entry 43 Set word learning: Your phone can learn the words you enter, to improve text prediction and completion. In a text entry screen, press Options > Text Entry > Set Text Prediction > Learn my words. Your phone shows when word learning is active. Set text completion: Set your phone to complete words based on the characters you enter. In a text entry screen, press Options > Text Entry > Set Text Prediction > Offer completions. Your phone shows when text completion is active. Edit or delete text: In a text entry screen, press S to move the cursor to the right of text you want to edit. Press the clear/back key \ to delete the character left of the cursor.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO VE66 user guide](http://yourpdfguides.com/dref/3771114)

<http://yourpdfguides.com/dref/3771114>

Hold | to delete word by word.

Word mode lets you enter words using one keypress per letter. The phone predicts each word as you enter it. For example, if you press 7 7 6 4, your display might show: Press s to enter Prog. Press \* to enter Prog & a space. Press S up/down to see other words. Press S right to select the suggested word. Create Message Prog ram SMS:4 You can turn text completion on ( ) or off ( ). Press | to delete character to left of cursor. Options Send To word mode To switch to "word" predictive text entry mode, press # in a text entry screen until you see in the display. 44 text entry Tip: Need to enter a symbol or punctuation? Press # until you see to switch to symbol mode (for more information, see page 46).

For example, if you press 7 once, your display might show: abc mode To switch to "abc" text entry mode, press # in a text entry screen until you see in the display. To enter text, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter. Press s to enter P. Press \* to enter P & a space.

Press S right to select the suggested word. Create Message P rog SMS:1 You can turn text completion on ( ) or off ( ). After two seconds, character is accepted and cursor moves to next position. Options Send To When text completion is activated, your phone tries to guess the rest of the word. If you want a different word, press keypad keys to enter the remaining letters.

Shortcut: To enter punctuation in abc mode, press | to cycle through common punctuation symbols. text entry 45 numeric mode Press # in a text entry screen until you see . Press the number keys to enter the numbers you want. Tip: Just need one number? To enter a number quickly, press and hold a number key until the number appears. symbol mode Press # in a text entry screen until you see .The display shows the symbol associated with each keypad key. Press S up/down repeatedly to see different symbols. To insert a symbol, press its key, or scroll to it and press s. 46 text entry entertainment videos To record and play videos on your phone, see your Quick Start Guide. H.

263 + AMR-NB: total bit rate up to 320 kbps - video up to 296 kbps, QVGA, 25 fps - audio up to 12.2 kbps, 8 kHz, mono - .3gp, .pvs, .pvp file extensions - MIME Video/mp4, Video/3gpp. H.263 + AMR-WB: total bit rate up to 320 kbps - video up to 296 kbps, QVGA, 25 fps - audio up to 23.85 kbps, 16 kHz, mono - .3gp, .pvs, .

pvp file extensions - MIME Video/mp4, Video/3gpp. H.263 + AAC/AAC+/Enhanced AAC+: total bit rate up to 350 kbps - video up to 296 kbps, QVGA, 25 fps - audio up to 128 kbps, up to 48 kHz, stereo/mono - .3gp, .pvs, .

pvp file extensions MIME Video/mp4, Video/3gpp. Real Audio + Video: total bit rate up to 350 kbps - video up to 296 kbps, QVGA, 15 fps - audio up to 64 kbps, up to 48 kHz, stereo/mono - .rm, .rmvb file extensions - MIME Application/x-pn-realmedia, Application/vnd.rn-realmedia.

H.264 + AMR-NB: total bit rate up to 280 kbps - video up to 256 kbps, QCIF, 15 fps - audio up to 12.2 kbps, 8 kHz, mono - .mp4, .3gp file extensions - MIME Video/mp4, Video/3gpp. H.264 + AMR-WB: total bit rate up to 280 kbps - video up to 256 kbps, QCIF, 15 fps - audio up to 23.85 kbps, 16 kHz, mono - .mp4, .3gp file extensions - MIME Video/mp4, Video/3gpp.

supported video formats Before you copy video files to your phone, make sure the files are in a format the phone recognises: MPEG4 + AMR-NB: total bit rate up to 320 kbps - video up to 296 kbps, QVGA, 25 fps - audio up to 12.2 kbps, 8 kHz, mono - .mp4, .3gp, .pvs, .pvp file extensions - MIME Video/mp4, Video/3gpp. MPEG4 + AMR-WB: total bit rate up to 320 kbps - video up to 296 kbps, QVGA, 25 fps - audio up to 23.85 kbps, 16 kHz, mono - .mp4, .3gp, .pvs, .pvp file extensions - MIME Video/mp4, Video/3gpp. MPEG4 + AAC/AAC+/Enhanced AAC+: total bit rate up to 350 kbps - video up to 296 kbps, QVGA, 25 fps - audio up to 128 kbps, up to 48 kHz, stereo/mono - .mp4, .3gp, .

pvs, .pvp file extensions MIME Video/mp4, Video/3gpp. entertainment 47 H264 + AAC/AAC+/Enhanced AAC+: total bit rate up to 350 kbps video up to 256 kbps, QCIF, 15 fps - audio up to 128 kbps, up to 48 kHz, stereo/mono - .mp4, .3gp file extensions - MIME Video/mp4, Video/3gpp.

WMV 9 + WMA v9 L2 (also WMA v3, v7, v8): total bit rate up to 224 kbps - video up to 96 kbps, QCIF, 15 fps - audio up to 128 kbps, up to 48 kHz, stereo/mono - .asf, .wmv file extensions MIME Video/x-ms-wmv. set up music To load song files from a music CD onto your computer: 1 2 3 Insert the music CD in your computer's CD drive. Open Windows Media Player 11. Copy the music CD to the media player library (also called ripping the CD). If your computer is connected to the Internet, the media player may retrieve CD information, such as song titles, album name, artist name and album artwork. This information will display in your phone's music player. music Copying and syncing music between your phone and computer is easy, with Microsoft™ Windows™ Media Player 11. Note: The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries.

This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor. Tip: You can also purchase Microsoft™ Windows Media DRM-protected music files from supported online music stores (such as Urge, Yahoo! and Napster). 48 entertainment set default format and bit rate for Windows™ Media Player 11 Windows Media Player 11 lets you adjust format and bit rate settings, to optimise sound quality, or to increase the number of song files you can store on your phone. To set the default file format and bit rate: 1 2 3 4 Insert the music CD in your computer's CD drive. Open Windows Media Player 11. Select the Rip tab in Windows Media Player 11. Click the Rip tab down arrow, then choose Format > Windows Media Audio, Windows Media Audio Pro or mp3. 5 Click the Rip tab down arrow again, then choose Bit Rate > bit rate. Tip: To maximise the number of songs you can store on the phone, we recommend setting the bit rate to 128 Kbps or lower (use the lowest bit rate that provides an acceptable sound quality on your phone).

Tip: To learn more about Windows Media Player 11 song file formats and bit rates, open Windows Media Player 11, click the Rip tab down arrow, then choose Help with Ripping. convert iTunes AAC files to MP3 files on your computer You can use the iTunes desktop application to convert standard iTunes AAC files to MP3 files that are compatible with Windows Media Player 11. For more information, open the iTunes desktop application and choose Help > iTunes Help > Saving a copy of a file in a new file format.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO VE66 user guide](http://yourpdfguides.com/dref/3771114)  
<http://yourpdfguides.com/dref/3771114>

get music Note: You'll need Windows Media Player 11 to synchronise music files as described in this section. Using previous versions of Windows Media Player may compromise your music experience.

You can download Windows Media Player 11 at [www.microsoft.com/windowsmedia](http://www.microsoft.com/windowsmedia). Note: Windows Media Player 11 requires Windows XP or later to run. If you are using an earlier version of the Windows OS on your computer, see the section "manually transfer music" on page 55.

Note: You cannot use Windows Media Player 11 to copy pictures or videos to the phone. When your phone is connected to the computer in media synchronisation mode, Windows Media Player 11 treats the phone as a single memory device, and will copy and sync music files to both phone memory and a microSD memory card installed in the phone. (For example, a phone with 1 GB of internal memory and an 8 GB microSD memory card would appear to have around 9 GB of available memory in Windows Media Player 11). on your phone If desired, insert a memory card in your phone (see your Quick Start Guide)., then press s > u Settings > Connections > USB Settings > Media Sync/PlayFromDevice. Attach a Motorola Original USB cable to the micro USB port on your phone and to an available USB port on the back of your computer. @@These tools are also sold separately. Note: Some phone functions are temporarily unavailable when a USB connection is active. on your computer Open Windows Media Player 11. Your phone appears in the upper right corner of the Windows Media Player 11 screen.

The phone's music files are listed on the left side of the screen. 1 Select the Sync tab in Windows Media Player 11. 50 entertainment 2 Drag and drop songs or playlists onto the Sync List on the right side of the Windows Media Player 11 screen. When a song or playlist starts to play, use the following keys to control song playback: 3 4 Click Start Sync to copy the songs onto the phone. When you finish, disconnect your phone from the computer. Press volume keys to change volume. Press S left to go to previous song. Press left & hold to rewind. Press s to pause/play. Elapsed Time/ Total Time all 7 - 12 01:15/02:40 album artwork play music Find it: s > j Multimedia > Media Finder > Music > category > song or playlist You can select a song or playlist from these categories: All, Playlists, Artists, Albums, Genres, Ratings or Shuffle All (play all songs in random order).

Tip: Use the phone's built-in stereo speakers to play your music out loud. Use a wired headset or wireless stereo headphones to enjoy your music in private. Tip: Lock the phone keys, to prevent accidental keypresses while playing music (see page 23). Song Title Options Back Press S right to go to next song. Press right & hold to fast-forward.

Fast forward & rewind. During a song, the music player shows the song title, artist, album and artwork, if available. If you receive a call during a song, the song pauses until the call is over. entertainment 51 When a song is playing, press Options to select music player options: options Rate Hide Delete Manage Send to Assign a rating to the song. Hide the music player.

Delete the song file. Show song Properties, such as file name, type and size. Send the song in a message or email, or send it to another device over a Bluetooth connection. Apply to Add the song to a playlist or make it a ringtone. options Use Bluetooth/ Use Handset To send the audio to a Bluetooth headset, select Use Bluetooth to connect to a recognised Bluetooth headset or search for a new headset. When a Bluetooth audio connection is active, select Use Handset to drop the Bluetooth connection and switch the audio back to the phone. Buy More Mark the song for further research. During synchronisation with a PC, you'll be prompted to buy more related content. Setup Personalise settings. 52 entertainment hide the music player To hide the music player while music plays, press .

The phone returns you to the home screen, where you can use the nav key S to control song playback. To return to the music player from the home screen, press S up. Shortcut: From the home screen, press Shortcuts > Find Bluetooth Devices. Your phone lists the Bluetooth audio devices it finds within range. 1 2 Scroll to the stereo headphones in the list. Press s to connect with the stereo headphones. use Bluetooth stereo headphones Connect your phone with optional Bluetooth stereo headphones to listen to music stored on your phone. To connect your phone to a set of Bluetooth stereo headphones for the first time, make sure the headphones are on and ready in pairing or bonding mode (to put the headphones in pairing/bonding mode, see the user's guide for the device). adjust audio settings Optimise the sound quality when listening to music through the phone speakers, stereo headphones or stereo headset. To change playback volume, press the volume keys on the side of your phone.

To adjust audio settings, press Options > Setup, then select your listening method (Stereo Headset or Loudspeaker). Find it: s > u Settings > Bluetooth > Search for Devices entertainment 53 Stereo headset options: options Stereo Surround Bass Boost Equalizer 3D Stereo Set surround sound environment. Set bass level. Optimise audio settings for the type of music you play. Set stereo separation level.

2 Press the external camera key Press j to take a photo. or j on the side of your phone to activate the camera. 3 Press Options > Mode > Video Camera to switch to video camera mode, then press j to record a video. Note: Music playback pauses while you record a video, and may pause momentarily when you take a picture. Loudspeaker options: To use the browser while playing music: options 3D Stereo Bass Boost Set stereo separation level.

Set bass level. 2 1 From the music player screen, press to go to the home screen. Press T to open the browser. do other tasks while playing music To take pictures or record videos while playing music: 1 From the music player screen, press to go to the home screen. To return to the music player from another application: 1 2 Press to exit the application. Press S up to return to the music player. 54 entertainment manually transfer music Without using Windows Media Player 11, you can manually copy or sync music files from the computer to phone memory, or to an optional microSD memory card in the phone. (To insert a memory card, see your Quick Start Guide). AAC+: 16 to 128 kbps, up to 48 kHz, mono/stereo - .mp4, .

3ga, .m4a, .aac file extensions - MIME Audio/mp4, Audio/3gpp, Audio/m4a, Audio/aac. Enhanced AAC+: 16 to 128 kbps, up to 48 kHz, parametric stereo .mp4, .3ga, .m4a, .aac file extensions - MIME Audio/mp4, Audio/3gpp, Audio/m4a, Audio/aac. MP3: Up to 320 kbps, up to 48 kHz, mono/stereo - .mp3, .mpga file extensions - MIME Audio/mp3, Audio/x-mp3, Audio/mpeg3, Audio/x-mpeg3, Audio/mpeg, Audio/mpg, Audio/x-mpeg, Audio/x-mpg.



[You're reading an excerpt. Click here to read official MOTOROLA](#)

[MOTO VE66 user guide](#)

<http://yourpdfguides.com/dref/3771114>

8-bit Linear PCM: Up to 320 kbps, 8/11.05/12/16 kHz, stereo/mono - .wav file extension - MIME Audio/L8, Audio/wav. 16-bit Linear PCM: Up to 320 kbps, 8 kHz, stereo/mono - .wav file extension - MIME Audio/L16, Audio/wav.

On a Windows PC, this is the My Computer window. On a Macintosh computer, it's on the desktop. 2 Double-click the Removable Disk icon for your phone or memory card. 3 Scroll to the playlist you created, and press s to select it.

4 5 Scroll to Add Songs, and press s to select it. Scroll to All, Artists, Albums or Genres, press s to select it. 6 Scroll to the songs you want to add, and press s to select them. 7 8 Press Add to add the selected songs to the playlist. 9 Replay the current playlist when the last song finishes playing. Optimise audio settings for a connected stereo headset. 10 To... go to a Web page Do this.

11 bookmark the current Web page go to a bookmarked Web page change the browser's home page send a picture, video or song file to your blog Go to the Web page you want to use, then press Options > Active Page > Use as Homepage. Use the Media Finder to scroll to the media file you want to post, then press > Options > Send via > Blog. Press Options > Active Page > Add Bookmark. Press Options > Go to > My Bookmarks > bookmark. Find it: Press T Press S up/down/left/right to scroll through Web pages. Scroll to a link and press s to select it. Press Back at any time to return to the previous screen. Some Web pages may contain a text entry window for exchanging information with a Web site.

12 Scroll to the entertainment 59 To... download a media file, theme, Java™ game or application hide the browser screen Do this..

13 Go to the Web page that links to the file, scroll to the link and select it. Press S left/right to select information tabs at the top of the display. Press S up/down to scroll to each data field, then press s to select it and enter information. When you're finished, press Save to save the blog.

To manually post a media file (photo, video or sound file) to a blog: Press Options > Hide All. The browser continues to run in the background, and you can perform other tasks while the browser is running. Press . Find it: s > 1 Mobile Internet > WebShare > blog 1 Press Options > Insert > Picture or Video or Sound, then scroll and select the file you want to insert. 2 3 Enter a Title: and Description: for the file, if desired. Press Post to post the file to the blog. exit the browser set up & use a blog You can set up a blog account on your phone, and set the phone to automatically post pictures and videos to your blog site.

To set up a blog on your phone: To specify one or more blogs where you would like to auto post photos/videos: Find it: s > 1 Mobile Internet > WebShare, press Options > Set Auto Post > Post Photos to or Post Videos to > blog Find it: s > 1 Mobile Internet > WebShare > Add Blog 60 entertainment To activate auto blog so your phone automatically posts captured photos/videos to the specified blog(s), see your Quick Start Guide. To activate auto blog so your phone automatically posts pictures and/or videos to the specified blog(s), see your Quick Start Guide. set up & use a Web feed You can set up a Web feed subscription, to periodically receive updated Web feed content that you can read on your phone.

61 check your email Check your personal Web-based email account (like Hotmail, Gmail or Yahoo). Find it: Press T 1 2 Press Options > Go to. Enter the Web address for your Web-based email account, then press Go. Find it: s > 1 Mobile Internet > Web Feeder > Add Subscription Press S left/right to select information tabs at the top of the display. Press S up/down to scroll to each data field, then press s to select it and enter information. When you're finished, press Save to save your subscription. To read a Web feed that you subscribe to on your phone: Find it: s > 1 Mobile Internet > Web Feeder > subscription

62 entertainment 61 manage certificates Certificates are used to verify the identity and security of Web sites when you download files or share information. To enable or disable Internet access certificates stored on your phone: install a widget Find it: s > Widgets 1 If no widgets are installed on your phone, select Get Widgets from the widget library screen. or If one or more widgets are installed on your phone, press Options > Get Widgets from the widget library screen. 2 Your phone launches the phone browser and takes you to the widgets download page.

3 Scroll and select the widget you want to install. Find it: s > u Settings > Security > Certificates widgets Widgets are small, Web-based applications you can install on your phone for instant access to Web 2.0 services and content. Your phone may come with some pre-installed widgets, and you can download more to personalise the content and services that matter to you. Note: You need to have browser service activated on your phone to use widgets.

You may incur additional data charges when accessing the Widgets application. Contact your service provider for more information. download a widget from a computer To download a widget from a computer to your phone: 1 Connect your phone to the computer over a USB cable connection. (For more information about using USB cable connections, see page 89). 2 Set USB mode to mass storage (press s > u Settings > Connections > USB Settings > Memory Card).

3 use widgets To view and use widgets installed on your phone: 3 Open the optional Motorola Phone Tools accessory application on the computer, and use the Phone Tools application to transfer the widget MPKG installation package to your phone. Find it: s > Widgets Shortcut: From the home screen, press Shortcuts > Widget Library. Press S up/down/left/right to scroll to an active widget you want to use. Press s to open the widget. Icons for the widgets installed in the widget library are separated into two categories, Active and Inactive. Only active widgets can be used (new widgets are installed as active by default) Your phone is limited in the number of widgets that can be active at one time. To reorder the active widgets or inactive widgets list: From the widget library screen, press Options > Reorder, scroll to the feature you want to move, press Grab, scroll to the destination location, press Insert. Tip: You can also download a widget MPKG installation package to your phone over a Bluetooth connection, or send the file to your phone in an SMS message or email message. Use the File Manager application (press s > m Tools > File Manager) to locate the widget file you downloaded. Select the file to install the widget to the widget library.

63 entertainment 63 To activate or deactivate a widget installed on your phone: Scroll to the widget, then press Options > Activate or Deactivate.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO VE66 user guide](http://yourpdfguides.com/dref/3771114)

<http://yourpdfguides.com/dref/3771114>