



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA MOTO W409G. You'll find the answers to all your questions on the MOTOROLA MOTO W409G in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MOTOROLA MOTO W409G

User guide MOTOROLA MOTO W409G

Operating instructions MOTOROLA MOTO W409G

Instructions for use MOTOROLA MOTO W409G

Instruction manual MOTOROLA MOTO W409G



MOTO™ W409G

Getting Started Guide



[You're reading an excerpt. Click here to read official MOTOROLA MOTO W409G user guide](http://yourpdfguides.com/dref/4065748)

<http://yourpdfguides.com/dref/4065748>

Manual abstract:

Take photos and send them to your friends. · Music. Instantly play your music. Just open the music player and select a playlist. · Web. Surf to your heart's content. Search, browse, everything you want to do, all made easier. @@ You may be surprised at what you discover. @@@@ Right Soft Key Left Soft Key Volume Keys Camera Key Send Key Make & answer calls. Micro USB Connector Back Key Power/End Key Turn on/off, hang up, exit menus. 3.5mm Headset Jack Note: Your phone might look a little different. Your phone 3 Contents Let's go . . .

.
.....
.....
.....
.. 5 Keys . . .
.....
.....
.....
.....
..... 8 Home screen
.....
.....
.....
..... 10 Calls
.....
.....
.....
.....
..... 12 Contacts
.....
.....
.....
..... 14 Messaging
.....
.....
.....
..... 16 Photos
.....
.....
.....
..... 17 Music player
.....
.....
.....
..... 19 Radio
.....
.....
.....
.....
..... 21 Web
.....
.....
.....
..... 23 Tips & tricks
.....
.....
.....

..... 24 Text entry

.....

..... 26 Personalize

.....

..... 27 Manage your life

.....

..... 30 Bluetooth® wireless.

.....

32 Memory card & USB

.....

... 34 Security.

.....

.....

.. 37 Troubleshooting

.....

.... 39 Safety, Regulatory & Legal

.....

... 41 4 Let's go let's get you up and running Assemble & charge 1 cover off 2 microSD card in 3 battery in 4 cover on 5 charge up 4H Caution: Please read "Battery Use & Safety" on page 41. Let's go 5 Tip: To remove the microSD memory card, depress the retainer tab (use a coin or other similar object), then slide the card out with your thumb. Turn it on & off To turn your phone on or off, press and hold the Power/End key . Prepaid service Find it: Press Menu (left soft key) > Tip: You can also press the Select key prepaid service app. Prepaid to open the With prepaid service, you buy wireless network services in advance. Your phone works just the same way as always. @@@@To answer a call, press call alert, press Reject.

. @@An optional microSD memory card can be installed in your phone--you can load it up with music, photos, and videos from your computer (see "Memory card & USB" on page 34). Let's go 7 Keys a few essentials Menu navigation 1 From the home screen, press Menu (left soft key) to open the app menu. 2 Press the Navigation key up, down, left or right to scroll and highlight a menu option. 3 Press the Select key to select the highlighted option.

Shortcut keys From the home screen press , up, down, left or right to quickly open Music player, Contacts, Messages, or User profiles. 8 Keys Adjust volume Press the volume keys on the side of your phone to change the ring volume (in the home screen), or the earpiece volume (during a call). When playing music or video files, press the volume keys to adjust media volume. Keys 9 Home screen quick access to the things you need most Quick start: Home screen The home screen gives you all your latest information in one place. It's what you see when you turn on the phone or press from a menu.

It's basically like this: 10:18AM Status Indicators 10/12/2012 10:18 AM Menu Browser Right Soft Key Left Soft Key Press to open app menu. Note: Your home screen might look a little different. 10 Home screen App menu All the apps on your phone are shown in your app menu. To open the app menu, from the home screen, press Menu (left soft key). Press up, down, left or right to highlight a menu option, then press to select the highlighted option. You can press to return to the home screen at any time. Phone status & notifications The status bar at the top of the screen contains icons that tell you about messages and phone status. status indicators Signal Strength GPRS Bluetooth® Radio Alarm Clock New Message Ring Only Vibrate Only Vibrate and Ring Vibrate then Ring Headset Battery Home screen 11 Calls it's good to talk In-call options During a call, press Spkr On to use the handsfree speakerphone. Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Tip: To mute your call, press Options > Mute. Recent calls 1 From the home screen, press recent calls. to see a list of 2 Highlight a call and press to call it. To see call details, press Options > View. 12 Calls Emergency calls Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. 1 Enter the emergency number in the home screen. 2 Press to call the emergency number. Cool down In very limited circumstances, such as where your phone has been exposed to extreme heat, "Cool Down" message screens will appear.

To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in "Cool Down" mode, only emergency calls can be made. Calls 13 Contacts contacts like you've never had before Quick start: Contacts Find it: Menu > 12:14AM Contacts Contacts a ab Text Entry Mode Press to scroll up/down through the contact list. Add new contact Lisa Lindsay 2125550707 Search for a contact. Options Back Select to view, call, edit, delete, copy, move, or send the selected contact.

Tip: To see more contacts, press up or down. 14 Contacts Create contacts Find it: Menu > Contacts > Add new contact Alternatively, you can enter a phone number in the home screen, then press Options > Save to Contacts. Enter the contact name and details. When you're finished, press OK > Yes to save. Call contacts Scroll to a contact and press .

Contacts 15 Messaging sometimes it's better 2 say it in a message Create & send messages Find it: Menu > Messages > Create Message Use the keypad to enter your message. Press Options to insert a picture, sound, or video. When you finish creating the message, press Options > Send to to enter phone numbers or select message recipients from your contact list. To send the message, press Options > Send. Receive a message When you receive a message, your phone plays an alert and shows the new message indicator at the top of the screen. To read the new message, press View. To read messages stored in your inbox, press Menu Messages > Inbox. > 16 Messaging Photos see it, capture it, share it! Find it: Press Camera Tip: You can also press Menu > Tools > Camera.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO W409G user guide](http://yourpdfguides.com/dref/4065748)
<http://yourpdfguides.com/dref/4065748>

Shots Remaining (Phone Memory) 250 Ix Options Press up/down to zoom in/out. Press right to change to video recorder.

Select to adjust camera settings. To take the photo, press . Your phone saves the photo, and briefly shows the photo in the screen. · To send the photo in a message, press Options > Send. Photos 17 · To delete the photo, press Options > Delete. To see photos you've taken, press Menu My Folder > Phone Memory or Memory card > > Photos. To record a video, go to the camera viewfinder screen and press right to change to the video recorder. Tools Alternatively, you can press Menu > > Video recorder. 18 Photos Music player when music is what you need..

. Get music You can transfer music from your computer to your phone by using a USB connection. For more information on transferring music, see "USB drag & drop" on page 35. Note: Copyright--do you have the right? Always follow the rules. See "Content Copyright" in your legal and safety information. Play music To create a music playlist: Tools > Music player Find it: Menu > > My playlists, press Options > New playlist 1 Enter a name for the playlist, then press Options > Done. 2 Select the playlist name, then press Load > Options > Add to add a song from your phone or memory card. 3 If necessary, select Phone Memory or Memory card to specify where the song file is located. 4 Scroll to the song, and press OK to add it to the playlist. Repeat to add other songs to the playlist.

Music player 19 To play a playlist, select it and press Load > Options > Play. To delete a playlist, select it and press Delete. To adjust music player settings, when the player is running, press Options > Settings > Player settings. 20 Music player Radio news and music on the go Note: The FM radio only works when an optional wired headset accessory is plugged into the phone's headset jack. Find it: Menu > Tools > FM radio Seek. To seek local radio stations, press To tune a station, press Press Options to see radio options: options Radio On(Off) Channel list Manual input Auto search left or right. Turn the radio on and off. Store up to nine radio channels. Enter a channel frequency. Automatically search for radio channels and store them to the channel list.

Activate background play, activate the loudspeaker, set recording format, audio quality, and storage location. Record radio programs. Settings Record Radio 21 options Append Return to the previous recorded file and continue recording to the same file. Manage recorded files. File list 22 Radio Web surf the web with your phone Note: To use the browser, you must have data service activated for your account (additional fees may apply for this service). Use your phone's browser to surf your favorite web sites, upload videos to a video blog, and download files and applications to your phone. Log onto your internet-based email account to check your email. Find it: Menu > To...

Go to your home page Go to a web page Bookmark a web page Go to a link on a web page Select Home. Select Go to URL. Press Options > Add to Bookmarks. Select the link. Browser Note: If you can't connect, contact your service provider.

Web 23 Tips & tricks a few handy hints To... Return to home screen See recent incoming & outgoing calls Create a new contact in your contact list Adjust sound volume Turn airplane mode on/off Press . Press Menu Recent calls > > Missed caof things Calendar Find it: Menu > Tools > Calendar To set the calendar view, press Options > Go to monthly view or Go to weekly view.

To add an event, scroll to the day, then press Options > Add event. You can set three types of event--Reminder, Meeting, or Course. To view an event, scroll to the day, then press Options > View. Select the event to see its details. When your phone shows/sounds an event reminder, press OK to dismiss the reminder.

Press Snooze to delay the reminder for eight minutes. Alarms Find it: Menu > Tools > Alarm To set an alarm, select it and turn it on, then specify the alarm time, recurrence, and alert type. When your phone shows/sounds an alarm, press Stop to turn off the alarm. Press Snooze to delay the alarm for eight minutes. 30 Manage your life Tasks Find it: Menu > Tools > Tasks To add a task, press Add > DaK.

You can't use the files on your memory card while it is connected. 3 On your computer, use the "My Computer" window to find "Removable Disk. " 4 Click on the "Removable Disk" icon to access the memory card. Memory card & USB 35 5 Drag & drop files between your computer and memory card folders. 6 When you're done, use the "Safely Remove Hardware" feature to finish. 36 Memory card & USB Security help keep your phone safe Codes & passwords Your phone password is originally set to 1122. If your service provider didn't change the phone password, you should change it: Settings > Security Settings Find it: Menu > > Change Password > Phone password You can also change your SIM card PIN and PIN2 codes. If you forget your phone password: At the Input password prompt, try entering 1122 or the last four digits of your phone number. If that doesn't work, contact your service provider. If you forget other codes: If you forget your SIM PIN code or PIN2 code, contact your service provider.

Lock your phone You can lock your phone to keep others from using it. You'll need to enter your four-digit phone password to lock or unlock the phone. To automatically lock your phone whenever you turn it off: Find it: Menu > > Phone Lock Settings > Security Settings Security 37 To unlock your phone: When you see Input password, enter your four-digit phone password and press OK. 38 Security Troubleshooting we're here to help Crash recovery In the unlikely event that your phone stops responding to key presses, try a quick reset. Remove the back cover and battery ("Assemble & charge" on page 5), then replace and turn on your phone as usual.

Reset Reset default factory settings on your phone. You'll need to enter your phone password to reset the phone. Caution: This option erases all information you have entered (including contacts and calendar entries) and content you have downloaded (including pictures, videos, and music files) stored in your phone's memory. After you erase the information, you can't recover it. This option does not delete SIM card or memory card information.

Find it: Menu > Settings > Reset Factory Settings Troubleshooting 39 Service & Repairs If you have questions or need assistance, we're here to help. Go to www.motorola.com/repair (United States) or www.motorola.com/support (Canada), where you can select from a number of customer care options.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO W409G user guide](http://yourpdfguides.com/dref/4065748)
<http://yourpdfguides.com/dref/4065748>

You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada). 40 Safety, Regulatory & Legal Battery Use & Safety Important: Handle and store batteries properly to avoid injury or damage. Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries. DON'Ts · Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.

· Don't let the mobile device or battery come in contact with water. * Water can get into the mobile device's circuits, leading to corrosion. If the mobile device and/or battery get wet, have them checked by your service provider or contact Motorola, even if they appear to be working properly. * · Don't allow the battery to touch metal objects. If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot. · Don't place your mobile device or battery near a heat source. * High temperatures can cause the battery to swell, leak, or malfunction. · Don't dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven. DOs · Do avoid leaving your mobile device in your car in high temperatures. * · Do avoid dropping the battery or mobile device.

* Dropping these items, especially on a hard surface, can potentially cause damage. * · Do contact your service provider or Motorola if your mobile device or battery has been damaged from dropping or high temperatures. * Note: Always make sure that the battery compartment is closed and secure to avoid direct exposure of the battery to any of these conditions. Battery Use & Safety 41 Important: Use Motorola Original products for quality assurance and safeguards. To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection),

Motorola provides holograms on its batteries.

Consumers should confirm that any battery they purchase has a "Motorola Original" hologram. Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as Invalid Battery or Unable to Charge, take the following steps: · Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram; · If there is no hologram, the battery is not a Motorola battery; · If there is a hologram, replace the battery and try charging it again; · If the message remains, contact a Motorola authorized service center. Important: Motorola's warranty does not cover damage to the mobile device caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard. Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web: · www.motorola.com/recycling · www.rbrc.org/call2recycle/ (in English only) Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries. Warning: Never dispose of batteries in a fire because they may explode.

032375o 42 Battery Charging Notes for charging your product's battery: · During charging, keep your battery and charger near room temperature for efficient battery charging. · New batteries are not fully charged. · New batteries or batteries stored for a long time may take more time to charge. · Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging. Battery Charging Driving Precautions Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle. Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products. While driving, NEVER: · Type or read texts. · Enter or review written data. · Surf the web.

· Input navigation information. · Perform any other functions that divert your attention from driving. While driving, ALWAYS: · Keep your eyes on the road. · Use a handsfree device if available or required by law in your area. · Enter destination information into a navigation device before driving. · Use voice activated features (such as voice dial) and speaking features (such as audible directions), if available. · Obey all local laws and regulations for the use of mobile devices and accessories in the vehicle. · End your call or other task if you cannot concentrate on driving. Remember to follow the "Smart Practices While Driving" in this guide and at www.motorola.com/callsmart (in English only).

43 Seizures/Blackouts Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing videos or games. These may occur even if a person has never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing videos or games or enabling a flashing-lights feature (if available) on your mobile device. Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired. Caution About High Volume Usage Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected. To protect your hearing: · Limit the amount of time you use headsets or headphones at high volume. · Avoid turning up the volume to block out noisy surroundings.

· Turn the volume down if you can't hear people speaking near you. If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO W409G user guide](http://yourpdfguides.com/dref/4065748)

<http://yourpdfguides.com/dref/4065748>

For more information about hearing, see our Web site at direct.motorola.com/hellomoto/nss/AcousticSafety.asp (in English only). Repetitive Motion When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician. [Nov0109] 44 Small Children Keep your mobile device and its accessories away from small children. These products are not toys and may be hazardous to small children.

For example: · A choking hazard may exist for small, detachable parts. · Improper use could result in loud sounds, possibly causing hearing injury. · Improperly handled batteries could overheat and cause a burn. Glass Parts Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact.

If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center. Operational Warnings Obey all posted signs when using mobile devices in public areas. Potentially Explosive Atmospheres Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders. When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries.

In such areas, sparks can occur and cause an explosion or fire. Symbol Key Your battery, charger, or mobile device may contain symbols, defined as follows: Symbol 032374o Definition Important safety information follows. 45 Symbol 032376o Definition Do not dispose of your battery or mobile device in a fire. Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information. Do not dispose of your battery or mobile device with your household waste. See "Recycling" for more information. For indoor use only. Listening at full volume to music or voice through a headset may damage your hearing. 032375o Radio Frequency (RF) Energy Exposure to RF Energy Your mobile device contains a transmitter and receiver.

When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits. Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy. RF Energy Operational Precautions For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions: 46 · When placing or receiving a phone call, hold your mobile device just like you would a landline phone. · If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting. · Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices. Follow Instructions to Avoid Interference Problems Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff.

If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight. Implantable Medical Devices If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device. Persons with implantable medical devices should observe the following precautions: · ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON. · DO NOT carry the mobile device in the breast pocket. · Use the ear opposite the implantable medical device to minimize the potential for interference.

· Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place. 47 Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider. Specific Absorption Rate (IEEE) SAR (IEEE) Your model wireless phone meets the governmental requirements for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed and manufactured to not exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed for the safety of all persons, regardless of age or health, and to account for any variations in measurements. The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate (SAR). The IEEE SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 watts per kilogram (W/kg), averaged over one gram of tissue. Tests for SAR are conducted using procedures accepted by the FCC and by Industry Canada with the mobile device transmitting at its highest certified power level in all tested frequencies. Although the SAR is determined at the highest certified power level, the actual SAR level of the mobile device while operating can be below the maximum value. This is because the mobile device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output. Before a mobile device is available for sale to the public in the U.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO W409G user guide](http://yourpdfguides.com/dref/4065748)
<http://yourpdfguides.com/dref/4065748>

S.

and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) submitted to the FCC and available for review by Industry Canada. The highest SAR value for this mobile device when tested for use at the ear is 1.

40 W/kg, and when worn on the 48 body, as described in this guide, is 1.46 W/kg. The SAR value for this mobile device in its data transmission mode (body-worn use) is 1.46 W/kg. Body-worn measurements can differ, depending upon available accessories and regulatory requirements.

The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product. While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines. Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net> or the Canadian Wireless Telecommunications Association (CWTA) Web site: <http://www.cwta.ca> Information from the World Health Organization "A large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established for mobile phone use." Source: WHO Fact Sheet 193 Further information: <http://www.who.int/emf>

WHO Information 49 FCC Declaration of Conformity FCC DoC Per FCC CFR 47 Part 2 Section 2.1077(a) Responsible Party Name: Motorola Mobility, Inc. Address: 600 N US Highway 45 Libertyville, IL 60048 USA Hereby declares that the product: Product Name: W409G, W418G, WX345 FCC ID: IHDP56LJ5 Conforms to the following regulations: FCC Part 15, subpart B, section 15.107(a), 15.107(d) and section 15.109(a) FCC Notice to Users The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC ID:xxxxxx on the product label. Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment.

See 47 CFR Sec. 15.21. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

See 47 CFR Sec. 15.19(3). This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna. FCC Notice 50 · Increase the separation between the equipment and the receiver. · Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for help. Industry Canada Notice to Users Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5.

This Class B digital apparatus complies with Canadian ICES-003. Industry Canada Notice Smart Practices While Driving Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas--for example, handsfree use only may be required. Go to www.motorola.com/callsmart (in English only) for more information. Your mobile device lets you communicate by voice and data--almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips: · Get to know your Motorola mobile device and its features such as speed dial, redial and voice dial.

If available, these features help you to place your call without taking your attention off the road. · When available, use a handsfree device. If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today. · Position your mobile device within easy reach. Be able to access your mobile device without removing your eyes from the road.

If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you. · Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and even heavy traffic can be hazardous.

Driving Safety 51 · Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility--driving safely.

· Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic. If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue. · Do not engage in stressful or emotional conversations that may be distracting.

Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road. · Use your mobile device to call for help. Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies (wherever wireless phone service is available). · Use your mobile device to help others in emergencies. If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number (wherever wireless phone service is available), as you would want others to do for you. · Call roadside assistance or a special non-emergency wireless assistance number when necessary.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO W409G user guide](http://yourpdfguides.com/dref/4065748)

<http://yourpdfguides.com/dref/4065748>

If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number (wherever wireless phone service is available).

Privacy & Data Security Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- Monitor access--Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- Keep software up to date--If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible.

Privacy & Data Security 52 · Secure Personal Information--Your mobile device can store personal information in various locations including your SIM card, memory card, and phone memory. Be sure to remove or clear all personal information before you recycle, return, or give away your device. You can also backup your personal data to transfer to a new device. Note: For information on how to backup or wipe data from your mobile device, go to www.motorola.com/support

- Online accounts--Some mobile devices provide a Motorola online account (such as MOTOBLUR).

Go to your account for information on how to manage the account, and how to use security features such as remote wipe and device location (where available).

- Applications--Install third party applications from trusted sources only. Applications can have access to private information such as call data, location details and network resources.
- Location-based information--Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile phones which are connected to a wireless network transmit location-based information.

Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.

- Other information your device may transmit--Your device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other third-party servers. This information is used to help improve products and services offered by Motorola. If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

53 Use & Care To care for your Motorola mobile device, please observe the following:

- Use & Care liquids** Don't expose your mobile device to water, rain, extreme humidity, sweat, or other liquids. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the mobile device.
- extreme heat or cold** Don't store or use your mobile device in temperatures below -10°C (14°F) or above 60°C (140°F).
- Don't recharge your mobile device in temperatures below 0°C (32°F) or above 45°C (113°F)**
- microwaves** Don't try to dry your mobile device in a microwave oven.
- dust and dirt** Don't expose your mobile device to dust, dirt, sand, food, or other inappropriate materials.
- cleaning solutions** To clean your mobile device, use only a dry soft cloth.

Don't use alcohol or other cleaning solutions.

- shock and vibration** Don't drop your mobile device.
- protection** To help protect your mobile device, always make sure that the battery compartment and any connector covers are closed and secure.

54 Recycling Recycling Mobile Devices & Accessories Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste, or in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at: www.motorola.com/recycling

Packaging & Product Guides Product packaging and product guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

California Perchlorate Label Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label: Perchlorate Material special handling may apply when the battery is recycled or disposed of. See www.dtsc.ca.

gov/hazardouswaste/perchlorate There is no special handling required by consumers.

Perchlorate Label Hearing Aid Compatibility with Mobile Phones Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has "Rated for Hearing Aids" printed on it, the following explanation applies. When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

Hearing Aid Compatibility 55 The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box. To maintain the published Hearing Aid Compatibility (HAC) rating for this mobile phone, use only the original equipment battery model. The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO W409G user guide](http://yourpdfguides.com/dref/4065748)

<http://yourpdfguides.com/dref/4065748>

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.) Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones. Software Copyright Notice Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the Software Copyright Notice 56 normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Content Copyright The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor. Content Copyright Export Law Assurances This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations.

For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade. Export Law Product Registration Online Product Registration: www.motorola.com/us/productregistration Product registration is an important step toward enjoying your new Motorola product. Registering permits us to contact you for product or software updates and allows you to subscribe to updates on new products or special promotions. Registration is not required for warranty coverage. Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status. Thank you for choosing a Motorola product. Registration 57 Motorola Limited Warranty for the United States and Canada Warranty What Does this Warranty Cover? Subject to the exclusions contained below, Motorola Mobility, Inc. warrants its mobile telephones ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories"), and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories, and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty: Products and Accessories Products Covered Products and Accessories as defined above, unless otherwise provided for below. Decorative Accessories and Cases.

Decorative covers, bezels, PhoneWrap™ covers and cases. Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection. Products and Accessories that are Repaired or Replaced. 58 Length of Coverage One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below. Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product. Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product. The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer. Exclusions (Products and Accessories) Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty. Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage. Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage. Altered Products.

Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage. Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage. Software Products Covered Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk). Length of Coverage Ninety (90) days from the date of purchase. 59 Exclusions (Software) Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO W409G user guide](http://yourpdfguides.com/dref/4065748)
<http://yourpdfguides.com/dref/4065748>

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the Internet), is provided "as is" and without warranty. Who is Covered? This warranty extends only to the first consumer purchaser, and is not transferable. What Will Motorola Do? Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software, and applications, please create a back up prior to requesting service. How to Obtain Warranty Service or Other Information USA Canada TTY 1-800-331-6456 1-800-461-4575 1-888-390-6456 You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center.

To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if 60 applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number. What Other Limitations are There? ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW. Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another. 61 Copyright & Trademarks Motorola Mobility, Inc. Consumer Advocacy Office 600 N US Hwy 45 Libertyville, IL 60048 www.motorola.com Note: Do not ship your product to the above address. If you need to return your product for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at: 1-800-331-6456 (United States) 1-888-390-6456 (TTY/TDD United States for hearing impaired) 1-800-461-4575 (Canada) Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply.

Contact your service provider for details. All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. All other product or service names are the property of their respective owners. © 2010 Motorola Mobility, Inc. All rights reserved. Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment. Product ID: MOTO W409G Manual Number: 68016156001-A 62 MOTO W409G TM Guía de Inicio Felicitaciones MOTOTM W409G El teléfono MOTO W409G viene con fabulosas funciones, como fotografías, música y acceso a Internet: todo en un elegante diseño de solapa. · Fotografías.

Tome fotografías y envíelas a sus amigos. · Música. Reproduzca su música en forma instantánea. Sólo abra el reproductor de música y seleccione una lista de reproducción. · Web. Navegue por toda la red. Buscar, explorar, todo lo que desea, mucho más fácil. Hemos reunido todas las funciones principales del teléfono en esta práctica guía, y en cosa de minutos le mostraremos lo sencillo que es utilizar su teléfono. Se sorprenderá con lo que descubra. Precaución: antes de armar, cargar o usar el teléfono por primera vez, lea la guía de información legal y de seguridad importante que se incluye con el producto. Más información En la computadora: vaya a <http://www.motorola.com/support>. Felicitaciones 1 Su teléfono teclas y conectores importantes Tecla de navegación Desplazarse hacia arriba, abajo, izquierda o derecha. @@@@ @@@@.

.....
.....
.....
.....
4 Teclas
.....
.....
.....
. 7 Pantalla principal
.....
.....
.... 9 Llamadas
.....
.....
.....
... 11 Contactos
.....
.....
.....
..... 13 Mensajería

.....
.....
.....
..... 15 Fotografías . .

.....
.....
.....
.....
.....
16 Reproductor de música.
.....
.....
... 18 Radio.

.....
.....
.....
..... 20 Web .

.....
.....
.....
.....
.....
..... 22 Consejos y trucos

.....
.....
.....
.....
.....
..... 23 Ingreso de texto

.....
.....
.....
.....
.....
..... 25 Personalizar. .

.....
.....
.....
.....
.....
..... 27 Controle su vida .

.....
.....
.....
.....
.....
..... 31 Conexión inalámbrica Bluetooth®

.....
.....
.....
.....
.....
..... 33 Tarjeta de memoria y USB .

.....
.....
.....
.....
.....
..... 36 Seguridad . .

.....
.....
.....
.....
.....
..... 39 Solución de problemas

.. 41 Información de seguridad, reglamentaria y legal . . @@@@Su teléfono funciona de la misma forma que siempre. @@@@Para desactivar la alerta de llamada entrante, oprima Rechazar. Para finalizar una llamada, oprima la tecla Encendido/ Fin .
@@Siempre obedezca las leyes y conduzca con seguridad. @@para ver una 2 Resalte una llamada y oprima para llamarlo. @@@@1 Escriba un número de emergencia en la pantalla principal.

@@@@@@Ingrese el nombre y los detalles del contacto. @@Oprima Opciones para insertar una imagen, sonido o video. @@@@Para leer el mensaje nuevo, oprima Ver.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO W409G user guide](http://yourpdfguides.com/dref/4065748)
<http://yourpdfguides.com/dref/4065748>

@@@> Tomas restantes (Memoria del teléfono) 250 1x Opciones Oprima hacia arriba o abajo para acercar o alejar la imagen. Oprima hacia la derecha para la videograbadora. Seleccione para ajustar la programación de la cámara. Para tomar la fotografía, oprima . El teléfono guarda una fotografía y la muestra brevemente en la pantalla. · Para enviar la fotografía en un mensaje, oprima Opciones > Enviar. 16 Fotografías · Para borrar la fotografía, oprima Opciones > Borrar.

Para ver las fotografías que ha capturado, oprima Menú > Mi carpeta > Memoria del teléfono o Tarjeta de memoria > Fotografías. Para grabar un video, vaya a la pantalla del visor de la cámara y oprima a la derecha para cambiar la videograbadora. Como alternativa, puede oprimir Menú > Herramientas > Videograbadora. Fotografías 17 Reproductor de música cuando lo que necesita es música..

. Obtener música Puede transferir música desde la computadora al teléfono mediante el uso de una conexión USB. Para obtener más información acerca de la transferencia de música, consulte "Tarjeta de memoria y USB" en la página 36. Nota: derechos de autor. ¿Tiene derecho? Siempre respete las normas.

Consulte "Contenido con derechos de autor" en la información legal y de seguridad. Reproducir música Para crear una lista de reproducción de música: Herramientas > Reproductor Búsqueda: Menú > de música > Mis listas de reproducción, oprima Opciones > Nueva lista de reproducción 1 Ingrese un nombre para la lista de reproducción, luego oprima Opciones > Listo. 2 Seleccione el nombre de la lista de reproducción, luego oprima Cargar > Opciones > Agregar para agregar una canción desde el teléfono o tarjeta de memoria. 18 Reproductor de música 3 Si es necesario, seleccione Memoria del teléfono o Tarjeta de memoria para especificar el lugar donde está el archivo. 4 Desplácese hasta la canción y oprima OK para agregarla a la lista de reproducción. Repita para agregar otras canciones a la lista de reproducción. Para reproducir una lista, selecciónela, luego oprima Cargar > Opciones > Reproducir. Para borrar una lista de reproducción, selecciónela y oprima Borrar. Para ajustar la programación del reproductor de música, cuando esté funcionando, oprima Opciones > Programación > Programación del reproductor. Reproductor de música 19 Radio noticias y música en movimiento Nota: la radio FM sólo funciona cuando hay un accesorio audífono opcional conectado al conector para audífonos del teléfono.

Búsqueda: Menú > Buscar. Herramientas > Radio FM Para buscar estaciones de radio locales, oprima Para sintonizar una estación, oprima derecha. izquierda o Oprima Opciones para ver las opciones de radio: opciones Rad Act (Des) Lista de canales Entrada manual Búsqueda automática Enciende y apaga la radio. Almacena hasta nueve canales de radio. Ingresar una frecuencia de canal. Busca automáticamente canales de radio y los almacena en la lista de canales. 20 Radio opciones Programación Activa la reproducción de fondo, el altavoz, programa el formato de grabación, calidad de audio y ubicación de almacenamiento. Graba programas de radio. Regresa al archivo grabado anterior y sigue grabando en el mismo archivo. Administra los archivos grabados. Grabar Agregar Lista de archivos Radio 21 Web navegue por la web con el teléfono Nota: para usar el web, debe tener activado el servicio de datos para la cuenta (puede que se apliquen cargos adicionales para este servicio). Utilice el web del teléfono para navegar por sus sitios web favoritos, cargar videos a un blog de video y descargar archivos y aplicaciones al teléfono. Inicie sesión en la cuenta de email basada en Internet para revisar el email. Búsqueda: Menú > Para..

. Ir a la página principal Ir a la página Web Marcar una página Web como favorita Ir a un enlace en una página web Seleccione Principal. Seleccione Ir a URL. Oprima Opciones > Agregar a favoritos. Seleccione el enlace.

Web Nota: si no se puede conectar, póngase en contacto con el proveedor de servicio. 22 Web Consejos y trucos unos consejos útiles Para...

@@@@@@@@@@@@@@@@@El teléfono predice cada palabra mientras la ingresa. Para activar, oprima Opciones > Programar T9 > Act. @@Escribe letras en mayúscula en el campo de texto. Escribe letras en minúscula en el campo de texto. @@@@Para ingresar un espacio en modo símbolo, oprima . 26 Ingreso de texto Personalizar añada su toque personal Perfiles El teléfono tiene distintos perfiles.

Puede personalizar los tonos de timbre, alertas y volúmenes para cada perfil. Búsqueda: Menú > Programación > Perfiles Puede seleccionar estos perfiles: perfiles General Reunión Exterior Programación predeterminada del perfil estándar. Tono de timbre desactivado, vibración activada. El tono de timbre y el volumen del tono de las teclas están programados en el máximo. Tono de timbre desactivado, vibración activada. La vibración está activada, todos los tonos están apagados. Interior Silencioso Personalizar 27 perfiles Audífono Ajusta la programación de perfil para cuando conecta un audífono al teléfono. Ajusta la programación de perfil para cuando haya un audífono Bluetooth® conectado al teléfono. Bluetooth Para cambiar la programación de un perfil, oprima Opciones > Personalizar. Puede ajustar estas programaciones: programación Programación de tonos Programa tonos de timbre para llamadas y mensajes entrantes, tonos de tecla y otros eventos.

Programa el volumen de los tonos de timbre y los tonos de las teclas. Programa Sólo timbre, Sólo vibrar, Vibrar y timbrar, Volumen Tipo de alerta o Vibrar luego timbrar. 28 Personalizar programación Tipo de timbre Otros tonos Programa como Único, Repetir o Ascendente Reproduce un tono adicional para Advertencia, Error, Llamada en espera y Conectar. Opciones para contestar Programa para contestar llamadas mediante la apertura de la solapa o al oprimir cualquier tecla. Fondo de pantalla Programe la fotografía como fondo de pantalla en la pantalla principal.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO W409G user guide](http://yourpdfguides.com/dref/4065748)
<http://yourpdfguides.com/dref/4065748>