



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA MOTO WX306. You'll find the answers to all your questions on the MOTOROLA MOTO WX306 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MOTOROLA MOTO WX306 User guide MOTOROLA MOTO WX306 Operating instructions MOTOROLA MOTO WX306 Instructions for use MOTOROLA MOTO WX306 Instruction manual MOTOROLA MOTO WX306

The image shows a grid of 18 thumbnail pages from the Motorola WX306 user manual. The pages are organized into columns and rows, each representing a different section of the manual. The sections include:

- WELCOME:** Introduction to the phone, including a '30-second tour' and 'Getting started' instructions.
- YOUR PHONE:** Overview of the phone's features, including the camera, navigation pad, and various keys.
- MESSAGES:** Instructions for sending and receiving SMS and MMS messages.
- CALLS:** Details on making calls, answering calls, and using call features like call forwarding.
- EMERGENCY CALLS:** How to make emergency calls and use the emergency number.
- TPS & TRICKS:** Tips and tricks for using the phone's features, such as the navigation pad and camera.
- MUSIC:** Instructions for playing music from the phone's memory or external storage.
- MENU MAP:** A visual guide to the phone's menu structure.
- LET'S GO:** A section for quick reference on basic functions like power, volume, and navigation.
- BASES:** Information about using the phone in different environments.
- PERSONALISE:** Instructions for customizing the phone's appearance and settings.
- CONTACTS:** How to manage contacts and use contact lists.
- PHOTOS & VIDEOS:** Instructions for taking photos and videos with the camera.
- RADIO:** How to use the phone's radio feature.
- CONNECT NEW DEVICES:** Instructions for connecting external devices like headphones or chargers.
- WEB:** How to browse the internet using the phone's browser.
- DISPLAY:** Information about the phone's screen and display settings.



You're reading an excerpt. [Click here to read official MOTOROLA MOTO WX306 user guide](http://yourpdfguides.com/dref/4122563)
<http://yourpdfguides.com/dref/4122563>

Manual abstract:

@@Emergency numbers vary by country. @@@@Listening to music or taking photos and videos on the move, is just a key press away. welcome Ringtone tips & tricks We've crammed all the main features of your phone into this handy guide--you can even take the guide with you. If you'd like even more information about how to use your new WX306, visit www.motorola.com/support. So, let's go. 3.5 mm headset jack Listen to music or call hands-free. Camera Take photos & videos.

1 2 Press > Messaging > Write message > Text message or Multimedia message. Enter your message. Tip: Press Options > Input method to switch text entry modes. Press # to switch capitalisation modes. Press * to enter a space.

To quickly change your ringtone, press and hold # from the home screen. Voicemail Press and hold 1. @@right or left. @@However, all key locations, sequences and functions are the same. @@@@Press to select a contact.

Press . Torch on To turn on the torch, press and hold 5. Press and hold 5 again, to turn it off. Tip: To download PC suite, go to: <http://www.motorola.com/mywx306> End a call Press . Soft keys Perform function shown above the key. Call key Enter number & press to call. Mini USB connector Charge & transfer files. Power/End key Turn on/off & end calls.

Read messages When you receive a message you will see New message 1 unread on your screen. Press View > to open the message. Redial number 1 2 Tip: To view music stored on your microSD memory card, press > File manager > Memory card. To transfer music to/from your memory card, plug your USB cable into your phone & computer, then drag & drop files. Messaging · Write message · Inbox · Drafts · Outbox · Sent messages · Delete messages · Email · Broadcast message · Templates · Message settings This is a standard home screen layout. Your phone's home screen may be a little different. File manager · Phone · Memory card Tools · Alarm · World clock · Calendar · Calculator · Tasks · Currency converter Fun & Games Settings · Phone settings · Network settings · Security settings · Connectivity · Factory data reset · User profiles · Shortcuts From the home screen, press All calls. to see a list of . Scroll to the entry you want and press Navigation key Scroll up, down, left or right. Centre key Press to select.

Let's go o g s ' t e l Basics Turn it on & off basics Personalise Set your wallpaper personalise Contacts Save contacts contacts Photos & videos Take photos & videos photos & videos Radio Listen to the radio radio Bluetooth™ Connect new devices Bluetooth Web Surf the web web Display The home screen shows when you turn on the phone. Status indicators can appear across the top of the home screen: display 1 Cover off. 2 SIM in. Press and hold for a few seconds to turn the phone on/off. Change the wallpaper to one that makes you smile.

Press > Wallpaper. Settings > Phone settings > Display > 1 2 Enter the number on the home screen and press Options > Save to Phonebook. Enter the contact details and press Yes to save. Tip: Press > Phonebook > Options > Phonebook settings > Preferred storage to choose where to save your contacts (SIM or Phone). 1 2 To use the camera press > Multimedia > Camera.

Press Settings > Video recorder to switch to video. Press to take your photo or to start/stop the video. Then: 1 2 Plug a headset into your phone. Note: The FM radio works only when the headset is plugged in. From the home screen, press > Multimedia > FM radio. left or right or press 1 2 3 4 Make sure the device you are pairing with is in discoverable mode. Press > Settings > Connectivity > Bluetooth > Search audio device. Your phone lists the devices it finds within range. Press a device name to connect with it. If necessary, press Yes, OK or enter the device passkey (such as 0000) to connect to the device.

Note: If you can't connect, contact your service provider. Use your phone's browser to surf your favourite web sites. Press . . . > Browser. Set time & date Menu navigation Press to open the main menu. Tip: You can also press Menu (right soft key). Press the navigation key up, down, right or left to highlight a menu option. Press option. to select the highlighted Press date. > Settings > Phone settings > Time and 2G NETWORK NAME 1:25 AM 01/01/2012 Status indicators Set ringtone & volume Play it loud or keep it quiet, you choose. Press > Settings > User profiles.

Choose a profile. Press Options > Customise to edit a profile. Call contacts 3 microSD in. This product meets the applicable limit for exposure to radio waves (known as SAR) of 2.0 W/kg (ICNIRP).

The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the legal and safety information packaged with your product. Note: When using the product while worn on your body, either use an approved accessory such as a holster or maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with SAR requirements. Note that the product may be transmitting even if you are not making a phone call.

4 Battery in. 1 2 3 Press > Phonebook. Press up or down, to scroll through the list to highlight the contact's number. Press . Set auto power Choose when to receive calls and messages--really useful stuff: Press > power off. Settings > Phone settings > Schedule . To send your photo by MMS, press . . To delete the photo, press Options > Delete. . To return to the viewfinder, press Cont.. Tip: To set where your photos are stored press Settings > Photo album > Options > Photos > Options > Storage > Phone or Memory card.

To set where your videos are stored press Options > Storage > Phone or Memory card. To transfer photos or videos to/from your memory card, plug your USB cable into your phone & computer, then drag & drop files. To tune in a station, press Options > Auto-search. To adjust volume, press up or down. To turn off the radio, press Options > Close. To go to your homepage, press Homepage. To go to a webpage, press Input address. To bookmark a page, press Options > Add to Bookmarks. Store favourite stations When listening to a station, press Options > Channel list. Select a channel number and press Add to store it.

Press Options > Channel list to see your stored stations. Press keys 1 to 20 to select a stored station. To automatically reconnect your phone with a paired device, simply turn the device on.



You're reading an excerpt. Click here to read official MOTOROLA MOTO WX306 user guide
<http://yourpdfguides.com/dref/4122563>

To automatically disconnect your phone from a paired device, simply turn the device off. To send a media file or contact, open the item that you want to transfer, then press Options > Send > Via Bluetooth.

Left soft key Camera Menu Right soft key Note: Your phone's home screen may be different from the one shown. 5 Cover on. 6 Charge up. 68016404016 4H 68016404016.fn Page 2 Tuesday, September 20, 2011 6:26 PM Safety, regulatory & legal Battery use & safety Safety, regulatory & legal Important: Handle and store batteries properly to avoid injury or damage.

Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries. DON'Ts · Don't disassemble, crush, puncture, shred or otherwise attempt to change the form of your battery. · Don't let the mobile device or battery come in contact with liquids.* Liquids can get into the mobile device's circuits, leading to corrosion. · Don't allow the battery to touch metal objects. If metal objects, such as jewellery, stay in prolonged contact with the battery contact points, the battery could become very hot. · Don't place your mobile device or battery near a heat source.* High temperatures can cause the battery to swell, leak or malfunction. · Don't dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven. DOs · Do avoid leaving your mobile device in your car in high temperatures.

* · Do avoid dropping the mobile device or battery.* Dropping these items, especially on a hard surface, can potentially cause damage.* · Do contact your service provider or Motorola if your mobile device or battery has been damaged by dropping, liquids or high temperatures. * Note: Always make sure that the battery compartment and any connector covers are closed and secure to avoid direct exposure of the battery to any of these conditions, even if your product information states that your mobile device can resist damage from these conditions. Important: Motorola recommends you always use Motorola-branded batteries and chargers for quality assurance and safeguards. Motorola's warranty does not cover damage to the mobile device caused by non-Motorola batteries and/or chargers. To help you identify authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. You should confirm that any battery you purchase has a "Motorola Original" hologram. If you see a message on your display such as Invalid battery or Unable to charge, take the following steps: · Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram; · If there is no hologram, the battery is not a Motorola battery; · If there is a hologram, replace the battery and try charging it again; · If the message remains, contact a Motorola authorised service centre. Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage or other hazard.

Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it also benefits the environment. You can recycle your used batteries in many retail or service provider locations. Additional information on proper disposal and recycling can be found at www.motorola.com/recycling Disposal: Promptly dispose of used batteries in accordance with local regulations.

Contact your local recycling centre or national recycling o MSS (Mobile Satellite Service), the FCC has restricted such devices to indoor use only (see 47 CFR 15.407(e)). Since wireless hot spots operating in this band have the same restriction, outdoor services are not offered. Nevertheless, please do not operate this device in Wi-Fi mode when outdoors. FCC notice danger, call 999 or another local emergency number (wherever wireless phone service is available), as you would want others to do for you.

· Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or another special non-emergency wireless number (wherever wireleate--If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible. · Secure personal information--Your mobile device can store personal information in various locations including your SIM card, memory card and phone memory. Make sure you remove or clear all personal information before you recycle, return or give away your device. You can also back up your personal data to transfer to a new device. Note: For information on how to back up or wipe data from your mobile device, go to www.motorola.com/support · Online accounts--Some mobile devices provide a Motorola online account (such as MOTOBLUR). Go to your account for information on how to manage the account and how to use security features such as remote wipe and device location (where available). · Applications and updates--Choose your apps and updates carefully and install from trusted sources only.

Some apps can impact your phone's performance and/or have access to private information including account details, call data, location details and network resources. · Wireless--For mobile devices with Wi-Fi features, only connect to trusted Wi-Fi networks. Also, when using your device as a hotspot (where available) use network security. @@@@If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing videos or games or enabling a flashing-lights feature (if available) on your mobile device. Discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour and stop use if you are tired. Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information. YOUR MOBILE DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES. Your mobile device is a radio transmitter and receiver.

It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. @@@@The SAR limit for mobile devices is 2 W/kg. @@@@Such information is contained with the Product. @@@@The Warranty Term will not be extended. @@@@See "Recycling" for more information.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO WX306 user guide](http://yourpdfguides.com/dref/4122563)

<http://yourpdfguides.com/dref/4122563>

@@@@@@@@@@@@@The warranty for Motorola rechargeable batteries becomes void if (i) the batteries are charged other than by Motorola approved battery chargers specified for the charging of the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, (iii) the battery is used in equipment or service other than the cellular telephone equipment for which it is specified. Depending on operating conditions and your usage habits, wear and tear might take place of components including mechanical problems related to Product housing, paint, assembly, sub-assemblies, displays and keyboards and any accessories which are not part of the Product's in-box configuration. The rectification of faults generated through wear and tear and the use of consumable items like batteries beyond their Optimum Performance Time as indicated in the product manual is considered to be your responsibility and therefore Motorola will not provide the free Warranty repair service for these items. For indoor use only. Listening at full volume to music or voice through a headset may damage your hearing.

Caution about high volume usage Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected. To protect your hearing: · Limit the amount of time you use headsets or headphones at high volume. · Avoid turning up the volume to block out noisy surroundings. · Turn the volume down if you can't hear people speaking near you. If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked. For more information about hearing, see our website at direct.motorola.com/hellomoto/nss/AcousticSafety.asp (in English only).

Body-worn SAR INSTALLED DATA Please make and retain a note of all data you have inserted into your Product for example names, addresses, phone numbers, user and access codes, notes, etc. before submitting your Product for a Warranty service as such data may be deleted or erased as part of the repair or service process. Please note if you have downloaded material onto your Product, for example, ring tones, ring tunes, screensavers, wallpaper, games, etc. these may be deleted or erased as part of the repair process or testing process. Motorola shall not be responsible for such matters. The repair or testing process should not affect any such material that was installed by Motorola on your Product as a standard feature. Radio frequency (RF) energy Exposure to RF energy Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate using your mobile device, the system handling your call controls the power level at which your mobile device transmits. Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Repetitive motion When you repetitively perform actions such as pressing keys or entering fingerwritten characters, you may experience occasional discomfort in your hands, arms, shoulders, neck or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a doctor. RF energy operational precautions For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions: · When placing or receiving a phone call, hold your mobile device just like you would a landline phone. · If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case or body harness. @@@@@@@@@@The lower the power output of the device, the lower its SAR value.

@@@@@@@@@@@@@Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant, either directly or by implication or estoppel or otherwise, any licence under the copyrights, patents or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product. Software copyright notice OUT OF WARRANTY REPAIRS If you request Motorola to repair your Product any time after the Warranty term or where this warranty does not apply due to the nature of the defect or fault, then Motorola may at its discretion carry out such repairs subject to you paying Motorola its fees for such a repair or it may refer you to an authorised third party to carry out such repairs. Smart practices while driving Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive.

Always obey them. The use of these devices may be prohibited or restricted in certain areas--for example, hands-free use only may be required. Go to www.motorola.com/callsmart (in English only) for more information. Your mobile device lets you communicate by voice and data, almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips: · Get to know your Motorola mobile device and its features such as speed dial, redial and voice dial. If available, these features help you to place your call without taking your attention off the road. · When available, use a hands-free device.

If possible, add an additional layer of convenience to your mobile device with one of the many Motorola original hands-free accessories available today. · Position your mobile device within easy reach. Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you. · Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous. · Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility--driving safely. · Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.



[You're reading an excerpt. Click here to read official MOTOROLA MOTO WX306 user guide](http://yourpdfguides.com/dref/4122563)
<http://yourpdfguides.com/dref/4122563>

If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

· Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking to aware you are driving and suspend conversations that can divert your attention away from the road. · Use your mobile device to call for help. Dial 999 or another local emergency number in the case of fire, traffic accident or medical emergencies (wherever wireless phone service is available). · Use your mobile device to help others in emergencies. If you see a road accident, crime in progress or other serious emergency where lives are in Driving safety 032375o Children Keep your mobile device and its accessories away from small children. These products are not toys and may be hazardous to small children. For example: · A choking hazard may exist for small, detachable parts. · Improper use could result in loud sounds, possibly causing hearing injury. · Improperly handled batteries could overheat and cause a burn.

Similar to a computer, if a child does use your mobile device, you may want to monitor their access to help prevent exposure to inappropriate apps or content. Information from the World Health Organisation "A large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established for mobile phone use". Source: WHO fact sheet 193 Further information:

<http://www.who.int/emf> WHO information WHAT IS NOT COVERED BY THE WARRANTY This warranty is not valid if the defects are due to damage, misuse, tampering, neglect or lack of care and in case of alterations or repair carried out by unauthorised persons. The following are examples of defects or damage not covered by this product warranty: 1 Defects or damage resulting from use of the Product in other than its normal and customary manner. 2 Defects or damage from misuse, access to incompatible sources, accident or neglect. 3 Defects or damage from improper testing, operation, maintenance, installation, adjustment, unauthorised software applications or any alteration or modification of any kind. 4 Breakage or damage to antennas unless caused directly by defects in material or workmanship.

5 Products disassembled or repaired other than by Motorola in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify any warranty claim. 6 Defects or damage due to range, coverage, availability, grade of service, or operation of the cellular system by the cellular operator. 7 Defects or damage due to moisture, liquid, extreme humidity, heavy perspiration or other moisture, sand, food, dirt or similar substances, caused from incorrectly securing the Product's protective elements and/or subjecting the Products to conditions exceeding any stated specification or limit. 8 Control unit coil cords in the Product that are stretched or have the modular tab broken. 9 All plastic surfaces and all other externally exposed parts that are scratched or damaged due to customer normal use. 10 Leather cases (which are covered under separate manufacturer's warranties). 11 Products rented on a temporary basis. Copyright & trademarks www.motorola.com Certain features, services and applications are network-dependent and may not be available in all areas; additional terms, conditions and/or charges may apply.

Contact your service provider for details. All features, functionality and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. @@Note: The images in this guide are examples only.

@@@© 2011 Motorola Mobility Inc. All rights reserved.

@@Product ID: Model WX306 Manual Number: 68016404016 Content copyright The unauthorised copying of copyrighted materials is contrary to the provisions of the copyright laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor. Content copyright HOW TO GET WARRANTY SERVICE? In most cases the authorised Motorola dealer which sold and/or installed your Motorola Personal Communicator and original accessories will honour a warranty claim and/or provide warranty service. Alternatively, for further information on how to get warranty service, please contact either the customer service department of your service provider or go to <http://www.motorola.com/support/warrantyselector>. @@@@ · New batteries are not fully charged. @@@@This glass could break if the product receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre. RF energy interference/compatibility Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices. European Union directives conformance statement The following CE compliance information is applicable to Motorola mobile devices that carry one of the following CE marks: EU conformance Use & care To care for your Motorola phone, please observe the following: Use & care Third party accessories Use of third party accessories, including but not limited to batteries, chargers, headsets, covers, cases, screen protectors and memory cards, may impact your mobile device's performance. In some circumstances, third party accessories can be dangerous and may void your mobile device's warranty.

For a list of Motorola accessories, visit www.motorola.com/products Operational warnings Obey all posted signs when using mobile devices in public areas. Follow instructions to avoid interference problems Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an aeroplane mode or similar feature, consult airline staff about using it in-flight. Potentially explosive atmospheres Areas with potentially explosive atmospheres are often, but not always, posted and can include fuelling areas, such as below decks on boats, fuel or chemical transfer or storage facilities or areas where the air contains chemicals or particles, such as grain dust or metal powders. When you are in such an area, turn off your mobile device, and do not remove, install or charge batteries unless it is a radio product type especially qualified for use in such areas as "Intrinsically Safe" (for example, Factory Mutual, CSA or UL approved).



[You're reading an excerpt. Click here to read official MOTOROLA MOTO WX306 user guide](http://yourpdfguides.com/dref/4122563)
<http://yourpdfguides.com/dref/4122563>

In such areas, sparks can occur and cause an explosion or fire. 0168 0168 [Only indoor use allowed in France for Bluetooth and/or Wi-Fi] liquids Don't expose your mobile device to water, rain, extreme humidity, sweat or other liquids.

If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone. extreme heat or cold Don't store or use your mobile device in temperatures below -10°C (14°F) or above 60°C (140°F). Don't recharge your mobile device in temperatures below 0°C (32°F) or above 45°C (113°F). microwaves Don't try to dry your phone in a microwave oven. Driving precautions Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle.

Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products. While driving, NEVER: · Type or read texts. · Enter or review written data. · Surf the web.

Implantable medical devices If you have an implantable medical device, such as a pacemaker or defibrillator, consult your doctor before using this mobile device. Persons with implantable medical devices should observe the following precautions: · ALWAYS keep the mobile device more than 20 centimetres (8 inches) from the implantable medical device when the mobile device is turned ON. · DO NOT carry the mobile device in the breast pocket. Hereby, Motorola declares that this product is in compliance with: · The essential requirements and other relevant provisions of directive 1999/5/ EC · All other relevant EU directives CLAIMING In order to claim the warranty service, you must return the Personal Communicator and/or accessories in question to Motorola's Authorised Repair or Service Centre in the original configuration and packaging as supplied by Motorola. Please avoid leaving any supplementary items like SIM cards. The Product should also be accompanied by a label with your name, address, and telephone number; name of operator and a description of the problem. In the case of vehicular installation, the vehicle in which the Personal Communicator is I. including without limitation loss of use, loss of time, loss of data, inconvenience, commercial loss, lost profits or savings. 0168 Product approval number .



[You're reading an excerpt. Click here to read official MOTOROLA MOTO WX306 user guide](http://yourpdfguides.com/dref/4122563)
<http://yourpdfguides.com/dref/4122563>