



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA MOTORAZR V3. You'll find the answers to all your questions on the MOTOROLA MOTORAZR V3 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MOTOROLA MOTORAZR V3
User guide MOTOROLA MOTORAZR V3
Operating instructions MOTOROLA MOTORAZR V3
Instructions for use MOTOROLA MOTORAZR V3
Instruction manual MOTOROLA MOTORAZR V3

Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V3 GSM wireless phone.



Welcome - 1

Check It Out!



Feature	Description
Take Photo	Press CAMERA () or press () > Multimedia > Camera to activate the camera, point lens at subject, press SHOOT () to take a photo.
Take Self-Portrait (flip closed)	Activate the camera, close the flip, use viewfinder to aim lens, press smart key to take a photo.
Send Photo	Send a photo to a phone number or email address: Take photo, then press SEND () > Send in Message.
Set Photo as Picture ID	Assign a photo to a phonebook entry to allow picture caller ID: Take photo, then press SEND () > Apply as Phonebook Entry.

2 - Check It Out

Feature	Description
Send Multimedia Message	Send a multimedia message with pictures, animations, sounds, and videos: () > New Message > New Multimedia Msg.
Wireless Connection	Set up a Bluetooth® wireless connection to a headset accessory, car kit, or external device: () > Settings > Bluetooth > Bluetooth Link > Setup > Power & Bk, press BACK (), press > Bluetooth > Link for headset.

Check It Out - 3



You're reading an excerpt. [Click here to read official MOTOROLA MOTORAZR V3 user guide](http://yourpdfguides.com/dref/3771147)
<http://yourpdfguides.com/dref/3771147>

Manual abstract:

Set Photo as Picture Assign a photo to a phonebook entry to ID allow picture caller ID: Take photo, then press STORE (+) > Apply as Phonebook Entry. 2 - Check It Out! Check It Out! - 3 Feature Take Photo www.motorola.com Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation. MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. Java and all other Java-based marks are trademarks or registered trademarks of Sun

Microsystems, Inc.

in the U.S. and other countries. All other product or service names are the property of their respective owners. © Motorola, Inc.

, 2005 Software Copyright Notice The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product. 4 - Check It Out! While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions.

However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>. Check It Out! - 5 Contents Safety

Information

*.
.
.*

. 9 Recycling Information .

*.
.
.
.*

18 Getting Started

*.
.
.*

. 19 About This Guide . . .

*.
.
.*

. 19 Installing the SIM Card. . . .

*.
.*

. 20 Battery Use

*.
.*

. . . . 20 Installing the Battery .

*.
.*

22 Charging the Battery

*.
.
.*

. 22 Turning Your Phone On

.....
.....
.....
24 Turning Your Phone Off.....

.....
.....
.... 24 Adjusting Volume .
.....

.....
.....
.....
... 25 Making a Call

.....
.....
.....
.....
25 Answering a Call

.....
.....
.....
.....
.... 26 Viewing Your Phone Number

.....
.....
.....
.....
..... 26 Highlight Features .

.....
.....
.....
.....
... 27 Taking and Sending a Photo

.....
.....
.....
.....
..... 27 Sending a Multimedia Message..

.....
.....
.....
.....
. 30 Using a Bluetooth® Wireless Connection

.....
.....
.....
.....
..... 33 Learning to Use Your Phone

.....
.....
.....
.....
.. 36 Using the Display

.....
.....
.....
.....
..... 36 Using the 4-Way Navigation Key

.....
.....
.....
.....
..... 41 Using the Operator Key ..

.....
.....
.....
.....
..... 41 Using the Message Key ...

.....

.....	
.....	
.....	41 Using Menus
.....	
.....	
.....	
.....	42 Entering Text
.....	
.....	
.....	
.....	44 Using the Smart Key
.....	
.....	
.....	55 6 - Contents Using the External Display.
.....	
.....	
.....	Using the Handsfree Speaker ..
.....	
.....	
.....	
.....	Changing a Code, PIN, or Password
.....	
.....	
.....	Locking and Unlocking Your Phone
.....	
.....	
.....	If You Forget a Code, PIN, or Password
.....	
.....	Using the Phonebook. ..
.....	
.....	
.....	
.....	Setting Up Your Phone ..
.....	
.....	
.....	
.....	Setting a Ring Style ..
.....	
.....	
.....	
.....	Changing the Call Alert
.....	
.....	
.....	Setting the Time and Date .
.....	
.....	
.....	
.....	Setting a Wallpaper Image.
.....	
.....	
.....	

.....
.....
.....
.....

. Putting a Call On Hold or Mute

.....
.....
.... Using Call Waiting

.....
.....
.....
..... Using Caller ID (Incoming Calls) ...

.....
.....
.... Calling an Emergency Number .
.....

.. 55 57 57 57 59 59 62 62 63 63 64 65 66 66 67 68 68 69 70 70 70 72 72 73 73 74 74 75 75 Contents - 7 Dialling International Numbers. . .

.....
.....
..... 75 Calling With 1-Touch Dial

.....
.....
.....
.... 76 Using Voicemail

.....
.....
.....
..... 76 Changing the Active Line .

.....
.....
.....
..... 78 Phone Features ...

.....
.....
.....
... 79 Main Menu ..

.....
.....
.....
.. 79 Settings Menu

.....
.....
.....
..... 80 Feature Quick Reference. .

.....
.....
.....
..... 81 Calling Features....

.....
.....

.....
.....
. 81 Messages

.....
.....
82 Phonebook

.....
.....
. . . . 83 Personalising Features .

.....
.....
. . . 85 Instant Messaging . .

.....
.....
. 86 Chat

.....
.....
. 87 Email

.....
.....
. . . 88 Menu Features . .

.....
.....
. . . . 88 Special Dialling Features

.....
.....
. . 89 Call Monitoring

.....
.....
. 89 Handsfree Features . .

.....
.....
90 Data and Fax Calls



[You're reading an excerpt. Click here to read official MOTOROLA
MOTORAZR V3 user guide](http://yourpdfguides.com/dref/3771147)
<http://yourpdfguides.com/dref/3771147>

.....
.....
.....
... 91 Network Features

.....
.....
.....
..... 93 Personal Organiser Features.

.....
.....
.....
. 93 Security

.....
.....
.....
.....

.. 95 News and Entertainment

95 Index

..... 100 8 - Contents Safety and General Information **IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.**

READ THIS INFORMATION BEFORE USING YOUR PHONE. 1 Safety Information Exposure To Radio Frequency (RF) Energy Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits. Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following instructions. **External Antenna Care** If your phone has an external antenna, use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone and/or may result in non-compliance with local regulatory requirements in your country. Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. **Safety and General Information - 9 Phone Operation** When placing or receiving a phone call, hold your phone as you would a fixed line phone. **RF Energy Interference/Compatibility Note:** Nearly every electronic device is r charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death. Note: The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

Use While Driving Check the laws and regulations on the use of phones in the area where you drive. Always obey them. When using your phone while driving, please: · Give full attention to driving and to the road. Using a phone may be distracting in certain circumstances. Discontinue a call if you can't concentrate on driving. · Always use handsfree operation. · Pull off the road and park before making or answering a call if driving conditions so require. Responsible driving best practices can be found in the "Wireless Phone Safety Tips" at the end of this guide and/or at the Motorola website: www.motorola.com/callsmart.

Blasting Caps and Areas To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions. **Damaged Products** If your phone or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorised Service Centre to determine if it has been damaged. Do not attempt to dry it with an external heat source, such as a microwave oven. **Safety and General Information - 13 12 - Safety and General Information Batteries and Chargers** Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals.

The conductive material may complete an electrical circuit (short circuit) and become hot. Take care when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. Use only Motorola Original™ batteries and chargers. **Caution:** To avoid risk of personal injury, do not dispose of your battery in a fire. Your battery, charger, or phone may contain symbols, defined as follows: Symbol 032374o **Seizures/Blackouts** Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games.

These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.) Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety

precautions: · Do not play or use a flashing-lights feature if you are tired or need sleep. · Take a minimum of a 15-minute break hourly. · Play in a room in which all lights are on. · Play at the farthest distance possible from the screen. Definition Important safety information will follow.

Your battery or phone should not be disposed of in a fire. Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information. Your battery or phone should not be thrown in the rubbish bin. Your phone contains an internal lithium ion battery. 032376o 032375o 032377o Li Ion BATT 032378o Choking Hazards Your phone or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your phone and its accessories away from small children. 14 - Safety and General Information Safety and General Information - 15 Repetitive Motion Injuries When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders: · Take a minimum 15-minute break every hour of game playing. · If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.

· If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor. 1. The information provided in this document supersedes the general safety information in user's guides published prior to January 28, 2005. European Union Directives Conformance Statement Hereby, Motorola declares that this product is in compliance with · The essential requirements and other relevant provisions of Directive 1999/5/EC · All other relevant EU Directives IMEI: 350034/40/394721/9 0168 Type: MC2-41H14 Product Approval Number The above gives an example of a typical Product Approval Number.



[You're reading an excerpt. Click here to read official MOTOROLA
MOTORAZR V3 user guide
http://yourpdfguides.com/dref/3771147](http://yourpdfguides.com/dref/3771147)

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site France Indoor Only Note: If your phone type MQ3-441H11 carries the alert mark, then your phone's Bluetooth features and Bluetooth Class 1 power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Bluetooth features in France unless you are indoors. 16 - Safety and General Information Safety and General Information - 17 Caring for the Environment by Recycling Recycling Information When you see this symbol on a Motorola product, do not dispose the product with household waste. Recycling Mobile Phones and Accessories Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste.

In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region. 18 - Recycling Information Getting Started About This Guide This guide describes the basic features of your Motorola wireless phone. To obtain a copy of this guide, see the Motorola Web site at: <http://hellomoto.com> Selecting a Menu Feature Use the menu system to access your phone's features. This guide shows you how to select a menu feature from the home screen as follows: Find the Feature M> Recent Calls > Dialed Calls This example shows that, from the home screen, you must press the menu key M to open the menu, scroll to and select s Recent Calls, then scroll to and select Dialed Calls. Press the 4-way navigation key S to scroll and highlight a menu feature. Press SELECT (+) to select the highlighted menu feature. Optional Features This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas.

Contact your service provider for more information. Getting Started - 19 Optional Accessories This label identifies a feature that requires an optional Motorola Original™ accessory. To maximise your battery's performance: · Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers. · New batteries or batteries that have been stored for a long time may require a longer charge time. · Maintain the battery at or near room temperature when charging. · Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle. · When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator. · Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery. The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling centre for proper disposal methods.

Warning: Never dispose of batteries in a fire because they may explode. Installing the SIM Card Your Subscriber Identity Module (SIM) card contains your phone number, service details, and phonebook/message memory. Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt. Slide the SIM card under the retention strap to insert it into the card slot as shown below: 1.

2. Battery Use Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to the phone's accessory connector; and your voice, data, and other application usage patterns. Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals. 20 - Getting Started Getting Started - 21 Installing the Battery Your phone is designed to use only Motorola Original batteries and accessories. Tip: The angle connector provided with your phone makes it easier for you to use the phone with an attached battery charger or phone accessory. Action 1 Insert the travel charger plug into the detachable angle connector as shown. 2 Insert the angle connector plug into the USB connector port on your phone. 1. 2. 3.

4. 3 Plug the other end of the travel charger into the appropriate electrical outlet. Note: It may take up to 10 seconds for your phone to provide a visible or audible indication that the battery is charging. 4 When your phone indicates Charge Complete, remove the travel charger and angle connector. Note: You can safely leave the travel charger connected to the phone after charging is complete. This will not damage the battery. Charging the Battery New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles. 22 - Getting Started Getting Started - 23 Turning Your Phone On Action 1 Press and hold the power key P for 2 seconds to turn the phone on.

Note: It may take up to 4 seconds for the display to illuminate after you turn the phone on. 2 If necessary, enter your SIM card PIN code and press OK (+) to unlock the SIM card. Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked. 3 If necessary, enter your 4-digit unlock code and press OK (+) to unlock the phone. At startup, you may be prompted to personalise your phone.

Select YES (-) to set personal phone options, or NO (+) to go to the home screen. For more information about personalising your phone, see page 85. Adjusting Volume Press the up or down volume keys to: · silence an incoming call alert · increase or decrease earpiece volume during a call · increase or decrease ringer volume when the home screen is visible (flip must be open) Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to switch back to vibrate alert, then ring alert.

040135o Making a Call You must be in the home screen to dial a phone number (see page 36). Press 1 keypad keys 2N 3O To dial the phone number make the call end the call and "hang up" the phone when you are finished Turning Your Phone Off Action Press and hold the power key P for 2 seconds to turn the phone off.



[You're reading an excerpt. Click here to read official MOTOROLA MOTORAZR V3 user guide](http://yourpdfguides.com/dref/3771147)
<http://yourpdfguides.com/dref/3771147>

Tip: You can also close the phone flip to end the call. 24 - Getting Started Getting Started - 25 Answering a Call When you receive a call, your phone rings and/or vibrates and displays an incoming call message. When the phone flip is active, open the phone to answer the call. (To activate, press M > Settings > In Call Setup > Answer Options > Open To Answer.) If the phone flip is not active: Press 1 N or ANSWER (-) 2O To answer the call end the call and "hang up" the phone when you are finished Viewing Your Phone Number To view your phone number from the home screen, press M#. While you are on a call, press M > My Tel. Numbers. Note: Your phone number must be stored on your SIM card to use this feature.

To store your phone number on the SIM card, see page 69. If you do not know your phone number, contact your service provider. 26 - Getting Started Highlight Features You can do much more with your phone than make and receive calls! Taking and Sending a Photo Shortcut: From the home screen, press CAMERA (+) to activate the camera. To activate your phone's camera from the menu system: Find the Feature M> Multimedia > Camera The active viewfinder image appears on your display. Press S up or down to zoom in or out. IMAGE AREA Photo Storage Space Used. Press S left or right to decrease or increase image brightness. Photo Viewfinder Memory Used: 72% BACK CAPTURE Press CAPTURE (+) to take a photo. Press BACK (-) to exit the camera application. Press M to open Pictures Menu.

Highlight Features - 27 Point the camera lens at the photo subject, then: Press 1 CAPTURE (+) 2 STORE (+) To take a photo view storage options If you choose to store the photo, continue to step 3. delete the photo and return to active viewfinder scroll to Send in Message, Store Only, Apply as Wallpaper, Apply as Screen Saver, or Apply as Phonebook Entry perform the storage option Action 4 Wait 5 seconds for your phone to save the photo and reset the external viewfinder. or Open the flip to store or discard the photo. or DISCARD (-) Adjusting Camera Settings Press M to open the Pictures Menu when the camera is active. The Pictures Menu can include the following options: Description View pictures and photos stored on your phone.

Auto-Timed Capture Set a timer for the camera to take a photo. Pictures Setup Open the setup menu to adjust the following settings: · Auto Repeat: Return to the beginning when the last picture displays in a picture album slideshow. · Shuffle: Set pictures to display randomly when viewing a picture album slideshow. · Allow Alert: Enable or disable all phone sound/vibration alerts when taking a picture. · Lighting Conditions: Set to Automatic, Sunny, Cloudy, Indoor (Home), Indoor (Office), or Night.

· Exposure: Set to +2, +1, 0, -1, or -2. Option Go To Pictures 3S 4 SELECT (+) Taking a Self-Portrait Action 1 From the home screen, press CAMERA (+) or press M > Multimedia > Camera to activate the camera, then close the flip. or Close the flip, then press and hold the smart key to activate the camera and external display viewfinder. 2 Use the external viewfinder to aim the camera lens. 3 Press the smart key to take a photo. 28 - Highlight Features Highlight Features - 29 Option Description · Resolution: Set the camera to capture photos at the following resolutions: MMS (160x120 pixels), Medium (320x240 pixels, or High (640x480 pixels) · Shutter Tone: Activate a tone that sounds when you take a photo. Can be set to None, Chimp, Quack, Flix, Boing, or Click. View Free Space See how much memory remains for storing pictures. Press 5S 6 SELECT (+) 7S 8 SELECT (+) To scroll to Picture, Voice Record, Sound, Video, New Page, Quick Note, or Contact Info select the file type highlight the file you want insert the file To add another page to the message, continue to step 9. open the MMS Menu to insert a new page scroll to Insert display a list of items you can insert scroll to New Page insert a new page after the current page Repeat steps 1 to 8 to enter contents for the new page.

Sending a Multimedia Message A Multimedia Messaging Service (MMS) multimedia message contains one or more pages with text and embedded media objects (including photos, pictures, animations, sounds, voice records, and video clips). You can send a multimedia message to other wireless phone users, and to email addresses. Tip: The layout of all pages in a multimedia message is defined by the layout of the first page. To display a media object at the top of the page, insert it in the first half of the message text. To display a media object at the bottom of the page, insert it in the second half of the message text. Find the Feature Press keypad keys M S SELECT (+) E> New Message > New Multimedia Msg To enter text on the page open the MMS Menu scroll to Insert display a list of items you can insert 9 10 11 12 13 M S SELECT (+) S SELECT (+) When you finish composing the multimedia message: Press 1 OK (+) 2S To store the message scroll to a Send To option: Highlight an existing phonebook entry. Or highlight [One Time Entry] to enter one or more phone numbers or email addresses. Or highlight [New Phonebook Entry] to enter a number/address and add it to the phonebook. Highlight Features - 31 1 2 3 4 30 - Highlight Features Press 3 ADD (+) To add the phonebook entry to the list of recipients Repeat steps 2 and 3 to add additional phonebook entries to the list. Press 18 DONE (-) 19 SEND (+) or M To return to the message editor send the message view message details, save the message in the drafts folder, or cancel the message or SELECT (+) select [One Time Entry] or [New Phonebook Entry] store the numbers/addresses scroll to Subject 4 DONE (+) 5S Using a Bluetooth® Wireless Connection Your phone supports Bluetooth wireless connections.

You can set up a wireless link with a Bluetooth headset or handsfree car kit, or connect to a computer or hand-held device to exchange and synchronise data. France Indoor Only Note: If your phone type MQ3-4411H11 carries the alert mark, then your phone's Bluetooth features and Bluetooth Class 1 power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Bluetooth features in France unless you are indoors. 6 7 8 9 10 11 12 13 14 15 CHANGE (-) keypad keys OK (+) CHANGE (-) S SELECT (+) S SELECT (+) BACK (-) S 16 CHANGE (-) 17 ADD (+) or REMOVE (+) 32 - Highlight Features select Subject enter the subject store the subject select Attachments to attach a file to the message, if desired scroll to Picture, Sounds, or Video select the file type highlight the file you want attach the file return to the message editor scroll to Receipt to request a receipt, if desired select Receipt activate/deactivate the delivery report Turning Bluetooth On or Off The preferred method for connecting your phone to a Bluetooth headset or handsfree car kit is to turn on Bluetooth on your phone, then connect your phone to the headset or car kit.



[You're reading an excerpt. Click here to read official MOTOROLA MOTORAZR V3 user guide](http://yourpdfguides.com/dref/3771147)
<http://yourpdfguides.com/dref/3771147>

To turn Bluetooth on: Find the Feature M> Settings > Connection > Bluetooth Link > Setup > Power > On Highlight Features - 33 This procedure turns Bluetooth on and leaves it on until you turn it off.

When your phone's Bluetooth power is on, your handsfree accessory can automatically reconnect to the phone when you turn on the accessory or move it within range of the phone. Note: To extend battery life, use the above procedure and set Bluetooth power to Off when not in use. Sending Objects to Another Device You can use a Bluetooth wireless connection to send a picture, sound, video, phonebook entry, datebook event, or bookmark from your phone to another phone, computer, or hand-held device. Sending a Picture, Sound, or Video Highlight the object on your phone that you want to send to the other device, then press M > Copy. Select a recognised device name listed in the Object Exchange menu, or [Look For Devices] to search for the device to which you want to send the object.

Searching for Other Devices To connect your phone to a Bluetooth headset or handsfree device: Find the Feature M> Settings > Connection > Bluetooth Link > Handsfree > [Look For Devices] If Bluetooth is turned off, your phone asks if you want to Temporarily Power On? Bluetooth. Press YES (-) to proceed. Alternatively, set Power to On in the Setup menu to turn Bluetooth on and leave it on. Your phone scans for and displays a list of device(s) located within range of the phone. Note: If your phone is already connected to a device, you must disconnect from it to search for other devices. SELECT (+). Sending a Phonebook Entry, Datebook Event, or Bookmark Highlight the item on your phone that you want to send to the other device, then press M > Send. Select a recognised device name listed in the Object Exchange menu, or [Look For Devices] to search for the device to which you want to send the item. To connect to a device, highlight the device name and press connection with the device. When the connection is made, the Bluetooth indicator $\tilde{\text{a}}$ displays in the home screen, and the external Bluetooth LED indicator flashes.

YES (-) and enter the correct PIN code to create a secure The device may request permission to bond with your phone. Select 34 - Highlight Features Highlight Features - 35 Learning to Use Your Phone See page 1 for a basic phone diagram. Notes: · Your home screen may appear different than shown. For example, the menu feature icons normally are hidden to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide menu icons, see page 86. · Your phone can display an analog or digital clock in the home screen (see page 85). · Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you open the flip or press any key.

To set the time that the backlight stays on, see page 68. · To further extend battery life, you can set the display to turn off, in addition to the backlight, after a period of inactivity. The display turns back on when you open the flip or press any key. To set the time that the display stays on, see page 68. Using the Display The home screen is displayed when you are not on a call or using the menu.

You must be in the home screen to dial a phone number. Date Service Provider 10/15/04 Messages Recent Calls Browser Phonebook Left Soft Key Label STYLES CAMERA Clock Right Soft Key Label Menu Indicator Press the 4-way navigation key S up, down, left, or right to select a menu feature icon. If you select a menu icon by mistake, press O to return to the home screen. The menu indicator M shows that you can press the menu key M to enter the main menu. Labels at the bottom corners of the display show the current soft key functions.

Press the left soft key - or right soft key + to perform the indicated function. 36 - Learning to Use Your Phone Learning to Use Your Phone - 37 The following status indicators can display: 5. Call Status 6. Messaging Presence 7. Message 4. Roam 3. Signal Strength 2. GPRS 2. GPRS Indicator Shows that your phone is using a high-speed General Packet Radio Service (GPRS) network connection. GPRS allows faster data transfer speeds.

Other indicators can include: * = GPRS PDP context active , = GPRS packet data available 8. Battery Level Service Provider 10/15/04 9. Ring Style 1. Data Transmission STYLES CAMERA 3. Signal Strength Indicator Vertical bars show the strength of the network connection. You cannot make or receive calls when the no signal indicator ! or no transmit indicator) is displayed. 4. Roam Indicator The roam indicator $\tilde{\text{a}}$ shows when your phone is seeking or using another network outside your home network. 5. Call Status Indicator Shows the call status of your phone.

For dual-line-enabled SIM cards, shows the current active phone line. Indicators can include: ? = phone in call @ = line 1 active A = line 1 active, call divert on > = call divert on B = line 2 active C = line 2 active, call divert on 1. Data Transmission Indicator Show connection and data transmission status.

The Bluetooth® wireless connection indicator $\tilde{\text{a}}$ shows when a Bluetooth connection is active. Other indicators can include: 4 = secure packet data transfer 3 = secure application connection 2 = secure Circuit Switch Data (CSD) call 7 = unsecure packet data transfer 6 = unsecure application connection 5 = unsecure CSD call 38 - Learning to Use Your Phone Learning to Use Your Phone - 39 6.

Messaging Presence Indicator Shows when instant messaging is active. Indicators can include: P = IM active _ = busy J = available for phone calls I = available for IM Q = invisible to IM X = offline Using the 4-Way Navigation Key Press the 4-way navigation key S up, down, left, or right to scroll through the menu system, highlight menu items, change feature settings, and play games. Press the centre select key C in the centre of the 4-way navigation key to select a highlighted menu item. The centre select key usually performs the same function as the right soft key +. When a Java™ application is active, the Java midlet indicator $\tilde{\text{a}}$ displays in this location.

7. Message Indicator Displays when you receive a new message. Indicators can include: r = text message s = voicemail and text message a = active chat session t = voicemail message d = IM message Using the Operator Key From the home screen, press the operator key L to go to your service provider's portal site to access customised content and services. If a portal site is not available, pressing the operator key launches the micro-browser. 8. Battery Level Indicator Vertical bars show the battery charge level.



[You're reading an excerpt. Click here to read official MOTOROLA MOTORAZR V3 user guide](http://yourpdfguides.com/dref/3771147)
<http://yourpdfguides.com/dref/3771147>

Recharge the battery when Low Battery displays and the battery alert sounds. 9. Ring Style Indicator Shows the ring style setting. y = loud ring l = vibrate = vibrate & ring z = soft ring } = vibrate then ring { = silent Using the Message Key From the home screen, press the message key E to go to the message centre, to send a message or read messages you have received.

40 - Learning to Use Your Phone Learning to Use Your Phone - 41 Using Menus From the home screen, press M to enter the main menu. The following icons represent features that may display in the main menu, depending on your service provider and service subscription options. Menu Icon Feature Phonebook Messages Games & Apps Multimedia Settings Highlighted Menu Feature Icon. Menu Icon Feature Recent Calls Office Tools Web Access IM Phonebook EXIT SELECT Left Soft Key Perform left function. Right Soft Key Perform right function. n e Q h w s Ê á ã 4-Way Navigation Key with Centre Select Scroll up, down, left or right. Press C to select menu feature. Menu Key Enter menu system, or open a sub-menu. Selecting a Feature Option Some features require you to select an option from a list: Dialed Calls 10) John Smith 9) Lisa Owens 8) Adda Thomas 7) Jack Bradshaw 6) Dave Thompson 5) Mary Smith 4) Carlo Emrys 3) Bob Adams BACK End Key Exit menu without making changes. Press BACK (-) to go back to previous screen.

Highlighted Option. Press S to scroll to and highlight a menu feature icon in the main menu. Press SELECT (+) or C to select the highlighted menu feature. VIEW Press VIEW (+) to view details of highlighted option. Press M to open sub-menu. · Press S to scroll up or down to highlight the option you want. · In a numbered list, press a number key to highlight the option. 42 - Learning to Use Your Phone Learning to Use Your Phone - 43 · In an alphabetised list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option. · When an option has a list of possible values, press S left or right to scroll through and select a value. · When an option has a list of possible numeric values, press a number key to set the value.

The message centre lets you compose text messages. For indicator descriptions, see following section. @@@@The mode you select remains active until you select another mode. @@@@Enter numbers only (see page 53). Enter symbols only (see page 54). @@Press M > Entry Setup in a text entry screen. @@@@For example, to type "the", you would press 8 4 3. @@@@If necessary, press # in a text entry screen to switch to iTAP mode. An indicator tells you which mode is active (see page 46). @@@@Press S left or right to highlight the letter combination.

Press SELECT (-) to select the letter combination. @@An indicator shows which mode is active (see page 46). @@@@The first character of every sentence is capitalised. @@@@If you do not want to save your text or text edits, press O to exit without saving. Your phone automatically stores the novel word and displays it as an option the next time you enter its letter combination. When the memory space for storing novel words is filled, your phone deletes the oldest words to add new words. Entering Numbers and Punctuation in iTAP Mode To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to revert to iTAP mode. Press 1 to enter punctuation or other characters as shown in the "Character Chart" on page 53.

Entering Words in Tap Mode Press 1 a keypad key one or more times 2 keypad keys To enter a letter, number, or symbol enter remaining characters Tip: Press S right to accept a word completion, or * to insert a space. store the text Using Tap Mode This is the basic text entry mode on your phone. Tap mode cycles through the letters and number of the key you press. Tap Extended mode also cycles through additional symbols as shown in the "Character Chart" on page 53. 50 - Learning to Use Your Phone 3 OK (+) Learning to Use Your Phone - 51 For example, if you press 8 one time, your phone displays: Character displays at insertion point.

Msg T Character Chart Use this chart as a guide for entering characters with Tap Extended mode. After 2 seconds, character is accepted and cursor moves to next position. 1 2 3 4 5 6 7 8 9 0 * # Press DELETE (-) to delete last character entered. DELETE OK Press OK (+) to accept and store text. When you enter 3 or more characters in a row, your phone may guess the rest of the word.

For example, if you enter prog your phone might display: Press S right to accept program. Press * to reject it and enter a space after prog. Msg This is a program To enter a different word (such as progress), press keys to enter remaining characters. .!?,@_&~:;'-'() ' ;%£\$¥ +x*^[]] =><# \$ abc2ääääääç def3ëééë ghi4iï jkl5 mno6ñöøóôõ p qrs7β tuv8üüüü wxyz9 change text case, for capital letters enter a space (hold to enter a return) change text entry mode (hold for default) Note: This chart may not reflect the exact character set available on your phone. In an email or Web address editor, 1 first shows common characters for that editor. Using Numeric Mode DELETE OK In a text entry screen, press # to switch entry modes until the numeric indicator W displays. Press the number keys to enter the numbers you want. When you finish entering numbers, press # to switch to another entry mode. 52 - Learning to Use Your Phone Learning to Use Your Phone - 53 Using Symbol Mode In a text entry screen, press # to switch entry modes until the symbol indicator [displays.

Press 1 keypad keys (one press per symbol) 2 S left or right 3 SELECT (+) To show possible symbol combinations at the bottom of the display highlight the combination you want select the highlighted combination You can press keypad keys to add more symbols to the end of the combination. enter the highlighted combination 0 * # +-x*/=><# \$ enter a space (hold to enter a return) change text entry mode (hold for default) Note: This chart may not reflect the exact character set available on your phone. In an email or Web address editor, 1 first shows common characters for that editor. Deleting Letters and Words Place the cursor to the right of the text you want to delete, and then: Action Press DELETE (-) to delete one letter at a time. Hold DELETE (-) to delete all entered text. or * Symbol Chart Use this chart as a guide for entering characters with symbol mode. 1 2 3 4 5 6 7 8 9 .!?,@_&~:;'-'() ' ;%£\$¥ @_\/:; '&' ()[]{} ; j~ <>= \$£¥ #%* Using the Smart Key The smart key gives you another way to perform many basic phone functions.



[You're reading an excerpt. Click here to read official MOTOROLA MOTORAZR V3 user guide](http://yourpdfguides.com/dref/3771147)
<http://yourpdfguides.com/dref/3771147>

It anticipates the next action you are likely to perform. For example, when you highlight a menu item, you can press the smart key to select it. You can use the smart key to make and end calls, turn features on and off, and open your phonebook. The smart key usually performs the same function as the right soft key +. 040159o Using the External Display When the flip is closed, the external display shows time and phone status information. It also displays messages to notify you of Learning to Use Your Phone - 55 54 - Learning to Use Your Phone incoming calls and other events. You can perform the following functions in the external display.

Using the Handsfree Speaker When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear. Press SPEAKER (+) to turn the handsfree speaker on or off during a call. Spkrphone On in the home screen. The handsfree speaker remains on until you press SPEAKER (+) again or end the call. Setting Phone Ring Style Press 1 volume keys 2 smart key 3 volume keys To select Ring Styles set a ring style return to the home screen When you turn the handsfree speaker on, your phone displays Returning an Unanswered Call Your phone keeps a record of your unanswered calls and displays X Missed Calls in the external display.

Action 1 Press the smart key to display the received calls list. or Press the volume keys to dismiss the Missed Calls message. 2 If necessary, press the volume keys to scroll through the list and highlight an unanswered call. 3 If a headset is connected to your phone, press and hold the smart key to call the number. or Press the smart key to exit without calling. Note: Because the microphone and earpiece are unavailable when the phone is closed, you must use a headset or other handsfree device with this feature. 56 - Learning to Use Your Phone Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory. Changing a Code, PIN, or Password Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone. If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information.

The unlock code must contain 4 digits, and the security code must contain 6 digits. You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary. To change a code or password: Find the Feature M> Settings > Security > New Passwords Locking and Unlocking Your Phone You can lock your phone manually or set the phone to lock automatically whenever you turn it off. Learning to Use Your Phone - 57 To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer. You can make emergency calls on your phone even when it is locked (see page 75). Press 1 keypad keys 2 OK (+) To enter your unlock code activate automatic lock Locking Your Phone Manually Find the Feature Press 1 keypad keys 2 OK (+) M> Settings > Security > Phone Lock > Lock Now To enter your unlock code lock the phone If You Forget a Code, PIN, or Password Note: Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone. If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following at the Enter Unlock Code prompt: Press 1M 2 keypad keys 3 OK (+) To display the unlock code bypass screen enter your security code submit your security code Unlocking Your Phone Tip: Your phone's unlock code is originally set to 1234.

Your service provider may reset the unlock code to the last 4 digits of your phone number. At the Enter Unlock Code prompt: Press 1 keypad keys 2 OK (+) To enter your unlock code unlock your phone If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider. Using the Phonebook This section describes basic phonebook operations. For more information about using the phonebook, see page 83. Setting Your Phone to Lock Automatically You can set your phone to lock every time you turn it off: Find the Feature M> Settings > Security > Phone Lock > Automatic Lock > On Storing a Phone Number Enter a phone number in the home screen, then press STORE (+) to create a phonebook entry with that number.

Press DONE (-) to store the number by itself, or fill in the other fields as necessary to complete the entry. Learning to Use Your Phone - 59 58 - Learning to Use Your Phone If you assign a Name to the phonebook entry, you can select MORE to store another number (for example, a work number) for the same Name. Setting a Picture ID for a Phonebook Entry Press M > Phonebook > entry, press M > Edit > Picture > picture name. Also see pages 2 and 27.

Recording a Voice Name When creating a phonebook entry, scroll to Voice Name and press RECORD (+). Press and release the voice key and say the entry's name (within 2 seconds). When prompted, press and release the voice key and repeat the name. Note: This option is not available for entries stored on the SIM card. Setting Picture ID View Press M > Phonebook, press M > Setup > View by > Picture. Viewing Entries By Category Press M > Phonebook, press M > Categories, then select whether you want to view All entries, entries in a predefined category (Business, Personal, General, VIPs), or entries in a category you created. To set the category for a phonebook entry, see page 84. Dialling a Number Press M > Phonebook, highlight the phonebook entry, press N to call. Shortcut: In the phonebook, press a keypad key one or more times to jump to entries that begin with the key's letters. Voice Dialling a Number Press and release the voice key, and say the entry's name (within 2 seconds). Sorting Phonebook Entries Press M > Phonebook, press M > Setup > Sort by, then select whether you want to sort the phonebook list by Name, Speed No.

, Voice Name, or Email. When sorting by name, you can view All numbers or just the Primary number for each name. To set the primary number for a name, see page 84. Tip: In Primary number view mode, highlight a name and press S left or right to view other numbers associated with the name. 60 - Learning to Use Your Phone Learning to Use Your Phone - 61 Setting Up Your Phone Setting a Ring Style You can set the following ring styles on your phone: Loud Soft Vibrate Vibe then Ring Vibe & Ring Silent Changing the Call Alert You can change the alert that a ring style uses to notify you of incoming calls or other events.



[You're reading an excerpt. Click here to read official MOTOROLA MOTORAZR V3 user guide](http://yourpdfguides.com/dref/3771147)
<http://yourpdfguides.com/dref/3771147>

Any changes you make are saved to the ring style profile. Find the Feature M> Settings > Ring Styles > Style Detail Note: Style represents the current ring style. You cannot set an alert for the Silent ring style setting. Press 1S 2 3 4 5 CHANGE (+) Each ring style is a profile that uses a different set of ring tone alerts or vibration alerts to notify you of incoming calls, text messages, and other events. The Silent setting silences your phone until you set another ring style.

To set a ring style: Find the Feature M> Settings > Ring Styles > Style > style name S SELECT (+) BACK (-) To scroll to Calls (or Line 1 or Line 2 for dual line phones) select the event scroll to the alert you want select the alert save the alert setting The ring style indicator shows the current ring style setting (see page 40). The ring style profile contains additional settings for other events, and settings for ringer ID, ringer and keypad volume. You can change ring style profile settings as desired to personalise the ring style. Setting the Time and Date You must set the time and date to use the datebook. Find the Feature M>

Settings > Initial Setup > Time and Date 62 - Setting Up Your Phone Setting Up Your Phone - 63 Setting a Wallpaper Image Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen.

The wallpaper image appears as a faint watermark in text and menu displays. Find the Feature Press 1S 2 CHANGE (+) 3 S up or down M> Settings > Personalise > Wallpaper To scroll to Picture open the picture viewer scroll to a picture/animation Scroll to (None) to turn off the wallpaper image. select the image scroll to Layout adjust the image layout scroll to Centre, Tile, or Fit-to-screen Centre places the image in the centre of Setting a Screen Saver Image Set a photo, picture, or animation as a screen saver image. The screen saver image displays when the flip is open and no activity is detected for a period of time. If necessary, the image shrinks to fill the display.

An animation repeats for 1 minute, then the first frame of the animation displays. Tip: Turn off the screen saver to extend battery life. Find the Feature Press 1S 2 CHANGE (+) 3 S up or down M> Settings > Personalise > Screen Saver To scroll to Picture open the picture viewer scroll to a picture/animation Scroll to (None) to turn off the screen saver image. select the image scroll to Delay set the delay interval scroll to the inactivity interval that starts the screen saver select the inactivity interval save screen saver settings 4 5 6 7 SELECT (+) S CHANGE (+) S the display. Tile fills the display with adjacent copies of the image. 4 5 6 7 SELECT (+) S CHANGE (+) S 8 SELECT (+) 9 BACK (-) necessary, to fit the display. confirm the layout setting save wallpaper settings Fit-to-screen resizes the image, if 8 SELECT (+) 9 BACK (-) 64 - Setting Up Your Phone Setting Up Your Phone - 65 Changing Phone Skin Change the look and feel of your phone's user interface by selecting a different skin setting. Find the Feature M> Settings > Personalise > Skin> skin Deleting a Theme You cannot delete the preloaded themes on your phone. To delete one or all of the themes that you have downloaded and installed: Find the Feature Press 1M 2S 3 SELECT (+) M> Multimedia > Themes > theme To open the Theme menu scroll to Delete or Delete All select the option Your phone displays the new skin. Setting a Phone Theme A phone theme consists of a bundled set of image and sound files with a specific theme (such as a special event or cartoon character) that you can apply collectively to your phone.

Phone themes typically include a wallpaper image, screen saver image, and ring tone. Your phone includes several preloaded themes. You can download and install additional themes on your phone. Setting Answer Options You can use additional, alternative methods to answer an incoming call. Multi-Key Open to Answer Downloading a Theme To download a theme from a Web page with the micro-browser, see page 96. When you install the theme, you can instantly apply its screen saver, wallpaper, and ring tone when your phone prompts you to Apply Theme Now? answer by pressing any key answer by opening the flip M> Settings > In-Call Setup > Answer Options To scroll to Multi-Key or Open to Answer select the option scroll to On or Off confirm the setting Setting Up Your Phone - 67 To activate or deactivate an answer option: Find the Feature Press S CHANGE (+) S SELECT (+) Selecting a Theme You can apply any of the themes installed on your phone. Note: If one of a theme's components is not available, then a default setting is applied. Find the Feature M> Multimedia > Themes > theme 1 2 3 4 66 - Setting Up Your Phone Setting Display Brightness Find the Feature M> Settings > Initial Setup > Brightness Storing Your Name and Phone Number To store or edit your name and phone number information on your SIM card: Find the Feature M> Settings > Phone Status > My Tel. Numbers Adjusting the Backlight Set the amount of time that the display backlight remains on. Find the Feature M> Settings > Initial Setup > Backlight Note: Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight.

To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you open the flip or press any key. Shortcut: Press M # from the home screen to view and edit your name and phone number(s). If you do not know your phone number, contact your service provider. Setting Display Timeout To further extend battery life, you can set the display to turn off (in addition to the backlight) when no activity is detected for a period of time.

Find the Feature M> Settings > Initial Setup > Display Timeout You can set the display to stay on for 1 or 2 minutes, or set Off to disable display timeout. Note: The display turns back on when you open the flip or press any key. 68 - Setting Up Your Phone Setting Up Your Phone - 69 Calling Features For basic instructions on how to make and answer calls, see page 25. Press 4N or VIEW (+) To call the entry's number view entry details (such as time and date of call) open the Last Calls Menu to perform other procedures Turning Off a Call Alert You can turn off your phone's incoming call alert before answering the call.

Action 1 Press the volume keys to turn off the alert.

2 Open the flip (or press the button on a handsfree headset) to answer the call. or M The Last Calls Menu can include the following options: Option Store Delete Delete All Hide ID/Show ID Send Message Add Digits Attach Number Viewing Recent Calls Your phone keeps lists of incoming and outgoing calls, even for calls that did not connect.



[You're reading an excerpt. Click here to read official MOTOROLA
MOTORAZR V3 user guide
http://yourpdfguides.com/dref/3771147](http://yourpdfguides.com/dref/3771147)

The most recent calls are listed first. The oldest calls are deleted as new calls are added. Shortcut: Press N from the home screen to view the dialled calls list. Find the Feature Press 1S 2 SELECT (+) 3S M> Recent Calls To scroll to Received Calls or Dialled Calls select the list scroll to an entry Note: < means the call connected. 70 - Calling Features Description Create a phonebook entry with the number in the No. field. Delete the entry. Delete all entries in the list.

Hide or show your caller ID for the next call. Open a new text message with the number in the To field. Add digits after the number. Attach a number from the phonebook or recent calls lists. Calling Features - 71 Option Send Tones Description Send the number to the network as DTMF tones. Note: This option displays only during a call. Talk and then send a fax in the same call (see page 91). Returning an Unanswered Call Your phone keeps a record of your unanswered calls, and displays: · X Missed Calls, where X is the number of missed calls Press 1 VIEW (+) 2S 3N To display the received calls list select a call to return make the call Talk then Fax Redialling a Number Press 1N 2S 3N To view the dialled calls list scroll to the entry you want to call redial the number Using the Notepad The most recent set of digits entered on the keypad are stored in your phone's notepad memory. This can be a phone number that you called, or a number that you jot down during a call, for later use. To retrieve the number stored in the notepad: Find the Feature Press N or STORE (+) M>

Recent Calls > Notepad To call the number create a phonebook entry with the number in the No. field open the Dialling Menu to attach a number or insert a special character Using Automatic Redial When you receive a busy signal, your phone displays Call Failed: Number Busy. Press N or RETRY (+) To redial the number or M When the call goes through, your phone rings or vibrates one time, displays Redial Successful, and connects the call. 72 - Calling Features Calling Features - 73 Putting a Call On Hold or Mute Press M > Hold or M > Mute mute all active calls To put all active calls on hold Using Caller ID (Incoming Calls) Calling line identification (caller ID) displays the phone number for incoming calls in your phone's external and internal displays. The phone displays the caller's name (and picture ID, if available) when the name is stored in your phonebook, or Incoming Call when caller ID information is not available. You can also set your phone to play a distinctive ringer ID for specific entries stored in your phonebook.

For more information, see page 83. Using Call Waiting When you are on a call, an alert tone sounds to indicate that you have received a second call. Press IN 2 SWITCH (+) or LINK (-) Calling an Emergency Number Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted. Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Press 1 keypad keys 2N To dial the emergency number call the emergency number To answer the new call switch between calls connect the 2 calls end the call on hold or M > End Call On Hold If necessary, you must turn on call waiting to use the feature. To turn call waiting on or off: Find the Feature M> Settings > In-Call Setup > Call Waiting Dialling International Numbers If your phone service includes international dialling, press and hold 0 to insert the local international access code (+) for the country from which you are calling. (Inserting + enables your phone to make an international call.) Then press the keypad keys as usual to dial the country code and phone number. Calling Features - 75 74 - Calling Features Calling With 1-Touch Dial To call phonebook entries 1 to 9, press and hold the single-digit speed dial number for one second. You can set 1-touch dial to call the entries in your phone memory phonebook or the SIM card phonebook: Find the Feature Press 1S 2 SELECT (+) M> Settings > Initial Setup > 1-Touch Dial To scroll to the location you want select the location Receiving a Voicemail Message When you receive a voicemail message, your phone displays the voicemail message indicator t and the New Voicemail notification. Press CALL (+) To listen to the message The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number. Storing Your Voicemail Number If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature Press 1 keypad keys 2 OK (+) EM > Voicemail Setup To enter your voicemail number store the number Using Voicemail Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number. Note: Your service provider may include additional information about using this feature. Listening to Voicemail Messages Find the Feature E> Voicemail The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number. Note: You cannot store a p (pause), w (wait), or n (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail. 76 - Calling Features Calling Features - 77 Changing the Active Line Change the active phone line to make and receive calls from your other phone number. Note: This feature is available only for dual-line-enabled SIM cards.

Find the Feature M> Settings > Phone Status > Active Line The call status indicator in the display shows the currently active phone line (see page 39). 78 - Calling Features Phone Features Main Menu This is the standard main menu layout. Menu organisation and feature names may vary on your phone. Not all features may be available on your phone. n Phonebook s Recent Calls ······ Received Calls Dialled Calls Notepad Call Times Call Cost Data Times Data Volumes Q á Games & Apps Web Access · Browser · Web Shortcuts · Stored Pages · History · Go To URL · Browser Setup · Web Sessions ······ Themes Camera Pictures Sounds MotoMixer Videos e Messages · New Message · Email Msgs · Message Inbox · Voicemail · Browser Msgs · Info Services · Quick Notes · Outbox · Drafts · MMS Templates SIM Apps Calculator Datebook Shortcuts Voice Records Alarm Clock Dialling Services · Fixed Dial · Service Dial · Quick Dial · Chat ······ h Multimedia ã w IM Settings (see next page) É Office Tools Phone Features - 79 Settings Menu l Personalise · Home Screen · Main Menu · Skin · Greeting · Wallpaper · Screen Saver · Quick Dial Ring Styles · Style · Style Detail ······ Bluetooth Link Sync Voice Calls Fax Calls Data Calls Cancel All Divert Status Feature Quick Reference m Phone Status ······ My Tel.



[You're reading an excerpt. Click here to read official MOTOROLA MOTORAZR V3 user guide](http://yourpdfguides.com/dref/3771147)
<http://yourpdfguides.com/dref/3771147>