




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA MOTOROKR EM25. You'll find the answers to all your questions on the MOTOROLA MOTOROKR EM25 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual MOTOROLA MOTOROKR EM25**  
**User guide MOTOROLA MOTOROKR EM25**  
**Operating instructions MOTOROLA MOTOROKR EM25**  
**Instructions for use MOTOROLA MOTOROKR EM25**  
**Instruction manual MOTOROLA MOTOROKR EM25**

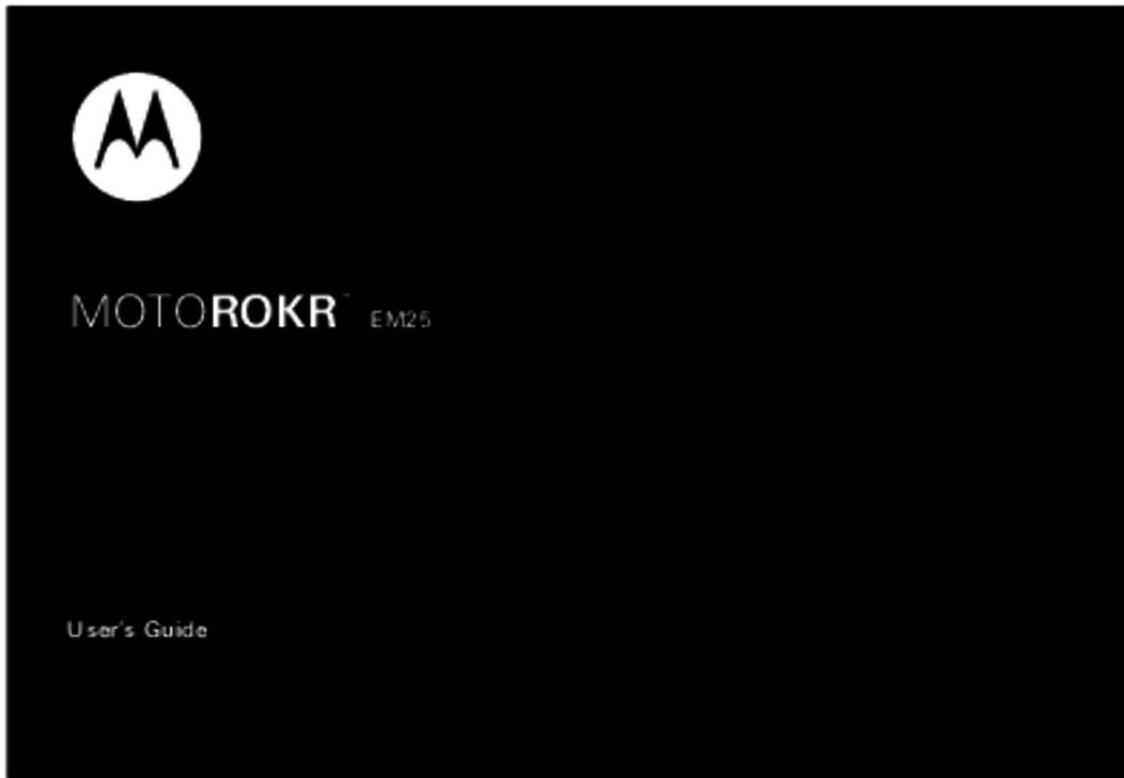

[You're reading an excerpt. Click here to read official MOTOROLA MOTOROKR EM25 user guide](http://yourpdfguides.com/dref/5181223)  
<http://yourpdfguides.com/dref/5181223>

**Manual abstract:**

• *My Phone, My Way* – Customize your home screen (page 24) with personal pictures taken with your phone’s camera, and download a chart-topping track and use as your ringtone. • *Connect on So Many Levels* – Whether it’s with work or friends, stay connected with voice (page 17) and messaging (page 40). • • *Camera* – Capture key moments with photos (page 47). *Convenient Extras* – When you are away from your home or desk, make use of handy tools like Phonebook, Calculator, Alarm Clock, Calendar, and others (page 60). • *Fun* – When you have a little time to spare, why not surf the web (page 51) or play a game (page 52)? 1 Here’s a quick anatomy lesson: Navigation Key Scroll up, down, left, right or press centre to select. Volume Keys Left Soft Key Right Soft Key Music Key Clear Key Send Key Power/End Key Microphone 2 Camera Lens Battery Cover Volume Keys 3.5 mm Headset Jack Note: Mini USB headsets are not supported. Low Battery Charging Indicator Mini USB Connector Charge your phone and connect to your PC. 3 A few menu basics: Home Screen Main Menu 6 Hi Phonebook & & 10:51am 1 10/10/08 Shortcut Menu Press and hold the Power Key O for a few seconds, or until the display lights up, to turn on your phone. 3 Select Exit Press the Navigation Key up, down, left, or right (S) to highlight a menu feature.

This is a typical home screen and main menu layout. Your phone may be a little different. 4 & 2 Press the Centre Key (s) to open the Main Menu. 4 Press the Centre Key (s) to select it. Motorola, Inc.

Consumer Advocacy Office 1307 East Algonquin Road Schaumburg, IL 60196 www.hellomoto.com Motorola Argentina S.A Suipacha 1111 - Piso 18 C1008AAW Buenos Aires ARGENTINA Certain mobile phone features are dependent on the capabilities and settings of your service provider’s network. Additionally, certain features may not be activated by your service provider, and/or the provider’s network settings may limit the feature’s functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user’s guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation. MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S.

and other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation. © Motorola, Inc., 2008. All rights reserved. Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user’s authority to operate the equipment. Software Copyright Notice The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68000201706-B 5 contents menu map . . . . .

. . . . .  
. . . . . 8 Use and Care . . . . .

. . . . . 10 get started .

. . . . .  
. . . . .  
. . . . . 11 about this guide . . . . .

. . . 11 SIM card . . . . .

. . . . .  
. . . 12 memory card . .  
. . . . . 12 battery.

. . . . .  
. . . . .  
. 13 turn it on & off. . . .  
. . . . . 17 make a call . . . . .

. . . . .  
. . . . .  
17 answer a call . . . . .

. . . . .  
. . 17 change ring alert . . . . .

. 17 store a number . . . . .  
. 18 call a stored number . . . .  
. . 18 your phone number . . .  
. . . 18 basics . . . . .

. . . . .  
. . 19 home screen. . . . .

. . . . .  
. . . . . 19 status indicators . . . . .

. . . 19 volume keys . . . . .



|                                     |  |
|-------------------------------------|--|
| 39 delete letters & words . . . . . | 39 symbol method . . . . .             |
| . . . . .                           | 39 messages . . . . .                  |
| . . . . .                           | . . . . .                              |
| . . . . .                           | . . . . .                              |
| . 40 send a message . . . . .       |  |
| . . . . .                           | 40 quick text . . . . .                |
| . . . . .                           | . . . . .                              |
| . 40 receive a message . . . . .    |  |
| . . 41 voicemail . . . . .          |  |
| . . . . .                           | 41 more message features . . . . .     |
| . . . . .                           | 42 entertainment . . . . .             |
| . . . . .                           | . . . . .                              |
| . . 43 music player . . . . .       |  |
| . . . . .                           | 43 FM radio . . . . .                  |
| . . . . .                           | . . . . .                              |
| . . . . .                           | 46 camera . . . . .                    |
| . . . . .                           | . . . . .                              |
| . . . . .                           | 47 pictures . . . . .                  |
| . . . . .                           | . . . . .                              |
| . . . . .                           | . . . . .                              |
| . 48 voice notes . . . . .          |  |
| . . . . .                           | 50 WebAccess . . . . .                 |
| . . . . .                           | . . . . .                              |
| . . 51 fun & games . . . . .        |  |
| . . . . .                           | 52 connections . . . . .               |
| . . . . .                           | . . . . .                              |
| . . . . .                           | 54 Bluetooth® wireless . . . . .       |
| . . . . .                           | 54 cable connections . . . . .         |
| . . . . .                           | 57 USB setting . . . . .               |
| . . . . .                           | 59 tools . . . . .                     |
| . . . . .                           | . . . . .                              |
| . . . . .                           | . . . . .                              |
| . . . . .                           | . . . . .                              |
| 60 personal organizer . . . . .     | 60 phonebook . . . . .                 |
| . . . . .                           | . . . . .                              |
| . . . . .                           | . . . . .                              |
| . . 61 network . . . . .            |  |
| . . . . .                           | 61 service & repairs . . . . .         |
| . . . . .                           | . . . . .                              |
| . . . . .                           | 62 SAR Data . . . . .                  |
| . . . . .                           | . . . . .                              |
| . . . . .                           | 63 SAR Data . . . . .                  |
| . . . . .                           | . . . . .                              |
| . . . . .                           | . . . . .                              |
| . . 65 EU Conformance . . . . .     |  |
| . . . . .                           | 66 Safety Information . . . . .        |
| . . . . .                           | . . 68 FCC Notice . . . . .            |
| . . . . .                           | . . . . .                              |
| . . . . .                           | 72 Warranty (except Mexico) . . . . .  |
| 73 Warranty (Mexico) . . . . .      | 76 WHO Information . . . . .           |
| . . . . .                           | . . . . .                              |
| . . . . .                           | 78 Recycling Information . . . . .     |
| . . . . .                           | 79 Privacy and Data Security . . . . . |
| . . . . .                           | 80 Driving Safety . . . . .            |

.....  
. 81 index . . . .  
.....

83 contents 7 menu map main menu L q Phonebook Recent Calls • Received Calls • Dialed Calls • Notepad • Erase All • Call Time • Call Cost \* • GPRS Data Counter • GPRS Connection Time Messages • Create Message • Message Inbox • Outbox • Drafts • Voicemail • Browser Msgs • Quick Notes • MMS Templates m Tools • Calculator • Shortcuts • Chat \* • SIM Tool kit \* • Calendar • Lantern • Alarm Clock Games & Apps WebAccess • Browser • Web Shortcuts • Go To URL • History • Web Sessions • Web Settings j Multimedia • Camera • Music Library • Pictures • Voice Notes • FM Radio • My Picture Settings • (see next page) g T 1 u \* Network Dependent This is the standard main menu layout.



[You're reading an excerpt. Click here to read official MOTOROLA MOTOROKR EM25 user guide](http://yourpdfguides.com/dref/5181223)  
<http://yourpdfguides.com/dref/5181223>

Your phone's menu may be different. 8 menu map settings menu b Personalize • Home Screen • Color Style • Wallpaper • Screen Saver • Slide Tone • Quick Dial USB • USB Modem • USB Disk Bluetooth Link • Find Me • Add Audio Device • Setup Ring Styles • Style • Style Detail Call Forward • When Busy • No Reply • Not Reachable • Not Available • All Calls • Cancel All g æ E N g In-Call Setup • Dialing Prefix • In-Call Timer • Call Cost Setup \* • Show Number • Call Waiting • Anykey Answer • Session Information • Auto Redial Headset & Car Setting • Auto Answer Airplane Mode • Airplane Mode • Prompt at Power Up Initial Setup • Time and Date • Slide Closed • Backlight • Language • Brightness • Input Mode • Connection Indication • Master Reset • Master Clear • Format Memory Card j N Phone Status • My Tel. Number • Battery Meter • Storage Devices Security • Phone Lock • Keypad Lock • Lock Application • Fixed Dial \* • Call Barring • Call Restriction • SIM PIN • New Passwords Network \* • New Network • Network Setup • Available Networks • Service Tone • Call Drop Tone Lantern • 30 Seconds • 1 Minute • 2 Minutes S % i m n \* Network Dependent menu map 9 Use and Care Use and Care To care for your Motorola phone, please keep it away from: liquids of any kind Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone. extreme heat or cold Avoid temperatures below 0°C/32°F or above 45°C/113°F. dust and dirt Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials. cleaning solutions To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions. microwaves Don't try to dry your phone in a microwave oven.

the ground Don't drop your phone. 10 Use and Care get started about this guide This guide shows how to locate a menu feature as follows: symbols This means a feature is network/subscription dependent and may not be available in all areas. Contact your service provider for more information. This means a feature requires an optional accessory. Tip: Press the center key s or Select to select a highlighted option.

Find it: s > q Recent Calls > Received Calls This means that, from the home screen: 1 2 Press the center key s to open the main menu. Scroll to q Recent Calls and press the center key s. 3 Scroll to Received Calls and press the center key s. get started 11 SIM card Your Subscriber Identity Module (SIM) card contains personal information like your phone number and contacts. It can also contain your voicemail and text message settings.

If you put your SIM card in another phone, that phone uses your phone number. Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt. Tip: Make sure your SIM card is fully inserted into the phone before installing the battery. 1 2 memory card You can use a removable microSD memory card (up to 2 GB) with your phone to store and retrieve multimedia objects, such as music and pictures. Note: Motorola approved SanDisk cards are recommended for cards greater than 1 GB. install the memory card To install the memory card, make sure the memory card's metal contacts are facing dries are not fully charged. New batteries or batteries stored for a long time may take more time to charge. • Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging. Note: You can also use a PC USB port to charge your phone battery.

Before connecting your phone to your PC, download and install the charging software driver from [www.motorola.com/support](http://www.motorola.com/support). Note: Your battery is intentionally tight fitting to ensure consistent connection. charge the battery New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. The low battery charging indicator will light and remain ON, 16 get started turn it on & off To turn on your phone, press and hold O for a few seconds or until the display turns on. If prompted, enter your four-digit unlock code.

Your phone's four-digit unlock code is originally set to 1234 or the last four digits of your phone number (see page 21).

To turn off your phone, press and hold O for a few seconds. Tip: Is your caller saying they can't hear you? Make sure your finger is not covering the microphone (see page 2). answer a call When your phone rings and/or vibrates, press N or slide open to answer. See page 25 for answer options. To hang up, press O.

change ring alert Find it: s > u Settings > N Ring Styles Available options are Loud, Soft, Vibrating, Vibe & Ring, or Silent (see page 24). make a call Enter a phone number and press N to make a call. See page 29 for more calling features. To hang up, press O. get started 17 store a number You can store up to 1000 phone numbers in Phonebook: 1 Enter a number in the home screen, and press Save.

2 Enter a name and other details for the phone number. 3 Press Save to store the number. your phone number Find it: s > u Settings > m Phone Status > My Tel. Number Tip: Want to see your phone number while you're on a call? Press Options > My Tel. Number. call a stored number Find it: s > L Phonebook 1 2 Scroll to the entry. Press N to call the entry. Shortcut: In Phonebook, enter the first letters of an entry to get to it quickly. Tip: Set the Phonebook icon as a Home Screen navigation key for even faster access (see page 24). 18 get started basics See page 2 for a basic phone diagram.

Soft key labels show the current soft key functions. For soft key locations, see page 2. Press the navigation key S up, down, left, or right to select items in the home screen. home screen When you turn on your phone, the home screen displays. 6 Hi status indicators Status indicators can appear at the top of the phone: & H & 10:51am Left Soft Key Label 10/10/08 Shortcut Note: Your home screen might look a little different from this example. & Menu Right Soft Key Label Signal Strength WAP Active Bluetooth New Message Battery Level & GPRS Active Changes to when connected. Roaming Active Active Line Ring Style basics 19 volume keys Press the volume keys on the side of the phone to: • Change earpiece or speakerphone volume during a call. • Change ringtone volume (if the phone is in idle state, not in a call and not playing music). • Change volume when playing music. Note: When listening to music using a Bluetooth stereo device (headset or car stereo), use the volume control keys on the device to increase/decrease music volume You can also use an optional 3.



[You're reading an excerpt. Click here to read official MOTOROLA MOTOROKR EM25 user guide](http://yourpdfguides.com/dref/5181223)  
<http://yourpdfguides.com/dref/5181223>

5 mm wired headset, or Bluetooth® headset, to go handsfree. Note: Mini USB headsets are not supported. memory card You can store multimedia content, such as songs, and photos, on your phone's internal memory or on an optional memory card. Note: You cannot download a copyrighted file and store it on your memory card. format memory card You need to format a memory card, using the phone, before using it for the first time.

This creates the necessary folders and ensures your phone can read the contents of the card. Your phone will prompt you if you need to format your memory card. handsfree You can use your phone's handsfree speaker to make calls without holding the phone to your ear. To turn the speaker on during a call, press Spkr on. To turn the speaker off, press Spkr off.

20 basics Note: To manually format the memory card press Your service provider may reset this codes If not, you should change it to protect your personal information. The unlock code must contain four digits. To change a code or password: s > u Settings > i Initial Setup > Format Memory Card. Caution: Formatting the memory card erases all content on the card. Note: To access music stored on your microSD memory card, press [. To access pictures stored on your microSD memory card, press s > j Multimedia > Pictures > All Pictures, then press Options > Switch Storage > Memory Card. All music files are displayed no matter where they are stored. Picture files must be stored in the memory card mobile\Picture folder. If there are no files stored on your memory card, your phone will automatically switch to its internal memory. Find it: s > u Settings > N Security > New Passwords Note: If you forget your security code, contact your service provider.

lock & unlock phone You can lock your phone with a four-digit code to keep others from using it. Note: You can make emergency calls on a locked codes & passwords Your phone's four-digit security code is originally set to 1234 or to the last four digits of your phone number. phone (see page 31). A locked phone still rings or vibrates for incoming calls or messages. To lock your phone: Find it: s > u Settings > N Security > Phone Lock > Lock Now or Automatic Lock basics 21 Enter the four-digit unlock code and press OK. Your phone first displays Phone Locked, and then shows Phone Lock Code until the next time you unlock your phone. To unlock your phone, enter your four-digit code and press OK. To change phone lock code: To lock your keypad with the slider open, press and hold \*. Find it: s > u Settings > N Security > New Passwords > Phone Lock Code lock & unlock keypad The keypad will automatically lock when the slider is closed, if the Keypad Lock Timer is On. To turn the timer on, press s > u Settings > N Security > Keypad Lock > Timer > 2 Seconds, 4 Seconds or 8 Seconds.

To unlock your keypad with the slider closed, press any key and select Unlock > OK. 22 basics tips & tricks From the home screen (page 19), you can use shortcuts: change ring To... take a photo Do this.

.. Press s > j Multimedia > Camera to activate the camera and press style access music library access FM radio Press and hold [. Press [. To .. Do this... Press and hold #. s to take a photo. see recently dialed numbers use application shortcuts access voicemail Press and hold 1. Press the left and right soft keys or the navigation key S. Press N.

tips & tricks 23 customize change home screen Find it: s > u Settings > b Personalize > Home Screen > Home Keys options Show Icons Show or hide the home screen shortcut icons. Up, Down, Left, Right Choose the features that open when you press the navigation key (S) up, down, left, or right in the home screen. ring styles & alerts Your phone rings and/or vibrates to notify you of an incoming call or to signal certain other events. This ring or vibration is called an alert. set a style There are times when you want to hear your ringtone, and there are times when you don't. Find it: s > u Settings > N Ring Styles Choose from the pre-programmed styles, including Vibrating and Silent. 24 customize set alerts Set alerts for different events, such as getting a message in your inbox or receiving a call. wallpaper Set a picture as a wallpaper (background) image in your home screen. Find it: s > u Settings > N Ring Styles 1 2 3 Scroll to Style Detail and press s. Scroll to an alert type and press s.

Scroll to the desired detail setting and press s. Note: Your phone plays a sample of each highlighted setting. Ringtones play through the speakerphone, unless you're using a headset. Find it: s > u Settings > b Personalize > Wallpaper To select a wallpaper image: 1 2 Scroll to Picture and press s. Scroll to the picture you want and press s or Select Off to turn off wallpaper.

Note: Your phone shows a sample of each answer options Set your phone to Anykey Answer. highlighted image. To adjust wallpaper image layout: 1 2 Scroll to Layout and press s. Scroll to center, Tile or Fit-to-screen, and press s. Find it: s > u Settings > g In-Call Setup > Anykey Answer customize 25 screen saver Set a picture as a screen saver image.

The screen saver displays when there is no phone activity. backlight To select a time period that the backlight remains on, press s > u Settings > i Initial Setup > Backlight. Find it: s > u Settings > b Personalize > Screen Saver To select a screen saver: 1 2 Scroll to Picture or Photo Album and press s. Scroll to the image you want and press s or Select Off to turn off the screen saver. Note: Your phone shows a sample of each highlighted image. more customizing features features ring volume s > u Settings > N Ring Styles > Style Detail > Ringing Volume slide tone color style To choose a Color Style (or skin) that sets the look and feel of your phone's display, press s > u Settings > s > u Settings > b Personalize > Slide Tone keypad volume s > u Settings > N Ring Styles > Style Detail > Key Tone Volume b Personalize > Color Style. 26 customize features reminders Set your phone to play reminder alerts for unread messages, missed calls, or voicemail messages that you receive: features clock view Show or hide a digital clock on the home screen: s > u Settings > b Personalize > Home Screen > Clock menu language s > u Settings > N Ring Styles > Style Detail > Reminders set time and date s > u Settings > i Initial Setup > Language s > u Settings > i Initial Setup > Time and Date slide closed Set your phone to continue or end a task when the slide is closed: master reset features master reset Reset all options except unlock code, security code, and lifetime timer: s > u Settings > i Initial Setup > Slide Closed text layout Set home screen text to be Left Justified, Centered or Off: s > u Settings > i Initial Setup > Master Reset To reset all options, you need to enter the Security Code (default 1234).



[You're reading an excerpt. Click here to read official MOTOROLA MOTOROKR EM25 user guide](http://yourpdfguides.com/dref/5181223)  
<http://yourpdfguides.com/dref/5181223>

*s > u Settings > b Personalize > Home Screen > Layout customize 27 master clear features master clear Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries. This option erases all user-entered information stored in your phone memory, including Contacts entries and downloaded files. Once you erase the information, it cannot be recovered.*

*It resets all options to their factory settings except for the unlock code, security code, and lifetime timer. s > u Settings > i Initial Setup > Master Clear To reset all options, you need to enter the Security Code (default 1234). 28 customize calls To make and answer calls, see page 17. 1 Scroll to an entry. Note: A %next to a call means the call redial a number 1 From the home screen, press N to see a list of recently dialed calls. 2 Scroll to the entry you want to call and press N. 2 connected. Press N to call the number. To see call details (such as time and date), press Options > View. Press Options (left soft key) while viewing a list of recent recent calls Your phone keeps lists of the calls you recently received and dialed, even if the calls didn't connect.*

*The lists are sorted from newest to oldest calls. The oldest calls are deleted as new calls are added. calls to see these options: option View Delete Call View the entry. Delete the entry. Call the entry.*

*Find it: s > q Recent Calls > Received Calls or Dialed Calls calls 29 option Send Message Create a new text message with the number in the To field. Save Block Custom Block List Save the entry in the Phonebook. Block calls from a phone number. View a list of blocked phone numbers. Unblock numbers. call waiting If you receive a second call while you are already on a call: • To answer the second call and put the first call on hold, press N or the Answer soft key. To switch between the calls, press Switch again. • To send the second call to your voicemail, press Ignore. return a missed call When you miss a call, your phone plays an alert, displays the { (missed call) indicator on the home screen. Press View to see the details and press N to call the number. To view your missed calls at any time: quick dial Your phone can store nine phone numbers that you can call with a single key press. To store a quick dial phone number: Find it: s > u Settings > b Personalize > Quick Dial To call a quick dial phone number, press and hold the single-digit quick dial number from the home screen. Find it: s > q Recent Calls > Received Calls To hear a voicemail message, see page 41. 30 calls notepad The most recent set of digits that you entered are stored in your phone's notepad memory. To retrieve a number in the notepad: not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.*

*call times Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing Find it: s > q Recent Calls > Notepad Press N to call the number or press Save to store the number in Phonebook. O. This time includes busy signals and ringing. emergency calls Your service provider programs emergency phone numbers (such as 112 or 911) that you can call under any circumstances, even when your phone is locked. 1 2 Enter the emergency number. Press N. The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly. features set in-call timer Note: Emergency numbers vary by country. Your phone's pre-programmed emergency number(s) may s > u Settings > g In-Call Setup > In-Call Timer calls 31 features call cost setup features hold the call Options > Hold mute the call Options > Mute use Bluetooth Options > Use Bluetooth show contacts Options > Phonebook make another call Options > New Call s > u Settings > g In-Call Setup > Call Cost Setup view call times s > q Recent Calls > Call Time Scroll to Last Call, Dialed Calls, Received Calls, All Calls, or Lifetime, and press Select.*

*in-call menu During a call you access the in-call menu by pressing Options. features show available phone line Options > My Tel Number Scroll to a line and press Select. show dialed calls Options > Dialed Calls show received calls Options > Received Calls 32 calls features show messages headset features auto answer Automatically answer calls when connected Options > Messages show calendar Options > Calendar change dialing prefix Options > Dialing Prefix to a headset: s > u Settings > S Headset & Car Setting > Auto Answer Note: Both mono and stereo headsets are supported for voice only. change volume Press volume keys on the side of the phone up or down to change the headset volume during a call. Note: When listening to music using a Bluetooth stereo device (headset or car stereo), use the volume control keys on the device to increase/decrease music volume calls 33 advanced calling features international calls If your phone service includes international dialing, press and hold 0 to insert your local international access code (indicated by +).*

*Then, press the keypad keys to dial the country code and phone number. call forward Set up or cancel call forward: features speed dial Each Phonebook entry you store is assigned a unique speed dial number. To display the speed dial number allocated to a contact number: s > L Phonebook > entry To speed dial a number, enter the speed dial number and press # then N. restrict calls Restrict outgoing or incoming calls: s > u Settings > g Call Forward s > u Settings > N Security > Call Barring Select Outgoing Calls, Incoming Calls or Cancel All and press Select. When prompted, enter the unlock code (supplied by your service provider) and press OK.*

*34 calls features airplane mode Turn off your phone's calling features in locations where wireless phone use is prohibited. This let's you use the music player and other non-network features while you are on an airplane, without interfering with airplane communications. s > u Settings > % Airplane Mode To reactivate your phone's calling features, turn off airplane mode. calls 35 text entry Some screens allow you to use the keypad to enter text, such as when you compose a message. 2 3 4 Scroll to Input Setup and press s. Scroll to Primary or Secondary and press s. Scroll to one of the following choices and press set entry modes Multiple text entry modes make it easy for you to enter names, numbers, and messages: entry mode Primary Secondary 123 Symbol Enter numbers only (see page 39). Enter text using a method that you set. s: options iTAP™ Let the phone predict each word as you press keys. TAP Enter letters and numbers by pressing a key one or more times.*



[You're reading an excerpt. Click here to read official MOTOROLA MOTOROKR EM25 user guide](http://yourpdfguides.com/dref/5181223)  
<http://yourpdfguides.com/dref/5181223>



To change the text entry mode: Enter symbols only (see page 39). Press # repeatedly in a text entry screen until the desired mode is displayed. To assign a Primary or Secondary text entry mode: 1 In a text entry screen, press Options. 36 text entry To select or edit a text entry mode: Press Options > Input Mode, in a text entry screen, and select the desired entry mode. text entry mode indicators When you select the Primary or Secondary text entry mode, the following indicators identify the text entry setting: primary secondary capitalization Press 0 in any text entry screen to change the text case. These indicators show capitalization status: indicator g h f j k i m q l p n o Tap, no capital letters Tap, capitalize next letter Tap, all capital letters iTAP™, no capital letters iTAP, capitalize next letter iTAP, all capital letters í L ì no capital letters all capital letters capitalize next letter only These indicators identify Numeric or Symbol entry mode: indicator gm [ number mode symbol mode text entry 37 tap method Regular Tap method cycles through the letters and numbers of the key you press. 1 Press a key one or more times to cycle through its characters. 2 Repeat the step above to enter all characters. 1 Press S right or left to scroll through the possible letter combinations, and highlight the combination you want. Press s to enter the highlighted combination.

You can press keys to add more letters to the end of the combination. or Press \* to enter the highlighted combination and insert a space. 2 Tip: Press \* to insert a space. In a text entry screen you can press # to switch entry modes. If Tap is not available as the Primary or Secondary entry mode, see page 36. For example, if you press 7764, your phone displays the corresponding letter combinations: iTAP™ method The iTAP software combines your single key presses into common words, and predicts each word as you enter it. This can be faster than the Tap method. 38 text entry 6 Msg This is a program SMS: 146(1) Press Sup 746 to accept program, press down to reject and continue. prog proh spoi Options Send numeric method In a text entry screen, press # to switch entry methods until your phone displays the gm (numeric) indicator. Press keypad keys to enter numbers. When finished, press # to switch entry modes. ì Abcq delete letters & words Move the cursor to the right of the text you want to delete and then: •• Press v to delete one letter at a time. Press and hold v to delete the entire message. Press S right or left to see other word suggestions. symbol method In the text entry screen, press # to switch entry methods until your phone displays the [(symbol) indicator. 1 Press a key one or more times to show possible symbol combinations at the bottom of the screen. 2 Scroll left or right to highlight a symbol and press s to enter it. text entry 39 messages You can send and receive text (SMS/EMS) and multimedia (MMS) messages, as well as access your voicemail from the Messages feature. Each message type allows you to attach different objects. The available options show in the Insert menu.

Note: Your phone can store a maximum of 750 SMS messages, shared between the Message Inbox, Outbox and Draft folders. 4 3 When you finish typing the message, press Send. Choose one or more people to send to. Press Send (left soft key). quick text Set your home screen to access the t Quick text option so that you can send messages faster. Find it: s > u Settings > b Personalize > Home Screen > send a message Find it: s > g Messages > Create Message 1 Select a message type and enter the message text. 2 To insert a picture, sound, or other object, press Options > Insert or Insert Object. Home keys > Up, Down, Left or Right > Quick TEXT After setup you can quickly access the text entry screen by pressing the navigation key direction you set for t Quick TEXT. 40 messages receive a message When you receive a message, your phone plays an alert, and displays a new message notification on the home screen. Press the View softkey to read the message immediately, or save it in your message inbox for viewing later.

To read messages in your message inbox: When you receive a voicemail message, your phone shows an indicator and New Voice Message. Press Call to call your voicemail. To check your voicemail messages: Find it: s > g Messages > Voicemail > s Note: Your service provider may have assigned speed dial number 1 for calling voicemail and may provide additional information about using voicemail. To set up voicemail Find it: s > g Messages > Message Inbox Scroll to the message you want to read. Press Select to open the message.

For MMS messages, your phone displays the media object, then the message. s > g Messages > Options > Voicemail Setup voicemail Your network stores the voicemail messages you receive. messages 41 more message features features use MMS template Select a preloaded multimedia template: s > g Messages > MMS Templates view sent, received and draft messages s > g Messages > Message Inbox, Outbox or Drafts erase messages Delete all messages or only messages from one folder: s > g Messages > Options > Cleanup Messages Select All, Inbox, Outbox, or Drafts. view the message memory status s > g Messages > Options > Memory Meter > SMS Status or MMS Status 42 messages entertainment music player Use your phone to play MP3, MIDI, AAC, AMR and WAV music file types: Note: Your phone may not play MP3 files that have a bit rate higher than 320 kbps. If you try to download or play one of these files, your phone may display an error message or ask you to delete the file.

Tip: Connect a stereo headset for high quality music playback. From the Music Player, open one of the following: 03:43:00 SHINY TOY GUNS WE ARE PILOTS Find it: s > j Multimedia > Music Library > All Songs > song 2/3 Band Name Track Name tab Now Playing Select the track that is currently playing. All Songs Select a track to show or play songs. Play and manage your playlists. Options Back Playlists Shortcut: Press [ to access Music Library directly. entertainment 43 tab Artists Select an artist to show or play their songs. Albums Select an album to show or play its songs. Genres Select a genre of music to show or play its songs. function rewind Press & hold S left (for at least two seconds). hide Press Options > Hide to minimize the music player turn off Press Back.

music player controls function scroll through song list play/pause/resume fast forward Before music playback, press S up or down. Press s. Press & hold S right (for at least two seconds). next/previous song Press & release S right/left. Tip: You can listen to music as you travel. Use Bluetooth® A2DP enabled devices, such as stereo headphones, for enhanced music quality and use Bluetooth AVRCP enabled devices, such as car stereos, to control playback.



[You're reading an excerpt. Click here to read official MOTOROLA MOTOROKR EM25 user guide](http://yourpdfguides.com/dref/5181223)  
<http://yourpdfguides.com/dref/5181223>

When listening to music using a Bluetooth stereo device (headset or car stereo), use the volume control keys on the device to increase/decrease music volume. playlists Find it: s > j Multimedia > Music Library > Playlists 44 entertainment •• To create a new playlist, press Create new playlist. To select and play a playlist, scroll to the playlist and press Options > Play. Connect: With a memory card inserted and your phone in the home screen, insert the USB cable in your phone and your Windows™ PC.

music playlist options option Play Create New Manage Music Setup View Free Space Play a track or playlist. Make a new playlist. Rename or Delete a playlist. Select Shuffle or Repeat. Note: Your phone operates with Microsoft™ Windows™ XP™ and Windows™ Vista™.

Other operating systems may not be compatible with your phone. Note: For USB cable connection details, see page 57. USB drag and drop: 1 Use the My Computer window to find "Removable Device". 2 Drag and drop music files that you want to save anywhere on the memory card. Note: A file name (including the path) must be less than 255 characters.

For example, if you copy songs into a folder you create that is named "MyMotoSongs, the name of any song PLUS the " View the storage space available. get music Copy music to your phone's memory card. entertainment 45 name of the folder "MyMotoSongs" must be less than 255 characters.. 3 When you're done, use the Safely Remove Hardware feature to finish. • Press S up or down to change the frequency. Press S left or right to scan for preset radio stations. •• Press the up or down volume keys on the side of the phone to adjust the volume. Press s to mute the radio. FM radio Find it: Press and hold [ •Tip: To set the FM radio to play as your alarm sound, press s > m Tools > Alarm Clock and select the FM Radio 88.

2 FM option to choose your favorite channel. set radio presets 1 Options Back Tune in the desired frequency by pressing S up or down, or press Options > Scan to scan for all available radio stations. To use the FM Radio you need to connect a stereo headset to the 3.5 mm headset jack. 2 Press and hold a number key to save that number as the preset. 46 entertainment use radio presets From the main FM radio screen, press a key pad number to jump to a preset station. To manage your station presets: 1 Press Options > Manage Presets to store, rename or delete radio presets. 2 Press S up or down to select a preset. take a photo Press s > j Multimedia > Camera to access the camera, then press s to capture your image. To save your picture, press s.

Note: Slide your phone open to take photos. Storage Location Resolution camera Your camera lens is on the back of your phone (see page 3). To get the clearest pictures, wipe the lens clean with a soft dry cloth before taking a picture. Zoom 1x Options Back Press S up or down to view camera settings. Press S left/right to change selected setting entertainment 47 photo options Before you take your photo, press Options to open the camera menu: options Go to Picture Auto-Timed Capture Switch to the Pictures menu.

Turn the auto-timed capture to 5 sec or 10 sec. Camera Setup Set the Resolution, Quality, Shutter Sound or Status Icon. Switch Storage Store your photos to the Phone Memory and Memory Card. Free Space Shows the Total Space, Used Space and Free Space on your storage device. After you capture your photo, you can press Options to open the Picture Options menu: options Store Only Save the photo and return to the viewfinder.

Discard Discard the photo and return to viewfinder. Apply as Set the photo as a wallpaper (background) image or a screen saver image. Detail Show the photo File Type, File Size and Resolution details. pictures Find it: s > j Multimedia > My Picture Use the My Picture feature to edit or crop your photos. 48 entertainment edit pictures Find it: s > j Multimedia > My Picture > Editor Drawing Mode Pen Step Zoom Setting options Pen Attribution Change the pen mode (mode, color, size, and step). Entry Type Pen Color Zoom In Zoom in on an area of your image. Zoom Out Zoom out to see more of your image. Stamp Options Options Back Creates a small image stamp of your picture. Rotate Rotate your image (Clockwise 90°, Counterclockwise 90° or 180°). Press Options to open and edit your picture.

Picture Size options Open Open an existing picture or take a new one. Save Save your image with a unique file name. Clear Screen Set the dimensions of your image. Remove the current image from the screen. entertainment 49 crop pictures Find it: s > j Multimedia > My Picture > Cropper To crop a stored picture select Pictures. To create a new picture for cropping, select Camera. Press Options to see the Crop menu. options Open Open another stored picture or take a new one with the Camera. Save Crop size Crop shape Save your image Enter the crop size. Select the crop shape.

voice notes Find it: s > j Multimedia > Voice Notes Use the Voice Notes feature to record reminders or voice notes to send in a message. Press s to start and pause recording. When you have finished recording press Stop. Enter a name for your file and press s to save the file. Standby 00:00:00 Options Back 50 entertainment Press Options to open the voice notes menu.

options Open Switch Storage Open a sound clip. Change the storage location of your clips View Free Space View the storage space available on the selected location. WebAccess options option Browser Web Shortcuts Open the Web browser. Open or create shortcut to a Web page. Go To URL Enter a Web page URL (address).

History Access a list of recently viewed Web sites. Web Sessions Web Settings Access a stored Web session. Clear history, reset cache or clear cookies. WebAccess Use your phone to access Web pages. Find it: s > 1 WebAccess open a Web page 1 Scroll to Go to URL and press Select. Enter the Web address, such as www.motorola.com. 2 Press s when complete. entertainment 51 manage bookmarks To see your bookmarks press 1 WebAccess > Web Shortcuts.

To manage your bookmarks press Options to open the bookmarks menu: options New bookmark Edit Go to Erase Add a new bookmark. Edit a bookmark. Open your bookmark. Delete a bookmark. fun & games features play a game s > T Games & Apps manage pictures s > j Multimedia > Pictures manage music and sounds s > j Multimedia > Music Library manage ringtones s > u Settings > N Ring Styles 52 entertainment Note: To access pictures stored on your microSD memory card, press s > j Multimedia > Pictures, then press Options > Switch Storage. Your phone will only recognize pictures stored in the mobile\Picture folder on the memory card. If there are no files stored on your memory card then your phone will automatically switch to its internal memory. entertainment 53 connections Bluetooth® wireless Your phone supports Bluetooth wireless connections with audio devices, such as a handsfree headset or music system.



[You're reading an excerpt. Click here to read official MOTOROLA MOTOROKR EM25 user guide](http://yourpdfguides.com/dref/5181223)  
<http://yourpdfguides.com/dref/5181223>

*Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products. For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.*

@@@ Just turn on the device, or move it near the phone. @@@@

Click on the "Removable Disk" icon to access the memory card.

3 If necessary, in the "Removable Disk" (memory card) window, create one or more folders for the files you will copy onto the memory card. 4 To copy files between your computer and phone, drag and drop into the appropriate folders. 5 When you're finished, remove the device by selecting the "Safely Remove Hardware" icon at the bottom of your computer screen, then select "USB Mass Storage Devices" and "Stop". Use these folders on your memory card for the file types indicated: Note: To help manage your files, you can also create new folders in the existing folders. • music files (MP3, MIDI, AMR, AAC and WAV): use mobile\Music, or place music files anywhere on the memory card (see page 45).

• picture files (JPG, PNG, or BMP): mobile\Picture. Tip: Pictures must be stored in the mobile\Picture folder on the memory card. To find picture files on your phone press s > j Multimedia > Pictures > All Pictures. Press Options > Switch Storage > Memory Card to switch storage location. Note: The maximum single picture file size is 600 kB, 1280 x 1024 pixels. Also, a file name (including the path) must be less than 255 characters. For example, 58 connections if you copy songs into a folder you create that is named "MyMotoSongs, the name of any song PLUS " the name of the folder "MyMotoSongs" must be less than 255 characters USB setting Set your phone's mini USB connection to function as a modem or storage device: Find it: s > u Settings > æ USB > USB Modem or USB Disk Note: Your USB connection must be set to USB Disk before copying files from your PC to your phone (see page 57). connections 59 tools personal organizer features add calendar event features event reminder When an event reminder occurs, press s to view it. Press Exit to dismiss it. copy calendar event Copy a datebook event to another date and/or time: s > m Tools > Calendar Scroll to the day and press s, then scroll to [Add New] and press Select.

view and edit calendar event s > m Tools > Calendar Scroll to the day and press s, then scroll to the event and press Select > Options > Copy. set alarm s > m Tools > Calendar Scroll to the day and press s, then scroll to the event and press Select. s > m Tools > Alarm Clock Tip: Set the FM radio to play as your alarm sound. 60 tools features calculator features edit entry s > m Tools > Calculator convert currency s > L Phonebook Scroll to the entry and press Options > Edit to edit the entry. Scroll up or down and press s to edit fields. Press s to save your changes. s > m Tools > Calculator Press Options and select Convert. phonebook features create entry network features network settings View network information and adjust network settings: s > L Phonebook > [New Entry] delete entry s > u Settings > m Network s > L Phonebook Scroll to the entry and press Options > Delete. tools 61 service & repairs If you have questions or need assistance, we're here to help. Go to www.

motorola.com/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 0800 666 8676 (Argentina), (800-201-442 (Chile), 01-800-700-1504 (Colombia), 01 800 021 0000 (México), 0800-100-4289 (Venezuela), or 0-800-52-470 (Perú). 62 Use and Care Specific Absorption Rate Data SAR Data This model wireless phone meets the government's requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver.

It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg. 1 Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output. Before a phone model is available for sale to the public in the U.S.

and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1,01 W/kg, and when worn on the body, as described in this user guide, is 0,61 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements). 2 While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines. SAR Data 63 Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site: <http://www.phonefacts.net>.

net or the Canadian Wireless Telecommunications Association (CWTA) Web site: <http://www.cwta.ca> 1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue.



[You're reading an excerpt. Click here to read official MOTOROLA MOTOROKR EM25 user guide](http://yourpdfguides.com/dref/5181223)  
<http://yourpdfguides.com/dref/5181223>

The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. 2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product. 64 SAR Data Specific Absorption Rate Data SAR Data This model meets international guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver.

It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear is 0,62 W/kg (850/1900 MHz); 0,67 W/kg (900/1800 MHz) .1 As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user's guide.2 In this case, the highest tested SAR value is 0,43 W/kg (850/1900 MHz); 0,52 W/kg (900/1800 Mhz).1 As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network. While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "handsfree" device to keep the mobile phone away from the head and body. Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>). 1. The tests are carried out in accordance with international guidelines for testing.

The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product. 2. Please see the Safety and General Information section about body worn operation. SAR Data 65 European Union Directives Conformance Statement EU Conformance Hereby, Motorola declares that this product is in compliance with: Approval Number from your product's label in the "Search" bar on the Web site.

•The essential requirements and other relevant provisions of Directive 1999/5/EC •All other relevant EU Directives 0168 Product Approval Number The above gives an example of a typical Product Approval Number. You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at [www.motorola.com/rte](http://www.motorola.com/rte). To find your DoC, enter the Product 66 EU Conformance Important Safety and Legal Information 67 Safety and General Information This section contains important information on the safe and efficient operation of your mobile device.

Read this information before using your mobile device. Safety Information Product Operation When placing or receiving a phone call, hold your mobile device just like you would a landline phone. If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting. Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: [www.motorola.com](http://www.motorola.com). Exposure to Radio Frequency (RF) Energy Your mobile device contains a transmitter and receiver.

When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits. Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy. Operational Precautions For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions. RF Energy Interference/Compatibility Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices. 68 Safety Information Follow Instructions to Avoid Interference Problems Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight. your mobile device with your implantable medical device, consult your healthcare provider.

Driving Precautions The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products. Responsible driving practices can be found in the "Smart Practices While Driving" section in this guide (or separate guide).

Implantable Medical Devices If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device. Persons with implantable medical devices should observe the following precautions: •ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON. •DO NOT carry the mobile device in the breast pocket. •Use the ear opposite the implantable medical device to minimize the potential for interference. •Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.



[You're reading an excerpt. Click here to read official MOTOROLA MOTOROKR EM25 user guide](http://yourpdfguides.com/dref/5181223)  
<http://yourpdfguides.com/dref/5181223>

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using Operational Warnings Obey all posted signs when using mobile devices in public areas. Potentially Explosive Atmospheres Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders. When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire. Safety Information 69 Symbol Key Your battery, charger, or mobile device may contain symbols, defined as follows: Symbol 032374o more information, see the "battery use & safety" section in the user's guide. Definition Important safety information follows. Do not dispose of your battery or mobile device in a fire. Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.

Do not throw your battery or mobile device in the trash. Do not let your battery, charger, or mobile device get wet. Listening at full volume to music or voice through a headset may damage your hearing. Keep Your Mobile Device and Its Accessories Away From Small Children These products are not toys and may be hazardous to children. For example: • A choking hazard may exist for small, detachable parts. • Improper use could result in loud sounds, possibly causing hearing injury. • Improperly handled batteries could overheat and cause a burn. 032376o 032375o Glass Parts Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove.

Stop using your mobile device until the glass is replaced by a qualified service center. Batteries & Chargers Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage, or other hazard. For 70 Safety Information Seizures/Blackouts Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired. • Avoid turning up the volume to block out noisy surroundings. • Turn the volume down if you can't hear people speaking near you. If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at [www.motorola.com/hearingsafety](http://www.motorola.com/hearingsafety) (in English only). Repetitive Motion When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician. [Mar0108] Caution About High Volume Usage Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected. To protect your hearing: • Limit the amount of time you use headsets or headphones at high volume. Safety Information 71 FCC Notice to Users The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is FCC Notice encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and the receiver. • Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. 72 FCC Notice Latin America Warranty, except Mexico Warranty (except Mexico) Latin America Warranty MOTOROLA INC. Subscribers/Cellular Division Through its own service centers and/or its authorized service centers, Motorola provides a 1-year warranty that covers the cellular phone, all its parts and labor against any defect and operation as long as the "Product" has been operated and handled under normal conditions.

The term of 1 year begins when the "Product" is purchased. If additional information is needed, please contact any of our service centers: Motorola de México, S.A. Bosques Alisos No. 125 Bosques de las Lomas CP 05120 México, D.F. Telephone: 257-6700 Conditions 1 For warranty service, return the "Product" and this warranty to the place of purchase or to any Motorola authorized service center. Motorola de Brasil Rua Bandeira, Paulista 580 Sao Paulo, Brazil 05424-010 Telephone: 821-9991 Warranty (except Mexico) 73 Centro de Servicio Motorola de Colombia Diagonal 127A N.



[You're reading an excerpt. Click here to read official MOTOROLA MOTOROKR EM25 user guide](http://yourpdfguides.com/dref/5181223)  
<http://yourpdfguides.com/dref/5181223>