



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA RAZR MAXX V6. You'll find the answers to all your questions on the MOTOROLA RAZR MAXX V6 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual MOTOROLA RAZR MAXX V6  
User guide MOTOROLA RAZR MAXX V6  
Operating instructions MOTOROLA RAZR MAXX V6  
Instructions for use MOTOROLA RAZR MAXX V6  
Instruction manual MOTOROLA RAZR MAXX V6

## Introduction

1

Welcome to the world of Motorola digital mobile communications! We are pleased that you have chosen the **MOTORAZR™** maxx V6 3G mobile phone.

*Note: Your phone may not appear exactly as the phone images below and throughout this manual. However all key locations, sequences, and functions are the same.*

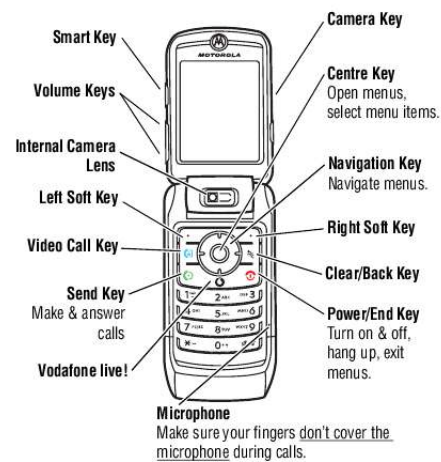

Introduction 1



[You're reading an excerpt. Click here to read official MOTOROLA RAZR MAXX V6 user guide](http://yourpdfguides.com/dref/2712540)  
<http://yourpdfguides.com/dref/2712540>

**Manual abstract:**

@@Centre Key Open menus, select menu items. Navigation Key Navigate menus. @@However all key locations, sequences, and functions are the same.

Introduction 1 v67.2.1 English 1 Bluetooth™ Connection Indicator This appears during Bluetooth connections. External Display See incoming call information, use as camera viewfinder when flip is closed. Volume Keys Scroll and adjust volume. Smart Key Open the audio player, select options, or old to lock/unlock external keys. Accessory Connector Port Insert battery charger & phone accessories.

@@@@@ under licence. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

All other product or service names are the property of their respective owners. © Motorola, Inc., 2006. Software Copyright Notice The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software.

To make your phone light up when you receive calls or messages, see page 59. [www.motorola.com](http://www.motorola.com) Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate as of the date of publication. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, nonexclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While features may be subject to change without notice, every effort is made to ensure that user manuals reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>. 1 Introduction 3 2 Contents Contents Camera .

.....

.....

.....

.....

.....

... 31 Taking and Sending a Photo . .

.....

.....

... 31 Using Photos and Pictures . . . . .

.....

.....

.... 32 Recording Video Clips . . . . .

.....

.....

.... 34 Using Video Clips .

.....

.....

.. 35 Making Video Calls . . .

.....

.....

.... 36 Using and Transferring Files .

.....

.....

..... 39 Playing or Viewing Media Files . . . . .

.....

.....

... 39 Sending Media Files . . . . .

.....

.....

.... 39 Audio Player .

.....

.....

.....

.....

. 40 Connecting Your Phone to Another Device . . . . .

41 Connecting a Memory Card to your computer . . . . . 45 Phone Updates . . . . .

. . . . .  
.....

..... 46 Vodafone live! . . . . .

. . . . .  
.....

..... 47 Vodafone live! . . . . .

. . . . .  
.....

..... 47 Learning to Use Your Phone.

. . . . .  
.....

. 50 Using the Display . . . . .

. . . . .  
.....

..... 50 Using the 5-Way Navigation Key .

. . . . .  
.....

. 52 Using Menus . . . . .

. . . . .  
.....

. . . 53 Smart Key . . . . .

. . . . .  
.....

. . 54 External Display . . . . .

. . . . .  
.....

. 54 Introduction . . . . .

. . . . .  
.....

..... 1 Safety Information . . . . .

. . . . .  
.....

..... 6 Use and Care . . . . .

. . . . .  
.....

. 13 EU Conformance . . . . .

. . . . .  
.....

.. 14 Recycling Information .....

.....

.....

..... 15 Basics ..

.....

.....

.....

.....

..... 16 About This Guide. . .

.....

.....

.....

..... 16 Installing the USIM, SIM, or Memory Card . . . . .

.....

16 Memory Card . . . . .

.....

.....

.....

..... 17 User Memory . . . . .

.....

.....

.....

..... 18 Battery Tips . . .

.....

.....

.....

18 Installing the Battery . . . . .

.....

.....

..... 19 Using Your Charger. . . . .

.....

.....

..... 19 Charging the Battery . .

.....

.....

..... 20 Turning Your Phone On .

.....

.....

.....

..... 20 Adjusting Volume . . . . .

.....

.....

.....

..... 21 Making a Call. . . . .

.....

.....

.....

..... 21 Answering a Call . . . . .

.....

.....

.....

..... 22 Changing the Call Alert . . . . .

.....

.....	22 Viewing Your Phone Number.....
.....	.....
.....	22 Entering Text.....
.....	.....
.....	.....
.. 23 4 Contents Contents Using the Handsfree Speaker...	.....
.....	.....
.....	55 Changing a Code, PIN, or Password.....
.....	.....
.....	55 Locking and Unlocking Your Phone.....
.....	.....
.... 56 If You Forget a Code, PIN, or Password.....	.....
.....	.....
.....	57 Setting Up Your Phone.....
.....	.....
.....	.....
. 58 Storing Your Name and Phone Number.....	.....
.....	.....
.. 58 Setting the Time and Date.....	.....
.....	.....
.....	.....
.... 58 Setting a Ring Style.	.....
.....	.....
.....	.....
. 58 Ring & Event Lights.....	.....
.....	.....
.....	.....
.....	59 Setting a Wallpaper Image...
.....	.....
.....	.....
.....	59 Setting a Screen Saver Image..
.....	.....
.....	.....
.. 60 Setting Display Appearance..	.....
.....	.....
.....	.....
.....	60 Setting Answer Options..
.....	.....
.....	.....
.....	.....
.. 61 Calling Features.....	.....
.....	.....
.....	.....
.....	.....
... 62 Turning Off a Call Alert.....	.....
.....	.....
.....	.....
.....	62 Viewing Call Log...
.....	.....
.....	.....
.....	.....
.....	62 Redialling a Number.....

.....  
.....  
.....  
.. 63 Using Automatic Redial. ....

.....  
.....  
. 63 Returning an Unanswered Call ....  
.....

.... 64 Using the Notepad. ....  
.....  
.....  
.....

.. 64 Putting a Call On Hold or Mute .....  
.....  
.....  
64 2 Using Call Waiting. ....

.....  
.....  
... 65 Using Caller ID ..  
.....

.....  
.....  
... 65 Calling an Emergency Number ..  
.....

..... 66 Dialling International Numbers ....  
.....  
.....  
.... 66 Calling With Speed Dial. ....

.....  
.....  
... 66 Using Voicemail ..  
.....

.....  
.....  
.. 67 Phone Features. . .  
.....

.....  
.....  
.... 69 Navigation Guide.  
.....

.....  
.....  
... 69 Feature Quick Reference ..  
.....

.....  
.. 71 SAR Data. ....  
.....  
.....

.....  
.....  
... 89 WHO Information ..  
.....  
.....

.....  
... 90 Index ...

.....

.....

.....

.....

..... 91 Contents 5 3 IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

1 Safety and General Information 3 Safety Information Safety and General Information 3.2.1 External Antenna Care If your phone has an external antenna, use only the supplied or Motorola-approved replacement antenna.



[You're reading an excerpt. Click here to read official MOTOROLA RAZR MAXX V6 user guide](http://yourpdfguides.com/dref/2712540)  
<http://yourpdfguides.com/dref/2712540>

Unauthorised antennas, modifications, or attachments could damage the phone and/or may result in non-compliance with local regulatory requirements in your country. Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. 3.1 Exposure To Radio Frequency (RF) Energy Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy. 3.2.2 Phone Operation When placing or receiving a phone call, hold your phone as you would a wireline phone. 3.

2 Operational Precautions To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following instructions. 6 Safety Information Body-Worn Operation: Voice Communication 3.2.3 Body-Worn Operation: Voice Communication To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting voice communications, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines.

If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 2.5 centimetres (1 inch) from your body when transmitting. 3.2.3 3.2.5 Approved Accessories Use of accessories not approved by Motorola, including but not limited to batteries, antennas, and convertible covers, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at [www.motorola.com](http://www.motorola.com).

3.3 RF Energy Interference/Compatibility Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference. Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. 3.2.4 Data Operation When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 2.5 centimetres (1 inch) from your body. Safety Information 7 3.

3.1 3rly when placing it inside a pocket, purse, or other container with metal objects. Use only Motorola Original™ batteries and chargers. Caution: To avoid risk of personal injury, do not dispose of your battery in a fire. Your battery, charger, or phone may contain symbols, defined as follows: Symbol 032374o 3.

5.4 Blasting Caps and Areas To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off elect in a microwave oven. dust and dirt Do not expose your phone to dust, dirt, sand, food, or other inappropriate materials. cleaning solutions To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning solutions.

the ground Do not drop your phone. Use and Care 13 5 European Union Directives Conformance Statement 5EU Conformance EU Conformance Hereby, Motorola declares that this product is in compliance with: · The essential requirements and other relevant provisions of Directive 1999/5/EC · All other relevant EU Directives 0168 Product Approval Number The above gives an example of a typical Product Approval Number. You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte). To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site. 14 EU Conformance Recycling Information 6.1 Caring for the Environment by Recycling 6Recycling Information 6 When you see this symbol on a Motorola product, do not dispose of the product with household waste. 6.2 Recycling Mobile Phones and Accessories Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste.

In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details.

If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region. Recycling Information 15 v67.2.1 English 7 7.1 About This Guide 7Basics Basics 7.2 Installing the USIM, SIM, or Memory Card Caution: Do not bend or scratch your card. Avoid exposing your card to static electricity, water, or dirt. Turn off your phone and remove your battery before you install or remove a SIM card.

Your 3G USIM (Universal Subscriber Identity Module) Card contains your phone number, service details, and contacts list/message memory. Your phone can use GSM SIM (Subscriber Identity Module) cards, but not all features will be available. This guide describes the basic features of your Motorola mobile phone. To obtain another copy of this guide, see the Motorola Web site at: [www.hellomoto.com](http://www.hellomoto.com)

com A Quick Start Guide for this product is also available. 7.1.1 Optional Features This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

7.1.2 Optional Accessories This label identifies a feature that requires an optional Motorola Original™ accessory. 1 2 16 Basics v67.2.1 English Memory Card 7.3 Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files. To show the amount of free space on the Memory Card: Find the Feature s > Settings > Phone Status > Storage Devices 3 7.3 Memory Card Insert the Memory Card next to the SIM card.

To remove the memory card, slide it out. The Memory Card provides you with a larger storage capacity than the Phone Memory. When you download pictures, sounds, video clips, or Java applications, they are saved to the Memory Card. Press 1S 2 To highlight the memory card see the memory card information s When you look at a list of files in My Files, the icon next to it shows whether it is stored on your memory card or your internal memory.



[You're reading an excerpt. Click here to read official MOTOROLA](http://yourpdfguides.com/dref/2712540)

[RAZR MAXX V6 user guide](http://yourpdfguides.com/dref/2712540)

<http://yourpdfguides.com/dref/2712540>



= stored on internal memory = stored on memory card Basics 17 v67.2.1 English 7.4 Note: A key over the icon indicates that the file has a copyright lock that keeps you from saving it on external memory, forwarding it, or editing it. If you have a TransFlash removable memory card, the use of an SD adapter allows you to use it in other devices that are compatible with SD cards (for example, digital cameras, laptops, mp3-players). User Memory · New batteries or batteries stored for a long time may take more time to charge.

· When charging your battery, keep it near room temperature. · When storing your battery, keep it uncharged in a cool, dark, dry place. · Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle. · It is normal for batteries to gradually wear down and require longer charging times.

If you notice a change in your battery life, it is probably time to purchase a new battery. Contact your local recycling centre for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode. Before using your phone, please read the battery safety information in the Safety and General Information section included in this guide. 7.

4 User Memory Your phone stores any content that you add, like ringtones or games, in user memory. Your service provider may store some content in user memory before you receive the phone. 7.5 Battery Tips Battery life depends on the network, signal strength, temperature, features, and accessories you use. · Always use Motorola Original batteries and battery chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers. 18 Basics v67.2.1 English Installing the Battery 7.6 Installing the Battery Your phone is designed to use only Motorola Original™ batteries and accessories.

7.6 7.7 Using Your Charger The battery charger shipped with this device is specifically designed for use with Motorola 3G mobile phones. Other chargers might take longer to charge your battery or cause your calls to fail during charging. For best performance, please use the following charger kit with this device: · SPN5193 Charger. 1 2 3 4 Basics 19 v67.2.1 English 7.8 7.8 Charging the Battery New batteries are shipped partially charged.

Before using your phone, please install and fully charge the battery as described below. Some batteries perform best after several full charge/discharge cycles. Action 1 Plug the charger into your phone. Charging the Battery Tip: You can safely leave the charger connected to your phone after charging is complete. This will not damage the battery.

7.9 Turning Your Phone On Action 1 Press and hold for 2 seconds or until the display turns on. 2 2 3 Plug the other end of the charger into the appropriate electrical outlet. When your phone indicates Charge complete, remove the charger. 3 If you want to start in Flight Mode, see "Flight Mode" on page 88 for more details.

If you want to use a User Account, press S to scroll to the User Account you want. Then press the Select key to select the account from the list (stored on the SIM card). Your phone's battery charging indicator lights up while the battery is charging, and turns off when the battery is fully charged. 20 Basics v67.2.1 English Adjusting Volume Action 4 If you are prompted, enter your SIM card PIN code and press the Ok key to unlock the SIM card. Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked. 5 If you are prompted, enter your four-digit unlock code and press Ok key to unlock the phone. Tip: The unlock code is originally set to 1234. Your service provider may change this number before you receive your phone.

6 To turn off your phone, press and hold 2 seconds. for 7.10 · increase or decrease speakerphone volume during a call · turn off an incoming call alert · increase or decrease the ringer volume setting when the home screen is visible Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to cycle back to vibrate alert, then ring alert. To change your ringer volume when your phone is closed, see page 54. 7.11 Making a Call To make video calls, see page 36. Press 1 keypad keys 2 To dial the phone number make the call 7.10 Adjusting Volume Press the up or down volume keys to: · increase or decrease earpiece volume during a call Basics 21 v67.

2.1 English 7.12 Press 3 To end the call and "hang up" the phone when you are finished or to "hang up" close the flip Note: You can make an emergency call even when the phone is locked, or when a SIM card is not inserted (see page 66). Press 2 Answering a Call To end the call and "hang up" the phone when you are finished 7.13 Changing the Call Alert To set your Ring Style, press s > Ring Styles or Settings > Ring Styles (see page 58).

Shortcut: In the home screen, press the volume keys up or down to quickly change your ring style profile. With your phone closed, press a volume key to see your ring style profile, press the smart key to change it, then press a volume key to store the change. Shortcut: Press and hold # to quickly change to silent style. Press and hold # again to change back to previous ring style. 7.

12 Answering a Call When you receive a call, your phone rings and/or vibrates and displays an incoming call message. Press 1 open the flip or answer the call Diverts or divert the call to your voicemail or call divert number, as though your line was busy To 7.14 Viewing Your Phone Number To view your phone number from the home screen, press K #. While you are on a call, press Options > My Tel. Numbers. 22 Basics v67.2.1 English Entering Text Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 58. If you do not know your phone number, contact your service provider.

7.15 7.15.1 Choosing a Text Entry Mode Multiple text entry modes make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode. Press # in any text entry screen to select one of the following entry modes: or Primary Text entry mode can be set to any iTAPTM or tap mode. 7.15 Entering Text Some features require you to enter information. The message centre lets you compose and send text messages. For indicator descriptions, see following section.

Msg SMS:0 or After you enter text press the Send To key to enter recipients. Secondary Text entry mode can be set to any iTAP or tap mode, or set to None if you don't want a secondary entry mode. W Flashing cursor indicates insertion point. Numeric mode enters numbers only.



[You're reading an excerpt. Click here to read official MOTOROLA RAZR MAXX V6 user guide](http://yourpdfguides.com/dref/2712540)  
<http://yourpdfguides.com/dref/2712540>

Symbol mode enters symbols only.

Options Send To Press the Options key to open the sub-menu. Basics 23 v67.2.1 English 7.15.

2 7.15.2 Setting Up a Text Entry Mode To set your primary and secondary text entry modes, press Options > Text Setup in a text entry view, select Primary Text or Secondary Text, and choose: iTAP TAP Tap Extended None Let the phone predict each word as you press keys (see page 27). Enter letters and numbers by pressing a key one or more times. Enter letters, numbers, and symbols by pressing a key one or more times. Hide the Secondary setting (only available for Secondary Setup). Setting Up a Text Entry Mode Text Entry Mode Indicators When you select the Primary Text or Secondary Text entry mode, the following indicators identify the text entry setting: Primary Second. Tap, no capital letters Tap, capitalise next letter only Tap, all capital letters iTAP, no capital letters iTAP, capitalise next letter only iTAP, all capital letters Using Capitalisation Press 0 in any text entry screen to change text case. The following indicators show capitalisation status: = no capital letters only = all capital letters 24 Basics = capitalise next letter Two other indicators identify Numeric (W) or Symbol ( modes. ) entry v67.

2.1 English Using Tap Mode 7.15.3 Using Tap Mode This is the standard mode for entering text on your phone. Regular TAP mode cycles through the letters and number of the key you press. Tap Extended also cycles through additional symbols as shown in the chart on page 26. Press 1 A keypad key one or more times 2 keypad keys To select a letter, number, or symbol Options Send To Block cursor indicates highlighted character. After 2 seconds, character is accepted and cursor moves to next position. Msg SMS:4 7.15.

3 T Press K to delete character to left of insertion point. Press the Send To key to enter the recipient. enter remaining characters Tip: Press S right to accept a word completion, or \* to insert a space. Press the Options key to open the sub-menu. In a text entry screen, you can press # to switch entry mode.

If you don't see Vg or Vm then press Options > Text Setup to set tap mode as your primary or secondary text entry mode. To enter text in tap mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter. When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter prog you might see: Basics 25 v67.

2.1 English 7.15.3 Character Chart Flashing cursor indicates insertion point. Msg SMS:4 Using Tap Mode This is a prog ram Press S right to accept program, or press \* to reject it and enter a space after prog. Use this chart as a guide for entering characters with Tap Extended. 1 2 3

?!,@' \_-:;& " ~10; j ^ % £ \$ ¥ ¤ ¤ + x \* \ [ ] = > < # \$ abc2áàäääç def3éèëë ghi4íî jkl5 mno6ñóòôöøoe pqrs7 tuv8úûüü wxyz9 change text case, for capital letters enter a space (hold to enter a return) change text entry mode (hold for default) Options Send To If you want a different word (such as progress), continue pressing keypad keys to enter the remaining characters. · Press S left or right to move the flashing cursor to the left or right in a text message. · The first character of every sentence is capitalised.

If necessary, press S down to force the character to lowercase before the cursor moves to the next position. · If you enter or edit information and do not want to save the changes, press to exit without saving. 4 5 6 7 8 9 0 \* # 26 Basics v67.2.1 English Using iTAPTM Mode Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor, I first shows common characters for that editor. 7.15.4 For example, if you press 7764, letter combinations that match your key presses display: Press S down to see a list of word options. Msg SMS:4 Press S up to accept Program, or press \* to enter Prog and a space.

7.15.4 Using iTAPTM Mode Press # in a text entry view to switch to iTAP mode. If you don't see or , press Options > Text Setup to set iTAP mode as your primary or secondary text entry mode. iTAPTM software provides a predictive text entry mode that lets you enter a word using one keypress per letter. This can be faster than TAP, because your phone combines the keypresses into common words. Tip: Your phone has a text tutorial which should help you with any problems. Find the Feature Options > Text Setup > Text Tutorial Prog ram Press Options key to open message options. Options Send To Press Send To key when the message is complete. · If you want a different word (such as Progress), continue pressing keypad keys to enter the remaining characters. · To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode. · Press 1 to enter punctuation or other characters. Basics 27 v67.2.1 English 7.15.4 Entering Words In a text entry screen, you can press # to switch entry modes. An indicator shows which mode is active (see page 24).

If iTAP mode is not available as the Primary Text or Secondary Text entry mode, see page 24. Press 1 keypad keys (one press per letter) To show possible letter combinations If alternative combinations are available then an arrow appears below the letters. 2 Press 4 S left 5 Using iTAPTM Mode To move the cursor back one letter select a word You can press keypad keys to add more letters to the end of the combination. or s \* enter the highlighted combination when it spells a word A space is automatically inserted after the word. S up or down go to the previous or next available predicted words Press and hold S up or down to display a popup window showing the next four predicted words. You can scroll up and down through this list and then press Select to accept the highlighted word. If you enter a word your phone does not recognise, the phone stores it to use as one of your word options. When you fill memory space for unrecognised words, your phone deletes the oldest words to add new words. 3 28 S right Basics accept the predicted word v67.2.

1 English Using Numeric Mode 7.15.5 Using Numeric Mode In a text entry screen, press # to switch entry modes until the W (Numeric) indicator displays. Press keypad keys to enter the numbers you want. When you finish entering numbers, press # to switch to another entry mode.

Press 1 S left, right, up or down 2 3 7.15.5 To highlight the symbol you want view more symbols enter the highlighted symbol S down s or the corresponding number key 7.15.6 Using Symbol Mode In a text entry screen, press # to switch entry modes until the (Symbol) indicator displays.



[You're reading an excerpt. Click here to read official MOTOROLA](http://yourpdfguides.com/dref/2712540)

[RAZR MAXX V6 user guide](http://yourpdfguides.com/dref/2712540)

<http://yourpdfguides.com/dref/2712540>

Msg 450 \* # enter a space (hold to enter a return) change text entry mode (hold for default) 7.15.7 Deleting Letters and Words .? ,@ -\_! ` : Place the cursor to the right of the text you want to delete, and then: Action Press K to delete the last letter. Send To Options Press and hold K to clear the entire message. Basics 29 v67.2.1 English 7.15.8 7.

15.8 Copying, Cutting, and Pasting Text From a text entry screen: Find the Feature Option Copy Text Cut Text Copy All Text Cut All Text Paste Undo Options > Editing Options Copying, Cutting, and Pasting Text · Copy All Text also displays in the menu (press Options) when you are viewing details for a Contacts entry, Calendar event, Vodafone live! page, text message, or Calls entry. Highlighting Text Description Copy the text you are about to highlight (see "Highlighting Text" on page 30). Cut the text you are about to highlight (see "Highlighting Text" on page 30). Copy all text in the editor. Cut all text in the editor. Paste the text you cut or copied. Undo the last copy, cut, or paste in the current text editor. 2 3 4 Note: · Paste only displays once you have cut or copied some text. · Undo only displays once you have cut, copied or pasted some text.

30 Basics Start key In a text editor, to highlight and copy or cut text: Find the Feature Options > Editing Options > Copy Text or Cut Text To scroll to the beginning of the text you want to copy or cut turn on the highlighting marker scroll to the end of the text you want to copy or cut copy or cut the text you selected You can now paste the text in another location or file. Press 1S S Copy key or Cut key Text remains on your clipboard, available to paste, until you copy or cut other text or until you turn off your phone. v67.2.1 English Camera You can do much more with your phone than make and receive calls! This section describes your phone's camera and video camera features.

8Camera 8 Point the camera lens at the photo subject. Press 1 s or the camera key To take a photo Tip: Press \* to turn the light on or off store the photo 8.1 Taking and Sending a Photo To activate your phone's camera, press the camera key on the top right side of your phone (see page 1 for exact location), or select the camera icon on the main menu. The active viewfinder image displays. Press S up or down to scroll through available options. Press S left or right to set value for available options. Press S to display the image options. 2 Options > Store Only or Options > Send or Send key or Options > Discard send the photo in a message delete the photo and return to active viewfinder Area display image options Options Open the Pictures Menu. Back Go back to previous screen Note: If you select Store Only you can select Print and Store to print the picture over a Bluetooth connection, see page 42. Camera 31 v67.2.1 English 8.1.1 Press Options to open the Pictures Menu when the camera is active. The menu can include the following options: Option Go To Pictures Go To Video Mode Internal View/ External View Light On/Light Off Description View pictures and photos stored on your phone.

Capture and view videos stored on your phone. Switch between the internal (selfportrait) and external cameras. Turn the camera light on and off. Note: The light stays on until you take a picture, receive a phone call, or select Light Off. Set a timer for the camera to take a photo. Open the setup menu to adjust picture and video settings. Choose to store and see pictures on your phone or memory card. View memory space available for storing pictures. Self Portrait Tip: To assign a stored picture to a contacts entry, open the entry and press Options > Edit Contact > Picture. You cannot assign pictures to entries stored on your SIM card.

8.1.1 Self Portrait If you close your phone while the viewfinder is active, the external display shows the image. Press the volume keys to zoom, or press the camera key to capture and store the image. 8.

2 Using Photos and Pictures You can send your photos to other mobile phone users or email addresses, assign photos to specific contacts entries, and use them as wallpaper or screen saver images. Auto-Timed Capture Camera Setup Switch Storage Device Free Space 8.2.1 Downloading Pictures Your phone may contain predefined photos, pictures, and animations. You can download and store additional images on your phone.

If you are unable to establish a network connection with Vodafone live!, contact your service provider. 32 Camera v67.2.1 English Viewing and Managing Pictures Note: The files that you download or receive as attachments might have a copyright lock that keeps you from forwarding them. To download a picture from Vodafone live!, see page 47. To store a picture from a message, see page 74. Press 3S or Options 8.2.2 To view the next/previous picture open the Pictures Menu to perform other options 8.2.

2 Viewing and Managing Pictures Note: Some files might have a copyright lock that keeps you from saving them on external memory, forwarding them, or editing them. To view a photo, picture, or animation stored on your phone: Find the Feature Press 1 S up or down 2 Tip: You can change the way your picture list displays using the Pictures Setup option in the Pictures Menu. Press Options to open the Pictures Menu from the picture list. The menu can include the following options: Option View Description Details: View picture information. View Free Space: View memory space available for storing pictures. Add picture to your album. Capture a new picture or create an album of stored pictures. Filter pictures by Storage Location. Insert selected picture in a new message. Camera 33 s > My Files > Pictures To scroll to the picture view the picture Press and hold s to go to full screen view.

Press and hold s to return to normal view. s Add to Album Create New Filter by Send v67.2.1 English 8.3 Option Apply As Print Print Index Manage Select Multiple to Properties Pictures Setup Description Set the picture as your phone's Wallpaper or Screen Saver, or a Contacts.

Print the picture. Details of printed pictures. Select from Rename, Delete, Move or Copy To for the current picture. Select more than one picture to Add to Album, Delete, Move, Copy or Print. This lists the name, size, type, resolution, date stored.

Open the setup menu to adjust picture and video settings. Recording Video Clips 8.3 Recording Video Clips To record a video on your phone: Find the Feature s > Camera > Options > Go To Video Mode The active viewfinder image displays. Note: Your phone's external camera light blinks during a video call, to let people around you know that they might be in your video. Press S up or down to scroll through available options. Press S to display the video options. VIDEO CLIP AREA Note: Send and Manage are only available for photos you have taken or pictures you have downloaded.



[You're reading an excerpt. Click here to read official MOTOROLA](http://yourpdfguides.com/dref/2712540)

[RAZR MAXX V6 user guide](http://yourpdfguides.com/dref/2712540)

<http://yourpdfguides.com/dref/2712540>

Press S left or right to set value for available options. Area displays video options Options Open the Videos Menu. Back to previous screen.

Back 34 Camera v67.2.1 English Using Video Clips Note: The number of clips remaining is only an estimate. Point the camera lens at the video subject, then: Press 1 s or the camera key 2 3 Stop key Options > Store Only or Send key or Options > Discard delete the video and return to active viewfinder to send the video in a message To start the video Tip: You can press the Pause key to pause video capture. stop the video to store the video To play a stored video, see page 35. Switch Storage Device Free Space 8.4 Press Options to open the Videos Menu when the camera is active. The menu can include the following options: Option Go To Videos Go To Photo Mode Internal View/ External View Videos Setup Description View videos stored on your phone. Capture and view photos stored on your phone. Switch between the internal (selfportrait) and external cameras.

Open the setup menu to adjust picture and video settings. Choose to store and see videos on your phone or memory card. See how much memory remains for storing videos. 8.4 Using Video Clips You can download video clips with Vodafone live!, and receive video clips in multimedia messages.

Camera 35 v67.2.1 English 8.4.1 8.

4.1 Downloading Video Clips To download a video clip with Vodafone live!, see page 47. To store a video clip from a message, see page 74. Option Create New Properties Videos Setup Downloading Video Clips Description Capture a new video. This lists the name, size, type, resolution, dated stored. Open the setup menu to adjust video settings. 8.4.2 Viewing and Managing Video Clips To play a video clip stored on your phone: Find the Feature Press 1 S up or down 2 s > My Files > Videos 8.5 Making Video Calls To scroll to the video clip start video clip playback s With your phone you can make a video call to someone else who has a video phone and see each other while you talk.

Please note that both parties participating in the video call have to be on the 3G network and in the 3G coverage area. During video clip playback, press Options to open the Videos Menu to perform various operation on the video: Option Play Full Screen Description Stretch the video to fill the display. Tip: A video can also be viewed in full screen by pressing the key #. Listen via Bluetooth Choose to enable Bluetooth to listen to your videos. 8.5.1 Making a Video Call A quick guide to making a video call: Press 1 keypad keys 2 3 To dial the phone number make the call end the call and "hang up" the phone when you are finished 36 Camera v67.2.1 English Making a Video Call Options During an Active Video Call Swapping Views Press Swap View To swap between the primary and the secondary video area during a video call 8.5.

1 You can also send and receive messages during a video call or start a new video call. Video Call Menu Find the Feature Options > Video Call Menu Some of the options accessed from the Video Call Menu during an active call include the following: Press More Apps To access applications during an active call, such as Contacts, Calendar or Vodafone live! adjust the brightness/contrast level of the display. This does not affect the outgoing video image. change whether you want the camera to be on or off if the camera is on, select the view from which the image is captured. During an active video call, there are two video areas on your phone display.

The primary video area shows your image (or the selected Camera Off Image) and the secondary video area shows your recipient's image. You can swap between the video areas to place your image onto the secondary video area, and the recipient's image onto the primary video area. Selecting Applications Press More Apps To access other applications during a video call Brightness/Contrast Camera On/Camera Off External View/Internal View During an active video call, you can access other applications, such as Contacts, Calendar, My Files or Vodafone live! Camera 37 v67.2.1 English 8.

5.2 Press Swap View To change between the primary and secondary video area on your phone display if the camera is off, put audio on hold to be able to e.g. change different image as your Camera Off Image. Select Resume to return to the Video Call Menu. stop sending video image temporarily. Select Unmute Audio to resume sending the video image choose to enable Bluetooth. display your telephone number from the home screen. Recording a Video Call You can record a video call as a video clip. During a video call: Press 1 Options > Record To start recording the call Your phone displays Recording.

It records incoming video and incoming and outgoing audio. stop recording and store the video clip The recording stops automatically if the call ends or you reach your video capture or memory limit. To view the video clip see page 35. Note: Video recording requires video compatibility with the other caller's video phone. Hold/Resume 2 Options > Stop Audio Mute/Unmute Audio Use Bluetooth My Tel. Number 8.5.2 Recording a Video Call Note: Recording of phone calls is subject to varying country laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature. 38 Camera v67.

2.1 English Using and Transferring Files You can store, send, and play music, videos, and other media files on your phone. 9Using and Transferring Files 9 9.1.1 Viewing a full screen picture To view a picture without any icons showing on the screen: Press To view as full screen scroll through all the pictures as full screen return to normal view 9.

1 Playing or Viewing Media Files To play music: Find the Feature s and hold S left or right s and hold s > My Files > My Music and select the file you want to play For more about playing music files, see page "Audio Player" on page 40. To play or view other media, follow the instructions above but replace My Music with the type of media you want. Tip: You can listen to tunes on your way. Use flight mode to make your phone safe to use even while you're on a plane. See page 88.

9.2 Sending Media Files To send music: Find the Feature s > My Files > My Music Highlight the file you want to send and press Options > Send > in Message. To send other media, follow the instructions above but replace My Music with the type of media you want. Using and Transferring Files 39 v67.2.1 English 9.2.1 9.2.1 Create a Playlist Find the Feature Press S up or down Create a Playlist To change volume continue playing s > My Files > My Music > Playlists > [Create New Playlist] S up Open a song list, and press the centre key s to select each song you want.

After you press the Done key, enter a name for your list. To hear your playlist, highlight it under Playlists and press Options > Play.



[You're reading an excerpt. Click here to read official MOTOROLA RAZR MAXX V6 user guide](http://yourpdfguides.com/dref/2712540)  
<http://yourpdfguides.com/dref/2712540>

Hide the audio player by pressing Options > Hide. This lets you use other phone features while the song plays. Press S up or down to highlight an option: Option Back Lock Keys Playlists Artists Albums Songs Exit Description Takes you back to the previous menu screen. Enables external key lock. Create or play a playlist. Select an artist to show or play their songs. Select an album to show or play its songs. Select songs to show or play the songs. Takes you out of My Music. 9.3 Audio Player You can't use the audio player with a USB cable connected to your phone. Find the Feature s > Music/My Files > My Music > All Tracks select the file you want to play Press s S left or right 40 To play or pause skip back or forward Using and Transferring Files v67.2. 1 English Play Music With Your Phone Closed To download songs to your phone, see page 49. To copy files between your phone and a computer, see page 41. Note: Your phone cannot play MP3 files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file. Metadata information is not supported for MP4 formatted files.

9.3.1 You can also use touch-sensitive music controls on the front of the phone: Press To Previous track Play/pause Next track 9.3.1 Play Music With Your Phone Closed You can close your phone while you listen to music. When your phone is closed, the external display shows the song artist, title, and time. To control your music playback: · Press the volume keys to adjust the volume. · Press the smart key to open the audio player menu. Press the volume keys to scroll through the menu, and press the smart key to select a menu item. · Press and hold the smart key to lock or unlock the side keys.

· The controls close after 4 seconds, if you don't use them. 9.4 Connecting Your Phone to Another Device You can connect your phone to a computer or handheld device using a USB cable or a Bluetooth connection. Note: Not all devices are compatible with all types of connections. Check your external device for specifications. The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products. To make data calls through a connected computer, see page 83. Using and Transferring Files 41 v67.2.

1 English 9.4.1 9.4.1 Setting Up a Cable Connection Attach a Motorola Original™ USB cable to the phone and external device as follows. Note: Check your computer or hand-held device to determine the type of cable you need. Action 1 Plug the end of the cable with the Motorola logo into the phone's accessory connector port. Make sure that the logo and the phone are both facing you. @@@@ Just turn on the device or move it near the phone. @@@@ Tip: Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

s > Connectivity > Bluetooth > [Add Audio Device] Your phone lists the devices it finds within range. Highlight a device in the list and: Press 1 Select 2 3 Yes or Ok keypad keys To select the device pair with the device enter the device passkey (such as 0000) if necessary, and then press the Ok key Copying Objects to Another Device You can use Bluetooth pairing to copy a media object, contacts entry, calendar event, or bookmark from your phone to a computer or other device. Note: You cannot copy a copyrighted object. 1 2 On your phone, highlight the object you want to copy to the other device. @@@@ Note: You cannot print message Templates or a contacts Mailing List. @@@@ In the Calendar, you can print the month, week or day. If available, choose additional objects or print options. @@@@ You can access your phone's memory card with a PC. @@@@ This directs the USB connection to your memory card. @@@@ Then select 'USB Mass Storage Devices' and 'Stop'.

@@@@ settings. @ Visit www.vodafone.com for additional information about the services Vodafone live! offers. To connect to the Vodafone live! service, press the Vodafone live! key on your handset. If you have any problems connecting to Vodafone live!, please contact Vodafone. Find the Feature Press or to connect > Vodafone live! > Vodafone live! You can also download pictures, videos, ringtones and games from Vodafone live! and install them on your phone. The Vodafone live! service allows you to access Web pages and Web-based applications on your phone. If necessary, please contact Vodafone to configure your phone. Your phone will use a High Speed Downlink Packet Access (HSDPA) 3G broadband connection or a 3G connection when available. These connections bring improved quality, sound, pictures and videos, as well as increased speed when downloading games and ringtones. The HSDPA connection is indicated by an indicator and the 3G connection by an indicator. Note: The availability of HSDPA may depend on the coverage at your location and/or your service provider. Alternatively, your phone may use a high-speed General Packet Radio Service (GPRS) network connection. This type of connection is identified by a (GPRS) indicator in the Vodafone live! 47 s You have the following options while browsing: Option Enter URL Shortcuts Saved Pages History Description Go to the live! Homepage Go to a requested page.

View a list of shortcuts you have created. View a list of pages you have saved. View a list of recently viewed pages. v67.2.

1 English 10.1.1 home screen that disappears when you start Vodafone live!. If you see an (in-call) indicator during a Vodafone live! session, your phone is using a standard voice connection. The type of network connection your phone uses depends on your service provider's network. Your network connection charges may vary depending on the type of connection used. Note: Some features on your phone might open Vodafone live! automatically. Starting Vodafone live! Shortcut: If you open a text message with a Web address (URL) embedded in it, you can press s > Go To to launch Vodafone live! and go directly to the URL. If you are unable to establish a network connection with Vodafone live!, contact your service provider. 10.

1.2 Interacting With Web Pages Press S up or down Select key keypad keys, followed by the Ok key To scroll through text, or highlight a selectable item select the highlighted item enter information Tip: If you make a mistake, press K to delete the last letter, or press and hold K to clear all letters. go back to the previous page open the Browser Menu 10.1.1 Starting Vodafone live! Press 1 or Press s > Vodafone live! > Vodafone live! 2 3 To start Vodafone live! S up or down Select key scroll to a shortcut, service or application select the item Back key Options 48 Vodafone live! v67.2.1 English Downloading Objects From a Web Page 10.1.3 Downloading Objects From a Web Page You can download pictures, sounds, or other objects from a Web page by selecting the link.



[You're reading an excerpt. Click here to read official MOTOROLA RAZR MAXX V6 user guide](http://yourpdfguides.com/dref/2712540)  
<http://yourpdfguides.com/dref/2712540>

You can store media objects on your phone, and use them as wallpaper images, screen saver images and event alerts.

@@@. To end a download in progress, press . @@@@messages. Allow all Vodafone live! messages. Allow only Vodafone live! @@in the Background Some phones are set up to run Vodafone live! in the background when the phone registers with a network. @@These types of services Vodafone live! @@For soft key locations see page 1.

The following status indicators can display: 4. Roam 3. Data 2. GPRS 6. Ring Style 5.

@@You must be in the home screen to dial a phone number. To dial a number from the home screen, press the number keys and . Press S right to see more news, if available. Clock Right Soft Key Label 1. @@@@Press the left soft key or right soft key to 50 Learning to Use Your Phone 1. Signal Strength Indicator Vertical bars show the strength of the network connection. You cannot make or receive calls when the (no signal) indicator or (no transmit) indicator is displayed. v67.2.1 English Using the Display 2.

GPRS Indicator Shows that your phone is using a high-speed General Packet Radio Service (GPRS) network connection. GPRS allows faster data transfer speeds. Indicators can include: = GPRS PDP context activate = GPRS packet data available 3. Data Transmission Indicator Shows connection and data transmission status. Indicators can include: = secure packet data transfer = secure application connection = unsecure packet data transfer = unsecure application connection = GPRS attach = secure Circuit Switch Data (CSD) call = Bluetooth™ connection is active 4. Roam Indicator 11.1 = unsecure CSD call Shows when your phone is seeking or using another network outside your home network. Indicators can include: = HSDPA home = 3G home = 2.5G home = 2G home = HSDPA roam = 3G roam = 2.5G roam = 2G roam Learning to Use Your Phone 51 v67.

2.1 English 11.2 5. Message Indicator Displays when you receive a new message. Indicators can include: = text message = voice and text message 6. Ring Style Indicator Shows the ring style setting. = loud ring = vibrate and ring = vibrate 7. Battery Level Indicator Vertical bars show the battery charge level. Recharge the battery when Low Battery displays and the battery alert sounds. = soft ring = vibrate then ring = silent = voicemail message Using the 5-Way Navigation Key 11.

2 Using the 5-Way Navigation Key Use the 5-way navigation key (S) to scroll up, down, left, or right in the menu system. Press the centre of the key (s) to select a highlighted menu item. 52 Learning to Use Your Phone v67.2.1 English Using Menus 11.3 Using Menus From the home screen, press s to enter the main menu. Name of Highlighted Menu Feature Icon 11.3 Icon Feature Entertainment Vodafone live! Music Camera Messaging Select Back Icon Feature Organiser & Tools Contacts Alarms Connectivity Calls Settings Select highlighted menu feature. Messaging My Files Scroll up, down, left, or right. Press centre to select highlighted menu feature.

11.3.1 Selecting a Menu Feature To select a menu feature, starting from the home screen: Exit any menu without making changes. Find the Feature s Calls > Options > Filter by > Dialed Numbers Press S to scroll to and highlight a menu feature icon in the main menu. The following icons may display in the main menu, depending on your service provider and service subscription options. This example shows that from the home screen, you must press s to open the menu, highlight and select Calls > Options > Filter by > Dialed Numbers, then highlight and select the call. Press the navigation key (S) up, down, left or right to highlight items, and press it in (s) to select items. Press Learning to Use Your Phone 53 v67.2.1 English 11.

3.2 the left/right soft keys to select the functions listed in the bottom left and right corners of the display. Selecting a Feature Option · When an option has a list of possible values, press S left or right to scroll through and select a value. · When an option has a list of possible numeric values, press a number key to set the value. 11.

3.2 Selecting a Feature Option Some features require you to select an option from a list: Dialed Numbers 10] John Smith 9] Lisa Owens 8] Adda Thomas 7] Jack Bradshaw 6] Dave Thompson 5] John Smith 4] John Smith 3] John Smith Options Back Press S to scroll down to other options. 11.4 Smart Key The smart key gives you another way to do things. For example, when you highlight a menu item, you can press the smart key to select it (instead of pressing s).

The smart key usually does the same thing as s. To find the smart key, see page 1. To change what the smart key does in the home screen, see page 80. Highlighted Option Press the Options key to see the sub-menu 11.5 External Display · Press S to scroll up or down to highlight the option you want. · In a numbered list, press a number key to highlight the option. · In an alphabetised list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option. 54 Learning to Use Your Phone When you close your phone, the external display shows the time, date, status indicators, and notifications for incoming calls and other events. After your phone is inactive for a while, the display shows only a clock. For a list of phone status indicators, see page 50.

To set the phone ring style in the external display: 1 Press a volume key to see Ring Styles. v67.2.1 English Using the Handsfree Speaker 2 3 Press the smart key repeatedly, until the style you want appears. Press a volume key to return to the home screen. 11.6 11.7 Changing a Code, PIN, or Password Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone. If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information.

The unlock code must contain 4 digits, and the security code must contain 6 digits. You can also reset your SIM card PIN code or PIN2 code, if necessary. Your Personal Identification Number (PIN) code protects the information stored on your SIM card. To change a code or password: Find the Feature 11.6 Using the Handsfree Speaker When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press the Speaker key to turn the handsfree speaker on or off during a call. When you turn the handsfree speaker on, your phone displays Speakerphone On in the home screen. The handsfree speaker remains on until you press the Speaker key again or turn the phone off. Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory. s > Settings > Security > New Passwords Learning to Use Your Phone 55 v67.



[You're reading an excerpt. Click here to read official MOTOROLA RAZR MAXX V6 user guide](http://yourpdfguides.com/dref/2712540)  
<http://yourpdfguides.com/dref/2712540>

2.1 English 11.8 11.8 Locking and Unlocking Your Phone You can lock your phone manually or set the phone to lock automatically whenever you turn it off. To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer. Locking and Unlocking Your Phone At the Enter Unlock Code prompt: Press 1 keypad keys 2 Ok key To enter your unlock code unlock your phone You can make emergency calls on your phone even when it is locked (see page 66). 11.8.3 Setting Your Phone to Lock Automatically You can set your phone to lock every time you turn it off: Find the Feature 11.

8.1 Locking Your Phone Manually Find the Feature s s > Settings > Security > Phone Lock > Lock Now Press 1 keypad keys 2 Ok key > Settings > Security > Phone Lock > Automatic Lock > On Press 1 keypad keys 2 Ok key To enter your unlock code lock the phone To enter your unlock code activate automatic lock 11.8.2 Unlocking Your Phone Your phone's unlock code is originally set to 1234. Many service providers reset the unlock code to the last 4 digits of your phone number. 56 Learning to Use Your Phone v67.2.1 English If You Forget a Code, PIN, or Password 11.9 If You Forget a Code, PIN, or Password Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Many service providers reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, at the Enter Unlock Code prompt: Press 1s 2 3 keypad keys Ok key To display the unlock code bypass screen enter your 6 digit security code submit your security code 11.9 If you forget your security code, SIM card PIN code or PIN2 code, contact your service provider. Learning to Use Your Phone 57 v67.2.

1 English 12 12.1 Storing Your Name and Phone Number 12Setting Up Your Phone Setting Up Your Phone To synchronise the time and date with the network, press s > Settings > Initial Setup > Time and Date > Autoupdate > On. To manually set the time and date, turn off Autoupdate, then, press s > Settings > Initial Setup > Time and Date > time or date. To choose an analogue or digital clock for your home screen, press s > Settings > Personalise > Home Screen > Clock. To turn the date on or off on your home screen, press To store or edit your name and phone number information on your SIM card: Find the Feature s > Settings > Phone Status > My Tel.

Numbers Shortcut: Press K # from the home screen to view or edit your name and phone number. Tip: If you want to see your phone number while you are on a call press Options > My Tel. Numbers. If you do not know your phone number, contact your service provider. s > Settings > Personalise > Home Screen > Date. 12.3 Setting a Ring Style Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an alert. You can select one of five different ring styles. The ring style indicator in the display shows the current ring style (see page 52).

To set a ring style: Find the Feature 12.2 Setting the Time and Date Your phone uses the time and date for the Calendar. Find the Feature s > Settings > Initial Setup > Time and Date s > Settings > Ring Styles > Style: style name 58 Setting Up Your Phone v67.2.1 English Ring & Event Lights Press 1 S up or down 2 Select key To scroll to the ring style select the ring style 12.4 12.4 Ring & Event Lights Your phone has lights on the outside that can pulse for incoming calls or messages. To set the light for your incoming calls, press s > Settings > Ring Styles > Ring Lights. To set the light for your incoming messages, press s > Settings > Ring Styles > Event Lights. Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press s > Settings > Ring Styles > style Details. · If you select the Silent ring style, your phone will not use Auto Answer (see page 83). · Java™ applications can make your phone vibrate or light up. You can turn off App Vibration and App Backlight under s > Settings > Java Settings. · To change your ringer volume when your phone is closed, see page 54.

· To turn off alerts for messages that arrive during a call, select s > Settings > In-Call Setup > MSG Alert > Not in Call. 12.5 Setting a Wallpaper Image You can set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image displays as a faint watermark in text and menu displays. When you set an animation as a wallpaper image, only the first frame of the animation displays.

Find the Feature s > Settings > Personalise > Wallpaper Setting Up Your Phone 59 v67.2.1 English 12.6 Setting Picture Description Select the picture or animation for the background image in your home screen, or None for no wallpaper. Select: Centre to centre the image on the display Tile to repeat the image across the display Fit-to-screen to stretch the image across the display. Setting a Screen Saver Image fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays. Find the Feature s > Settings > Personalise > Screen Saver Layout Setting Picture Delay Description Select the picture or animation for your screen saver or None for no screen saver. Select how long your phone must be inactive before the screen saver picture displays. Note: If this setting is longer than your Display Timeout setting, then your display will turn off before you see the screen saver.

12.6 Setting a Screen Saver Image The screen saver image displays when the phone is on and no activity is detected for a specified time period. Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver. You can set a photo, picture, or animation as a screen saver image. The screen saver shows when the flip is open and no activity is detected for a specific time. The image shrinks to 12.7 Setting Display Appearance To choose a phone skin that sets the look and feel of your phone's display: Find the Feature s > Settings > Personalise > Skin 60 Setting Up Your

Phone v67.2.1 English Setting Answer Options To set your display brightness: Find the Feature 12.

8 12.8 Setting Answer Options s > Settings > Initial Setup > Brightness You can use different ways to answer an incoming call. To turn on or turn off an answer option: Find the Feature You can set the amount of time that the display and keypad backlights remain on, or turn off backlights to extend battery life.



[You're reading an excerpt. Click here to read official MOTOROLA RAZR MAXX V6 user guide](http://yourpdfguides.com/dref/2712540)  
<http://yourpdfguides.com/dref/2712540>