




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA W418G. You'll find the answers to all your questions on the MOTOROLA W418G in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MOTOROLA W418G
User guide MOTOROLA W418G
Operating instructions MOTOROLA W418G
Instructions for use MOTOROLA W418G
Instruction manual MOTOROLA W418G

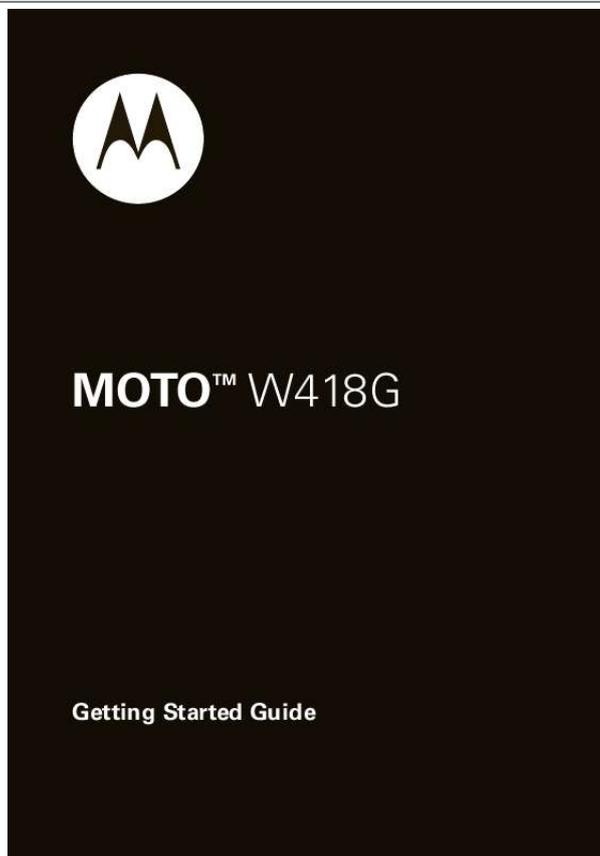

[You're reading an excerpt. Click here to read official MOTOROLA W418G user guide](http://yourpdfguides.com/dref/3809556)
<http://yourpdfguides.com/dref/3809556>

Manual abstract:

Search, browse, everything you want to do, all made easier. @@You may be surprised at what you discover. @@@@Note: Your phone might look a little different. Let's get you up and running 1 cover off 2 microSD card in Tip: To remove the microSD memory card, depress the retainer tab (use a coin or other similar object), then slide the card out with your thumb. Turn it on & off To turn your phone on or off, press and hold the Power/End key . Find it: Press Menu (left soft key) > Tip: You can also press the Select key prepaid service app. With prepaid service, you buy wireless network services in advance. Your phone works just the same way as always. Prepaid options let you activate and deactivate prepaid service, check your prepaid balance, add money to your account, call customer service, and provide other information requested by your prepaid service provider. Note: Available prepaid service may vary depending on your service provider or region.

Contact your service provider for availability and more information. Make & answer calls To make a call from the home screen, enter a number, then press the Send key . To answer a call, press call alert, press Reject. To end a call, press the Power/End key An optional microSD memory card can be installed in your phone--you can load it up with music, photos, and videos from your computer (see "Memory card & USB" on page 34). 1 From the home screen, press Menu (left soft key) to open the app menu.

2 Press the Navigation key up, down, left or right to scroll and highlight a menu option. From the home screen press , up, down, left or right to quickly open Music player, Contacts, Messages, or Press the volume keys on the side of your phone to change the ring volume (in the home screen), or the earpiece volume (during a call). When playing music or video files, press the volume keys to adjust media volume. Quick access to the things you need most The home screen gives you all your latest information in one place. It's what you see when you turn on the phone or press from a menu.

Note: Your home screen might look a little different. All the apps on your phone are shown in your app menu. To open the app menu, from the home screen, press Menu (left soft key). Press up, down, left or right to highlight a menu option, then press to select the highlighted option. You can press to return to the home screen at any time. The status bar at the top of the screen contains icons that tell you about messages and phone status. It's good to talk During a call, press Spkr On to use the handsfree speakerphone. Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. 2 Highlight a call and press to call it. Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked.

emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. 1 Enter the emergency number in the home screen. 2 Press to call the emergency number. In very limited circumstances, such as where your phone has been exposed to extreme heat, "Cool Down" message screens will appear. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in "Cool Down" mode, only emergency calls can be made. Contacts like you've never had before Select to view, call, edit, delete, copy, move, or send the selected contact. Alternatively, you can enter a phone number in the home screen, then press Options > Save to Contacts. Sometimes it's better 2 say it in a message Use the keypad to enter your message.

Press Options to insert a picture, sound, or video. When you finish creating the message, press Options > Send to to enter phone numbers or select message recipients from your contact list. When you receive a message, your phone plays an alert and shows the new message indicator at the top of the screen. To read the new message, press View. To read messages stored in your inbox, press Menu Messages > Inbox.

Your phone saves the photo, and briefly shows the photo in the screen. To see photos you've taken, press Menu My Folder > Phone Memory or Memory card > > Photos. When music is what you need. You can transfer music from your computer to your phone by using a USB connection. For more information on transferring music, see "USB drag & drop" on page 35.

See "Content Copyright" in your legal and safety information. To create a music playlist: 2 Select the playlist name, then press Load > Options > Add to add a song from your phone or memory card. 3 If necessary, select Phone Memory or Memory card to specify where the song file is located. 4 Scroll to the song , and press OK to add it to the playlist. Repeat to add other songs to the playlist. To adjust music player settings, when the player is running, press Options > Settings > Player settings. News and music on the go Note: The FM radio only works when an optional wired headset accessory is plugged into the phone's headset jack. Automatically search for radio channels and store them to the channel list. Surf the web with your phone Note: To use the browser, you must have data service activated for your account (additional fees may apply for this service). Use your phone's browser to surf your favorite web sites, upload videos to a video blog, and download files and applications to your phone.

Log onto your internet-based email account to check your email. Note: If you can't connect, contact your service provider. Return to home screen See recent incoming & outgoing calls Create a new contact in your contact list Adjust sound volume Turn airplane mode on/off Press . Press Menu Recent calls > > Missed calls or Dialed calls or Received calls. Enter a phone number in the home screen, then press Options > Save to Contacts. From the home screen, press the up/down volume keys. Reduce the time your phone display stays on: Settings > Phone settings Press Menu > > Backlight, and set Time (sec) to a lower setting. settings Â· Turn off the screen saver: Press Menu > > Phone settings > Display > Screen Saver > Settings > Status > Off, then press OK. Think keyboard, now think smaller Use the phone keypad to enter text and create messages or notes. indicators at the top right of the text screen show the current text entry mode.

Tip: Use your phone's T9 feature to enter words using one keypress per letter. The phone predicts each word as you enter it. Capitalize the first letter of a new sentence. Enter capital letters in the text field. Enter lowercase letters in the text field. To delete letters to the left of the cursor, press To enter a space in symbol mode, press .



[You're reading an excerpt. Click here to read official MOTOROLA W418G user guide](http://yourpdfguides.com/dref/3809556)
<http://yourpdfguides.com/dref/3809556>

Add your personal touch Your phone has different profiles. You can customize ringtones, alerts, and volumes for each profile. You can select these profiles: profiles Ringtone and key tone volume are set to maximum. Adjust profile settings for when a wired headset is plugged into your phone.

Adjust profile settings for when a Bluetooth® headset is connected to your phone. You can adjust these settings: settings Set ringtones for incoming calls and messages, key tones, and other events. Set to answer calls by opening the flip or pressing any key. The screen saver appears after a specified period of inactivity. To turn the screen saver on or off, select Settings > Status > On or Off. Stay on top of things To set the calendar view, press Options > Go to monthly view or Go to weekly view. To add an event, scroll to the day, then press Options > Add event. You can set three types of event--Reminder, Meeting, or Course. To view an event, scroll to the day, then press Options > View. To set an alarm, select it and turn it on, then specify the alarm time, recurrence, and alert type.

When your phone shows/sounds an alarm, press Stop to turn off the alarm. Use airplane mode to turn all your wireless connections off--useful when flying.

Note: When you select airplane mode, all wireless services are disabled. You can then turn Bluetooth® back on, if permitted by your airline. Other wireless voice and data services (such as calls and text messages) remain off in airplane mode. Emergency calls to your region's emergency number (e. Turn Bluetooth power on or off Find it: Menu > Settings > Connectivity > Bluetooth > Power When Bluetooth power is on, the Bluetooth indicator appears in the home screen. Note: To extend battery life, turn off Bluetooth power when not in use. To connect with a new device, you need to pair with it. You only need to do this once for each device--to connect again, see "Reconnect devices" on page 33.

1 Make sure the device you are pairing with is in discoverable mode (see device instructions). Note: If Bluetooth power is not turned on, your phone will ask if you want to Power on Bluetooth first? select Yes. 3 Your phone lists the devices it finds within range. 4 If necessary, enter the device passkey (like 0000) to connect to the device. Tip: For specific information about a device, check the instructions that came with it.

For more Bluetooth support, go to www. For maximum Bluetooth security, always connect Bluetooth devices in a safe, private environment. Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. To automatically reconnect your phone with a paired device, simply turn on the device. To manually reconnect your phone with a paired device, select the device name in the My device list.

To automatically disconnect your phone from a paired device, simply turn off the device. To manually disconnect your phone from a paired device, select the device name in the My device list. Load photos, music, and more on your phone Note: You need an optional microSD memory card installed for some features on your phone, like the music player. To format your memory card, press Menu My Folder > Memory card > Format. > Warning: When you format a memory card, all data on the card is deleted. To see files stored on your memory card, press Menu My Folder > Memory card. > To copy or move a file from your phone to your memory card: 1 Press Menu > You can drag & drop your pictures, videos, music, and more from your computer to your phone's memory card. See "Content Copyright" in your legal and safety information. Note: When your phone is connected to a computer, it cannot be used for anything else, including making emergency calls. To restore the phone to normal use, disconnect it from the computer.

1 With a memory card inserted and your phone showing the home screen, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer. You can't use the files on your memory card while it is connected. 3 On your computer, use the "My Computer" window to find "Removable Disk. 5 Drag & drop files between your computer and memory card folders. 6 When you're done, use the "Safely Remove Hardware" feature to finish. Help keep your phone safe If your service provider didn't change the phone password, you should change it: You can also change your SIM card PIN and PIN2 codes. If you forget your phone password: At the If that doesn't work, contact your service provider. If you forget other codes: If you forget your SIM PIN code or PIN2 code, contact your service provider. You can lock your phone to keep others from using it. You'll need to enter your four-digit phone password to lock or unlock the phone.

To automatically lock your phone whenever you turn it off: Find it: Menu > > Phone Lock To unlock your phone: When you see Input password, enter your four-digit phone password and press OK. In the unlikely event that your phone stops responding to key presses, try a quick reset. Remove the back cover and battery ("Assemble & charge" on page 5), then replace and turn on your phone as usual. Reset default facâ Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging. Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle.

Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products. Enter or review written data. Perform any other functions that divert your attention from driving. Use a handsfree device if available or required by law in your area.

â Enter destination information into a navigation device before driving. â Use voice activated features (such as voice dial) and speaking features (such as audible directions), if available. End your call or other task if you cannot concentrate on driving. Remember to follow the "Smart Practices While Driving" in this guide and at www. Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing videos or games. These may occur even if a person has never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing videos or games or enabling a flashing-lights feature (if available) on your mobile device. Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.



[You're reading an excerpt. Click here to read official MOTOROLA](http://yourpdfguides.com/dref/3809556)

[W418G user guide](http://yourpdfguides.com/dref/3809556)

<http://yourpdfguides.com/dref/3809556>

Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing.

The louder the volume sound level, the less time is required before your hearing could be affected. Avoid turning up the volume to block out noisy surroundings. Turn the volume down if you can't hear people speaking near you. If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked. For more information about hearing, see our Web site at direct. When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician. Keep your mobile device and its accessories away from small children. These products are not toys and may be hazardous to small children. for example: A choking hazard may exist for small, detachable parts.

Improper use could result in loud sounds, possibly causing hearing injury. Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. if glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders. When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol Definition Do not dispose of your battery or mobile device in a fire. Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.

Do not dispose of your battery or mobile device with your household waste. Listening at full volume to music or voice through a headset may damage your hearing. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits. 5 centimeters (1 inch) from your body when transmitting. your mobile device is a radio transmitter and receiver. Tests for SAR are conducted using procedures accepted by the FCC and by Industry Canada with the mobile device transmitting at its highest certified power level in all tested frequencies. Although the SAR is determined at the highest certified power level, the actual SAR level of the mobile device while operating can be below the maximum value. This is because the mobile device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

And Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure.

The highest SAR value for this mobile device when tested for use at the ear is 1. Body, as described in this guide, is 1.46 W/kg. The SAR value for this mobile device in its data transmission mode (body-worn use) is 1.46 W/kg. Body-worn measurements can differ, depending upon available accessories and regulatory requirements. the SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product. While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines. Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site: <http://www>.

A large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established for mobile phone use. The following statement applies to all products that have received FCC approval. applicable products bear the FCC logo, and/or an FCC ID in the format FCC ID:xxxxxx on the product label. Motorola has not approved any changes or modifications to this device by the user.

Any changes or modifications could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. This Class B digital apparatus complies with Canadian ICES-003. Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. always obey them. The use of these devices may be prohibited or restricted in certain areas--for example, handsfree use only may be required. Your mobile device lets you communicate by voice and data--almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility.

If you choose to use your mobile device while driving, remember the following tips: Get to know your Motorola mobile device and its features such as speed dial, redial and voice dial.



[You're reading an excerpt. Click here to read official MOTOROLA W418G user guide](http://yourpdfguides.com/dref/3809556)
<http://yourpdfguides.com/dref/3809556>

If available, these features help you to place your call without taking your attention off the road. • When available, use a handsfree device. If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today. • Position your mobile device within easy reach. Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you. • Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and even heavy traffic can be hazardous. Do not take notes or look up phone numbers while driving.

Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility--driving safely. • Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic. If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue. • Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.

• Use your mobile device to call for help. Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies (wherever wireless phone service is available). • Use your mobile device to help others in emergencies. If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number (wherever wireless phone service is available), as you would want others to do for you. • Call roadside assistance or a special non-emergency wireless assistance number when necessary.

If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number (wherever wireless phone service is available). Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information: •

Monitor access--Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available. • Keep software up to date--If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible. Secure Personal Information--Your mobile device can store personal information in various locations including your SIM card, memory card, and phone memory. Be sure to remove or clear all personal information before you recycle, return, or give away your device. You can also backup your personal data to transfer to a new device. Note: For information on how to backup or wipe data from your mobile device, go to www. Go to your account for information on how to manage the account, and how to use security features such as remote wipe and device location (where available). • Applications--Install third party applications from trusted sources only.

Applications can have access to private information such as call data, location details and network resources. • Location-based information--Location-based information includes information that can be used to determine the approximate location of a mobile device. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services. • Other information your device may transmit--Your device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other third-party servers. This information is used to help improve products and services offered by Motorola. If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola. To care for your Motorola mobile device, please observe the following: Liquids Don't expose your mobile device to water, rain, extreme humidity, sweat, or other liquids.

If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the mobile device. Extreme heat or cold Don't store or use your mobile device in temperatures below -10°C (14°F) or above 60°C (140°F). Don't recharge your mobile device in temperatures below 0°C (32°F) or above 45°C (113°F) microwaves Don't try to dry your mobile device in a microwave oven.

Dust and dirt Don't expose your mobile device to dust, dirt, sand, food, or other inappropriate materials. Cleaning solutions To clean your mobile device, use only a dry soft cloth. Don't use alcohol or other cleaning solutions. shock and vibration Don't drop your mobile device. Protection To help protect your mobile device, always make sure that the battery compartment and any connector covers are closed and secure.

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste, or in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at: www. Product packaging and product guides should only be disposed of in accordance with national collection and recycling requirements.

Please contact your regional authorities for more details. Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label: Perchlorate Material • special handling may apply when the battery is recycled or disposed of. Hearing Aid Compatibility with Mobile Phones Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has "Rated for Hearing Aids" printed on it, the following explanation applies. When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise.



[You're reading an excerpt. Click here to read official MOTOROLA W418G user guide](http://yourpdfguides.com/dref/3809556)
<http://yourpdfguides.com/dref/3809556>

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

To maintain the published Hearing Aid Compatibility (HAC) rating for this mobile phone, use only the original equipment battery model. the ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs. M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. m4 is the better/higher of the two ratings. T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. t4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.

) Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones. Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software.

Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the Normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations.

Com/us/productregistration Product registration is an important step toward enjoying your new Motorola product. Registering permits us to contact you for product or software updates and allows you to subscribe to updates on new products or special promotions. registration is not required for warranty coverage. Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status. What Does this Warranty Cover? Subject to the exclusions contained below, Motorola Mobility, Inc. Warrants its mobile telephones ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories"), and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories, and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty: Products Covered Products and Accessories as defined above, unless otherwise provided for below. Ear buds and boom headsets that transmit mono sound through a wired connection. Length of Coverage One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.

The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage. batteries. @@@@ use of Non-Motorola Products and Accessories. @@ unauthorized Service or Modification. @@ altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage. communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage. Applies only to physical defects in the media that embodies the copy of the software (e.

No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected. Software that is downloaded from the Internet, is provided "as is" and without warranty. This warranty extends only to the first consumer purchaser, and is not transferable. Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts.

No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software, and applications, please create a back up prior to requesting service. You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if Applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.



[You're reading an excerpt. Click here to read official MOTOROLA W418G user guide](http://yourpdfguides.com/dref/3809556)
<http://yourpdfguides.com/dref/3809556>

What Other Limitations are There? Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another. Com Note: Do not ship your product to the above address. If you need to return your product for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at: 1-800-331-6456 (United States) 1-888-390-6456 (TTY/TDD United States for hearing impaired) 1-800-461-4575 (Canada) Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. contact your service provider for details. All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation. mOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. All other product or service names are the property of their respective owners. Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment. .



[You're reading an excerpt. Click here to read official MOTOROLA W418G user guide](http://yourpdfguides.com/dref/3809556)
<http://yourpdfguides.com/dref/3809556>