



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA WILDER. You'll find the answers to all your questions on the MOTOROLA WILDER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual MOTOROLA WILDER User guide MOTOROLA WILDER Operating instructions MOTOROLA WILDER Instructions for use MOTOROLA WILDER Instruction manual MOTOROLA WILDER

The image shows a page from the Motorola Wilder user manual. It features a grid of sections with icons and text. The sections include:

- WELCOME:** Information about the phone and its features.
- YOUR PHONE:** A diagram of the phone with labels for various buttons and features like Camera, Call, Home key, and Volume keys.
- MESSAGES:** Instructions for sending and receiving SMS and MMS.
- CALLS:** Instructions for making and answering calls, including emergency calls.
- CONTACTS:** Instructions for creating and managing contacts.
- PERSONALISE:** Instructions for customizing the phone's appearance and settings.
- SOCIAL NETWORKS:** Instructions for connecting to social media.
- CONTACTS:** Instructions for creating and managing contacts.
- BLUETOOTH™:** Instructions for pairing and using Bluetooth devices.
- MEDIA:** Instructions for playing music and videos.
- WEB:** Instructions for using the phone's browser.
- HOMESCREEN:** Instructions for customizing the home screen.



You're reading an excerpt. [Click here to read official MOTOROLA WILDER user guide](http://yourpdfguides.com/dref/4122562)  
<http://yourpdfguides.com/dref/4122562>

**Manual abstract:**

@@@ Your phone's menu may be a little different. Gallery Messaging · Inbox · Drafts · Outbox · Sent items · Saved items · Delivery reports · Voice messages · Info messages Bluetooth Games Twitter Facebook MySpace YouTube Google search Gmail Recent calls music MOTOROLA WILDER TM Your phone is splash and dust resistant, because life happens fast, be ready for whatever it throws at you. Note: Always make sure that the battery door cover and connector cover are closed and secure. Damage caused by failing to properly secure the phone's splash resistant covers is not covered by the warranty. If you'd like even more information about how to use your new EX130 visit [www.motorola.com/support](http://www.motorola.com/support). So, let's go. @@@@ Touch > Add recipient > select a contact. @@ If your voicemail number is preset, you will connect.

Play music Touch > Music player Connector Charge & connect to PC. End a call Touch End call. controls function > play/pause next/previous song volume Touch Touch // . . Volume Keys Read messages When you receive a message, your phone plays an alert and shows the new message indicator at the top of the screen.

To read the new message, touch View. To read messages stored in your inbox, touch > Messaging > Inbox. In-call options During a call, touch Loudspeaker, Keypad, Mute, New call, Contacts or Hold. Backlight time To set how long your backlight stays on, touch Settings > Display > Backlight time-out. Touchscreen Redial number Battery tips Call log.

Want to extend your battery life? Try these: · · Turn off Bluetooth™ power: Touch > Bluetooth > Off. Turn off the screen saver: Touch > Display > Screen saver > Off. 1 2 Touch > Press the side volume keys up or down. Touch and hold the contact you want to call, then touch Call. Camera Key 12:00 Indicator display Tip: To access music stored on your microSD memory card, touch > Gallery > Memory card. To transfer music to/from your memory card, plug your USB cable into your phone & computer, then drag & drop files to the 'Music' folder. Home key Let's go o g s ' t e l Basics Turn it on & off basics Personalise Profiles customise social networks Use your phone to access your favourite social network sites, touch > Applications. Google Maps Contacts Create contacts phonebook Bluetooth™ Turn on or off Bluetooth media Photos & videos photos & videos web Use your phone's browser to surf your favourite websites, upload videos and download apps. Log onto your Internet-based email account to check your email. USB drag & drop home screen The home screen is what you see when you turn on the phone or touch Home from a menu.

It's basically like this: status indicators 1 cover off 2 SIM in Press and hold (on top of the phone) for a few seconds to turn the phone on/off. Your phone has different profiles. You can customise ringtones, alerts and volumes for each profile. Touch > Settings > Profiles, then select from these profiles: . . . . General: Standard profile default setting. Silent: Ringtone is off, vibrate is off. Meeting: Vibrate is on, ringtone is off. Outdoor: Ringtone and key tone volume set to maximum. Flight: Turn off all wireless connections. Touch tips . . . Touch: To choose an icon or option. Touch & hold: To open special options. Drag/flick: Scroll/move slowly (drag) or quickly (flick). Note: If you don't have a social network account, you can visit the website to set it up. Touch > Contacts > , enter the contact name and details, then touch Save. Tip: Touch > More > Memory in use to choose where to save your contacts (Phone memory, SIM card or Phone and SIM card). Touch > Bluetooth > On or Off · Update your status After you set up an account, you can sign in, update and see your current status and see and respond to friends' updates.

When Bluetooth power is on, the Bluetooth indicator appears on the home screen. Connect new devices To connect with a new device, you need to pair with it. You only need to do this once for each device. Photos: Touch > Camera. To take the photo, press .

· Videos: Touch > Camera, then drag down. Press to start/stop. After you've taken the photo, touch , then: · Touch · · > browser name Call contacts Touch and hold a contact, then touch Call. 04: 04: 04:35 AM 04:35 AM Menu navigation 3 microSD in This product meets the applicable limit for exposure to radio waves (known as SAR) of 2.0 W/kg (ICNIRP). The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the legal and safety information packaged with your product. Note: When using the product while worn on your body, either use an approved accessory such as a holster or maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with SAR requirements. Note that the product may be transmitting even if you are not making a phone call.

1 2 3 4 4 battery in Touch to open the main menu. Make sure the device you are pairing with is in discoverable mode (see device instructions). Touch > Bluetooth > Paired devices > New. Your phone lists the devices it finds within range. Select a device to connect. If necessary, enter the device passkey (like 0000) to connect to the device. Press Home to close any menu or app and return to the home screen. Touch Back to go back. Search for contact. View contact. Add contact to a group. Add contact to speed dial. View memory status and more. Add contact. Display settings To set display settings such as wallpaper, and screen saver, touch > Settings > Display.

Mi Mike ike 07970 07970 07970405803 07970405803 970 Lara Lara 05569873490 05569873490 6 734 To send in a message, email or via Bluetooth, touch Send. · To delete the photo or video and return to the viewfinder, touch Delete. · To assign to a contact, touch Attach to contact. To see the photos and videos you've taken, touch > Gallery > Images or Video clips. To go to a webpage, touch Enter URL.

To bookmark a webpage, touch More > Bookmarks > Add bookmark. · To change displays settings like Font size and View mode, touch More > Settings. · To go to a link on a webpage, touch it. Note: If you can't connect, contact your service provider. 01:33 Status indicators 11-01-2011 (Fri) Menu icon Touch to open main menu. Shortcuts Touch to open. Date & time Set date, time, time zone and formats: 5 cover on 6 charge up touch > Settings > Date and time.



**[You're reading an excerpt. Click here to read official MOTOROLA WILDER user guide](http://yourpdfguides.com/dref/4122562)**  
<http://yourpdfguides.com/dref/4122562>



For a list of Motorola-supplied or approved accessories, visit our website at: [www.motorola.com](http://www.motorola.com). Repetitive motion When you repetitively perform actions such as pressing keys or entering fingerwritten characters, you may experience occasional discomfort in your hands, arms, shoulders, neck or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a doctor.

During use, the actual SAR values for your device are usually well below the values stated. This is because, for purposes of system efficiency and to minimise interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value. Body-worn SAR testing has been carried out using an approved accessory or at a separation distance of 2.5 cm (1 inch).

To meet RF exposure guidelines during body-worn operation, the device should be in an approved accessory or positioned at least 2.5 cm (1 inch) away from the body. If you are not using an approved accessory, ensure that whatever product is used is free of any metal and that it positions the phone at least 2.5 cm (1 inch) away from the body. The World Health Organisation has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices.

They recommend that if you are interested in further reducing your exposure then you can easily do so by limiting your usage or simply using a hands-free kit to keep the device away from the head and body. Additional information can be found at [www.who.int/emf](http://www.who.int/emf) (World Health Organisation) or [www.motorola.com/rfhealth](http://www.motorola.com/rfhealth) (Motorola Mobility, Inc.). Where, in the Country of purchase, there is a statutory requirement to provide extended repair service to consumers beyond the first year of purchase (South Africa and Portugal), this warranty will be provided by Motorola Authorised Service Centres or Motorola directly appointed dealers in the country of purchase according to the terms of this warranty information document. However, please note that you will be referred back to the place of purchase, if the Motorola Dealer has purchased the product directly from Motorola, in the country of purchase or in a country where Motorola is not required to support supplementary repair service during the second year of purchase because of the statutory obligations that may apply to the seller or importer of the product, but not to the manufacturer, to provide an extended warranty to consumers beyond the first year.

**CLAIMING** In order to claim the warranty service, you must return the Personal Communicator and/or accessories in question to Motorola's Authorised Repair or Service Centre in the original configuration and packaging as supplied by Motorola.

Please avoid leaving any supplementary items like SIM cards. The Product should also be accompanied by a label with your name, address, and telephone number; name of operator and a description of the problem. In the case of vehicular installation, the vehicle in which the Personal Communicator is installed should be driven to the Authorised Repair or Service Centre, as analysis of any problem may require inspection of the entire vehicular installation.

•••••Such information is contained with the Product. •••••Always obey them. •••••When driving a car, driving is your first responsibility. •••••When available, use a hands-free device. If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original hands-free accessories available today. • Position your mobile device within easy reach. Be able to access your mobile device without taking your eyes off the road.

If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you. • Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous. • Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility--driving safely.

• Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic. If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue. • Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking to aware you are driving and suspend conversations that can divert your attention away from the road. • Use your mobile device to call for help.

Dial 999 or another local emergency number in the case of fire, traffic accident or medical emergencies (wherever wireless phone service is available). • Use your mobile device to help others in emergencies. If you see a road accident, crime in progress or other serious emergency where lives are in danger, call 999 or other local emergency number (wherever wireless phone service is available), as you would want others to do for you. • Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number (wherever wireless phone service is available). Driving safety WARRANTY INFORMATION Motorola guarantees to you, the original purchaser, the Personal Communicator and accessories which you have purchased from an authorised Motorola dealer (the "Products"), to be in conformance with the applicable Motorola specifications current at the time of manufacture for a different period of time from date of purchase of the Product(s) (warranty term).

The warranty period starts at the time of the Product(s) original purchase by the first end-user. The Product may consist of several different parts and different parts may be covered by a different warranty period (hereinafter "Warranty Period"). The different Warranty Periods are: a) Twelve (12) months for the Personal Communicator and for accessories (whether included in the Product sales package or sold separately) other than the consumable parts and accessories listed in (b) and (c) below; b) Six (6) months for the following consumable parts and accessories: batteries, and c) Ninety (90) days for the media on which any software is provided e.g.

CD-ROM, memory card. You must inform Motorola of the lack of conformity to the applicable specifications of any of the Products within a period of two (2) months from the date on which you detect a defect in material, workmanship or lack of conformity and in any event within a term not to exceed the Warranty Term, and must immediately submit the Product for service to Motorola's Authorised Repair or Service Centre.



[You're reading an excerpt. Click here to read official MOTOROLA](http://yourpdfguides.com/dref/4122562)

[WILDER user guide](http://yourpdfguides.com/dref/4122562)

<http://yourpdfguides.com/dref/4122562>

Motorola shall not be bound by Product related statements not directly made by Motorola nor any warranty obligations applicable to the seller. During the Warranty term, Motorola will, at its discretion and without extra charge, as your exclusive remedy, repair or replace your Product which does not comply with this warranty; or failing this, to reimburse the price of the Product but reduced to take into account the use you have had of the Product since it was delivered. This warranty will expire at the end of the Warranty Term. This is the complete and exclusive warranty for a Motorola Personal Communicator and accessories and in lieu of all other warranties, terms and conditions, whether express or implied. Where you purchase the product other than as a consumer, Motorola disclaims all other warranties, terms and conditions express or implied, such as fitness for purpose and satisfactory quality. Information from the World Health Organisation "A large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established for mobile phone use." Source: WHO fact sheet 193 Further information: <http://www.who.int/emf> WHO information 032375o Children Keep your mobile device and its accessories away from small children. These products are not toys and may be hazardous to small children. For example: · A choking hazard may exist for small, detachable parts. · Improper use could result in loud sounds, possibly causing hearing injury.

· Improperly handled batteries could overheat and cause a burn. Similar to a computer, if a child does use your mobile device, you may want to monitor their access to help prevent exposure to inappropriate apps or content. Use & care To care for your Motorola phone, please observe the following: Use & care Battery charging Notes for charging your product's battery: · During charging, keep your battery and charger near room temperature for efficient battery charging. · New batteries are not fully charged. · New batteries or batteries stored for a long time may take more time to charge.

· Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging. Battery charging European Union directives conformance statement The following CE compliance information is applicable to Motorola mobile devices that carry one of the following CE marks: EU conformance liquids Don't expose your mobile device to water, rain, extreme humidity, sweat or other liquids. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone. extreme heat or cold Don't store or use your mobile device in temperatures below -10°C (14°F) or above 60°C (140°F). @@microwaves Don't try to dry your phone in a microwave oven. @@cleaning solutions To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning solutions. shock and vibration Don't drop your phone. @@@Repair, at Motorola's option, may include reflashing of software, the replacement of parts or boards with functionally equivalent, reconditioned or new parts or boards. Replaced parts, accessories, batteries, or boards are warranted for the balance of the original warranty time period.

The Warranty Term will not be extended. All original accessories, batteries, parts, and Personal Communicator equipment that have been replaced shall become the property of Motorola. Motorola does not warrant the installation, maintenance or service of the products, accessories, batteries or parts. @@@@@@In some circumstances, your mobile device may cause interference with other devices. Glass parts Some parts of your mobile device may be made of glass. This glass could break if the product receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre. Follow instructions to avoid interference problems Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff.

If your mobile device offers a flight mode or similar feature, consult airline staff about using it in-flight. Third party accessories Use of third party accessories, including but not limited to batteries, chargers, headsets, covers, cases, screen protectors and memory cards, may impact your mobile device's performance. In some circumstances, third party accessories can be dangerous and may void your mobile device's warranty. For a list of Motorola accessories, visit [www.motorola.com/products](http://www.motorola.com/products)

Operational warnings Obey all posted signs when using mobile devices in public areas. 0168 0168 INSTALLED DATA Please make and retain a note of all data you have inserted into your Product for example names, addresses, phone numbers, user and access codes, notes, etc. before submitting your Product for a Warranty service as such data may be deleted or erased as part of the repair or service process. Please note if you have downloaded material onto your Product, for example, ring tones, ring tones, screensavers, wallpaper, games, etc. these may be deleted or erased as part of the repair process or testing process.

Motorola shall not be responsible for such matters. The repair or testing process should not affect any such material that was installed by Motorola on your Product as a standard feature. [Only indoor use allowed in France for Bluetooth and/or Wi-Fi] Potentially explosive atmospheres Areas with potentially explosive atmospheres are often, but not always, posted and can include fuelling areas, such as below decks on boats, fuel or chemical transfer or storage facilities or areas where the air contains chemicals or particles, such as grain dust or metal powders. When you are in such an area, turn off your mobile device, and do not remove, install or charge batteries unless it is a radio product type especially qualified for use in such areas as "Intrinsically Safe" (for example, Factory Mutual, CSA or UL approved). In such areas, sparks can occur and cause an explosion or fire. Implantable medical devices If you have an implantable medical device, such as a pacemaker or defibrillator, consult your doctor before using this mobile device. Persons with implantable medical devices should observe the following precautions: · ALWAYS keep the mobile device more than 20 centimetres (8 inches) from the implantable medical device when the mobile device is turned ON. · DO NOT carry the mobile device in the breast pocket. · Use the ear opposite the implantable medical device to minimise the potential for interference. · Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.



[You're reading an excerpt. Click here to read official MOTOROLA WILDER user guide](http://yourpdfguides.com/dref/4122562)  
<http://yourpdfguides.com/dref/4122562>

Hereby, Motorola declares that this product is in compliance with: · The essential requirements and other relevant provisions of directive 1999/5/ EC · All other relevant EU directives Driving precautions Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle. Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products. While driving, NEVER: · Type or read texts. · Enter or review written data. · Surf the web. 0168 Product approval number OUT OF WARRANTY REPAIRS If you request Motorola to repair your Product any time after the Warranty term or where this warranty does not apply due to the nature of the defect or fault, then Motorola may at its discretion carry out such repairs subject to you paying Motorola its fees for such a repair or it may refer you to an authorised third party to carry out such repairs. The above gives an example of a typical product approval number. You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/ EC (to R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte). To find your DoC, enter the Product approval number from your product's label in the "Search" bar on the website. .



[You're reading an excerpt. Click here to read official MOTOROLA WILDER user guide](http://www.motorola.com/rtte)  
<http://yourpdfguides.com/dref/4122562>