



**Manual abstract:**

congratulations! your phone e n h p r u o y calls make & answer calls calls messages send messages messages tips & tricks ring style shortcuts music player  
To use the music player, insert a microSD memory card (optional). The music player supports MP3, MIDI and AMR music formats. FM radio main menu  
Games&apps · FM radio \* · Games Music player · All songs · My star list · Folders · Album · Artist · Genre · Update songs File manager Profiles FM radio  
\*\* Camera \* Bluetooth My settings · Colour · Clamshell · Display · Clock · Keys · Call register · More settings Services \*\*\* Tools · Organiser · Alarm ·  
Calculator · Fake call · Converter · Voice memo · Memory status · My shortcuts \* WX295 only \*\* WX265 only \*\*\* Network dependent Display/torch Lanyard  
Menu s Message Call key Music (WX265)/ camera (WX295) key Navigation S key Center key s Indicators (WX265) New call, new message or charging.  
Display (WX295) Time, incoming call number, or service provider. MOTO TM Soft keys Performs function shown above the key. Mini USB Connector  
Charge, or connect a headset. Power/ end key Enter a number and press . When your phone rings or vibrates, press . 1 2 Press s > Messages > Messages >  
Create text message. Enter your message.

Tip: Press Options > Input method to switch text entry modes. Press \* to switch capitalisation modes. Press # to enter a space. Press Options > Languages to  
change language. To quickly switch your ring style, press and hold # from the home screen.

Flip open' to answer Just open the flip to answer a call. Press s> My settings > Clamshell > Clamshell open answer from the home screen. play music Find  
it: s > Music player > All songs. Tip: Press the music key (WX265). end a call Press .

torch on To quickly turn on your torch, press 5 from the home screen. Press 5 to turn it off. controls function play/pause skip to next/ previous song volume  
Press s. Press S right or left. Press S up or down. WX265/WX295 emergency calls To call an emergency number, enter the emergency number and press .  
Your service provider programmes emergency phone numbers, (such as 999 or 112), that you can call under any circumstances, even when your phone is  
locked. Emergency numbers vary by country. Your phone's pre-programmed emergency number(s) may not work in all locations, and sometimes an  
emergency call cannot be placed due to network, environmental or interference issues. 3 4 Press s.

Select Add number, enter a number and press s or select Add from directory and scroll to a contact. Press s to select a contact. Press s to send. Important: A  
headset has been provided for use with your mobile phone. This headset is the only model headset that Motorola warrants to operate with your phone. It is  
compliant with the acoustic safety requirements specified in France. Note: Your phone may not appear exactly as the images in this manual. However, all key  
locations, sequences and functions are the same. voicemail Press and hold 1. If your voicemail number is pre-set, you will connect.

Directory Messages · Messages · Voice mess. · Voicemail · Settings WAP · Homepage · Bookmarks · Recent pages · Offline pages · Go to URL · Profiles This is  
a standard main menu layout. Your phone's menu may be a little different. 5 recent calls To see your dialled, received and missed calls, press from the home  
screen. read messages When you receive a message you will see 1 on your screen.

Press s > s to open the message. You can reply to the message by pressing Options > Reply. Getting Started Guide Note: To transfer songs to/from your  
memory card, use a microSD memory card reader on your computer to drag & drop files to the "Audios > Music" folder. 10:27 Camera (WX295 only) let's  
go o g s ' t e l basics turn it on & off basics contacts save contacts Press and hold for a few seconds to turn the phone on/off. personalise set your wallpaper  
customise photos Note: You can only take photos with the WX295.

USB Drag & Drop radio listen to the radio FM radio home screen The home screen displays when you turn on the phone. Status indicators can appear across  
the top of the home screen: status indicators 1 cover off 2 SIM in 1 2 Enter the number on the home screen and press Save. Enter the contact details and press  
Save. Change the wallpaper to one that makes you smile. Find it: s > My settings > Display > Wallpaper 1 2 Press s > Camera > Camera. 1 Plug a mini-  
USB headset into your phone. Note: The FM radio works only when the headset is plugged in. menu navigation Press the centre key s to open the main menu.  
Tip: Press s > Directory > Options > Default storage to choose where to save your contacts (To SIM or To phone). set time & date Set the time & date shown  
on your home screen.

Find it: s > My settings > Clock > Set time/date Tip: To quickly turn on your camera, press the camera key. Press s to take your photo, then to: · Set as your  
wallpaper press S up. · Send by Bluetooth press S down. · Send by MMS press S left. · Assign as contact press S right. · Delete press Delete. · Return to the  
viewfinder press Back. Tip: To set where your photos are stored press Options > Storage > Phone or Memory card. To transfer photos to/from your memory  
card, use a microSD memory card reader on your computer to drag & drop files to the "Images" folder. 2 call contacts Press s > Games & apps > FM radio  
(WX295) or s > > FM radio (WX265) from the home screen.

Signal strength Battery Alert New level type message indicator in 3 microSD in 4 battery in Press the navigation key S up, down, right or left to highlight a  
menu option. Press s to select the highlighted option. Press Options to display the options menu. 1 2 Press s > Directory. set ringtone & volume Play it loud  
or keep it quiet, you choose.

Profiles Find it: s > Choose a profile. Press Options to edit a profile. Press S up or down, to scroll through the list to highlight the contact's number. Tip:  
Press S right or left to change category (General, Most called, SIM directory, Phone directory or Group). To tune in a station, press S left or right or press  
Options > Auto search.

To adjust the volume, press S up or down. To turn off the radio, press Options > Turn off. 18:10 18/02/2010 store favourite stations When listening to a  
station, press Save > Ok. Select a channel number and press Add to store it. Press Options > Channel list to see your stored stations.



**[You're reading an excerpt. Click here to read official MOTOROLA  
WX295 user guide  
http://yourpdfguides.com/dref/3341205](http://yourpdfguides.com/dref/3341205)**

Press keys 1 to 40 to select a stored station. Service provider create shortcuts Choose the features you want to access with a single key press from the home screen--really useful stuff: Find it: s > Tools > My shortcuts > Add > Functions > Keys 3 Menu S Message Press . 5 cover on 6 charge up Note: Your phone's home screen may be different from the one shown. accessories & more [www.motorola.com](http://www.motorola.com)

com 4H CJB31A0ALAAA 68000202825 68000202825.fm Page 2 Tuesday, May 4, 2010 2:22 PM Safety, regulatory & legal Battery use & safety Important:

Handle and store batteries properly to avoid injury or damage. Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries. DON'Ts · Don't disassemble, crush, puncture, shred or otherwise attempt to change the form of your battery. · Don't let the phone or battery come in contact with water. Water can get into the phone's circuits, leading to corrosion. If the phone and/or battery get wet, have them checked by your service provider or contact Motorola, even if they appear to be working properly.\* · Don't allow the battery to touch metal objects. If metal objects, such as jewellery, stay in prolonged contact with the battery contact points, the battery could become very hot. · Don't place your battery near a heat source.

Excessive heat can damage the phone or the battery. High temperatures can cause the battery to swell, leak or malfunction. Therefore: · Do not dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven. · Avoid leaving your phone in your car in high temperatures.\* DOs · Do avoid dropping the battery or phone.

Dropping these items, especially on a hard surface, can potentially cause damage.\* · Do contact your service provider or Motorola if your phone or battery has been damaged by being dropped or by high temperatures. \* Note: If the product guide expressly states that your phone is designed to resist damage from exposure to certain rugged conditions, such as water immersion, rain, dust, high and low temperatures, shock or other conditions, do not exceed the stated limits and ensure the stated precautions are taken. Always make sure that the battery compartment is closed and secure to avoid direct exposure of the battery to any of these conditions. Important: Use Motorola Original products for quality assurance and safeguards.

To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original" hologram. Motorola recommends that you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as Invalid Battery or Unable to Charge, take the following steps: · Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram; · If there is no hologram, the battery is not a Motorola battery; · If there is a hologram, replace the battery and try charging it again; · If the message remains, contact a Motorola authorised service centre. Important: Motorola's warranty does not cover damage to the phone caused by non-Motorola batteries and/or chargers. Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage or other hazard.

Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it also benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web: · [www.motorola.com/recycling](http://www.motorola.com/recycling) · [www.rbrc.org/call2recycle/](http://www.rbrc.org/call2recycle/) (in English only) Disposal: Promptly dispose of used batteries in accordance with local regulations.

Contact your local recycling centre or national recycling organisations for more information on how to dispose of batteries. Warning: Never dispose of batteries in a fire because they may explode. Battery Use & Safety Specific absorption rate (ICNIRP) SAR (ICNIRP) Safety & general information This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.

Safety Information Symbol key Your battery, charger or mobile device may contain symbols, defined as follows: Symbol 032374o FCC notice to users Definition Important safety information follows. Do not dispose of your battery or mobile device in a fire.

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxx on the product label. Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec.

15.21. This device complies with part 15 of the FCC Rules. Recycling requirements. Please contact your regional authorities for more details.

· · · Exposure to radio frequency (RF) energy Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate using your mobile device, the system handling your call controls the power level at which your mobile device transmits. Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy. 032376o Privacy & data security Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information: · Monitor access--Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available. · Keep software up to date--If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible. · Secure personal information--Your mobile device can store personal information in various locations including your SIM card, memory card and phone memory. Be sure to remove or clear all personal information before you recycle, return or give away your device.

You can also back up your personal data to transfer to a new device. @@@@ Contact your local regulatory authorities for more information. @@@@ Use your mobile device to call for help.



[You're reading an excerpt. Click here to read official MOTOROLA WX295 user guide](http://yourpdfguides.com/dref/3341205)  
<http://yourpdfguides.com/dref/3341205>

@@ Use your mobile device to help others in emergencies. @@@@ If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or another special non-emergency wireless number (wherever wireless phone service is available). Listening at full volume to music or voice through a headset may damage your hearing. www.hellomoto.com Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation. MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under licence. Obigo® is a registered trademark of Obigo A. eZiText™ and Zi™ are trademarks of Zi Corporation and/or its Affiliates. All other product or service names are the property of their respective owners. © 2010 Motorola, Inc.

All rights reserved. Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment. Bluetooth ID: B014013 Manual number: CJB31A0ALAAA 68000202825 Batteries & chargers Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage or other hazard. For more information, see "Battery Use & Safety". Use & care To care for your Motorola phone, please keep it away from: liquids of any kind Don't expose your phone to water, rain, extreme humidity, sweat or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone. Use & Care RF energy interference/compatibility Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices. Keep your mobile device & its accessories away from small children These products are not toys and may be hazardous to small children. For example: · A choking hazard may exist for small, detachable parts.

· Improper use could result in loud sounds, possibly causing hearing injury. · Improperly handled batteries could overheat and cause a burn. Follow instructions to avoid interference problems Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an aeroplane mode or similar feature, consult airline staff about using it in-flight. European Union directives conformance statement Hereby, Motorola declares that this product is in compliance with: · The essential requirements and other relevant provisions of Directive 1999/5/EC · All other relevant EU Directives EU Conformance extreme heat or cold Avoid temperatures below 0°C/32°F or above 45°C/113°F. microwaves Don't try to dry your phone in a microwave oven. dust and dirt Don't expose your phone to dust, dirt, sand, food or other inappropriate materials. cleaning solutions To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning solutions. shock and vibration Don't drop your phone. Glass parts Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre.

Implantable medical devices If you have an implantable medical device, such as a pacemaker or defibrillator, consult your doctor before using this mobile device. Persons with implantable medical devices should observe the following precautions: · ALWAYS keep the mobile device more than 20 centimetres (8 inches) from the implantable medical device when the mobile device is turned ON. · DO NOT carry the mobile device in the breast pocket. · Use the ear opposite the implantable medical device to minimise the potential for interference. · Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your health care provider. Seizures/blackouts Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout. If you have experienced seizures or blackouts or if you have a family history of such occurrences, please consult your doctor before playing video games or enabling a flashing-lights feature (if available) on your mobile device. Discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour and stop use if you are tired. 1588 Product Approval Number Smart practices while driving Drive Safe, Call Smart Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas--for example, hands-free use only.

Go to [www.motorola.com/callsmart](http://www.motorola.com/callsmart) (in English only) for more information. Your mobile device lets you communicate by voice and data, almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips: · Get to know your Motorola mobile device and its features such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road. · When available, use a hands-free device. If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original hands-free accessories available today.



[You're reading an excerpt. Click here to read official MOTOROLA WX295 user guide](http://yourpdfguides.com/dref/3341205)  
<http://yourpdfguides.com/dref/3341205>



· Position your mobile device within easy reach.

Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you. · Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous. · Do not take notes or look up phone numbers while driving.

Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility--driving safely. · Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic. If you must make a Driving Safety The above gives an example of a typical Product Approval Number. You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte).

To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site. Driving precautions Using a mobile device while driving may cause distraction. End a call if you can't concentrate on driving. Enter information about your destination and route prior to your drive. Do not enter data or engage in text messaging while driving. Keep your eyes on the road while driving. Listen to the audible turn-by-turn directions, if available. @ @ Always obey the laws and regulations on the use of these products. @ @ @ @ @ · Avoid turning up the volume to block out noisy surroundings.

· Turn the volume down if you can't hear people speaking near you. If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked. For more information about hearing, see our website at [direct.motorola.com/hellomoto/nss/AcousticSafety.asp](http://direct.motorola.com/hellomoto/nss/AcousticSafety.asp) (in English only). Information from the World Health Organisation Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body. Source: WHO Fact Sheet 193 Further information: <http://www.who.int/peh-emf>

WHO Information 032375o Software copyright notice Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant, either directly or by implication or estoppel or otherwise, any licence under the copyrights, patents or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product. Software Copyright Notice Battery charging Notes for charging your phone's battery: · When charging your battery, keep it near room temperature.

Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging. · New batteries are not fully charged. · New batteries or batteries stored for a long time may take more time to charge. · Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging. Battery Charging Operational warnings Obey all posted signs when using mobile devices in public areas.

Caring for the environment by recycling This symbol on a Motorola product means the product should not be disposed of with household waste. Recycling Information Potentially explosive atmospheres Areas with potentially explosive atmospheres are often, but not always, posted and can include fuelling areas, such as below decks on boats, fuel or chemical transfer or storage facilities or areas where the air contains chemicals or particles, such as grain dust or metal powders. When you are in such an area, turn off your mobile device and do not remove, install or charge batteries. In such areas, sparks can occur and cause an explosion or fire. Repetitive motion When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a doctor. [Nov0109] Disposal of your mobile device & accessories Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets or batteries) with your household waste. Do not 032376o dispose of your battery or mobile device in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Centre in your region.

Details of Motorola-approved national recycling Content copyright The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor. Content Copyright .



[You're reading an excerpt. Click here to read official MOTOROLA](http://yourpdfguides.com/dref/3341205)

[WX295 user guide](http://yourpdfguides.com/dref/3341205)

<http://yourpdfguides.com/dref/3341205>