



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEC ASPILA EX. You'll find the answers to all your questions on the NEC ASPILA EX in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEC ASPILA EX
User guide NEC ASPILA EX
Operating instructions NEC ASPILA EX
Instructions for use NEC ASPILA EX
Instruction manual NEC ASPILA EX

NEC

Integrated Communication System

Aspila EX

**Key Telephone
Quick Reference Guide**

Nothing contained in this manual shall be deemed to be, and this manual does not constitute, a warranty of, or representation with respect to, any of the equipment covered. This manual is subject to change without notice and NEC Infrontia Asia Pacific Sdn Bhd has no obligation to provide any updates or corrections to this manual. Further, NEC Infrontia Asia Pacific Sdn Bhd also reserves the right, without prior notice, to make changes in equipment design or components as it deems appropriate. No representation is made that this manual is complete or accurate in all respects and NEC Infrontia Asia Pacific Sdn Bhd shall not be liable for any errors or omissions. In no event shall NEC Infrontia Asia Pacific Sdn Bhd be liable for any incidental or consequential damages in connection with the use of this manual. This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied or reproduced without prior written consent of NEC Infrontia Asia Pacific Sdn Bhd.

© 2003 by NEC Infrontia Asia Pacific Sdn Bhd All Rights Reserved.
Printed in Malaysia

Sales & Marketing Regional Head Office
NEC Infrontia Asia Pacific Sdn Bhd
Selangor Darul Ehsan, Malaysia

Issue 1-0
August, 2003



[You're reading an excerpt. Click here to read official NEC ASPILA EX user guide](http://yourpdfguides.com/dref/3801148)

<http://yourpdfguides.com/dref/3801148>

Manual abstract:

This manual is subject to change without notice and NEC Infrontia Asia Pacific Sdn Bhd has no obligation to provide any updates or corrections to this manual. Further, NEC Infrontia Asia Pacific Sdn Bhd also reserves the right, without prior notice, to make changes in equipment design or components as it deems appropriate. No representation is made that this manual is complete or accurate in all respects and NEC Infrontia Asia Pacific Sdn Bhd shall not be liable for any errors or omissions. In no event shall NEC Infrontia Asia Pacific Sdn Bhd be liable for any incidental or consequential damages in connection with the use of this manual. © All rights are reserved. © 2003 by NEC Infrontia Asia Pacific Sdn Bhd All Rights Reserved. Printed in Malaysia Sales & Marketing Regional Head Office NEC Infrontia Asia Pacific Sdn Bhd Selangor Darul Ehsan, Malaysia Issue 1-0 August, 2003 Before using Your Telephone...

Thank you for purchasing NEC Infrontia "Aspila EX" system.

Due to the flexibility built into the system, your Dialing Codes and Feature Capacities may differ from those in this guide. Check with your Supplier / System Administrator and make a note of any differences. For more convenient use...

@@@OneT ABBc ABBg EXT. @ (Refer to P3) You can enter more than 1 characters. " " key is to erase one character at left (Backspace). Press a One-Touch Key for one-button contact with other extensions or outside party. The number registration is necessary.

CHECK CLEAR Line Appearance Keys (CALL1/CALL2) 1 2 3 4 5 6 Programmable Function Keys Used as "Trunk" and/or "Function" keys. COMM.004 7 8 9 10 11 12 13 14 15 16 17 18 These are Intercom keys for placing and answering calls. If you are busy on one just use the other. NEC-i AP 0060355695888 Dial Press " " or " " key to find a desired name. 19 20 21 22 23 24 LND Key CALL1 CALL2 Speaker Ringing Tone, Voice or BGM are sent. MSG ABC DEF DIAL 1 FLASH GHI 2 JKL 3 MNO LND 4 CONF PQRS 5 TUV 6 WXYZ Press CALL1 then LND to automatically redial the last number you called. MIC DND Handset If you are on a Handsfree Call, lift the handset for privacy. 7 8 0 VOL. 9 SPK HOLD DND Key Enable Do Not Disturb to block your calls when you don't want to be interrupted.

This key will also flash when Call Forwarding is activated. COMM.004 NEC-i AP 0060355695888 Dial Press "DIAL" key to place a call.

@@@@@@@@@See Handsfree Options below. @@@@Normally, you have Automatic Handsfree. - Use Handsfree Answerback to answer a voice-announced Intercom call by speaking toward your phone without lifting the handset. '03 MO TU WE TH FR SA SU 26\ 18 19 20 21 22 23 24 27\ 25 26 27 28 29 30 31 28\ 1 2 3 4 5 6 7 29\ 8 9 10 11 12 13 14 OneT 6-24 TUE 10:30AM 200 John List Dir ICM Prog 1 14 For more convenient use... Do Not Disturb (DND) DND Using Your Telephone Alphanumeric Display (Large) <Super Display Key Telephone> 1 (On-Hook) DND : Trunk Incoming Call DND : Intercom Incoming Call DND : Trunk & Intercom Incoming Call DND : Transferred (CFW) Call DND : Cancel Helps you use features and tells you about your calls.

With optional Caller-ID, a ringing line may show your caller's number and name. Indicator Flashes in Green when you have Message Waiting or flashes in Red when there is a call. 2 3 4 0 One-Touch Keys Press a One-Touch Key for one-button contact with other extensions or outside party. The number registration is necessary. Display Toggle Key SA SU 23 24 30 31 67 13 14 OneT 6-24 TUE 10:30AM 200 John List Dir ICM Prog '03 MO TU WE TH 26\ 18 19 20 21 27\ 25 26 27 28 28\ 1 2 3 4 29\ 8 9 10 11 FR 22 29 5 12 Changes the display either "Calendar" or "One-Touch".

DIAL Key Press CALL1, DIAL and dial a bin number for Abbreviated Dialing. Soft Keys Provides quick and easy access to features - just follow the menu on the display. CHECK When you set DND function, DND Key's lamp is lit and the Internal Dial Tone pattern is changed. CLEAR Line Appearance Keys (CALL1/CALL2) These are Intercom keys for placing and answering calls. If you are busy on one just use the other.

Call Forwarding / Follow Me CALL1 CFW Condition Extension Number CFW Type SPK Programmable Function Keys 1 2 3 4 5 6 7 8 9 10 11 12 8 2 3 4 8 8 6 7 0 ? ? ? ? 2 3 4 ? FWD All Calls FWD Outside Calls only FWD Intercom Calls only Used as "Trunk" and/or "Function" keys. 13 14 15 16 17 18 19 20 21 22 23 24 LND Key CALL1 CALL2 Speaker Ringing Tone, Voice or BGM are sent. MSG ABC DEF DIAL 1 FLASH GHI 2 JKL 3 MNO LND When Busy / No Answer Follow Me Immediate When No Answer Both Ring Cancel 4 CONF PQRS 5 TUV 6 WXYZ Press CALL1 then LND to automatically redial the last number you called. MIC DND Handset If you are on a Handsfree Call, lift the handset for privacy. 7 8 0 VOL. 9 SPK HOLD DND Key Enable Do Not Disturb to block your calls when you don't want to be interrupted. This key will also flash when Call Forwarding is activated. When you set Call Forwarding function, DND Key's lamp flashes and Internal Dial Tone pattern is changed. MSG Key Press MSG Key to set / answer a Message Waiting. VOL Keys The Volume Controls are for speaker, handset and ringing calls.

They also adjust the LCD contrast for telephones with a display. HOLD Key Press HOLD to hold the outside line or intercom. Conference CONF Extension Number CONF <twice> FLASH Key MIC Key Press MIC to turn on/off the microphone. (MIC OFF : Lit) ? (Talking) ? ? Telephone Number (Talk) While on a call, press FLASH to hang up or flash. SPK Key Press SPK Key for Handsfree calls, or use the handset instead. See Handsfree Options below. While on a handset call, press SPK once for Handsfree; twice for Group Listen. CONF Key While on a call, press CONF to set up a Conference. Microphone Picks up your voice for Handsfree calls. Press MIC to turn off the microphone.

Trunk Key ? Basic Digital Telephone HOLD ? Handsfree Options Extension Number 8 (Talking) 2 6 ? ? ? (Talk) Telephone Number - Handsfree lets you place and answer calls by pressing "SPK" instead of using the handset. @Normally, you have Automatic Handsfree. @You may be able to have up to 32 parties. @@@@This operation puts your outside call on System Hold. @@@@Ask your Supplier.

This operation puts your outside call on Exclusive Hold. Other extension user can not take the call off Hold. @@@@@@@@@@@@@@See Handsfree Options below. @@@@Normally, you have Automatic Handsfree.



[You're reading an excerpt. Click here to read official NEC ASPILA](http://yourpdfguides.com/dref/3801148)

[EX user guide](http://yourpdfguides.com/dref/3801148)

<http://yourpdfguides.com/dref/3801148>

@@@Number of pressing the Key 1 2 @ B E H K N Q U X ! @@@@Repeat duration is programmable.

Ask your Supplier. You should lift the handset when the called party answered. @@@Press twice to insert a "space". Clear the character entry to the left, one character at a time. @@CALL 1 Bin No. Telephone Number HOLD <twice> Camp On Key (851+35) <Callback> Wait for the system to call you back 8 5 5 ? 9 ? ? Extension Number ? ? ? SPK <Camp On> In case of Intercom Call, when you hear ringing, wait for the called party to answer. In case of Outside Call, when you hear Dial Tone, begin telephone number dialing. <Callback> In case of Intercom Call, when your phone starts the ringing, lift handset and wait for the called party to answer. In case of Outside Call, when your phone starts the ringing, lift handset, hear Dial Tone, and begin telephone number dialing. This function is applicable in case all trunks are busy condition.

(not applicable for dialed outside party busy) Up to 10 (Bin No.0-9) numbers can be registered. @@If you want to continue the operation, dial Bin No.

@@Telephone Number 8 7 0 5 3 ? ? ? 9 ? ? (Group ABB) 8 5 4 Name HOLD SPK Set / Answer a Message Waiting Set MSG ? ? (Hear Busy Tone or No Answer) 8 4 MW Key (851+31) MSG 1 The digit of Bin No. depends on the system setting. (0-9 / 00-99 / 000-999) System setting is necessary for Group ABB function. Ask your Supplier for more details. "9" (Trunk Access Code) should be added on top of number. Name can be entered by Dial Pad Keys. (See P5) Up to 24 digits dialing can be registered, and up to 12 characters can be registered as name.

If you want to continue the operation, dial Bin No. instead of SPK Key to finish. You can skip to enter the name. (No enter any character, then press "HOLD" Key). You can erase the registered number & name by pressing "CLEAR" Key after dialing Bin No.

. Language Selection for your Display <Display Key Telephone> CALL1 Language Type SPK Answer Your phone's Indicator is flashing in Green 8 4 MW Key (851+31) 1 0 1 2 Japanese English German 7 7 3 4 5 8 French Italian Spanish ? 6 7 8 Dutch Portuguese Norwegian 9 Danish Swedish When you set a MW, the called party's Indicator starts to flash, and your .



[You're reading an excerpt. Click here to read official NEC ASPILA EX user guide](http://yourpdfguides.com/dref/3801148)

<http://yourpdfguides.com/dref/3801148>