




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEC E228. You'll find the answers to all your questions on the NEC E228 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEC E228
User guide NEC E228
Operating instructions NEC E228
Instructions for use NEC E228
Instruction manual NEC E228

For the latest version of the NEC e228 product manual, please see http://www.nec europe.com/mobile_phones.asp

- Windows® XP and Windows® 2000 are registered trademarks of Microsoft Corporation in the United States and/or other countries.
- This product contains ACCESS Co., Ltd.s NetFront3 Internet browser software. **ACCESS NetFront**
- NetFront3 is the trademark or registered trademark of ACCESS Co., Ltd. in Japan and in other countries.
- A portion of this software includes software modules developed by the Independent JPEG Group. You may not alter or reproduce, or remove from this product the Internet browser software contained herein.
- Use of the GIF decoder module contained in this product is permitted only as a part of browser software, under a license from Unisys Corporation. For other use, you have to obtain a separate license from Unisys Corporation.
- Purchase and/or use of the browser software contained in this product does not authorise your use of any other product or performance of any other method or activity involving use of the LZW patents or GIF technology, unless you are separately licensed in writing by Unisys Corporation.
- Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.
- T9® Text Input is a registered trademark of Tegic Communications Inc.
- T9 Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, 6,011,554, and 6,307,548; Australian Pat. No. 727539; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT,NL,PT,ES,SE,GB; Republic of Korea Pat. Nos. KR201211B1 and KR226206B1; and additional patents are pending worldwide.
- Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations: 4,901,307; 5,490,165; 5,056,109; 5,504,773; 5,101,501; 5,506,865; 5,109,390; 5,511,073; 5,228,054; 5,535,239; 5,267,261; 5,544,196; 5,267,262; 5,568,483; 5,337,338; 5,600,754; 5,414,796; 5,657,420; 5,416,797; 5,659,569; 5,710,784; and 5,778,338.
- WOW, Dialog Clarity, SRS and  symbol are trademarks of SRS Labs, Inc. **SRS**
- WOW and Dialog Clarity technologies are incorporated under license from SRS Labs, Inc.
- "The James Bond Theme" by Monty Norman© EMI Unart Catalog Inc.(BMI) All Rights Reserved. International Copyright Secured. Used by permission."
- The specifications and information in this manual are subject to change without notice.
- Some contents in this manual may not apply to your phone depending upon the software of the phone or your service provider.



[You're reading an excerpt. Click here to read official NEC E228 user guide](http://yourpdfguides.com/dref/1321250)

<http://yourpdfguides.com/dref/1321250>

Manual abstract:

@ @ You may not alter or reproduce, or remove from this product the Internet browser software contained herein. - Use of the GIF decoder module contained in this product is permitted only as a part of browser software, under a license from Unisys Corporation. For other use, you have to obtain a separate license from Unisys Corporation. - Purchase and/or use of the browser software contained in this product does not authorise your use of any other product or performance of any other method or activity involving use of the LZW patents or GIF technology, unless you are separately licensed in writing by Unisys Corporation. - Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. - T9® Text Input is a registered trademark of Tegic Communications Inc. - T9 Text Input is licensed under one or more of the following: U.

S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, 6,011,554, and 6,307,548; Australian Pat. No. 727539; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat.

No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT,NL,PT,ES,SE,GB; Republic of Korea Pat. Nos.

KR201211B1 and KR226206B1; and additional patents are pending worldwide. - Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations: 4,901,307, 5,490,165, 5,056,109, 5,504,773, 5,101,501, 5,506,865, 5,109,390, 5,511,073, 5,228,054, 5,535,239, 5,267,261, 5,544,196, 5,267,262, 5,568,483, 5,337,338, 5,600,754, 5,414,796, 5,657,420, 5,416,797, 5,659,569, 5,710,784, and 5,778,338. - WOW, Dialog Clarity, SRS and symbol are trademarks of SRS Labs, Inc. - WOW and Dialog Clarity technologies are incorporated under license from SRS Labs, Inc. - "The James Bond Theme" by Monty Norman© EMI Unart Catalog Inc.(BMI) All Rights Reserved. International Copyright Secured. Used by permission." - The specifications and information in this manual are subject to change without notice. - Some contents in this manual may not apply to your phone depending upon the software of the phone or your service provider.

Important Safety Information Emergency services To make an emergency call in any country 1 Ensure that your e228 is switched on and in service. 2 3 Press the Start key to return to the Home screen if needed. Press 112 (or 999 within the UK or 000 in Australia) followed by the Start key. (When the USIM card is not inserted or when the dial lock function is on, press the SK2 (Emrgcy). When the dial lock function is on, press 112 and SK1 (Yes).

Refer to Locking your e228 section on page 28 for further instructions on emergency calls when the key lock is on.) Tell the operator which service you require: Police, Ambulance, Fire Brigade, Coastguard or Mountain Rescue Service. Give your location and, if possible, remain where you are to maintain contact. The 112 emergency number service is available on every digital network service. Alternatively, use 999 in the UK, or 000 in Australia.

Note that these can only be used with a valid USIM. Due to the nature of the cellular system, connection to emergency calls cannot be guaranteed. Follow the instructions and do not end the call until told to do so. General care A phone contains delicate electronic circuitry, magnets and battery systems. You should treat it with care and pay attention to the following: · This phone is fitted with an internal battery that can only be replaced by a qualified service engineer.

There is a risk of explosion if the battery is replaced with an incorrect battery type. Dispose of the used battery in accordance with the manufacturer's instructions. · Do not allow the phone, battery or accessories to come into contact with liquids or moisture at any time. Do not immerse in liquid. · Do not paint the phone.

· Do not drop, throw or subject the phone to rough treatment. · Do not place the phone alongside computer disks, credit cards, travel cards and other magnetic media. The information contained on disks or cards may be affected by the phone. · Do not leave the phone or the battery in places where the temperature could exceed 60 °C, e.g. on a car dashboard or a window sill, behind glass in direct sunlight, etc. · Do not remove the battery while the phone is switched on. · Take care not to allow metal objects, such as coins or key rings to contact or short-circuit the battery terminals. PL-1 Important Safety Information · Do not dispose of batteries in a fire. Dispose of Li-ION batteries at a Li-ION recycling point.

For more specific battery and power supply information, see pages 7 and 8. · Do not put the battery in your mouth, as battery electrolytes may be toxic if swallowed. · Do not attempt to dismantle the phone or any of its accessories. · Do not put a battery into a microwave oven, dryer or high-pressure container. · Do not let the battery come into direct contact with an electric outlet or cigarette lighter charger.

Use only authorised charger units. . . . Do not pierce the battery with a sharp object such as a needle. When the battery is thrown away, be sure it is non-conducting by applying vinyl tape to the (+) and (-) terminals. Do not disassemble or modify the battery. Do not solder the battery directly.

Stop using the battery if you detect any abnormalities, such as odour, discolouration or heat during use, charge or storage. · Do not use the phone with a damaged or misshapen battery. · In the unlikely event of a battery leak, take care to keep the battery discharge away from your eyes or skin. If the leakage does come into contact with the eyes or skin, please flush thoroughly in clean water and consult a doctor. · Remove a worn out battery immediately. · The earpiece may become warm during normal use. Also, the phone itself may become warm while the battery is being charged. · When a phone is set to Vibration mode, the vibration can sometimes cause your phone to move. Be careful not to place the phone near heat sources (such as a heater) or too close to the edge of the table. · Use an anti-static cloth to clean the phone.

Do not use an ordinary dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the case. . . . Remember to recycle the cardboard packaging supplied with this phone. Remember to make backup copies of all important data on your phone. Do not leave the battery pack empty or disconnected for a long time, otherwise some data may be initialised. Take care not to put your phone in your back pocket and then sit on it. Also, do not put your phone at the bottom of a bag where it may be subject to excessive weight or pressure. Doing so may damage the LCD and camera lens and cause them to malfunction.



[You're reading an excerpt. Click here to read official NEC E228 user guide](http://yourpdfguides.com/dref/1321250)
<http://yourpdfguides.com/dref/1321250>

.....
.....

.....
.....
.....

..... 5 To Insert/Remove the USIM Card

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 5 Battery

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 7 To Insert the Battery

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *12 Setting the Clock*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *12 To Set the Clock*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *12 Entering your PIN Code* ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.. 12 To Enter your PIN Code ..

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 12 Check your own number

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.. 12 Understanding the Menus

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

13 Menu options

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 14 To set an image as wallpaper ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 14 Quick Menu and Home Screen Shortcut

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 15 Taskbar .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 17 Taskbar

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 17 Making and Receiving Calls

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

18 Making a Voice Call

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

... 18 CL-1 Contents To Make a Voice Call ..

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....

.....

.....

.....

.....

..... 18 Call Logs

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 20 Receiving a Voice Call ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 21 To Receive a Call ...

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 21 Voicemail

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 22 During a Voice Call ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 23 To Make a Second Call ...

.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 23 To Receive a Second Call

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 23 To Switch to a Grouptalk

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

. 24 Other Operations During a Call

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... 24 Making and Receiving a Video Call .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 25 To Make a Video Call to a Video Capable phone

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 25 To Make a Video Call to a PC with Webcam .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.. 26 To Receive a Video Call ...

.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 26 Operations During a Video Call ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 27 Locking your e228 .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....

.....
28 Setting the Key lock

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *28 To set the Key lock on/off ..*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

28 Emergency calls under the Key lock

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.. 28 Setting up your Contacts

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 29 Contact Entries

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 29 To Register a New Entry in the Contact List ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

. 30 To Add a New Contact Group

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

. 30 Entering Text

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 32 Text entry

.....

.....

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
33 Multitap Text (ABC) Input

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 34 T9® Text Input .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

34 Numeric Input

.....

.....
.....
.....

.....
.....
.....

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 35 Symbol Input

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

35 Other things you can do when editing text

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 36 To Enter a Space

.....
.....
.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 36 Contents CL-2 To Insert a New Line ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 36 To Change the Case ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 36 To Change to Delete/Backspace Mode

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.. 36 To Change to Insert/Overwrite Mode ...

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

. 36 To Copy/Cut and Paste the Text

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.. 36 Using Messaging ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....
.....
.....
.....
.....
..... 37 Overview

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 37 Message Menus .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 39 Writing and Sending a New Message ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.. 43 New Text Message ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... 43 New Video Message

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 44 New Multimedia Message

.....
.....
.....
.....

.....

.....
.....

.....
.....
.....

55 To Reply to a Received Message

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 56 Organising Messages .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 57 Creating Folders

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *57 Remote mailbox.*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *57 Copying or Moving Messages*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

57 To Copy/Move Messages to the Memory Card

.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

..... 57 To Create a Folder Under My Folders .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 58 Changing the Settings on your e228

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 59 Handset Settings ..

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

60 CL-3 Contents Handset profile

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 61 Call time info .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 62 Call options .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.. 62 Making calls ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... 63 Video calls .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 64 Camera settings

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 67 Security

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

... 68 Locks ..

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 70 Language .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 71 Clear settings

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....

..... 76 To Download and Save a File in your e228 File Manager

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.. 76 To Bookmark ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

... 76 Using your e228's Advanced Features ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 78 Photo/Video Camera

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 78 To Take and Send a Photo/Video in a Message

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 78 Multiple selections .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 79 To Select Multiple Items .

.....
.....
.....
.....

.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

... 79 Multi-call/Multi-task ..

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....
.....

.. 79 To Start/Switch Tasks During Multitasking ...

.....
.....
.....
.....
.....
.....

.....
.....
.....

..... 80 High-Speed Data Communications .

.....
.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

... 80 Messaging

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

81 Video Call (available in 3G coverage only)

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 82 Contents CL-4 Using the File Manager ...

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
83 Handset memory

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.. 83 Memory card ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

85 What is Memory Stick Duo™?

.....
.....

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.... 87 Operations

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 88 Memory card tool

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

90 Set permissions

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 91 Settings

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

91 Using the Multimedia Centre

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 93 Capture .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 94 Camera Capture

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

. 94 Camera Options menu

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *97 Camera Settings* ...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. *98 To Take a Photo*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *98 To Make a Video* ..

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 99 To Record Sound

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

100 Player

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

. 105 Connecting your e228 to a PC

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

107 USB

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

107 To Establish a Dial-up Connection to a PC using a USB Cable

.....
.....
.....

.....
.....
.....
.....

.. 108 Data exchange ...

.....
.....

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

..... *108 To activate Data Exchange ..*

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

109 To Transfer Data between the phone and a PC

.....
.....
.....
.....
.....
.....
.....
.....

. 109 Synchronisation

.....
.....
.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 109 To perform local USB synchronisation

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....

... 109 CL-5 Contents To perform OTA remote synchronisation ..

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

109 Synchronisation Options

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.....
.....

.....
.....
. 110 To Register a Server

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....
..... 110 Synchronisation Settings ..

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....
.....111 Using the Toolbox .

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....
... 113 Calendar ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 114 To add a new calendar entry

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 115 To edit a calendar entry

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....

.... 117 To synchronise calendar entries between e228 and a PC .

.....
.....

.....
.....
.....

.....
.....
.....

..... 117 To delete a calendar entry or entries .

.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

.. 118 To Do

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

119 To Add a New To Do Task

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 119 To Edit To Do Tasks .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.. 121 To Delete To Do Tasks ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 121 Alarm clock

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
123 To Set an Alarm

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 123 To Edit an Alarm

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....
..... *125 To Change alarm clock status ..*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 125 To Delete Alarms

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.... 125 Notepad

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *127 Calculator ...*

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *128 Calculator ..*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
..... *.. 128 To Use the Calculator ...*

.....
.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 128 Currency Calculation ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

129 To Convert one Currency to Another

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 129 Call memo ...

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.. 130 To Listen to a Call Memo ...

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 130 To Delete a Call Memo ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 130 Contents CL-6 Shortcut Keys

.....
.....

.....
.....

Before you use your phone you must do the following: · Insert a valid USIM (Universal Subscriber Identity Module) card · Charge the battery · Insert the memory card (Memory Stick Duo™) in the side slot (optional) · Set the date and time This section shows you what to do step by step.

USIM Card 3 provides you with a USIM card that must be inserted into your phone. The USIM card holder is located underneath the battery. If the USIM card is removed, then the phone becomes unusable until a valid USIM is inserted. Always disconnect the charger and other accessories from your phone before inserting and removing your USIM card. To Insert/Remove the USIM Card Ensure that the power is off.

If the power is on, press and hold the End (On-Off) key until power is off. Insert/remove the USIM card as shown in the diagram on the next page. -5- Setting up your e228 Insert a USIM card 1 Remove the battery cover (and the battery). 2 Insert the USIM card into the USIM card holder. USIM card holder 3 Slide the USIM card into place.

Setting up your e228 -6- Battery To Insert the Battery 1 2 3 4 Ensure that your phone is switched off before you insert the battery. Open the battery cover. (see the diagram on page 6). Place the bottom of the battery into position and then push down on the upper section of the battery until it clicks into place. Close the battery cover. Your e228 automatically switches off if the battery voltage is too low. Batteries have a life cycle. If you find that the amount of times you have to charge the battery is increasing dramatically, the battery life may be coming to an end. Replace the battery with a new one of the same type. When the battery is not being used for a long period, remove it from your e228 and store in a place with low humidity and low temperature.

A battery that has not been used for a long period of time needs to be completely discharged and then recharged two or three times before reaching full capacity. You can charge the battery whenever you wish without affecting the performance of the phone. Charging To Charge the Battery Using the Charger 1 2 3 4 Insert the battery into the phone (see To Insert the Battery on page 7). Connect the charger plug to your e228 I/O connector (see the diagram on the next page). Plug the charger into a mains socket. The LED indicator on your e228 lights up while charging is in progress and goes off when charging is completed. After charging is completed, unplug the charger from the I/O connector. -7- Setting up your e228 Connecting the battery charger to the phone Even if the phone remains connected to the charger, the battery's residual capacity may decrease when the phone is used. The battery must be charged at room temperature. Ensure that your phone is switched off.

If the phone temperature is high, wait until it returns to a normal temperature. The recommended battery charge time is approximately two hours. Stop charging the battery if charging is not completed within five hours. Remove the charger from the phone and connect it again to restart the charging. The LED indicator may take a few minutes to light up after the phone starts charging an empty battery.

Low Battery Alarm The battery power has 4 levels and is indicated by the following icons: Empty Battery Low Battery Medium Battery Full Battery Setting up your e228 -8- When the battery runs out, the following image blinks and a warning alarm may be heard. The phone switches off shortly afterwards. Low battery alarm During a call, the image and a discontinuing alarm sound indicate low-power. After approximately 60 seconds the call is disconnected. The volume level of the low-power warning alarm depends on the ringtone volume level on standby and the earpiece volume during a call.

Inserting the Memory card Your e228 supports a "Memory Stick Duo™" (referred to as the memory card) up to 128MB. Please read the important instructions about the memory card in the Important Safety Information section on page PL-5 and in the File Manager section on page 83. Always insert/remove the memory card with the phone switched off. The Memory Stick Duo™ is available through 3 as an optional accessory. -9- Setting up your e228 The following shows the memory card and its components. Memory Card (Memory Stick Duo™) Overview Front Back Memory erasure prevention switch Label Memo area Memory Stick Duo Adapter Connector (do not touch) Memory Stick Duo Adaptor INSERT Insert Memory Stick Duo in this direction Setting up your e228 -10- To insert the memory card Always insert/remove the memory card with the phone switched off. Insert the memory card into the slot with the back facing you, until the memory card is fully inserted into the slot, as shown in the figure below. Setting/removing the memory card Open the Memory Stick Duo™ card slot. Insert the memory card. Remove the memory card.

To remove the memory card 1 2 Push the memory card to release. Carefully pull the memory card out of the slot. Switching your e228 on and off To Switch On After setting the USIM card (see pages 5 and 6) and the battery (see pages 7 and 8), press the End (On-Off) key until the phone switches on (approximately two seconds). To Switch Off In standby mode, press and hold the End (On-Off) key until power is off. There may be some delay while the phone switches off. Do not switch the phone on again during this time. -11- Setting up your e228 Power Saver The power saver function turns the screen off when the phone is left idle for a certain period of time. You can turn the screen back on by pressing any key. Setting the Clock When using your e228 for the first time you are prompted to set the current date and time. To Set the Clock 1 2 Press the MENU key, select the Settings icon, select Date and time, Set date and time and Home time.

Enter the current date and time. Refer to Date and time on page 70 for details. Entering your PIN Code If you want to secure information in your phone, you can activate your PIN code so that the phone cannot be used without entering the PIN as you switch on your phone. (For information about how to activate PIN codes, refer to Security on page 68 in the Settings section.) PIN1 and PIN2 numbers are usually supplied with your USIM card.

If not, or you have lost them, contact 3. To Enter your PIN Code 1 2 3 4 Ensure that your USIM card is in your e228 and that the battery is charged. Press and hold the End (On-Off) key until power is on. If the Password screen is displayed, enter your PIN1. The code you enter appears as asterisks (*).

If you make a mistake while entering your PIN, delete the wrong number by pressing the C key. Press the SK1 (OK). When connecting to the network, the name 3 appears. If you are connecting onto another network, the name of another operator appears. Check your own number To check your own number, press the Menu key and press 0 from the Home screen.



[You're reading an excerpt. Click here to read official NEC E228 user guide](http://yourpdfguides.com/dref/1321250)

<http://yourpdfguides.com/dref/1321250>

Setting up your e228 -12- Understanding the Menus This section describes how to use the menus. You can do various tasks on your e228 using the various menus and submenus. By selecting icons, menus, submenus, options menus or building your own shortcuts, you can access the numerous functions and their settings. · *Icon list* An icon is a graphic image with a name that represents and links to a category of functions or a particular function. · *Menu list* Your e228's functions are reached through a system of menus.

You can select a menu option by scrolling up or down to select an item followed by the Enter key. Alternatively, press the item's corresponding number. If there are more than nine items in a menu, not all of the choices are visible on the same screen. You can scroll up or down to view the next screen. You can reach the main menu by pressing the MENU key. · *Options menu list* (Press the Options menu key when available.) This is a dynamic menu. That is, the options available depend on the function you are using. While an Options menu is available, the Options menu indicator (.) is on. Press the Options menu key to access the menu. Refer to Display on page 4 for details. *Main Menu To Display the Main Menu:* Press the MENU key. *To highlight a Menu icon:* Press the 4-way navigation key or the icon ID number. *Icon ID number -13- Understanding the Menus Menu options* This section shows you how to use the menus. The following example shows you how to set your wallpaper. *To set an image as wallpaper To 1 2 3 4 5 6 7 Display Main Menu Highlight Settings icon Select Settings icon Select Screen settings Select Wallpaper Select an image Do This* Press the MENU key. Main Menu is displayed.

Press the 4-way navigation key to highlight the Settings icon. Whenever an icon is highlighted it has a box around it and the icon name appears at the bottom of the display. Press the Enter key. The User settings menu is displayed. · Press the Up and Down keys to highlight Screen settings and press the Enter key, or, alternatively press 3. alternatively press 2. · Press the Up and Down keys to highlight Wallpaper and press the Enter key, or, Press the Enter key and open the folders. Highlight an image file and press the Enter key. The selected image is displayed in the box. Set the selected image Press SK1 (OK).

as wallpaper The image is set as wallpaper and the screen returns to the Screen settings list menu. *Understanding the Menus -14- Quick Menu and Home Screen Shortcut* You can create shortcuts to an application or a function that you frequently use in the Quick menu or on the Home screen. Whenever you can create a shortcut to an application/function, the Link this menu is available on the SK1. From the SK1, you can select where to add the shortcut, in the Quick menu list or on the Home screen. · *Quick menu* The Quick menu is your customised list of shortcuts to applications/functions. Pressing the MENU key twice on the Home screen or pressing the SK2 (Quick) on Main Menu displays the Quick menu. Highlight the required shortcut by pressing the Up and Down keys and then press Enter key to activate the application/function. The Quick menu display varies depending on the region. · *Home screen shortcut* You can also create shortcut icons to applications/functions on the Home screen. Pressing the Enter key followed by the 4-way navigation keys on the Home screen highlights the shortcuts.

Press the Enter key to select the highlighted shortcut to activate the application/function. *Quick menu -15- Understanding the Menus* Apart from creating shortcuts, you can activate various functions and settings and customise your Home screen. You can press the C key several times to return to the Home screen. To focus on a home screen shortcut, press the Enter key. You can do the following from the Home screen. *What you can do from the Home Screen Task* Activating a Home screen shortcut Changing the active phone profile Accessing the Quick menu Displaying call logs Setting the dial lock function Deleting a Home screen shortcut Moving a Home screen shortcut Pasting the copied phone number onto the Home screen (dialler is activated) Saving the input/copied phone number in Contact list Sending a text message to the input/copied phone number Setting the Home screen type Turning the key lock on/off Steps Press the Enter key on the Home screen. Use the navigation keys to select the desired shortcut and press the Enter key to select. Press the Options menu key and select Handset profile. Select a profile option. Press the Options menu key and select Quick menu. Press the Options menu key and select Call logs. Press the Options menu key and select and Dial lock. Refer to Dial lock on page 68. Select the Home screen shortcut, press the SK2 (Delete). Select the Home screen shortcut, press the SK1 (Move). Highlight the new place and press the SK1 (Place). After you copy a phone number, return to the Home screen and press the Options menu key and select Paste. The copied phone number is pasted on the dialler. After you input/copy a phone number on the Home screen, press the SK2 (Add). After you enter/copy a phone number, press the Options menu key and select Send message.

Press the Options menu key and select Home screen type. Select Standard or Show calendar (the monthly view calendar). Press the MENU key and the key. *Understanding the Menus -16- Taskbar* Pressing and holding the MENU key displays the taskbar at the bottom of the screen. When there are multiple tasks active at the same time, they are displayed on the taskbar as icons. Highlight using the Left and Right keys and press the Enter key to switch to that task. On the taskbar, you can end the selected task by pressing the End key or the SK1 (End task). Pressing the SK2 (End all) ends all tasks. You can cancel the taskbar display by pressing the C key. When you end tasks by pressing the End key, SK1 (End task) or SK2 (End all) the tasks are interrupted, and any unsaved changes discarded.

Taskbar Active tasks (Home screen/Messages/Browser) Press the SK2 (End all) to end all the active tasks. Press the SK1 (End task) to end the selected task. *-17- Understanding the Menus Making and Receiving Calls* This section describes how to make and receive calls. This section guides you through the following step by step: · *Making a Voice Call* · *Receiving a Voice Call* · *Other things that you can do during a Voice Call* · *Making and Receiving a Video Call* (available in 3G coverage only) When using the headset, you can start/end a voice call using the switch on the microphone. *Making a Voice Call To Make a Voice Call To 1* Enter the phone number Do This Enter the phone number using the keypad.

Note: To correct mistakes, press the C key briefly to delete the last number or press and hold the C key to clear all the numbers. 2 3 4 Dial the phone number Talk End the call Press the Start key.



[You're reading an excerpt. Click here to read official NEC E228 user guide](http://yourpdfguides.com/dref/1321250)

<http://yourpdfguides.com/dref/1321250>

Press the End key. Useful Tips Task Making an emergency call Steps Enter the emergency number 999 (UK only), 000 (Australia only) or 112. Press the Start key to make an emergency call.

Note: When the Key lock is set, follow the instructions on page 28 to make an emergency call. Tell the operator your location and which emergency service you require: ambulance, police, rescue services, etc. If possible, remain where you are and keep the line connected. Making and Receiving Calls -18- Task Making an international call Making a call using the Contact list Steps Press and hold 0 to display a "+" symbol. Enter the international country code, then the phone number. Press the Start key to make an international call. Press the MENU key and select Contacts or press the Up or Down key. Note: To scroll the contact list in alphabetical order, press the Down key. Note: From the keypad, enter the first letter of contact entry you want to select. For example, press the 2 key twice to display the Contact entry list starting with B.

Search and select the addressee's phone number. Press the Start key to make a call using the contact list. From the Home screen, press the Left key. Alternatively press the Options menu key, Call logs then Incoming calls. Select the phone number on the list. Press the Start key to make a call from the Incoming calls list. From the Home screen, press the Start key. Alternatively press the Options menu key, Call logs then Outgoing calls. Select the phone number on the list. Press the Start key to make a call from the Outgoing calls list.

From the Home screen, press the Right key. Alternatively press the Options menu key, Call logs then Missed calls. Select the phone number on the list. Press the Start key to make a call from the Missed calls list. Enter a contact memory number from 2 to 99.

Press the Start key to call the phone number registered for the memory number. For the contact memory whose number is 2 to 9, you can also make a call by pressing and holding the key assigned to the number you want to dial. The memory number from 2 to 9 can be changed from the Speed dial screen. To find the Speed dial screen, press the MENU key, select Contacts, press the Options menu key and select Speed dial. Note: Pressing 1 and the Start key, or pressing and holding 1 calls the voicemail centre.

Note: If more than one phone number is registered for a memory number, the first number is used to make a call. Making a call from Incoming calls list Making a call from Outgoing calls list Making a call from Missed calls list Speed dial -19- Making and Receiving Calls Task Pause Dial Steps Enter the phone number, then press and hold # to insert a pause (displayed as p). Input the numbers to call, inserting pauses where necessary. Press the Start to dial the input numbers. When the other party answers the call, press the SK1 (Send) to dial the numbers after the pause. Keep pressing the SK1 until you have dialled all the required numbers. After entering the phone number, press the key and enter the subaddress number. You can specify one sub-address (office extension number, etc.) for each. Entering the sub-address of a phone number Call Logs Press the Options menu key Call logs Call logs are lists of call records such as incoming/outgoing/missed calls.

Up to 20 entries are saved in each call log. You can make a call using these logs, and do the following from Call logs on the Options menu. Item Outgoing calls Incoming calls Missed calls Clear all logs Automatic delete Duplicate records Description You can also see the Outgoing calls by pressing Start key from the Home screen. You can also see the Incoming calls by pressing Left key from the Home screen. You can also see the Missed calls by pressing Right key from the Home screen. Deletes all the call log data. Turns the automatic deletion function on/off. This function automatically deletes the call logs when you switch off the phone. Selects whether to allow multiple records to/from the same number to be made on the log or not. Select Allow or Do not allow. If you miss a call, it is shown as a missed call by an icon on the Home screen. After you display Missed calls the icon disappears. Making and Receiving Calls -20- Receiving a Voice Call When someone makes a voice call to your 3 number, the ringtone, the illumination and the vibrate function are activated depending on your settings. When the Calling Line Identification (CLI) function has been activated by the caller, the caller's phone number is displayed. If the caller opts to hide their phone number, the e228 generates a message indicating that the phone number has been withheld.

Common Tasks To Receive a Call To 1 Answer the call Do This Press the Start key or SK1 (Answer). Note: When Any key answer function is activated, you can press any key except the SK2 (Ignore), End key, and the Options menu key to answer the call. Refer to Call options on page 62 for details. Note: When the headset is connected, pressing the headset switch also answers the call. 2 3 Talk End the call Press the End key.

The call is disconnected and the call time duration is displayed. Useful Tips Useful tips for receiving a call are shown below: Task Turning off the ringtone Turning off the ringtone while ringing Rejecting a call Steps You can mute the ringtone by setting the active phone profile's Ring volume to Silent. Refer to Handset profile on page 61. To mute the ringtone while ringing, press the C key. While receiving a call, press the End key or the SK2 (Ignore). Note: Rejected calls are diverted to the number registered in Call forwarding, If busy. This usually defaults to voicemail, depending on the network operator. If you miss a call, it is shown as a missed call by an icon on the Home screen. The missed call is saved to the Missed calls list. When you display Missed calls, the icon disappears.

When you miss a call -21- Making and Receiving Calls Task Rejecting the second call Steps Press the Options menu key, Ignore call. Note: Rejected calls are diverted to the number registered in Call forwarding, If busy. This usually defaults to voicemail, depending on the network operator. Press the Options menu key, Divert call. The registered call forwarding number is displayed. Check the phone number and press the SK1 (OK). The call is diverted to the phone number registered in Call forwarding setting. (Refer to Call forwarding on page 69 for details.) If you want to divert a call to another number or there is no phone number registered, enter or search for the phone number. Forwarding a voice call (available in 3G coverage only) Voicemail When you forward a call to the voicemail centre, the caller may leave a message for you.

If a message is left, the voicemail icon is displayed on your screen. Call the voicemail centre to retrieve the message, following the instructions below. For how to set the voicemail setting, refer to Voicemail in Call options on page 63.



[You're reading an excerpt. Click here to read official NEC E228 user guide](http://yourpdfguides.com/dref/1321250)

<http://yourpdfguides.com/dref/1321250>

To Call voicemail centre Do This Do one of the following; · Press and hold the 1 key, or · Press the 1 key and the Start key. Making and Receiving Calls -22- During a Voice Call Some of the tasks described here are only available if you have subscribed to certain services.

Ask 3 about details on service subscription. Common Tasks To Make a Second Call To 1 2 Enter the second phone number Dial the second phone number Press the Start key. The numbers you entered are dialled and the first call is automatically put on hold. To switch calls: Press the SK1 (Swap) or press the Options menu key, Swap calls. To end the current call: Press the End key or press the Options menu key, End call and End active call. To end the call on hold: Press the Options menu key, End call and End held call. To end both calls: Press the End key twice. Do This 3 4 Talk End the calls To Receive a Second Call To 1 Another call received during a call Answer the second call, i.e. another call received during the first call. Talk End the call Do This Press the SK1 (Answer). The first call is automatically put on hold. 2 3 To switch calls: Press the SK1 (Swap). Alternatively, press the Options menu, Swap calls. To end the current call: Press the End key.

Alternatively, press the Options menu key, End call and End active call. To end the held call: Press the Options menu key, End call and End held call. To end both calls: Press the End key twice. -23- Making and Receiving Calls To Switch to a Grouptalk To 1 2 Switch to Grouptalk Talk Do This (When there are two calls on-line: the current call and a held call) Press the Options menu key, Join calls. Note: Press the Options menu key, Grouptalk. Pressing the SK1 (Split) splits the selected caller from the Grouptalk and the SK2 (Drop) drops the selected caller from the Grouptalk. Press the End key. 3 End the call Other Operations During a Call To Use the Scratchpad Adjust the earpiece volume Search the contact list Put a call on hold Do This If you enter keypad characters during a call, these characters remain displayed on the screen after the call is finished. Press the Up and Down key to adjust the volume while on a call. Press the SK2 (Contact) to display the Contact list.

While talking, press the SK1 (Hold). Alternatively, press the Options menu key and select Hold call. The call will be put on hold. To retrieve the call, press the SK1 (Retrieve). Alternatively, press the Options menu key, Retrieve call.

When you have a connected call and a held call, press the SK1 (Swap). Alternatively, press the Options menu key, Swap calls. The connected call is put on hold and vice versa. Press the Options menu key and select Call memo to start recording the conversation. To stop the recording, press the Enter key. Both your voice and the other party's voice are recorded. (20 seconds max.) Five call memos can be recorded in the phone. A call memo is displayed with its date and time of recording. For further information about using call memos, refer to Call memo on page 130. Note: Always ask the other party's permission to record. Note: You cannot attach call memos to messages or copy them to the memory card. Swapping the connected and held call Record a Call memo Making and Receiving Calls -24- To Activate Settings Do This Press the Options menu key and select Settings to see the following settings: Auto answer: Turns on/off automatic answering. Set answer key: Selects Use any key or Send key only as the call answering key. Auto redial: Turns on/off automatic redial.

Send DTMF tones: Enables/disables the sending of Dual Tone Multi Frequency (DTMF) signals. Divert to: Sets the phone number to forward the call to. Mute: Turns on/off mute. You can only receive a third call if you end one of the current/held calls. Press the Options menu key and select the appropriate option to end the current/held call. Receive a third call Making and Receiving a Video Call Available in 3G coverage only For further information on changing the default settings for a video call, refer to Video calls on page 64. To Make a Video Call to a Video Capable phone To 1 2 3 Enter a phone number Start the video call Talk and focus the camera Do This Enter the phone number, using the keypad or the call logs. For further information on Call Logs, refer to page 20. Press the SK1 (Vid. call).

When the other party responds, hold the camera towards you and talk. Adjust the camera position if necessary. Note: Handsfree is set by default for video calls. Press the End key. 4 End the call -25- Making and Receiving Calls To Make a Video Call to a PC with Webcam This service is network dependent. Please contact 3 for further details. To 1 2 Select the email address you want to contact Start the video call Do This Select the email address from the contact list, the Incoming calls/Missed calls list, etc. Press the SK1 (Vid. call). Note: The video call may take some time to connect.

Please be patient. The connection time also depends on how quickly the other party answers the call. To Receive a Video Call To 1 2 Receive a video call Answer the call Do This The phone indicates that you are receiving a video call. Press the Start key or SK1 (Answer) to answer and send the captured image from the active camera to the other party. Note: To answer the video call without sending your image, press the SK2 (No video). The alternative photo is sent to the other party. Useful Tips Task Making a video call using the contact list Steps 1 2 3 Press the MENU key and select Contacts or press the Up or Down key. Search and select the addressee's phone number/email address. Press the SK1 (Vid. call) to dial the phone number/email address.

Press the Right key to display Missed calls. Search and select the addressee's phone number/email address. Press the SK1 (Vid. call) to dial the phone number/email address. Press the Left key to display Incoming calls. Search and select the addressee's phone number/email address. Press the SK1 (Vid. call) to dial the phone number. Press the End key or press the Options menu key and select Ignore. Making a video call from the Missed calls number list 1 2 3 1 2 3 1 Making a video call from Incoming calls number list Rejecting the incoming video call Making and Receiving Calls -26- Task Screen setting Steps 1 The received image and the sent image can both be displayed on the screen.

Press the Options menu key. Switch between Use photo instead to hide your image (sent image) Operations During a Video Call Task Setting the handsfree mode Steps Press the Options menu key and select Handsfree. Select Handsfree on or Handsfree off. When the handsfree option is on, the microphone sensitivity increases, and the other party's voice can be heard from the speaker. Press the Right key to zoom in or the Left key to zoom out. To turn the microphone on/off, do one of the following: Zoom in/out Turning the microphone on/off (sending/ not sending your voice to the other party) · Press (Mute/Unmute) to switch the microphone on and off.



[You're reading an excerpt. Click here to read official NEC E228 user guide](http://yourpdfguides.com/dref/1321250)

<http://yourpdfguides.com/dref/1321250>

· Alternatively, press the Options menu, Other settings and Mute settings. Select Mute or Unmute. Press the SK2 (In/Out) to switch to the other camera. Switching cameras (Available only while sending the camera image) Turning your camera on/off (sending/not sending your image to the other party) Changing the screen display mode Press the Options menu, then either Use live video or Use photo instead (whichever is displayed). Press the Options menu then Screen mode. Select My side is smaller (to display your image on the smaller window), My side is larger (to display your image on the larger window), Other side only (to display only the other party's image) or My side only (to display only your image). Press the Options menu key, Picture quality. Select Standard, Better picture (image quality has the priority) or Faster movement (capturing movement has the priority). Press the Options menu key, Camera mode. Select Portrait mode, Landscape mode or Night-time mode. Press the Options menu key and Lighting settings. Select Sunny, Cloudy, Automatic or Indoors. Press the Options menu key, Other settings and Show call length. Select Show call length or Do not show.

Press the Up and Down keys. Changing the picture quality Changing the camera mode Setting the lighting mode Setting the call time duration information Adjusting the speaker volume -27- Making and Receiving Calls Locking your e228 This section describes how to prevent your phone from being used except for answering voice/video calls. Sometimes when a task has already started, it continues even after you have locked your phone. When your phone is locked, you cannot switch it off. Remember to unlock it before switching it off. Setting the Key lock You can only set the key lock from the Home screen. Even when some tasks are open, you can return to the Home screen by pressing the Start key. To set the Key lock on/off To 1 Set the Key lock on/off Do This On the Home screen, press the MENU key and key. Emergency calls under the Key lock While the phone is locked, you can make emergency calls only to the designated numbers. Follow the steps below to make an emergency calls while the key lock is set.

To 1 Enter the designated emergency number Do This Enter the designated emergency number (see Making an emergency call on page 18 for the designated numbers). The confirmation message is displayed. Note: The screen below is displayed until you enter the designated emergency number correctly. Unlock instruction 2 Call the number Press SK1 (Yes). Your e228 is unlocked temporarily and the emergency call is made.

Locking your e228 -28- Setting up your Contacts This section describes how to work with contacts. Press the "MENU" key select "Contacts" icon Contact Entries Up to 500 entries can be registered from the phone Contact list. Up to 254 entries can be read from the USIM contact list, depending on your USIM card (please ask 3 for details). The maximum number of contacts in the e228 is affected by the number of fields used in each contact entry. The following shows the data that you can enter under a name in the Contact list: Data Name Nickname Image Contact group Phone number Phone Contact List (32 single-byte characters max.

) (32 single-byte characters max.) One image file Choose from 16 groups Up to four phone numbers (36 digits max. for each) Up to 37 digits can be entered per phone number when it includes the international code "+". Up to 3 email addresses Note: Though an email address can contain up to 90 single-byte characters when you register the Contact entry, it is limited to 31 single-byte characters when you send video calls. One homepage address (256 single-byte characters max). USIM Contact List (This item can be registered, edited and deleted.) One phone number (This item can be registered, edited and deleted.) - Email URL - -29- Setting up your Contacts Common Tasks To Register a New Entry in the Contact List To 1 2 3 Start the Contacts function Start a new contact entry Fill in the data Do this Press the MENU key and select Contacts. Alternatively, press the Up or Down key. Press the Options menu key and select Add contact.

Fill in data on the displayed Add contact screen and press the SK1 (OK). The data you entered is saved as a contact entry. Note: You can change the Add contact field so that only the name, number and category is requested. To do this, press the Options menu key, select Settings and Set add method. Choose between Quick add and Standard method. To Add a New Contact Group To 1 2 Access the Contact list Edit the contact group profile Do this Press the MENU key and select Contacts. Press the Options menu key and select Contact groups. Select a contact group entry and press SK1 (Edit) to fill in the profile data. You can edit the group name, set a group image and select ringtones, illumination and vibration patterns for incoming voice calls, video calls or messages from a member of that group. Press the SK1 (OK).

Display a contact entry. Press the Options menu key and select Edit contact. Select the group name in the group box. The profile is applied to all registered members. 3 4 Save the changes Register contact entries to the group Setting up your Contacts -30- Useful Tips Task Quickly displaying Contact numbers 1 to 99 Sorting contact entries Editing a contact entry Deleting a contact entry Writing a message from a contact entry Steps Enter the memory number and press the # key.

Press the Options menu key, select Settings, Sort records. Select the sorting method. Note: Available only when you access Contacts from the Main Menu. Search and select the entry and then press the Enter key twice. Search and select the entry and then press the Options menu key. Select Delete and Selected data. Note: Available only when you access Contacts from the Main Menu. Search and select the entry then press the Enter key. Highlight the phone number or email address and press the SK2 (Msg). When an email address is highlighted, you can also open the message screen by pressing the Start key. Search and select the entry and press the Options menu key and select Copy or Move. Select the destination and press the Enter key. Note: Available only when you access Contacts from the Main Menu. Search and select the entry and press the SK1 (Use). The selected data is extracted the last application (message writer, notepad, etc.

). Press the Options menu key and select Memory status. The total number of contact entries allowed for the default memory, used memory and free entry numbers are displayed. Copying and moving Extracting contact entry information Displaying the contact memory status -31- Setting up your Contacts Entering Text This section describes how to enter and edit text. There are four types of text entry: · Multitap Text (ABC) Input: Where you press each key as many times as needed to display the character you want.



[You're reading an excerpt. Click here to read official NEC E228 user guide](http://yourpdfguides.com/dref/1321250)

<http://yourpdfguides.com/dref/1321250>

· T9® Text Input: Where intuitive texting predicts the word you are trying to enter. · Numeric Input: Where you enter numbers. · Symbol Input: Where you enter symbols, Greek characters, or characters with accents. T9® Text Input is covered by the United Kingdom Pat. No. 2238414B, Euro. Pat. No. 0 842 463 (96927260.8) and other patents pending.

The maximum number of characters allowed in an item or a field is defined as the number of single-byte characters that can be input. When entering double byte characters such as accents (ë, î, ô, etc.) or triple byte characters such as the Euro symbol (€), the maximum number of characters varies accordingly. Here are some examples of text entry methods. Entering Text -32- Text entry Text entry field To start messaging: Content type Press the SK2 (Msg).

Or press the MENU key, Messages and press the SK1 (New). (Refer to the Writing and Sending a New Message on page 43 for details) To change the input mode: Remaining number of characters Press the Enter key to start inputting text from the text entry field. Press SK1 (Mode) to select the text entry mode you require. Input mode icons To change the Editing options: Press the Options menu key from the text entry screen. Select Editing options or press 6. Change the settings in Editing options. Editing options <input mode> Multitap input <Clear mode> Delete Backspace <Write mode> Insert Overwrite T9® input (Predictive text) Numeric input -33- Entering Text Multitap Text (ABC) Input The following example shows how to enter the word dog in a text message: To 1 2 3 Enter d Enter o Enter g Do this Press the (3DEF) key once, then d appears. Press the (6MNO) key three times, then o appears. Press the (4GHI) key once, then g appears. Press the Right key to move to the next character position.

Enter the 0 key to select and insert a space. key to switch lower case, upper case (shift) and Caps lock. Press the T9® Text Input In the T9® text Input mode, you press each key only once, even if the character you want is not the first character on the key. When you press the keys, different words are suggested. If the word you want is not suggested, you can edit the word and register it in the dictionary for access the next time. The following example shows how to enter the word fog in a text message: To 1 2 Enter fog Convert and select the word you want Do this Press the (3DEF) (6MNO) (4GHI) keys. The word "dog" should appear. Press the SK1 (Next), SK2 (Prev.) or # key to display the word you want, then press the Right key to enter the displayed word or the 0 key to select and insert a space. Do this until the word "fog" appears.

Enter fog by using the Multitap Input Mode. The word is registered in the dictionary. If you enter the (3DEF) (6MNO) (4GHI) keys the next time, you can select the word fog. 3 If the word you want is not suggested, edit the word and register it by using the Multitap Input Mode To insert symbols and face marks, press Options menu and press 1 (see Symbol input section on page 35 for details). Press the key to switch lower case, upper case (shift) and Caps lock.

Entering Text -34- Numeric Input Here is the example to enter 364 in a text message after changing to the Numeric Input mode. To 1 2 3 Enter 3 Enter 6 Enter 4 Do this Press the (3DEF) key; then 3 appears. Press the (6MNO) key; then 6 appears. Press the (4GHI) key; then 4 appears. You can also enter numbers using the multitap and the T9® text input modes by pressing and holding the keys.

Symbol Input To open the symbol input menu, press the # key in the multitap input, the T9® input or the numeric input mode. Highlight the line in which the symbol you want is located. You can move the highlighted line by using the 4-way navigation key. Find the keypad character displayed above the symbol and press the key. The temporary symbol menu disappears after inserting a symbol. The symbol menu is displayed as follows: Symbol menu Press Right/Left navigation key to go to Previous/Current/Next pages You can cancel the temporary symbol menu by pressing the C key. -35- Entering Text Other things you can do when editing text To Enter a Space To enter a space in the text in the Multitap Text Input mode or the T9® text input mode, press the 0 key. To Insert a New Line To insert a new line in the text, move the cursor to the insertion point of the new line, press and hold the # key. Alternatively, press the Options menu key, New line. To Change the Case Press the key to toggle between Shift (next letter in upper case), Caps Lock and Lower case (see diagram on page 33).

To Change to Delete/Backspace Mode To change to delete/backspace mode, press the Options menu key, Editing options, then Delete or Backspace in Clear mode. In Delete mode, you can delete characters after the cursor. In Backspace mode, you can delete characters before the cursor. To Change to Insert/Overwrite Mode To change to insert/overwrite mode, press the Options menu key, Editing options, then Insert or Overwrite in Write mode. To Copy/Cut and Paste the Text To 1 2 Activate copy/cut Specify the copy/cut starting point Do this Press the Options menu key in the text input mode, then select Copy/Cut. Move the cursor to the starting point by using the 4-way navigation key and press the Enter key. Note: You can cancel the specified copy/cut starting point by pressing the C key. Move the cursor to the end by using the 4-way navigation key and press the Enter key. Note: The clipboard's maximum capacity is 1024 bytes. Move the cursor to the paste point by using the 4-way navigation key.

Press the Options menu key, then select Paste. 3 Specify the copy/cut ending point 4 5 Specify the paste point Paste the block You can paste copied/cut text into other applications. Entering Text -36- Using Messaging Press SK2 (Msg) on the Home screen or press the MENU key Select Messages or Press the 2 key. This section describes how to work with messages: · Overview · Message Menus · Writing and Sending a New Message · Receiving and Reading a Message · Replying and Forwarding · Organising Messages Overview Message Types · Text messaging Your e228 supports the following message types: To send a text message, the person you are calling must be a text messaging or SMS service subscriber. · Video messaging allows you to send messages with multimedia files attached.

Multimedia files include video clips, audio files and image files. Up to 60 attachments are allowed per message, with the total message size not exceeding 100 KB, including the message text. When you receive a video message, you are notified by a message from the message centre. You can either automatically or manually receive the contents of a video message.



[You're reading an excerpt. Click here to read official NEC E228 user guide](http://yourpdfguides.com/dref/1321250)

<http://yourpdfguides.com/dref/1321250>