

Manual abstract:

@@You may not alter or reproduce, or remove from this product, the Internet browser software contained herein. - Use of the GIF decoder module contained in this product is permitted only as a part of browser software, under a license from Unisys Corporation. For other use, you have to obtain a separate license from Unisys Corporation. - Purchase and/or use of the browser software contained in this product does not authorise your use of any other product or performance of any other method or activity involving use of the LZW patents or GIF technology, unless you are separately licensed in writing by Unisys Corporation. @@in the U.S. @@- T9 Text Input is licensed under one or more of the following: U.S. Pat. Nos.

@@No. 727539; Canadian Pat. No. 1,331,057; United Kingdom Pat. No.

2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.

Pat. No. @Nos. KR201211B1 and KR226206B1; and additional patents are pending worldwide. - Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations: 4,901,307, 5,490,165, 5,056,109, 5,504,773, 5,101,501, 5,506,865, 5,109,390, 5,511,073, 5,228,054, 5,535,239, 5,267,261, 5,544,196, 5,267,262, 5,568,483, 5,337,338, 5,600,754, 5,414,796, 5,657,420, 5,416,797, 5,659,569, 5,710,784, and 5,778,338. - WOW, Dialog Clarity, SRS and symbol are trademarks of SRS Labs, Inc. - WOW and Dialog Clarity technologies are incorporated under license from SRS Labs, Inc. - "The James Bond Theme" by Monty Norman© EMI Unart Catalog Inc.(BMI) All Right Reserved. International Copyright Secured.

Used by permission." - The specifications and information in this manual are subject to change without notice. - Some contents in this manual may differ from your handset depending upon the software of the phone or your service provider. Emergency Services and Safety Precautions Emergency services To make an emergency call in any country 1 Ensure that your e313 is on and in service. Press Start key to return to the Home screen if needed. Press 112 (or 999 within UK or 000 in Australia) followed by the Start key. (When the USIM card is not inserted or when the dial lock function is on, just press the Soft key (SOS). When the key lock function is on, press 112 and SK1 (Yes). Refer to Key lock section on page 12 for further instruction emergency calls when the key lock is on.) 2 3 Follow instructions received and do not end call until told to do so.

Tell the operator which service you require: Police, Ambulance, Fire Brigade, Coastguard or Mountain Rescue Service. Give your position and, if possible, remain stationary to maintain contact. The 112 emergency number service is available on every digital network service while in the UK an alternative is 999 and in Australia 000. Note that these can only be used with a valid USIM. Due to the nature of the cellular system, the connection of emergency calls cannot be guaranteed.

General care A handset contains delicate electronic circuitry, magnets and battery systems. You should treat it with care and give particular attention to the following points: · Do not allow the handset, battery or accessories to come into contact with liquids or moisture at any time. Do not immerse in any liquid. · Do not paint the handset. · Do not drop, throw or subject the handset to rough treatment.

· Do not place the handset alongside computer disks, credit cards, travel cards and other magnetic media. The information contained on disks or cards may be affected by the handset. · Do not leave the handset or the battery in places where the temperature could exceed 60 °C, e.g. on a car dashboard or a window sill, behind glass in direct sunlight, etc. · Do not remove the handset's battery while the handset is switched on. · Take care not to allow metal objects, such as coins or key rings to contact or short-circuit the battery terminals. · Do not dispose of battery packs in a fire. The handset's Li-ION batteries may be safely disposed of at a Li-ION recycling point. For more specific battery and power supply information, see pages 6 and 7.

PL-1 Emergency Services and Safety Precautions · Do not put the handset's battery in your mouth, as battery electrolytes may be toxic if swallowed. · Do not attempt to dismantle the handset or any of its accessories. · This equipment is fitted with an internal battery that can only be replaced by a qualified service engineer. There is a risk of explosion if the battery is replaced with an incorrect battery type. Dispose of the used battery in accordance with the manufacturer's instructions. · Do not put a battery into a microwave oven, dryer or high-pressure container. · Do not contact battery directly to an electric outlet or cigarette lighter charger. Use only authorised charger units. · Do not pierce battery with a sharp object such as a needle. · When the battery is thrown away, be sure it is non-conducting by applying vinyl tape to the (+) and (-) terminals.

· Do not disassemble or modify the battery. · Do not solder a battery directly. · Stop using the battery if abnormal heat, odor, discolouration, deformation or abnormal condition is detected during use, charge or storage. · Do not use with a damaged or deformed battery. · In the unlikely event of a battery leak, take care to keep the battery discharge away from your eyes or skin.

If the leakage does come into contact with the eyes or skin, please flush thoroughly in clean water and consult with a doctor. · Remove the battery whose life cycle has expired from equipment immediately. · The earpiece may become warm during normal use. Also, the handset itself may become warm while the battery is being charged. · When a handset is set to Vibration mode, the vibration can sometimes cause your e313 handset to move.

Be careful not to place the handset near heat sources (such as a heater) or too close to the edge of the table. · Use an anti-static cloth to clean the handset. Do not use an ordinary dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the case. · Remember to recycle: the cardboard packing supplied with this handset is ideal for recycling. · Remember to make backup copies of all important data on your handset. · Do not leave the battery pack empty or disconnected for a long time, otherwise some data may be initialised. · Take care not to put your phone in the back pocket of your trousers or skirt and then sit on it. Also, do not put your phone at the bottom of bag where it may subject to excessive weight or pressure. Doing so may damage the LCD and camera lens and cause them malfunction.



[You're reading an excerpt. Click here to read official NEC E313 user guide](http://yourpdfguides.com/dref/537789)

<http://yourpdfguides.com/dref/537789>

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *7 Inserting the Memory card ..*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *9 To Power On ..*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *10 To Power Off .*

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

10 Power Saver

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 11 To Set Clock

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
... 11 To Enter PIN

.....
.....
.....
.....
.....

.....
.....
.....
.....
.....

.....
.....
.....
.....

..... 11 Powering your e313 On and Off

.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
.....

.... 10 Setting Clock .

.....
.....
.....
.....
.....

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 11 Entering PIN Code

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

. 11 Check your own number

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 11 Key Lock

.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 12 To set the Key lock on/off ...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.... 12 Setting the Key lock .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.. 12 Emergency calls under the Key lock ...

.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 12 Making and Receiving Calls .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 13 To Make a Voice Call .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 14 Making a Voice Call

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

14 CL-1 Contents Call Logs

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 16 To Receive a Call ...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 17 Voicemail

.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *18 To Make a Second Call ..*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... *19 To Receive a Second Call*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 19 To Switch to a Grouptalk

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.. 20 Other Possible Operations During a Call ...

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 20 To Make a Video Call to a Video Capable Handset

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 22 To Make a Video Call to a PC with Webcam ...

.....
.....
.....

.....
.....
.....

.....

.....
.....
.....

22 To Receive a Video Call

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 22 Operations During a Video Call

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 23 Receiving a Voice Call ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
.....

. 17 During a Voice Call

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

19 Making and Receiving a Video Call

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... 22 Text Entry

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 25 Display Information .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 26 Multitap Text (ABC) Input ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 27 T9® Text Input ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 27 Numeric Input

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

28 Symbol Input

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 29 To Change to Delete/Backspace Mode

.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.. 29 To Change to Insert/Overwrite Mode

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 29 To Copy/Cut and Paste the Text

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 29 Other functions whilst editing text ...

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 29 Browser

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 35 To Download a File and Save it in your e313 File Manager ...

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 35 Browser Menus

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 31 Contents CL-2 To Register a Bookmark

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

35 Advanced Features

.....
.....
.....
.....

.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 37 To Take a Photo/Make a Video and Send it Attached to a Message .



[You're reading an excerpt. Click here to read official NEC E313 user guide](http://yourpdfguides.com/dref/537789)

<http://yourpdfguides.com/dref/537789>

.....
.....
.....
.....

.....
.....
.....
.....

..... *37 To Select Multiple Items*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..... *38 To Start/Switch Task During Another Task*

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *39 Photo/Video Camera*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....

. 37 Multiple selection

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 38 Multi-call/Multi-task

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 38 High-Speed Data Communications

.....
.....

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

..... *39 Messaging*

.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

... *39 How to Use the Menu Function* ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *41 To set an image as wallpaper* ..

.....
.....
.....

.....
.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

... 42 Menu Functions Operations ..

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 42 Quick Menu and Home Screen Shortcut ..

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 44 Display information of Task bar

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
.....
..... 46 Taskbar ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
..... 46 Message .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
..... 47 Overview

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *48 Message Menus*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *49 New Text Message* ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
53 New Video Message

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *54 New Multimedia Message* .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

55 New Email

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
..... 55 To Edit a Slide Show

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
..... 58 To Receive a Video Message or Multimedia Message .

.....
.....

.....
.....
.....

.....
.....
.....

.....
..... 59 To Receive a Video Message/Multimedia Message Manually

.....
.....

.....
.....
.....

.....
.....
.....

..... 60 To Read a Message ...

.....
.....
.....

.....
.....
.....

.....

.....
.....
.....

.....
.....
.....
.....

.....
.....

.. 60 To Control the Multimedia Message Player ...

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 64 Writing and Sending a New Message

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 53 Receiving and Reading a Message

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....

..... 59 *Replying and Forwarding*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.... 64 *CL-3 Contents To Reply to a Received Message in Inbox*.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

64 *To Forward a Received Message in Inbox*

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 65 *To Reply to a Received Message*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *65 Creating Folders*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

66 Remote mailbox

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 66 Copying or Moving Messages

.....
.....
.....
.....

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

. 66 To Copy/Move Messages to the Memory Card

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

66 To Create a Folder Under My Folders

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 67 Message Memory Maintenance

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 66 File manager

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 68 Handset memory

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 69 What is "Memory Stick DuoTM"?

.....
.....
.....

.....
.....
.....

.....

.....
.....
.....

..... *73 Memory card*

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... *71 Operations*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

. *74 Memory card tool*

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 75 Contacts ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

76 To Register a New Entry in the Contact

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 77 To Add a New Contact Group

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

77 Contact Entries

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

76 Java™

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

. 79 To Run Downloaded Applications

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

79 Set permissions

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 80 Settings

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
80 Applications

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

79 Multimedia centre

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.. 82 Camera Capture Screen ...

.....
.....

.....
.....
.....

.....
.....
.....

.....

.....
.....
.....

..... *84 Camera Options menu*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *86 Camera Settings*

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *87 To Take a Photo*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 87 Capture

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... 84 Contents CL-4 To Make a Video .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... 88 To Record Sound .

.....
.....
.....

92 To Play an Audio File

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 94 Player

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 90 Connections

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
... 96 To Establish a Dial-up Connection to a PC using an USB Cable ..

.....
.....
.....
.....
.....

.....
.....
.....

..... 97 Data exchange

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 98 To activate Data Exchange

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 98 To Transfer Data between the Handset and a PC

.....
.....
.....
.....
.....
..... *100 To Register a Server*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
..... *101 Synchronisation Settings* ..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *101 USB*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

97 Synchronisation

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.... 99 Settings .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

103 Handset profile

.....

.....
.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
. 105 Call time info. ...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
106 Call options

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
 . 106 Camera settings

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 109 Video call options

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 109 Video call service ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....

.....
.....
.....

.....
.....
.....
..... *109 Handset Settings* .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....
..... *104 Video calls* .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
..... *108 Screen settings* .

.....
.....
.....
.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 110 Network

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..111 Locks ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
..... *112 Security ...*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
..... *. 112 CL-5 Contents Set codes*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
..... *112 Supplementary*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

... 113 Date and time ..

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 114 Language

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 115 Reset

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 115 Toolbox

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.... 116 To Add a New Schedule .

.....

.....
.....
.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

. 118 To Edit a Schedule

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 120 To synchronise a schedule data between your e313 and a PC

.....

.....

.....

.....

.....

.....

.....

.....

... 120 To Delete a Schedule

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 121 To Add a New To Do Task .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 122 To Edit To Do Tasks ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 123 To Delete To Do Tasks

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

123 To Set an Alarm

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 125 To Edit an Alarm

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 126 To Change alarm clock status ..

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.....
. 126 To Delete Alarms

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.... 127 To Create a New Notepad Entry .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
... 128 To Edit a Notepad Entry ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
..... 128 To Delete a Notepad Entry

.....
.....

... 130 Currency Calculation

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

131 To Convert one Currency to Another

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 131 To Listen to a Call Memo

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 132 Calendar ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *117 To Do*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
... *122 Alarm clock* ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. *125 Notepad*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *128 Calculator*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 130 Call memo ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 132 Contents CL-6 To Delete a Call Memo ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 132 Shortcut Keys

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
..... 133 Index ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 139 CL-7 Contents Contents CL-8 Introducing your e313 Your e313 combines a wide range of features into a technologically advanced handset, capable of operating in UMTS (Universal Mobile Telecommunication System), also known as 3G, GSM (Global System for Mobile Communications) or 2G and GPRS (General Packet Radio Service) or 2.5G.

3G will allow much greater data speeds than 2G/2.5G networks and will enable you to make video calls, send multimedia messages and view photos and videos and much more. Views, Keys and Display of your e313 Views Camera LED indicator Memory card slot Front and sides Headset connector Earpiece Display Microphone Key area I/O connector for USB cable or charger -1- Introducing your e313 Camera Rear e313 Battery pack cover Speaker Introducing your e313 -2- Keys 4-way navigation (Up/Down/Left/Right) key Options menu key Softkey 1 (SK1) Softkey 2 (SK2) Enter key MENU key Triangle key Start key End (on-off) key C (clear) key Keypad characters (0-9, and #) Internal antenna -3- Introducing your e313 Display Home screen example Handset profile: Standard/Meeting/Outdoor/Car Headset Key lock Dial lock Message (unread/full) Backlight on/off Alarm set Vibration set Voicemail received Call forwarded Voicemail received Videomail on Server USB connected SSL communication Local Packet communication (ready/ongoing) OTA Packet communication (ready/ongoing) Active tasks Memory card Area mode (Single SIM) Area mode (Dual SIM) Radio field level Status Indicator Line Battery level 3 Mode Indicator Line Soft key Line (SK1, Clock, Option menu indicator, SK2) Introducing your e313 -4- Setup Before you use your handset you will need to carry out the following actions: · Insert a valid USIM (Universal Subscriber Identity Module) card · Charge the battery · Insert the memory card (Memory Stick Duo™) in the side slot (optional) · Set the date and time This section will guide you through this step by step. USIM Card 3 will issue you with a USIM card that must be inserted into your handset. The holder for the USIM card is located underneath the battery. If the USIM card is removed then the handset becomes unusable until a valid USIM is inserted. Always disconnect the charger and other accessories from your handset before inserting and removing your USIM card. To Insert/Remove the USIM Card Ensure that the power is off. If the power is on, press and hold the End (On-Off) key until power is off. Please insert/remove the USIM card by referring to the diagram on the next page.

-5- Setup 1 Remove the battery. 2 The USIM card holder 13 e3 3 Insert the USIM card into the USIM card holder. 4 Slide and lock the USIM card holder. 13 e3 Setup -6- e3 13 e3 13 Battery To Insert the Battery Ensure that your handset is switched off before you insert the battery. Place the bottom of the battery into position and then push down on the upper section of the battery until it clicks into place.

The battery can also be charged whenever you wish without affecting the performance of the handset. Your e313 automatically switches off if the battery voltage is too low. Batteries have a lifecycle. If you find that the amount of times you have to charge the battery is increasing dramatically, the battery life may be coming to an end. Replace the battery with a new one of the same type.

When the battery is not being used for a long period, remove it from your e313 and store in a place with low humidity and low temperature.



[You're reading an excerpt. Click here to read official NEC E313 user guide](http://yourpdfguides.com/dref/537789)
<http://yourpdfguides.com/dref/537789>

A battery that has not been used for a long period of time needs to be completely discharged and then recharged two or three times before reaching full capacity. Charging Make sure that the battery is attached to your handset. Connect the charger plug to your e313 I/O connector. See the diagram on the next page. Plug the charger into a power socket. The LED indicator on your e313 will light up when charging is in progress and go off when charging is completed. After charging the battery, tilt the charger plug upward and pull it away from your e313 I/O connector. To Charge the Battery Using the Charger 1 2 3 4 -7- Setup Even if the handset remains connected to the charger, the battery's residual capacity may decrease when the handset is used. The battery must be charged at room temperature.

Ensure that your handset is switched off. If the handset temperature is high, wait until it returns to a normal temperature. The recommended battery charge time is approximately two hours. Stop charging the battery if charging is not completed within five hours. Low Battery Alarm The battery power level (4 levels) is indicated by the following icons: Empty Battery Low Battery Medium Battery Full Battery When the battery runs out, the following image will blink and a warning alarm may be heard (depending on the handset settings). The handset will shortly shut down. Setup -8- During a call, the image and a discontinuing alarm sound indicate low-power. After approximately 60 seconds the call will be disconnected. The volume level of the low-power warning alarm depends on the ringtone volume level on standby and the earpiece volume during a call. Inserting the Memory card Your e313 will support a "Memory Stick Duo™" (referred to as memory card) up to 128MB.

Please read important instructions on the memory card in Emergency Services and Safety Precautions and in the File Manager section on page 73. Always insert/remove the memory card with the handset power off. The following shows the memory card and its components. Memory Stick Duo Memory erasure prevention switch Connector (do not touch) Label Adaptor Memory Stick Duo Adaptor INSERT Insert Memory Stick Duo in this direction -9- Setup To insert the memory card Always insert/remove the memory card with the handset power off. · Insert the memory card into the slot with the backside facing you, until the memory card is fully inserted into the slot, as shown in the figure below: Open the memory card slot Insert the memory card Remove the memory card To remove the memory card Push in memory card with the tip of your finger into the slot.

The memory card is released from the slot. Carefully pull the memory card out of the slot. 1 2 Powering your e313 On and Off To Power On You are now ready to Power your handset on. Press the End (On-Off) key until the phone powers up (approximately two seconds). To Power Off In standby mode, press and hold the End (On-Off) key until power is off.

There may be some delay while the handset powers down. Do not repower the handset during this time. Setup -10- Power Saver The power saver function turns the screen off when the handset is left without any operation for a certain period of time. By pressing any key, you can turn the screen on. Setting Clock When using your e313 for the first time you will be prompted to set the current date and time. To Set Clock Press the MENU key, select the Settings icon, select Date and time, Set date and time and Home time. Enter the current date and time. Refer to Date and time on page 114 for details. 1 2 Entering PIN Code If you want to secure information in your phone, you can activate your PIN code so that the handset cannot be used without entering the PIN on handset power on. (For how to activate PIN codes, refer to Security on page 112 in the Settings section.

) PIN1 and PIN2 numbers are usually supplied with your USIM card. If not, or you have lost it, contact 3. Proceed as described below. To Enter PIN Ensure that your USIM card is in your e313 and that the battery is charged. Press and hold the End (On-Off) key until power is on. If the Password screen is displayed, enter your PIN1. 1 2 3 If you make a mistake while entering your PIN, erase the wrong number by pressing the C key. The code you enter appears as asterisks (*). Press the SK1 (OK) key. When connecting to the network, the name 3 will appear.

If you are connecting onto another network, the name of another operator will appear. 4 Check your own number To check your own number, press the Menu key and press 0 from the Home screen. -11- Setup Key Lock You can lock all the key operation, except for answering voice/video calls, to maintain the current phone status at the time. When some application has already started, the application will keep running even after you lock the key operation. When the key operation is locked, you cannot power off your e313.

Unlock this function before attempting to turn off the handset. Setting the Key lock The Key lock can be set only from the Home screen. Even when some tasks are open, you can return to the Home screen by pressing the Start key. To set the Key lock on/off Do This On the Home screen, press the MENU key and key.

To 1 Set the Key lock on/off Emergency calls under the Key lock Do This Enter the designated emergency number.

The confirmation message is displayed. Note : The screen below is displayed until the designated emergency number is correctly entered. While the phone is locked under this function, emergency calls can be made only to the designated numbers. Follow the steps below to make an emergency calls while the key lock is set. To 2 Enter the designated emergency number 3 Call the number Press SK1 (Yes). Your e313 is unlocked temporarily and the emergency call is made. Key Lock -12- Making and Receiving Calls When using the headset, you can start/end a voice call using the switch placed on the microphone. The following operations are described: · Making a Voice Call · Receiving a Voice Call · During a Voice Call · Making and Receiving a Video Call (available in 3G areas only) -13- Making and Receiving Calls Making a Voice Call Do This Input the phone number using the keypad. Note : To correct mistakes, press the C key briefly to delete the last number or press and hold the C key to clear all the numbers. Press the Start key.

To Make a Voice Call To 1 Input the phone number 2 Dial the phone number 3 Press the End key. Talk 4 End the call Useful Tips Operation Making an emergency call Useful tips for making a call are shown below: Procedure Input the emergency number 999 (UK only), 000 (Australia only) or 112. Press the Start key to make an emergency call.



[You're reading an excerpt. Click here to read official NEC E313 user guide](http://yourpdfguides.com/dref/537789)

<http://yourpdfguides.com/dref/537789>

Note : When the Key lock is set, follow the operation on page 12 to make an emergency call. Tell the operator your location and which emergency service you require: ambulance, police, rescue services, etc. If possible, remain stationary and keep the line connected. Press and hold 0 to display a "+" symbol. Input the international country code, then the phone number. Press the Start key to make an international call. Press the MENU key and select Contacts or press the Up or Down key.

Note : Pressing the Down key, you can scroll the contact list in the alphabetical order. Note : Press the keypad character to display the contact entry starting with the letter. For example, press the 2 key twice to display the Contact entry list starting with B. Search and select the addressee's phone number. Press the Start key to make a call using the contact list.

Making an international call Making a call using the Contact list Making and Receiving Calls -14- Operation Making a call from Incoming calls list From the home screen, press the Left key. Alternatively press the Options menu key, Call logs then Incoming calls. Select the phone number on the list. Press the Start key to make a call from the Incoming calls list. From the home screen, press the Start key.

Alternatively press the Options menu key, Call logs then Outgoing calls. Select the phone number on the list. Press the Start key to make a call from the Outgoing calls list. From the home screen, press the Right key. Alternatively press the Options menu key, Call logs then Missed calls. Select the phone number on the list. Press the Start key to make a call from the Missed calls list. Enter a contact memory number from 2 to 99. Press Start key to call the phone number registered for the memory number. For the contact memory whose number is 2 to 9, you can also make a call by pressing and holding the keypad of the memory number.

The memory number from 2 to 9 can be changed from the Speed dial screen. To find the Speed dial screen, press the MENU key, select Contacts, press the Options menu key and select Speed dial. Note : Pressing 1 and Start key, or pressing and holding 1 will make a call to the voicemail centre. Note : If more than one phone number is registered for a memory number, the first number is used to make a call. Input the phone number, then press and hold # to insert a pause (displayed as p). Input the numbers to call, inserting pauses where necessary. Press the Start key to dial the input numbers. When the other party answers the call, press the SK1 (Send) key to dial the numbers after the pause. Keep pressing the SK1 key until all the required numbers are dialled. After inputting the phone number, press the key and input the subaddress number.

You can specify one sub-address (office extension number, etc.) for a phone number. Procedure Making a call from Outgoing calls list Making a call from Missed calls list Speed dial Pause Dial Entering the sub-address of a phone number -15- Making and Receiving Calls Call Logs Call logs) (Press the Options menu key Call logs are lists of call records such as incoming/outgoing/missed calls. A maximum of 20 entries are saved in each call log. You can make a call using these logs.

The following settings and operations are provided: Item Outgoing calls Incoming calls Missed calls Clear all logs Automatic delete Duplicate records Selects whether to allow multiple records to/from the same number to be made on the log or not. Select Allow or Do not allow. Turns the automatic deletion function on/off. This function automatically deletes the call logs when the handset power is turned off. Deletes all the call log data.

You can also see the Missed calls by pressing Right key from the Home screen. You can also see the Incoming calls by pressing Left key from the Home screen. You can also see the Outgoing calls by pressing Start key from the Home screen. Description If you miss a call, it will be indicated as a missed call by an icon on the Home screen. When you display Missed calls or turn the power off, the icon disappears. Making and Receiving Calls -16- Receiving a Voice Call When a voice call is made to your 3 number, the ringtone, the illumination and the vibrate function will be activated (activation depends on the settings). When the Calling Line Identification (CLI) function has been activated by the caller, the caller's phone number will be displayed. If the calling party opts to hide their phone number, e313 will generate a message indicating that the phone number has been withheld. Basic Operations The basic operations for receiving a voice call are shown below: To Receive a Call Do This Press the Start key or SK1 (Answer) key. Note : When Any key answer function is activated, you can press any key except the SK2 (Ignore) key, End key, Triangle key and the Options menu key to answer the call.

Refer to Call options on page 106 for details. Note : When the headset is connected, pressing the headset switch will also answer the call. To 1 Answer the call 2 Talk Press the End key. The call is disconnected and the call time duration is displayed. 3 End the call Useful Tips Operation Turning off the ringtone Rejecting a call Useful tips for receiving a call are shown below: Procedure You can mute the ringtone by setting the active handset profile's Ring volume to Silent. Refer to Handset profile on page 105. While receiving a call, press the End key or the SK2 (Ignore) key. Note : Rejected calls will be diverted to the number registered in Call forwarding, If busy. This is usually defaulted to voicemail, depending on the network operator. If you miss a call, it will be indicated as a missed call by an icon on the Home screen.

The missed call will be saved to the Missed calls list. When you display Missed calls, the icon disappears. When you miss a call -17- Making and Receiving Calls Operation Rejecting the second call Press the Options menu key, Ignore call. Note : Rejected calls will be diverted to the number registered in Call forwarding, If busy. This is usually defaulted to voicemail, depending on the network operator.

Press the Options menu key, Divert call. The registered call forwarding number is displayed. Check the phone number and press the SK1 (OK) key. The call will be diverted to the phone number registered in Call forwarding setting. (Refer to Call forwarding on page 113 for details.)

) If you want to divert a call to another number or there is no phone number registered, input or search for the phone number. Procedure Forwarding a voice call (available in 3G areas only) Voicemail When you forward a call to the voicemail centre, the caller may leave a message for you. If a message is left, the voicemail icon will be displayed on your screen. Call the voicemail centre to retrieve the message, referring to the procedures below. For how to set the voicemail setting, refer to Voicemail in Call options on page 107.



[You're reading an excerpt. Click here to read official NEC E313 user guide](http://yourpdfguides.com/dref/537789)

<http://yourpdfguides.com/dref/537789>

To Call voicemail centre Do one of the following; Do This · Press and hold 1 key, or · Press the 1 key and the Start key. Making and Receiving Calls -18- During a Voice Call Some of the operations described below are only available if you have subscribed to certain services. Ask 3 about details on service subscription. Basic Operations The possible operations during a voice call are shown below: To Make a Second Call Do This Press the Start key. Input numbers are dialled and the first call will automatically be put on hold.

To switch calls: Press the SK1 (Swap) key or press the Options menu key, Swap calls. To end the current call: Press the End key or press the Options menu key, End call and End active call. To end the call on hold: Press the Options menu key, End call and End held call. To end both calls: Press the End key twice. To 1 Input the second phone number 2 Dial the second phone number 3 Talk 4 End the calls To Receive a Second Call Do This Press the SK1 (Answer) key.

The first call will automatically be put on hold. To switch calls: Press the SK1 (Swap) key. Alternatively, press the Options menu, Swap calls. To end the current call: Press the End key. Alternatively, press the Options menu key, End call and End active call. To end the held call: Press the Options menu key, End call and End held call. To end both calls: Press the End key twice. To 1 (Another call received during a call) Answer the second call 2 Talk 3 End the call -19- Making and Receiving Calls To Switch to a Grouptalk Do This (When there are two calls on-line: the current call and a held call) Press the Options menu key, Join calls. Note : Press the Options menu key, Grouptalk. Pressing the SK1 (Split) key will split the selected caller from the Grouptalk and the SK2 (Drop) key will drop the selected caller from the Grouptalk.

Press the End key. To 1 Switch to Grouptalk 2 Talk 3 End the call Other Possible Operations During a Call Do This If you input keypad characters during a call, the input characters will remain displayed on the screen after the call is finished. Press the Up and Down key to adjust the volume while being on a call. Press the SK2 (Contact) key to display the Contact list. While talking, press the SK1 (Hold) key.

Alternatively, press the Options menu key and select Hold call. The call will be put on hold. To retrieve the call, press the SK1 (Retrieve) key. Alternatively, press the Options menu key, Retrieve call. When you have a connected call and a held call, press the SK1 (Swap) key. Alternatively, press the Options menu key, Swap calls. The connected call will be put on hold and vice versa. Press the Options menu key and select Call memo to start recording the conversation. To stop the recording, press the Enter key. Both your voice and the other party's voice will be recorded.

(20 seconds max.) Five call memos can be recorded in the handset. A call memo is displayed with its date and time of recording. For further information about using call memos, refer to page 132. Note : Always ask the other party's permission to record. Note : A call memo cannot be attached to messages or copied to the memory card. To Use the Scratchpad Adjust the earpiece volume Search the contact list Put a call on hold Swapping the connected and held call Record a Call memo Making and Receiving Calls -20- To Press the Options menu key and select Settings. The following settings are provided: Auto answer: Turns on/off the automatic answering function. Set answer key: Selects Use any key or Send key only as the call answering key. Auto redial: Turns on/off the automatic redial function.

Send DTMF tones: Enables/disables the sending of Dual Tone Multi Frequency (DTMF) signals. Divert to: Sets the phone number to forward the call to. Mute: Turns the mute function on/off. When a third call is received while already there are two calls on, you can receive the third call only if you end one of the current/held calls. Press the Options menu key and select the appropriate option to end the current/held call.

Do This Activate Settings Receive a third call -21- Making and Receiving Calls Making and Receiving a Video Call (Available in 3G areas only) For further information on changing the default settings for a video call, refer to Video calls on page 108. To Make a Video Call to a Video Capable Handset Do This Input the phone number as normal, using the keypad or the call logs. For further information on Call logs, refer to page 16. Press the SK1 (Vid. call) key.

Adjust the camera position if necessary. Press the End key. To 1 Call a phone number 2 Start the video function 3 Talk and see 4 End the call To Make a Video Call to a PC with Webcam Do This Select the email address from the contact list, the Incoming calls/Missed calls list, etc. Press the SK1 (Vid. call) key. Note : The video call may take some time to connect. Please be patient. The connection time will also depend on how quickly the other party answers the call. This service is network dependent. Please contact 3 for further details.

To 1 Select the email address to connect 2 Start the video function To Receive a Video Call Do This You will receive an incoming video call notification. Press the Start key or SK1 (Answer) key to answer and send the captured image from the active camera to the other party. Note : To answer the video call without sending your image, press the SK2 (No video) key. The alternative photo will be sent to the other party. To 1 Receive a video call 2 Answer the call Making and Receiving Calls -22- Useful Tips Procedure 1 2 3 1 2 3 1 2 3 1 Press the End key or press the Options menu key and select Ignore. Press the Left key to display Incoming calls. Search and select the addressee's phone number/email address. Press the SK1 (Vid. call) key to dial the phone number. Press the Right key to display Missed calls.

Search and select the addressee's phone number/email address. Press the SK1 (Vid. call) key to dial the phone number/email address. Press the MENU key and select Contacts or press the Up or Down key. Search and select the addressee's phone number/email address.

Press the SK1 (Vid. call) key to dial the phone number/email address. Operation Making a video call using the contact list Making a video call from the Missed calls number list Making a video call from Incoming calls number list Rejecting the incoming video call Operations During a Video Call Procedure Press the Right key to zoom in or Left key to zoom out. To turn the microphone on/off, do one of the following: The following operations are possible during a video call: Operation Zoom in/out Turning the microphone on/off (sending/ not sending your voice to the other party) · Press the SK1 (Mute/Unmute) key.



[You're reading an excerpt. Click here to read official NEC E313 user guide](http://yourpdfguides.com/dref/537789)
<http://yourpdfguides.com/dref/537789>

The SK1 (Mute) will turn the microphone off.

The SK1 (Unmute) will turn the microphone on. · Alternatively, press the Options menu, Other settings and Mute settings. Select Mute or Unmute. Turn the camera to the angle you like. (Available only while sending a camera image) Press the Options menu, then either Use live video or Use photo instead (whichever is displayed). Press the Options menu then Screen mode. Select My side is smaller (your image will be displayed on the smaller window), My side is larger (your image will be displayed on the larger window), Other side only (only the other party's image will be displayed) or My side only (only your image will be displayed). Changing the camera direction Turning your camera on/off (sending/not sending your image to the other party) Changing the screen display mode -23- Making and Receiving Calls Operation Press the Options menu key, Picture quality. Select Standard, Better picture (image quality has the priority) or Faster movement (capture movement has the priority). Press the Options menu key, Camera mode.

Select Portrait mode, Landscape mode or Night-time mode. Press the Options menu key, Contrast settings. Select Much brighter, Brighter, Standard, Darker or Much darker. Press the Options menu key, Lighting settings. Select Sunny, Cloudy, Automatic or Indoors. Press the Options menu key, Other settings and Show call length. Select Show call length or Do not show. Press the Up and Down keys. Procedure Changing the image quality Changing the camera mode Adjusting the colour contrast Setting the lighting mode Setting the call time duration information Adjusting the speaker volume Making and Receiving Calls

-24- Text Entry This section describes how to enter and edit the text. There are four types of text entry.

· Multitap Text (ABC) Input: You press each key as many times as needed to display the character you want. · T9® Text Input: Intuitive texting predicts the word you are trying to enter. · Numeric Input: Enters only numbers. · Symbol Input: Enters symbols, Greek alphabet characters, or characters with accents.

T9® Text Input is covered by the United Kingdom Pat.

No. 2238414B, Euro. Pat. No. 0 842 463 (96927260.

8) and other patents pending. The maximum number of characters allowed in an item or a field is defined as the number of single-byte characters that can be input. When entering double byte characters such as accents (ë, ì, ô, etc.) or triple byte characters such as the Euro symbol (€), the maximum number of characters will vary accordingly. Below are examples of text entry methods. -25- Text Entry Display Information When you enter text in the Contact list or a message, the text entry display shows you various information as shown below: To start the message function: Press the SK2 (Msg). Or press the MENU key, Messages and press the SK1 (New). (Refer to the Writing and Sending a New Message on page 53 for details) Remaining number of characters To change the Mode: Press the Enter key in text mode and press SK1 (Mode) until the mode you want appears. 17:15 Indicates Shift (caps lock ()) or Input mode icons T9: T9® ABC: Multitap text (ABC) 123: Numeric Current mode Insert/Overwrite Delete/Backspace Text Entry -26- Multitap Text (ABC) Input Do this Press the (3DEF) key once, then d appears.

Press the (6MNO) key three times, then o appears. Press the (4GHI) key once, then g appears. Press the Right key to move to the next character position. key to switch lower case, upper case (shift) and Caps lock. In the following example, to enter dog in a text message. To 1 Enter d 2 Enter o 3 Enter g You can also press 1 then SK1 (Next) or SK2 (Prev.) to select and insert common symbols and face marks. Press the T9® Text Input In the T9® text Input mode, you press each key only once, even if the character you want is not the first character on the key. When you press the keys, different words are suggested. If the word you want is not suggested, you can edit the word and register it to the dictionary for access the next time.

In the following example, to enter fog in a text message. To Press the (3DEF) (6MNO) (4GHI) keys. The word "dog" should appear. Do this 1 Enter fog 2 Convert and select the word you want Press the SK1 (Next), SK2 (Prev.) key or # key to display the word you want, then press the Right key to enter the displayed word or the 0 key to select and insert a space.

Do this until the word "fog" appears. Enter fog by using the Multitap Input Mode. The word is registered in the dictionary. If you enter the (3DEF) (6MNO) (4GHI) keys the next time, you can select the word fog. 3 If the word you want is not suggested, edit the word and register it by using the Multitap Input Mode You can also press 1 then SK1 (Next) or SK2 (Prev.

) to select and insert common symbols or face marks. key to switch lower case, upper case (shift) and Caps lock. Press the -27- Text Entry Numeric Input Do this Press the (3DEF) key; then 3 appears. Press the (6MNO) key; then 6 appears. Press the (4GHI) key; then 4 appears. Here is the example to enter 364 in a text message after changing to the Numeric Input mode. To 1 Enter 3 2 Enter 6 3 Enter 4 Numbers can also be input in the multitap and T9® text input modes by pressing and holding the keys. Symbol Input By pressing the # key in the multitap text input mode, the T9® text input mode, or the Numeric Input mode, the temporary symbol menu is displayed. Highlight the line in which the symbol you want is located. You can move the highlighted line by using the Up, Down, Left and Right keys.

Find the keypad character displayed above the symbol and press the key. The temporary symbol menu disappears after inserting a symbol. The symbol menu screen is displayed as below. The temporary symbol menu can be cancelled by pressing the C key. Text Entry -28- Other functions whilst editing text To Enter a Space To enter a space in the text in the Multitap Text Input mode or the T9® text input mode, press the 0 key. To Insert a New Line To insert a new line in the text, move the cursor to the inserting point of the new line, press and hold the # key. Alternatively, press the Options menu key, New line. To Change the Case key to toggle between Shift (next letter in upper case), Caps Lock, and Lower case (see diagram on page 26). Press the To Change to Delete/Backspace Mode To change to delete/backspace mode, press the Options menu key, Editing options, then Delete or Backspace in Clear mode. In Delete mode, you can delete characters after the cursor.

In Backspace mode, you can delete characters before the cursor. To Change to Insert/Overwrite Mode To change to insert/overwrite mode, press the Options menu key, Editing options, then Insert or Overwrite in Write mode.



[You're reading an excerpt. Click here to read official NEC E313 user guide](http://yourpdfguides.com/dref/537789)

<http://yourpdfguides.com/dref/537789>

To Copy/Cut and Paste the Text Do this Press the Options menu key in the text input mode, then select Copy/ Cut. Move the cursor to the starting point of by using the Up, Down, Left or Right key and press the Enter key. Note : You can cancel the specified copy/cut starting point by pressing the C key. Move the cursor to the ending point by using the Up, Down, Left or Right key and press the Enter key. Note : The maximum capacity of clipboard is 1024 byte. Move the cursor to the paste point by using the Up, Down, Left or Right key. To copy/cut and paste text, proceed as described below: To 1 Activate the copy/cut function 2 Specify the copy/cut starting point 3 Specify the copy/cut ending point 4 Specify the paste point -29- Text Entry To Press the Options menu key, then select Paste. Do this 5 Paste the block Copied/cut text can be pasted on other applications.

Text Entry -30- Browser (Press the triangle key) The browser application enables you access a great deal of information: Viewing the latest news and weather, downloading games, checking sports information, finding locations and much more. 3 provides you attractive sites on the Internet with expanding range of contents. Now MTV's music videos are always accesible. For football fans, near-live actions from ongoing game will be available with easy sign-up. Browser Menus Level 2 Registers the highlighted phone number/email address to the Contact list. A new contact entry creation screen is displayed with the phone number/email address inserted. Current page Selected link Registers the highlighted link to the Bookmarks. Displays the list of Bookmarks. On the list, the most recently accessed bookmark will be displayed first. Press the Options menu key again and the following submenus are provided: Edit title: Edits the bookmark's title (24 single-byte characters max.

). Send URL: Starts the message writer to edit a new message with the URL in the message text. Copy URL: Copies the URL of the bookmark Delete: Delete selection deletes the selected bookmark and Delete all deletes all the bookmarks. Link this: Adds a shortcut to the selected bookmark in the Quick menu and Home screen. Saves the page on display as an off-line file. A maximum of 20 pages can be saved. To avoid accidental deletion, 10 saved pages can be protected. Maximum data size for a saved page is 100KB. Registers the page on display to the Bookmarks. Note : Maximum of 50 bookmarks can be registered.

Pressing the Options menu key will display a menu list of functions provided for the browser application. The following describes the function menus: Level 1 Level 3 Description Add to Contacts Add bookmark Bookmarks Save page -31- Browser Level 1 Displays the list of pages saved offline. Highlight the file and press the Enter key to open. Press the Options menu key and the following Options menus are provided: Edit title: Edits the saved page's title (24 single-byte characters max.).

Send URL: Starts the message writer with the URL of the saved page in the message text. Protect: Protects the selected saved page. Unprotect: Cancels the protection of the selected saved page. Delete: Delete selection deletes the selected page, and Delete all deletes all the pages. Move to highlight a file and press the Enter key to display the contents.

When a saved page is displayed, press the Options menu key and the following Options menus are provided: Level 2 Level 3 Description Saved pages · Add to contacts: Registers the highlighted phone number/email address/URL to the Contact list. A new contact entry creation screen is displayed with the phone number/email address/URL inserted. · Save image: registers an image on the file to the Image List. · Edit title: Edits the title. · Send as message: Starts the message writer with the current page URL/image URL in the message text or the image file attached. · Page information: Displays the page information. Check page title displays the title. Check URL displays the URL. Check certificate displays the certificates saved with the file. · Copy as text: Copies the text on the saved page.

· Protection: Sets protection on the selected file or clears the set protection. · Delete: Deletes the selected saved page. Browser -32- Level 1 Copies the text on the displayed page. Saves an image to the Image list. Starts the message writer to edit a new message with the URL of the displayed page in the message text. Starts the message writer to edit a new message with the URL of the displayed image in the message text. Starts the message writer to edit a new message with the displayed image attached. Refreshes the page displayed. Starts an input screen. You can directly input a URL and display it.

Displays the URL history input from Enter URL menu function. Highlight a URL history and press the Options menu key and the following submenus are provided: Send URL: Starts the message writer to edit a new message with the URL of the selected history in the message text. Delete: Delete selection deletes the selected URL history and Delete all deletes all the URL history. Latin-1 US ASCII UTF-8 UCS2 UCS4 UTF-16 Changes the character encode to Latin-1. Latin-1 is set by default.

Changes the character encode to US ASCII. Changes the character encode to UTF-8. Changes the character encode to UCS2. Changes the character encode to UCS4. Changes the character encode to UTF-16.

Level 2 Level 3 Description Copy as text Save image Send as message Current page URL Image URL Image file Refresh Enter URL History Encoding -33- Browser Level 1 Check page title Check URL Check certificate Displays the certificate on the displayed page. When the contents of the displayed page has been downloaded without a certificate, this menu will be greyed out. Scroll settings Display settings Font size settings Other Settings Timeout Saved Pages Certificates Cookie settings Selects the method of Cookie reception from Accept all, Block all and Prompt each time. Sets the communication timeout time from 30 seconds, 60 seconds and No timeout limit. Selects whether to automatically save a page with/without image files or to ask each time. Displays the list of certificates. When a certificate is displayed, press the SK1 (Validity) key or press the Options menu key and select Change validity to enable/disable the selected certificate. Clear settings Browser reset Returns the modified settings to the default settings. Returns all the information (Saved Pages, History, Bookmarks and Settings) about the browser application to the default settings. This requires the Code Number to avoid accidental operation.

Note : Refer to page 112 for details on the Code Number. Selects the font size. Images: Turns on (Yes)/off (No) the image display. Animations: Enables/disables the animation display. Selects the number of lines per scroll from Scroll one line, Scroll three lines, Scroll five lines and Scroll one page.



[You're reading an excerpt. Click here to read official NEC E313 user guide](http://yourpdfguides.com/dref/537789)

<http://yourpdfguides.com/dref/537789>

Displays the URL of the displayed page. Displays the title of the displayed page. Level 2 Level 3 Description Page information Settings Display Settings Reset Browser -34- Basic Operations The following describes basic operations for the browser application. To End a Browser session Do this Press the End key. To 1 End a browser session To Download a File and Save it in your e313 File Manager Do this Browse and search for a file.

Select the link and press the Enter key. The downloaded file is stored in one of Video files, Image files, Music files, Voice files or Other files folders under Handset memory or Memory card folder. To find these folders, press the MENU key and select File manager. To 1 Start the browser 2 Download the file To Register a Bookmark Do this Display the page to register by entering the URL. Press the Options menu key and select Add bookmark.

Note : Pressing and holding the Enter key while an URL is highlighted will also register the URL in the Bookmarks. To 1 Display the page to register 2 Register the page as a bookmark -35- Browser Useful Tips Procedure Pressing the Enter key on a focused link/anchor will: Jump to the URL Make a voice/video call to the phone number Start message writer to edit a new message to the address Download the multimedia file Operation Links and Anchors Download the Java™ Application Note : To register data in the contact list, press and hold the Enter key. You can press the Up and Down keys to scroll the page up and down. Press the Left key to display the previous page. Press the Right key to return to the next page.

Scrolling Displaying the previous/next page Browser -36- Advanced Features Your e313 brings you a whole new world of mobile multimedia communications! In this section, we introduce the following advanced features of e313: · Photo/Video Camera (take pictures or record short videos and send them from your e313) · Multiple Selection (Select multiple items in list screens) · Multi-call/Multi-task (watch the latest sports results and call your friends to tell them about it at the same time) · Messaging (send text, multimedia, video messages or email) · Other Features of e313 (play Java™ applications, listen to music, transfer data from a PC, synchronise data with your PC, or store and manage your video/image/audio data on the memory card) Photo/Video Camera Ever wished you had brought your camera with you? With your e313 that won't happen to you. When you want to show your friends what you're up to or want to ask a friend which new shirt to buy, simply take a picture and send it from your e313. To make the visual experience even more appealing, record a short video with e313 and send it by video message. To Take a Photo/Make a Video and Send it Attached to a Message Do this Press the SK1 (Camera) key.

Alternatively, press the MENU key, Multimedia centre and Take photo/Make video. Press the SK1 key again on viewfinder. Alternatively, select Take photo/Make video on the Multimedia screen. The screen changes to viewfinder. Press the Enter key to start capturing. Start up the message function and select the message type.

(Refer to Writing and Sending a New Message on page 53 for details.) Refer to page 87, 88 and 53, for details on taking photos, making videos and sending messages. To 1 Start the image/video function 2 Take a photo/make a video clip 3 Attach the snapshot/video clip to a message and send Useful Tips · Make the most of your photos and video clips: send them as attachments of a message, use an image as a Home screen wallpaper, use a photo of your friend's face as their contact picture, etc. -37- Advanced Features Image Viewer When images are downloaded to your e313, are received attached to a message or are taken by using e313's camera, you can display them using the Image viewer. Such images can be used as a Home screen wallpaper or contact picture and contact list data. Refer to To View an Image File on page 91 for details. Video/Audio Player You can play video and audio data saved in e313's play list using the Video/Audio Player. Refer to Multimedia centre on page 82 for details. Multiple selection It is very convenient to select multiple items when many different items are displayed on screen, like in Contacts. On your e313, you can select multiple items to copy or delete at once.

To Select Multiple Items and # keys. In the relevant In certain item lists, for example in Contacts, you can highlight multiple items by using the screen, start the selection by pressing . . . To select/deselect another item, press · To highlight a group of items, start the selection by pressing , then scroll down and press #. All items between the and # will be highlighted.

· To end the multiple selection, press the C key. This function is only available in certain applications. This function will not be available for contacts when accessed through the Up or Down keys. The application must in this case be accessed by pressing the MENU key and then 5. Multi-call/Multi-task Did you ever wish you could send a message while talking on the handset? e313's multi-call function lets you do this.

If you want to check your calendar while talking, the multi-task function allows you to display the calendar saved in e313. For example, you can use one of the following functions while talking on the handset: · Browser · Message (text message/multimedia message/video message/email) · Java™ application · Contact · Settings · Toolbox Advanced Features -38- The more tasks you are carrying out simultaneously, the more 'pages' you will see on the multi-task icon; it could show two or three pages depending on the amount of simultaneous multi-tasking being performed by your e313. To Start/Switch Task During Another Task Do this Press the Start key. Enter the phone number to make a call. Press the MENU key and select Messages to start the message function. Press the SK2 (Contact) key or Up key to start the contact list function. Press the triangle key to access 3's multimedia services. Press the MENU key to display Main Menu. Press and hold the MENU key. The taskbar is displayed.

Select the required task by pressing Left and Right keys and the Enter key to switch to the selected task. End a task: Select the icon on the multi-task bar to end and press SK1 (End task). End all tasks: Press SK2 (End all). When only the Home screen icon is displayed, which means no tasks are active, press End key to end the multi-task function. To 1 Go back to the Home screen 2 Start another task 3 Switch to another task 4 End tasks High-Speed Data Communications Your e313 supports high-speed data communication rates for your PC via a USB connection.



[You're reading an excerpt. Click here to read official NEC E313 user guide](http://yourpdfguides.com/dref/537789)

<http://yourpdfguides.com/dref/537789>