



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEC VERSA SX WINDOWS 98. You'll find the answers to all your questions on the NEC VERSA SX WINDOWS 98 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual NEC VERSA SX WINDOWS 98**  
**User guide NEC VERSA SX WINDOWS 98**  
**Operating instructions NEC VERSA SX WINDOWS 98**  
**Instructions for use NEC VERSA SX WINDOWS 98**  
**Instruction manual NEC VERSA SX WINDOWS 98**

## NEC Versa LX/SX Windows 98 Upgrade Information

Follow the instructions provided in this document to upgrade your NEC Versa® LX or SX system from Microsoft® Windows® 95 to Microsoft Windows 98.

*Please read these notes in their entirety.*

### CAUTION


NEC recommends that you use the system's AC power adapter throughout this process. The Windows 98 upgrade is lengthy and interrupting the process with a loss of power can be catastrophic if the system performs an emergency or low power save-to-file.

### System Requirements

The system requirements for your NEC Versa using Windows 98 are approximately the same as they are for using Windows 95. As with Windows 95, Windows 98 requires 16 MB of RAM; your NEC Versa ships with 32 MB. For hard disk space, a typical installation requires 225 MB of free hard disk space, but may range from 165 MB to 300 MB, depending on system configuration and options selected.

The system requirements for your NEC Versa are:

- Approximately 50 MB additional hard disk capacity.
- If backing up Windows 95 system configuration files, another additional 50 MB for a total of 100-MB additional hard disk space.

 **Note:** The Windows 98 Setup Wizard informs you if your system has insufficient hard drive space to proceed.

### Upgrading To Windows 98

Use these steps to upgrade from Windows 95 to Windows 98.

1. With Windows 95 running, insert the Windows 98 installation CD-ROM into your system. If your system has Auto Insert Notification enabled, a Windows 98 graphic appears asking you if you want to upgrade to Windows 98. If you see the graphic, answer "Yes" and skip to step 3. If you do not see this graphic, go to step 2.
2. Use Windows Explorer to navigate to the Windows 98 Setup utility at the root

NEC Versa LX/SX Windows 98 Upgrade Information 1



[You're reading an excerpt. Click here to read official NEC VERSA SX WINDOWS 98 user guide](http://yourpdfguides.com/dref/2311448)  
<http://yourpdfguides.com/dref/2311448>

**Manual abstract:**

*System Requirements* The system requirements for your NEC Versa using Windows 98 are approximately the same as they are for using Windows 95. As with Windows 95, Windows 98 requires 16 MB of RAM; your NEC Versa ships with 32 MB. For hard disk space, a typical installation requires 225 MB of free hard disk space, but may range from 165 MB to 300 MB, depending on system configuration and options selected. The system requirements for your NEC Versa are: T Approximately 50 MB additional hard disk capacity. T If backing up Windows 95 system configuration files, another additional 50 MB for a total of 100-MB additional hard disk space. Note: The Windows 98 Setup Wizard informs you if your system has insufficient hard drive space to proceed.

*Upgrading To Windows 98* Use these steps to upgrade from Windows 95 to Windows 98. 1. With Windows 95 running, insert the Windows 98 installation CD-ROM into your system. @@If you see the graphic, answer "Yes" and skip to step 3.

If you do not see this graphic, go to step 2. 2. @@3. Double click on the Setup icon. The Setup Wizard guides you through the installation process.

@@@@@@NEC recommends that you back up your system files. @@@@@@You need to reset the video resolution using the following steps. 1. @@2. @@3.

*Press Apply and Close, then restart your system.* 4. @@@@These USB drivers are for Windows 95. 2 NEC Versa LX/SX Windows 98 Upgrade Information  
*Using the NEC Versa Desktop Wallpaper* You may observe brief video display corruption as the NEC Versa wallpaper appears on the Windows 98 desktop.  
*Using an External Mouse* Windows 98 may not always detect that you have installed an external mouse during start up. If this occurs, restart the system to enable the mouse.  
*Infrared Port* During the Windows 98 installation process, Windows 98 detects the presence of the infrared port even though the infrared port setting may be disabled in the system BIOS. If you select the infrared default driver, a RunDLL error occurs; Windows 98 reboots and continues the installation without any further messages. Enable the infrared port in the system BIOS prior to performing the Windows 98 upgrade. Doing this before the upgrade eliminates the error message.

*Save-to-File* When you perform a Save-to-File (STF) operation, the STF progress dialog box may not appear. @@The uninstall application is not on the diskette. @@00 7/98 NEC Versa LX/SX Windows 98 Upgrade Information 3 .



**[You're reading an excerpt. Click here to read official NEC VERSA  
SX WINDOWS 98 user guide](http://yourpdfguides.com/dref/2311448)**

**<http://yourpdfguides.com/dref/2311448>**