




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF B1320N2GB. You'll find the answers to all your questions on the NEFF B1320N2GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF B1320N2GB
User guide NEFF B1320N2GB
Operating instructions NEFF B1320N2GB
Instructions for use NEFF B1320N2GB
Instruction manual NEFF B1320N2GB

**How to connect up,
build-in, set up, use and
look after your
B1320 oven**

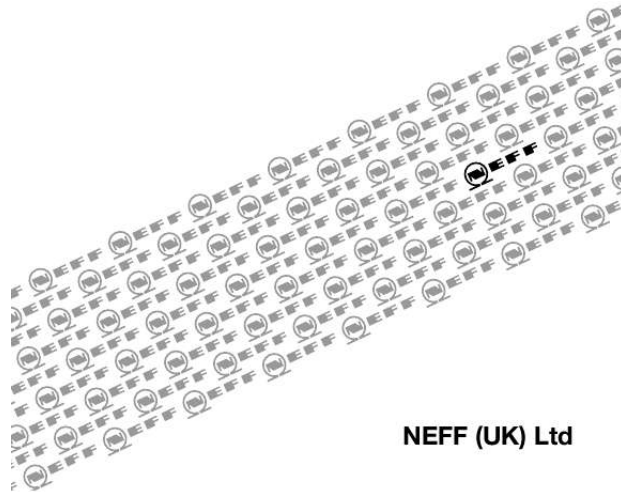

NEFF (UK) Ltd



[You're reading an excerpt. Click here to read official NEFF B1320N2GB user guide](http://yourpdfguides.com/dref/3552309)
<http://yourpdfguides.com/dref/3552309>

Manual abstract:

An environment-friendly method of disposal will ensure that valuable raw materials can be recovered and used again. Before you dispose of your old appliance, make sure that it has been rendered inoperable. Your new appliance was protected by suitable packaging while it was on its way to you. All materials used for this purpose are environment-friendly and suitable for recycling. Please make a contribution to protecting the environment by disposing of the packaging appropriately. Up-to-date information concerning options for disposing of your old appliance and the packaging from the new one can be obtained from your retailer or local government office. Before connecting your new appliance Before using your new appliance, please read these Instructions for use carefully. They contain important information concerning your personal safety as well as on use and care of the appliance. The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.

@@ Do not use the appliance if it is damaged in any way. @@@@ Repairs must only be performed by service engineers trained by the manufacturer. Repairs carried out by incompetent service agents can make the appliance unsafe. 3 Important Information Appliance safety considerations The appliance should only be used for the preparation of food. The surfaces of heating and cooking appliances get hot during operation.

The interior oven walls and the heating elements get extremely hot. Always keep children away from the appliance. Never leave the appliance unattended when cooking with fat or oil. They can catch fire if overheated. Clean the oven regularly.

Fatty or oily remnants could ignite when the oven is switched on. Make sure that the power cord does not get caught in the hot oven door. The plastic insulation could melt. In the case of a defect, switch off (or remove) the mains fuse in the building electrical system. Do not store combustible items in the oven. They could ignite if the oven is switched on accidentally. Do not clean the oven with steam or high-pressure cleaners. Do not insert a baking sheet at the bottom of the oven, or cover the base of the oven with aluminium foil, as this would result in heat build up. Roasting and baking times would change, and the enamel would be damaged. Never pour water directly into the hot oven.

Damage to the enamel could result. Dripping juices may leave spots on the oven lining. Always place a baking tray below to prevent this from happening. Never stand or sit on the open oven door. The oven door must close properly. Keep the door seal surfaces clean. 4 Introducing: Your new Oven 0 0 Electronic timer controls Function selector Temperature selector with control lamp Function selector Temperature selector 0 100 50 L Setting: k Defrosting position v Circotherm Z Radiant grill Setting: 50250 L, M, H Temperature in ° C Temperature for radiant grill H 200 M 15 0 25 0 5 Introducing: Your new Cooker Accessories Your appliance is supplied with: 1 Wire shelves 1 Roasting/grill pan with grid The following accessories can be obtained from the supplier of your oven: Deep roasting pan Baking tray, aluminium Baking tray, enamelled Small grill-set Note: The baking tray or roasting pan may distort while the oven is operating. This is caused by major temperature differences on the utensil. These differences may occur if only one part of the utensil was covered or if deep-

frozen food, e. g.

pizza, was placed on the utensil. Note: Order no. Z 1270 X2 Z 1330 X0 Z 1340 X2 Z 1240 X2 Note: The distortion will already subside again during baking, roasting or grilling. Shelf positions Your oven features 4 shelf positions. The shelf positions are counted from bottom to top.

The numbers are marked in the oven. When using circotherm, do not use shelf position »2«, in order not to block air circulation. 6 Before Using Your Appliance for the First Time Time of day Before you use your appliance for the first time, it is necessary to set the current time on the electronic timer. After connecting to the mains, or after a power failure, the display 0.00 will blink.

To set the time of day: Press the t and g button simultaneously, while turning the rotary knob 8 to set the current time of day (example: 15.00 hrs., see illustration). Note: Any incorrect settings that were made accidentally must be reset to zero before setting the time of day (see the section "Electronic timer").

Preliminary cleaning: 1. Clean the appliance exterior with a soft damp cloth. 2. Clean the oven interior and the accessories with a hot detergent solution. Initial burn-in 1. Preheat the empty oven for about 30 minutes.

Select v heat at a setting of 190 °C. During the initial burn-in phase, please open the kitchen windows to dissipate unpleasant odours. 7 Electronic Timer Minute timer Cooking time Off time Timer knob Automatic timer OFF The timer knob is designed for onehand operation. To use this function, the required cooking time must be set by turning the timer knob within 4 seconds of pressing the appropriate function button. Setting the time of day: Follow the steps described in the preceding section "Before Using Your Appliance for the First Time ...". Minute timer: Press the t button and set the length of time required for the alarm. (The example in the illustration shows a time of 5 minutes.

) After setting, the time of day is displayed again. Press the t button to display the time remaining. After the time has elapsed, an alarm signal sounds. To switch off the alarm, briefly press the t button. The settings can be corrected at any time.

To cancel a setting before the time has elapsed: Press the t button and set the time in the display to 0.00. Setting the timer: 8 Electronic Timer Automatic timer for the main oven You can use the automatic timer functions to switch the oven ON or OFF. Automatic OFF: If you want cooking to start immediately, simply use the timer knob to set the required total cooking time. 1.

Select the heating system and the oven temperature. 2. Press the g button and set the total cooking time (see the example in the illustration to the right, showing 1 hour and 30 minutes). After setting the display shows the time of day and indicates »AUTO«. The oven is now operating. After the set cooking time, a signal sounds and the oven is automatically switched OFF. To turn the signal off, briefly press the g button. 3. Turn the oven selector switch to the 0 position. 4.

The »AUTO« symbol blinks. Important: It must be switched OFF by pressing the E button. Setting the length of cooking time 9 Electronic Timer Automatic ON and OFF: 1. Select the heating system and the oven temperature. 2. Press the g button and set the total cooking time (see the example in the illustration right, showing 1 hour and 30 minutes).



[You're reading an excerpt. Click here to read official NEFF](#)

[B1320N2GB user guide](#)

<http://yourpdfguides.com/dref/3552309>

3. Press the h button and set the cooking finish time (the example in the illustration shows 12.30 hrs.).

After setting the display shows the time of day and indicates »AUTO«. The oven cooling fan will start immediately. At the pre-set time, the oven will be automatically switched ON. The settings can be corrected at any time. When the pre-set cooking finish time is reached, a signal sounds and the oven is automatically switched OFF.

To turn the signal off, briefly press the h button. 4. Turn the oven selector switch to the 0 position. 5. The »AUTO« symbol blinks.

Important: It must be switched OFF by pressing the E button. Setting the length of cooking time Setting the end of cooking time Please note: The automatic timer is ideal for dishes that require little attention during cooking. Both the alarm and the automatic timer may be programmed up to 24 hours in advance. The current settings can always be checked by pressing the appropriate function button. To cancel a setting before the timer has elapsed: Press the g button and reset the time in the display to 0.00. 10 Definition of Oven Features Gentle defrosting----- k Advantages: Recommended for delicate pastries only (i.e., whipped-cream gateaus). Advantages: low soiling of oven interior cooking on up to 3 shelf levels at once is possible shorter preheating times low oven temperatures bread baking Advantages: ideal for steaks, sausages, chicken joints, fish, kebabs and chops no turning of food is required three shelves of 'grilled' food can be prepared at one time very convenient Advantages: particularly suitable for flat, small cuts of meat, i.

e., steaks and sausages, fish, vegetables and toast. Circotherm ----- v Circotherm grilling ----- v A system by which foods, that would normally be grilled by direct heat from an element, are cooked using Circotherm. Temperatures between 180 to 190 °C are selected and the food is placed on the wire shelf, roasting on the roasting/grill pan. Radiant grill ----- Z The food being cooked is exposed to heat from the grill element at the top of the oven cavity. 11 Switching the Oven ON and OFF Before switching on your oven, you should decide which heating system you wish to use. Switching the oven ON: 1. Use the function selector to determine the desired system. 2. Set the temperature control knob to the desired temperature.

The selected temperature will be controlled automatically. The red oven temperature control lamp illuminates when the oven is first switched on, and extinguishes when the required temperature has been reached. Switching the oven OFF: To switch the oven OFF, turn both the temperature selector and function selector to the »0« position. @@@@ If the cake base gets too dark: Check the shelf level. Reduce the baking time, and possibly use a lower baking temperature.

If the cake base stays too light: Check the shelf level. @@@@@@ If a cake collapses after removing it from the oven, use less liquid on your next attempt, consider using a longer baking time, or use a slightly lower temperature setting. 13 Roasting Roasting with Circotherm v Notes: Meat roasted using the Circotherm system will brown on all sides and ste function selector switch to the k position. @@@@@@ Higher defrosting temperatures may cause the food to dry out. @@@@ Cover the pot and defrost of 130 140° C.

Attention: Pot handles must be ovenproof. Defrost and warm up frozen baked goods at 100 140° C. @@@@@@ Place on wire grill covered with greaseproof paper. @@@@ Oven cleaners must not be used on aluminium or plastic parts. @@ Do not use any scouring pads or abrasive cleaners.

@@ Enamel and glass: Use hot detergent suds for cleaning. @@ Food remnants burn in when the oven is reheated. The baked in remnants are very difficult to remove once burnt in. @@ Do not clean the warm oven with any of the cleaning products specifically designed for this purpose. When baking very moist cake (e.

g. rich fruit cake) that could drip over the top of the tin, place on the roasting pan or your own baking sheet. When roasting, ensure that the meat juices do not splash on to the base of the oven. Clean the oven before soiling becomes too heavy. Wash out the oven cavity with hot detergent suds. Leave the door open until the interior has dried. 18 Cleaning and Care Manual cleaning steps: Note: To make cleaning more convenient, the oven offers you the following options: Removing the oven door: 1. Fully open the oven door. 2. Move the catch levers on the right and left-hand sides to the fully open position.

3. Placing the door at an upward angle toward you, grasp the door with both hands and lift it out of the hinges toward you. Replacing the oven door: 1. Set both hinges into their respective receptacles on the left and right, and swing the oven door downward. 2.

Close the catch levers on the left and right. 3. Close the oven door. Switch on the oven light: Set the function selector to a random position. 19 Service and Repair Information In the event of problems or repairs that you cannot solve yourself, our customer service will be happy to help.

Check the customer service directory for an office facility in your area. Caution: Calling customer service because of an operator error can be very costly! In the event of a service request, please have the following information handy: E-Number FD You can find this information on the appliance's nameplate. The nameplate is located on the appliance, behind the oven door, on the left bottom edge of the oven. Replacing the oven light: Caution: Disconnect the appliance or remove the fuse! 1. To prevent damage, place a tea cloth into the cold oven. 2. Unscrew the lamp cover by turning it anti-clockwise. 3. Replace the lamp. Type: Incandescent bulb E 14, 220 240 V, 40 W, heat-resistant to 300 °C.

You may obtain this bulb from our spares department. Replacing the oven door seal: 1. Remove the defective oven door seal by simply unhooking it. You may obtain the new oven door seal from our spares department. 20 Trouble-shooting Guide Calling the customer service is not always really necessary. In some cases, you can remedy the situation yourself. The following table may contain some helpful tips. Important general safety guidelines: Service or repair work on the electronic components may only be performed by a qualified expert. Without exception, prior to starting such repairs, the appliance must be disconnected from the mains. This may be accomplished by tripping the automatic fuse or by removing the fuse from the fuse box that controls your flat or apartment.

Problem There is a general failure of all electrical functions, i.e., the control lamps have suddenly ceased to function. Liquids or thin cake mixes are distributed at a visibly uneven thickness. The electronic timer display suddenly shows a blinking 0.



[You're reading an excerpt. Click here to read official NEFF](#)

[B1320N2GB user guide](#)

<http://yourpdfguides.com/dref/3552309>

00. The oven suddenly stop functioning. Possible cause Defective fuse. Remedy Check the fuse in the fuse box, and replace if required. Level the appliance using the levelling feet, or check the installation.

Reset the time of day. The appliance has not been placed or installed plumb-and-level. The power supply was briefly interrupted. The electronic timer is set to an automatic timing cycle. This is a normal condition. It is caused by the occurrence of temperature differences. This condition is normal with moist cakes or with very large roasts. This kind of soiling is normal. Set the timer for operation without automatic timing. Press the E key.

Heat the oven at 100 °C for about 5 minutes. During baking or roasting, open the oven briefly several times; wipe up condensation after use. Remove the oven door, and put aside with the handle facing upward. For cleaning, remove the two screws at the door handle moulding with a screwdriver. Caution: During reassembly, install both the door handle and the door seal in their original positions. The oven door window pane fogs up. A considerable amount of water condensation occurs in the oven. After prolonged use, the oven window panes are soiled from the inside. 21 Assembly Instructions For the installer and kitchen expert! Important installation notes: Properly dispose of packaging materials. Do not use oven door handle for transporting or handling the unit during installation.

WARNING: Connection and first start of the appliance may only be performed by an authorised specialist. Connection must be made using an H 0 5 V V- F mains connection cable. Nominal connected loading, nominal voltage and model number of the appliance: see the rating plate, located behind the oven door, fixed to the lower left facing edge of the oven. The unit's nameplate is located at on the right sidewall of the unit. Electrical safety of the appliance can be ensured only if the equipment earth in the building installation has been installed according to regulations.

On the installation side a isolating device shall be provided. Any switch with a contact gap exceeding 3 mm may be considered a separating device. Other examples are LS switches, fuses and contactors. In the case of repairs interrupt all power connections to the unit. @@@@ Open the oven door and, using one screw on each side, fasten the built-in oven to the side strips of the housing unit (see illustration).

The two screws (supplied with the builtin oven) must be started slightly outward. Verify that the built-in oven is positioned securely and in a level position, and that the required installation dimensions have been maintained. The properly installed appliance must be covered on all sides in such a fashion that not even components with rough insulation are exposed to the touch. The cover must be removable with tools only. mind. 598 mind. 590 560 570 5 min50 d. 3 mind. 23 NEFF (UK) Ltd. Grand Union House, Old Wolverton Road, Old Wolverton Milton Keynes, MK12 5PT Tel: 01908 328300 Fax: 01908 328399 5750 201 814 Printed in Germany 0703 Es.



[You're reading an excerpt. Click here to read official NEFF B1320N2GB user guide](http://yourpdfguides.com/dref/3552309)
<http://yourpdfguides.com/dref/3552309>