



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF B1544. You'll find the answers to all your questions on the NEFF B1544 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF B1544
User guide NEFF B1544
Operating instructions NEFF B1544
Instructions for use NEFF B1544
Instruction manual NEFF B1544

de Gebrauchsanleitung
en Instructions for use
fr Mode d'emploi

de

en

fr



B 1544 ..



[You're reading an excerpt. Click here to read official NEFF B1544 user guide](#)

<http://yourpdfguides.com/dref/1850714>

Manual abstract:

..... 46 Packaging and old appliances . .
... 46 Before installation . .
.....
..... 46 Safety information . . .
.....
... 47 Reasons for damage
.....
... 48 Your new cooker
..... 49 The control panel . . .
.....
.....
.. 49 Function selector
..... 49 Temperature selector . . .
.....
..... 50 Press-down switches .
.....
50 Slide-in levels
.....
... 50 Accessories . .
.....
..... 51 Before using your Appliance for the first time
.....
.....
... 52 Preliminary cleaning
..... 52 Initial burn-in
.....
.....
... 52 Time of day
.....
.....
... 52 Electronic clock
.....
..... 53 The control panel
.....
.....
... 53 Special functions
.....
..... 53 Minute timer
.....
.....
..... 54 Automatic timer .
.....
.....
54 Inhaltsverzeichnis Description of Oven Features 56 Switching the oven ON and OFF . 59 Rapid heat up
.....
.....
.. 59 Baking
.....
.....
..... 60 Cooking Tips and Helpful Hints .
... 61 Roasting
.....
.....
..... 62 Grilling
.....
.....
..... 64 Combination hot-air/surface grilling .

65 Surface grilling

 . . 65 Defrosting and Cooking . . .

 66 Cleaning and Care

 68 Important cleaning basics . .

 . 68 Catalytic oven surfaces

 70 EasyClean® system (Oven cleaning system)

 71 Removing/installing the oven door

 . . . 73 Heating elements

 73 Inset rack / Telescopic pull-outs . .

 . 74 Service and Repair information . . 75 Trouble-shooting Guide . .

76 45 Important information Before using your new appliance, please read these Instructions for Use carefully. They contain important information concerning your Personal safety as well as on use and care of the appliance. The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance. Please keep the operating and installation instructions in a safe place; this important documentation may also be of use to a possible subsequent owner. Packaging and old appliances Your new appliance was protected by suitable packaging while it was on its way to you. All materials used for this purpose are environmentally friendly and can be recycled. Please make a contribution to protecting the environment by disposing of the packaging appropriately.

Old appliances are not worthless rubbish. Environmentally-conscious recycling can reclaim valuable raw materials. Before disposing of your old appliance, please make sure that it is unusable, or label it with a sticker stating „Caution, scrap“. Up-to-date information on how to dispose of your old appliance and the packaging from the new one can be obtained from your retailer or local authority. Before installation Transport damage Check the appliance after unpacking it. Do not connect the appliance if it has been damaged in transport. The cooker may only be connected by an approved specialist. Losses resulting from damage caused by incorrect connection will invalidate warranty claims. Electrical connection 46 Safety information Hot oven This appliance is intended for domestic use only. Only use the cooker for food preparation.

Open the oven door carefully. Hot steam may escape. Never touch the internal surfaces of the oven or the heating elements. There is a risk of burning. Children must be kept at a safe distance from the appliance.

Never store combustible items in the oven. Risk of fire. Never place flammable objects onto the hot plates. Fire hazard! Never place cables of electronic devices onto the hot plates. Never clamp leads of electrical appliances in the hot oven door.

The insulation on the leads could melt. There is a risk of short-circuiting. Caution: The extension rails heat up during oven operation. Use special care to avoid burns when extending the rails. Remove all packaging remnants, e.g. polystyrene parts, from the oven. Repairs Incorrectly done repairs are dangerous. There is a risk of electrocution. Repairs may only be carried out by after-sales service technicians who have been fully trained by BSH.

If there is a fault, switch off the oven fuse at the fuse box. Call the after-sales service. 47 Reasons for damage Baking sheet or aluminium foil on the oven floor Do not place baking sheets on the oven floor. Do not line the oven floor with aluminium foil. This causes heat to accumulate. Baking and roasting times will no longer be correct and the enamel will be damaged. If using hot air *, do not place greaseproof paper loosely in the oven (e.g. when heating the oven). The hot-air fan could draw in the paper which may damage the heater and fan.

Never pour water directly into a hot oven. This could damage the enamel. When baking very moist fruit cakes, do not put too much on the baking sheet. Fruit juice dripping from the baking sheet leaves stains that cannot be removed. It is recommended that you use the deeper universal pan.

Only leave the oven to cool with the door closed. Do not allow anything to become trapped in the oven door. Even if you only leave the oven door open slightly, the fronts of adjacent units may become damaged over time. If the oven seal is very dirty, the oven door will no longer close properly when the oven is in use. The fronts of adjacent units could be damaged.

Keep the oven seal clean. Do not stand or sit on the oven door. Do not use high-pressure cleaners or steam jets. Keep an eye on pressure cookers during the heat-up phase. As soon as the proper cooking pressure is reached, reduce the heat setting. Please observe the separate operating instructions that came with your hob. Baking paper Water in the oven Fruit juice Cooling with the oven door Very dirty oven seal Using the oven door as a seat Care and cleaning Hotplates 48 Your new cooker Here you will learn more about your new oven. The control panel and its switches and indicators are explained here. The heating modes and the accessories included with your oven will be explained here. The control panel Electronic clock Function selector Temperature selector with control lamp EasyClean® system (oven cleaning system) Function selector Use the function selector to select the type of heating for the oven.

Settings * / () , & . e d \$ Hot-air and defrosting position Top/bottom heat (conventional heating system) Surface grilling, full-surface grill Surface grilling, centre-area grill (energy-saving grill) Combination hot-air/surface grilling Pizza setting Bottom heat Defrosting position EasyClean® system (Oven cleaning system) Oven light 49 Temperature selector Settings 50 275 Temperature in °C. Press-down switches To engage and disengage, depress the switch, making sure that it is in OFF position. Slide-in levels Your oven features 4 slide-in levels. The slide-in levels are counted from bottom to top. The numbers are marked in the oven. When using hot-air baking * or roasting, do not use slide-in level »2«, in order not to block air circulation.



[You're reading an excerpt. Click here to read official NEFF B1544 user guide](http://yourpdfguides.com/dref/1850714)

The hook-in grilles and telescopic rails can be inserted at your preferred slide-in level. 50 Accessories Universal pan with grid Your appliance is supplied with: Grid Baking tray, enamelled Baking tray, enamelled Baking tray, non-stick Wire shelf, high/low Wire shelf, dose mesh Roasting tray Upgrade set Single Telescope System steamer cooker Pizza stone Note: Order no. Z 1232 X0 Z 1233 X0 Z 1272 X0 Z 1332 X0 Z 1342 X0 Z 1343 X0 Z 1432 X0 Z 1442 X0 Z 1512 X0 Z 1784 X0 N 8642 X0 Z 1912 X0 The baking tray or universal pan may distort while the oven is operating.

This is caused by major temperature differences on the utensil. These differences may occur if only one part of the utensil was covered or if deep-frozen food, e.g. pizza, was placed on the utensil. The distortion will already subside again during baking, roasting or grilling.

51 Before using your appliance for the first time Preliminary cleaning Take the accessories out of the oven. Remove all packaging remnants, e.g. polystyrene parts, from the oven. 1.

Clean the appliance exterior with a soft moistened cloth. 2. Clean the oven and the accessories with a hot detergent solution. Please observe the operating instructions furnished with the hob. Initial burn-in Heat the empty oven for approx. 30 minutes. Select top and bottom heat at a setting of 240° C. During the initial burn-in phase, please open the kitchen windows to dissipate unpleasant odours. Before using the appliance for the first time, you must set the current time on the electronic clock. After connecting to the mains, or after a power failure, the display 0:00 will blink.

Press the > button and set the current time with the rotary knob (e.g. 15:00 Uhr). To correct the time, press the symbol flashes. Then set the time. Time of day

Setting the time > button until the Note: The time cannot be corrected if an automatic function has been set (see Electronic clock for cancelling automatic function). 52 Electronic clock The electronic clock can be operated with one hand; after pressing the button, set the time with the rotary knob. Settings can be made for as long as the function display flashes (~4 seconds). The control panel Rapid heat up Minute timer Function selector Time of day Rotary knob To engage and disengage, depress gently OFF time ON time Special functions Masking out the display 1. Press the > button for 7 seconds.

The display then goes blank and the time continues running in the background. Rapid heating Setting the time Dimming the display 2. To switch on the display, briefly press the > button. Rapid heating s can be set with the clock (see section "Switching the oven on and off"). See section "Before using your appliance for the first time".

Between 22.00 and 6.00 the display is automatically dimmed. 53 Minute timer 1. Press the > button and set the cooking time (e.g. 5 minutes). When the timer switches on, the remaining time is displayed. 2. When the time has elapsed, a signal is emitted and the press the ,symbol flashes. To stop the signal, > button. Automatic timer Automatic switch off You can switch the oven on and off via the electronic clock. If you wish to bake or roast food immediately, it is only necessary to set the ON time. 1. Select the heating system and the oven temperature.

2. Press the > button until the ? symbol flashes and set the ON time with the rotary knob (example: 1 hour and 30 minutes). When the setting has been made, the current time is displayed after approx. 4 seconds. The ? symbol signals automatic mode. 3. When the time has elapsed (example: 1 hour and 30 minutes), a signal is emitted and the ! display flashes. The oven switches off automatically. To stop the signal, press the > button. 4.

Switch the oven off. 5. To end automatic mode, press the > button again. 54 Automatic switch on and switch off If the food is to be baked or roasted later on, both the ON time and OFF time must be set. 1.

Select the heating system and the oven temperature. 2. Press the > button until the ? symbol flashes and set the ON time with the rotary knob (example: 1 hour and 30 minutes). 3. Press the > button until the ! symbol flashes and set the OFF time with the rotary knob (example: 12:30).

When the setting has been made, the current time is displayed after approx. 4 seconds. The ! symbol signals automatic mode. 4. The oven is automatically switched on and off at the preset times (e.g. 11:00 and 12:30). 5. When the time has elae ON: 1. Use the function selector to determine the desired system.

2. Set the temperature control knob to the desired temperature. The selected temperature will be controlled automatically. The oven temperature control lamp illuminates when the oven is first switched on, and extinguishes when the required temperature has been reached. Switching the oven OFF: To switch the oven OFF, turn both the temperature selector and functions selector to the »0« position. Notes: The appliance features a cooling fan which runs until the oven has cooled down. Rapid heat up Switching the oven ON: When the oven has been switched on, rapid heating s can be switched on with hot air via the clock. Press the > button until the s symbol flashes. After approx. 4 seconds rapid heat up s switches on.

The s symbol is lit during the heating-up process. When the set temperature is reached, the symbol goes out and a signal sounds. Early cancelling: Press the button > until the icon s appears. Then cancel the rapid heating using the control knob. 59 Baking Using baking tins Always place baking tins in the centre of the baking grill.

We recommend dark metallic baking tins. Using baking sheets The slanted (handle) end of the baking sheet must always face the oven door. Always fully insert baking sheets into the oven. Use only original baking sheets. Notes You can influence the degree of browning by changing the temperature setting. Light coloured baking tins made from thin-wall materials lead to longer baking times and uneven browning of the cake. If a cake collapses after removing it from the oven, consider using a longer baking time, or use a slightly lower temperature setting. Using tinplate baking tins * / Hot air Top/bottom heat Shelf position 1 Shelf position 1 If the cake bottom gets too dark: Check the slide-in level. Shorten the baking time, and possibly use a lower baking temperature. If the cake bottom stays too light: Check the slide-in level. Increase the baking time, select a lower temperature, or use a dark metal baking tin. Do not place baking forms or high cakes too close to the rear oven wall. 60 Cooking Tips and Helpful Hints The bottom of a cake baked on a baking sheet stays too light The bottom of a cake baked in a tin stays too light The bottom of cake or cookies gets too dark The cake gets too dry The cake is too moist on the inside Remove from the oven all baking sheets or universal baking pan currently not in use.



[You're reading an excerpt. Click here to read official NEFF B1544 user guide](http://yourpdfguides.com/dref/1850714)

<http://yourpdfguides.com/dref/1850714>

Use a grill and not a baking sheet to support the cake tin during baking. Set cake or cookies into a higher set of slide-in levels.

Select a slightly higher oven temperature, and shorter baking time. Choose a slightly lower baking temperature. Note: Higher temperatures do not shorten baking times (done on the outside, raw on the inside). Choose a slightly longer baking time, allow the dough to rise slightly longer. Add less liquid to the dough. Avoid blocking the air vents at the rear wall of the oven cavity with the cake tins. When baked with hot-air circulation, cake baked in round or square tins gets too dark at the rear. Very moist cake dough (e.g. fruit cake) causes a lot of steam to generate in the oven that condenses on the oven door. Very uneven browning when using hot air circulation. Cake collapses when taken out of the oven. To save energy you can let the steam escape from the oven and thereby reduce the forming of water droplets by briefly and carefully opening the oven door (once or twice, in case of longer baking times more often). Check the slide-in level. Use less liquid. Preheat only if expressly required by the recipe. Dark baking tins have a higher degree of heat absorption. Residual heat: In the case of longer baking times, you can switch off the oven 5-10 minutes before the full baking time has elapsed.

61 Roasting Place the grill into the universal baking pan and slide them together into the same slide-in level. Meat can be roasted in the oven in a particularly economical fashion if the weight of the cut exceeds 750 grams. Rinse the universal baking pan and/or the roaster with water, and place the meat into it. With fat meat and poultry, pour 125 to 250 ml of water (to suit the size and kind of roast) into the universal pan. At your discretion, baste lean meat with fat, or cover it with bacon strips.

The roast drippings collecting in the universal pan make a tasty gravy. Dissolve the drippings with hot water, bring to a boil, thicken with corn starch, season to taste and, if required, pass it through a strainer. No preheating is required. Save energy by putting the roast into the oven while it is still cold. Roasting in an uncovered pot Roasting in a covered pot Place the meat into the roasting pot (or Dutch oven), cover it with a matching lid, and place it on the grill in the oven. We recommend that beef roast be prepared in a covered roasting pot. Roasting on the roasting sheet (Optional accessory available from your dealer). Place the roasting sheet into the universal pan. The roasting sheet prevents soiling of the oven. Grease and juice drippings from the roast are collected in the universal pan.

To render your roast more crispy when using the roasting sheet, you may wish to set a slightly higher temperature than indicated in the roasting table. 62 Tips Big, high roasts, goose, turkey, duck = Long roasting times, low temperatures Medium sized, low roasts = Medium roasting times, medium temperatures Small, flat roasts = Short roasting times, high temperatures Roasting time per cm of meat height without bones app. 13-15 minutes Roasting time per cm of meat height with bones app. 15-18 minutes We recommend using the lower of the stated temperatures first. In general, the lower temperature ensures a more even browning. We recommend turning the roast after half or two thirds of the roasting time have elapsed when using the setting /. For roasting, use only cookware with oven-proof handles. Prepare large roast directly in the universal pan, without using the grill. Smaller cuts of roast can be roasted on aluminium foil. @@@@Choose slightly longer roasting times.

@@@Always keep children at a safe distance. Always close the oven door when grilling. The grilling temperatures are variable. Always use the grill and the universal pan. Always place food to be grilled in the centre of the wire grill.

@@The radiator will be reactivated after a short period of time. @@Use the grill and universal pan together. @@@@Whole poultry should be turned after approx. two-thirds of the cooking time has elapsed. @@@@Always use the grill and universal pan together.

Turn the food after approx. two-thirds of the grilling time has elapsed. @@@@Slide-in levels With 1 bakings sheet: With 2 baking sheets: Slide-in level 1 Slide-in levels 1 + 3. All stated times are approximate guidelines that vary with the shape and volume of deep-frozen products. 66

Defrosting Raw deep-frozen products or foods from a freezer always defrost at 50° C. Higher defrosting temperatures may cause the food to dry out. Defrost deep-frozen meals packed in aluminium foil or closed aluminium containers at a setting of 130 140° C. Defrost and warm up deep-frozen baked goods at 100 - 140° C. Brush bread, rolls or yeast pastry lightly with water to make the crust more appealing. Defrost dry deep-frozen yeast cakes at 160 170° C for 20 30 minutes.

Defrost moist deep-frozen yeast cakes (with fruit topping) at 160 170° C for 30 50 minutes after wrapping in aluminium foil to prevent cake from drying out.

Defrost and toast deep-frozen toast (with topping) at 160 170° C for about 20 minutes. Frozen pizza: Please follow the manufacturers' instructions.

Defrosting position e Recommended for delicate pastries only (i.e., whipped-cream gateaus). Turn the function selector switch to the e position. Dependent on size and type of the baked goods, defrost 25 45 minutes, take out of the oven and allow to stand 30 45 minutes. With smaller amounts (pastries), the defrosting time is reduced to 15 20 minutes and the subsequent standing time to 10 15 minutes. 67 Cleaning and Care Important cleaning basics For cleaning, do not use abrasives, no corrosive cleaners, and no sharp objects.

Do not scratch off burnt-in food residues, but soak them off with a moist cloth and dishwashing detergent. Special cleaners, such as oven cleaning spray, must not be used on aluminium or plastic parts. Stainless steel front When using commercially available stainless steel cleaning agents, the lettering may become damaged. Do not use scouring sponges. Use commercially available detergents applied to a soft, moistened cloth or a chamois.

Enamel and glass Use hot detergent suds for cleaning. For cleaning the mating surface of the oven door at the front of the oven, the door should be removed.

Oven door pane The temperature of the pane inside the oven door is reduced by a heat-reflecting coating. The reduced temperature ensures that visibility through the oven door window is not impaired. When the oven door is open, this coating may have a bright appearance.

This is quite normal and does not indicate a quality defect. Hob surface The hob is covered by a special set of operating instructions. Please observe all cleaning directions contained in the instructions. 68 Oven interior Clean the oven after each use, especially after roasting or grilling.



[You're reading an excerpt. Click here to read official NEFF B1544 user guide](http://yourpdfguides.com/dref/1850714)

<http://yourpdfguides.com/dref/1850714>

Food remnants burn in when the oven is reheated. The baked in remnants are very difficult to remove once burnt in. You can reduce the degree of soiling by frequent cleaning using the hot-air system. Do not clean the warm oven with any of the cleaning products specifically designed for this purpose. When baking very moist cake, use the universal baking pan. For roasting, use the appropriate utensils (Dutch oven).

Clean the oven before soiling becomes too heavy. Wash out the oven cavity with hot detergent suds. Leave the door open until the interior has dried. 69 Catalytic oven surfaces Cleaning the catalytic surfaces of the oven The rear wall of the oven is coated with self-cleaning enamel. The surface cleans itself while the oven is in operation. Large splashes sometimes only disappear after the oven has been used several times. Never use oven cleaner on the back wall of the oven. Should the enamel become slightly stained, this will not affect its self-cleaning properties. Cleaning the oven floor, the oven ceiling and the side walls Use hot soapy water or a vinegar solution. It is best to use oven cleaner if the oven is very dirty.

Only use oven cleaner in a cold oven. Never use oven cleaner on the self-cleaning rear wall of the oven. Note: Enamel is baked on at very high temperatures. This can cause some slight colour variation. This is normal and does not affect the function.

Do not use coarse scouring pads or strong cleaning agents to remove such discolorations. The edges of thin trays cannot be completely enamelled. As a result, these edges can be rough. Anti-corrosion protection is guaranteed. 70 EasyClean® Systemd The oven cleaning function featured in your oven is intended to help you keep your oven neat and tidy.

An amount of cleaning solution is vaporised automatically. The combined effects of heat and steam soften the soil deposits on the oven wall enamel and facilitate their removal. Caution: Use this function only after the oven has completely cooled (room temperature). Use normal water only, and no distilled water. Activate oven cleaning: 1. Remove the baking sheet and the universal baking pan from the oven. The baking grill may remain in the oven. 2. Pour approx. 400 ml of water mixed with a little dishwashing detergent into the floor pan of the oven cavity.

In the case of heavy soil build-up, you may wish to allow the cleaning solution to soak in for a while before you activate the cleaning function. 3. Close the oven door. Warning: The cleaning system can only be activated when the oven has cooled down completely. 4. Turn the function selector to the position. The oven cleaning and the oven temperature control lamp are illuminated. After the initial heating time (approx. 4 minutes) the oven temperature control lamp extinguishes. After a further 17 minutes the program cycle is completed.

A buzzer sounds. Switching the oven OFF: Turn the function selector to the 0 position. The oven cleaning control lamp extinguishes. 71 After deactivating the oven cleaning function Cleaning tips: Never leave the residual water in the oven for any length of time, e.g.

overnight. 1. Open the oven door and pick up the remaining water with a large absorbent sponge cloth. 2. Using the detergent-soaked sponge cloth, a soft brush or a plastic pot scrubber, wipe of the oven interior.

Stubborn soil remnants can be removed with a cleaning scraper for glass-ceramic. Caution: Use the scraper carefully, and do not apply the tool at too flat an angle, because the enamel could be scratched! 3. Calciferous deposits may be removed with a cloth soaked in vinegar. 4. Wipe clean with clear water and dry with a soft cloth (do not forget to wipe under the oven door seal). Cleaning tips: If the oven is heavily soiled, the procedure may be repeated after the oven has cooled. If the oven is heavily soiled with grease, e.g. after roasting or grilling, we would recommend rubbing any stubborn dirt with detergent before activating the oven cleaning function. After cleaning, leave the oven door in its slanted detent position, i.

e., at a 30-degree angle, to allow the interior enamel surfaces to dry thoroughly. Rapid drying 1. Place the oven door into the slanted detent position, at an angle of approximately 30 degrees. 2. Turn the function selector to the * position, and the temperature selector to the 50° C. 3. Allow oven to heat for 5 minutes. 4. Afterwards return the function selector and the temperature selector to the »0« position.

72 Oven door Note: To make the manual cleaning steps following the automatic oven cleaning function more convenient, the appliance features the following options. Removing the oven door 1. Fully open the oven door. 2. Move the catch levers on the right and left-hand sides to the fully open position.

3. Placing the door at an upward angle toward you, grasp the door with both hands and lift it out of the hinges toward you. Hanging the oven door 1. Set both hinges into their respective receptacles on the left and right, and swing the oven door downward. 2.

Close the catch levers on the left and right. 3. Close the oven door. Lowering the heating element In order to clean the oven ceiling more easily turn down the grill heating element. Warning: The heating element must have cooled down. 1. Press the retaining clip upward until you hear the click. 2. Hold the heating element and fold it down. After cleaning Fold the heating element back up.

Pull the retaining clip forward and press it up until it clicks into place. 73 Inset rack Removing 1. Pull the inset rack out of its bearing bush. 2. Remove the inset rack. Clean the rack using washing-up liquid and pan scrapers or brushes. Telescopic pull-outs Removing 1. Press the coach spring down. 2. Push the telescope upwards and remove it.

Clean the telescopic pull-outs using washing-up liquid and pan scrapers or brushes. Attaching Insert the telescopic pull-out at the rear. Insert the telescopic pull-out into the guide and press down until it locks into position. Always insert the telescopic pull-outs all the way. Do not close the oven door until all telescopic pull-outs have been inserted.

Attention: The telescopic pull-outs become hot when the oven is on. Risk of burns when the telescopic pull-outs are pulled out 74 Service and Repair Information In the event of problems or repairs that you cannot solve or perform yourself, our customer service will be happy to help. Check the customer service directory for a customer service facility in your area. Caution: Calling the customer service because of an operator error can be very costly! E No and FD No You can find this information on the appliance's nameplate. The nameplate is located on the appliance, behind the oven door, on the left bottom edge of the oven.

@@@ To prevent damage, place a dish towel into the cold oven. 2. Unscrew the lamp cover by turning it counter-clockwise. 3. @@@ You may obtain the new oven door seal from your customer service.



[You're reading an excerpt. Click here to read official NEFF B1544 user guide](http://yourpdfguides.com/dref/1850714)

<http://yourpdfguides.com/dref/1850714>

75 Trouble-shooting Guide Calling the customer service is not always really necessary. In some cases, you can remedy the situation yourself. The following table may contain some helpful tips. Important general safety guidelines: Service or repair work on the electronic components may only be performed by a qualified expert. Without exception, prior to starting such repairs, the appliance must be disconnected from the mains.

This may be accomplished by tripping the automatic fuse or by removing the fuse from the fuse box that controls your flat or apartment. Problem Possible cause Remedy Check the fuse in the fuse box, and replace if required. . . . if there is a general failure of Defective fuse all electrical functions, i.e., the control lamps have suddenly ceased to function. . . .

. . . if liquids or thin viscous dough are distributed at a visibly uneven thickness? . . . if the oven suddenly stop functioning? The appliance has not been placed or installed plumb-and-level.

The electronic clock is set to an automatic timing cycle. The power supply was briefly interrupted. Energy pulses (e.g. lightning flash). Level the appliance using the leveling feet, or check the installation. Set electronic clock to operation without automatic timer: 1. Press the : button. 2. Reset ON time ? to 0:00. Reset the time of day. . . . if the oven suddenly stop functioning and the electronic clock flashes 0:00? .

. . . if electronically control functions fail? . . . if the oven cleaning control lamp fails to illuminate after the function has been activated? Reset the relevant functions. Temperature inside oven Prior to using the oven cleaning cavity is still too high, i.e. function, the oven must be allowed to after prolonged use of cool completely. the hotplates.

Defective control lamp. Replacement only by an authorised expert. 76 Problem Possible cause Remedy . . .

if smoke is generated during Roasting temperature roasting or grilling? to high. Grill or universal pan slid in incorrectly. . . . if enamelled slide-in parts show mat bright stains? . . . if the glass pane or window of the oven door become clouded? Normal occurrence due to dripping meat juices. Normal occurrence, due to existing temperature difference. Place grill into universal pan and insert together in slide-in level. Not available. Switch on the oven for app. 5 minutes at 100° C .

. . . if the oven shows increasing Normal occurrence, Briefly open the oven door occasionally condensation water? e.g. in the case of cakes during baking or roasting, wipe up the with very moist topping condensation water after operation. (fruit) or roasts. . . . if the panes of the oven Normal soiling. door are dirty on the inside after some time of use? Remove the oven door and place it facing down on a clean and soft surface. Grip the door glass next to the hinges, pull the upward and remove it. Press in the retaining clip with your thumb on one side and disengage the inner door glass e.g. with the spatula, then repeat on the other side.

Installation after cleaning: Insert inner door glass into the holder. First engage the right side and then the other side. Hang door glass and press down next to the hinges until it clicks into place. 77 Notizen 111 Notizen 112 Notes 113 Notes 114 5750 206 239 Printed in Germany 0304 Es. .



[You're reading an excerpt. Click here to read official NEFF B1544 user guide](http://yourpdfguides.com/dref/1850714)

<http://yourpdfguides.com/dref/1850714>