



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF B27CR22N1. You'll find the answers to all your questions on the NEFF B27CR22N1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF B27CR22N1
User guide NEFF B27CR22N1
Operating instructions NEFF B27CR22N1
Instructions for use NEFF B27CR22N1
Instruction manual NEFF B27CR22N1



[You're reading an excerpt. Click here to read official NEFF B27CR22N1 user guide](http://yourpdfguides.com/dref/5905061)
<http://yourpdfguides.com/dref/5905061>

.....
.....
... 21 7 Environmental protection .
.....

..... 7 Saving energy ...
.....
.....

..... 7 Environmentally-friendly disposal . .
.....
.....
..... 7 p Rails.....

.....
.....
.....
.....

22 Detaching and refitting the rails

.....
.. 22 * Getting to know your appliance . . .
.....

8 Control panel

.....
Controls
.....

..... Main menu

.....
.....
. Menu for the types of heating .. Cooking compartment functions

.....
.....
.....
.....

.....
.....
.....
.....

.....
8 . 8 . 9 .

. 9 . 10 q Appliance door . . .
.....

.....
... 23 Removing and fitting the appliance door . .

.....
.. 23 Removing the door cover

.....
.....

23 Removing and installing the door panels

..... 24 _ Accessories

.....
.....
.....

... 10 Accessories included .. Inserting accessories .. Combining accessories Optional accessories ...

.....
.....

.....

.....

.....

.. @@Only then will you be able to operate your appliance safely and correctly. Retain the instruction manual and installation instructions for future use or for subsequent owners. This appliance is only intended to be fully fitted in a kitchen.

Observe the special installation instructions. Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport. Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under warranty. This appliance is intended for domestic use only. The appliance must only be used for the preparation of food and drink. The appliance must be supervised during operation. Only use this appliance indoors. This appliance is intended for use up to a maximum height of 2000 metres above sea level.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards. Children must not play with, on, or around the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised. Keep children below the age of 8 years old at a safe distance from the appliance and power cable. Always slide accessories into the cooking compartment the right way round. ~ "Accessories" on page 10 4 Important safety information en (Important safety information no i t amro f n i y t e f a s t n a t ropmI General information : Warning – Risk of fire! □ Combustible items stored in the cooking compartment may catch fire. Never store combustible items in the cooking compartment. Never open the appliance door if there is smoke inside. Switch off the appliance and unplug it from the mains or switch off the circuit breaker in the fuse box. Risk of fire! is created when the appliance □ A draught door is opened.

Greaseproof paper may come into contact with the heating element and catch fire. Do not place greaseproof paper loosely over accessories during preheating. Always weight down the greaseproof paper with a dish or a baking tin. Only cover the surface required with greaseproof paper. Greaseproof paper must not protrude over the accessories.

Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents. Risk of injury! on the appliance door move □ The hinges when opening and closing the door, and you may be trapped. Keep your hands away from the hinges. □ : Warning – Risk of injury! : Warning – Risk of burns! □ The appliance becomes very hot.

Never touch the interior surfaces of the cooking compartment or the heating elements. Always allow the appliance to cool down.



[You're reading an excerpt. Click here to read official NEFF](#)

[B27CR22N1 user guide](#)

<http://yourpdfguides.com/dref/5905061>

Keep children at a safe distance. Risk of serious burns! ovenware become very hot. Always use oven gloves to remove accessories or ovenware from the cooking compartment. Risk of burns/vapours may catch fire in the hot alcoholic cooking compartment. Never prepare food containing large quantities of drinks with a high alcohol content. Only use small quantities of drinks with a high alcohol content. Open the appliance door with care. Incorrect repairs are dangerous.

Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the aftersales service. Risk of electric shock! The cable shock and on electrical appliances may melt when touching hot parts of the appliance. Never bring electrical appliance cables into contact with hot parts of the appliance. Risk of electric shock! Do not use high-pressure cleaners or steam cleaners, which can result in an electric shock. Risk of electric shock!

A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.

Warning – Risk of electric shock! Hazard due to magnetism! Permanent magnets are used in the control panel or in the control elements. They may affect electronic implants, e.g. heart pacemakers or insulin pumps. Wearers of electronic implants must stay at least 10 cm away from the control panel.

Halogen lamp : Warning – Risk of scalding! The accessible parts become hot during operation. Never touch the hot parts. Keep children at a safe distance. Risk of scalding! When you open the appliance door, hot steam can escape. Steam may not be visible, depending on its temperature.

When opening, do not stand too close to the appliance. Open the appliance door carefully. Keep children away. Risk of scalding! cooking compartment may create hot steam. Never pour water into the hot cooking compartment. Warning – Risk of electric shock! When replacing the cooking compartment bulb, the bulb socket contacts are live. Before replacing the bulb, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Causes of damage Cleaning function : Warning – Risk of fire! Causes of damage Loose food residues, grease and meat juices may catch fire during the cleaning function. Before starting the cleaning function, remove coarse dirt from the cooking compartment and from the accessories. Risk of fire! The appliance will become very hot on the outside during the cleaning function.

Never hang combustible objects, e.g. tea towels, on the door handle. Do not place anything against the front of the appliance. Keep children away from the appliance. General information Caution! Accessories, foil, greaseproof paper or ovenware on the cooking compartment floor: do not place accessories on the cooking compartment floor. Do not cover the cooking compartment floor with any sort of foil or greaseproof paper. Do not place ovenware on the cooking compartment floor if a temperatof packaging in an environmentally-friendly manner. This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

Getting to know your appliance Note: Depending on the appliance model, individual details and colours may differ. *Getting to know your appliance Control panel In the control panel, set the appliance's different functions. The current settings are shown on the display. In this chapter, we will explain the displays and controls. You will also find out about the various functions of your appliance. (Display 0 Touch buttons 8 ShiftControl control Touch buttons There are sensors under the touch buttons. Touch on the corresponding touch button to select a function. Touch button # on/off Main menu Use Switching the appliance on or off- "Switching the appliance on and off" on page 13 Selecting operating modes and settings ~ "Setting and starting the appliance operation" on page 13 Setting the timer, cooking time, or "Ready at" start delay ~ "Timesetting options" on page 15 Activating or deactivating the childproof lock ~ "Childproof lock" on page 16 Displaying further information Displaying the current temperature ~ "Setting and starting the appliance operation" on page 13 Activating or deactivating rapid heating ~ "Heating up the appliance quickly" on page 14 Activating or deactivating PowerBoost ~ "Heating up the appliance quickly" on page 14 Starting or stopping the operation ~ "Setting and starting the appliance operation" on page 13 Controls Use the controls to set your appliance simply and directly. 0 3 Time-setting options Childproof lock Information ! ° Rapid heating # Start/Stop ----- 8 Getting to know your appliance ShiftControl control Use the ShiftControl control element to navigate through the lines on the display and select the settings. Settings that you can change have left and right arrows '.

Button (Left) Right % Up & Down Use Navigates to the left on the display Navigates to the right on the display Navigates upwards on the display Navigates downwards on the display en Main menu Touch the 0 touch button to access the main menu. Menu Use Types of heating Selecting the required type of heating and temperature for your dish ~ "Switching the appliance on and off" on page 13 Basic settings Individually adjusting the appliance settings~ "Basic settings" on page 17 EasyClean Cleaning light soiling from the cooking compartment ~ "Cleaning function" on page 20 Self-cleaning Cleaning the cooking compartment pyrolytically ~ "Cleaning function" on page 20 Note: You can also scroll through the settings values quickly by pressing and holding a button. As soon as you release the button, you stop scrolling through the values quickly. Menu for the types of heating Your appliance has different types of heating. After switching on the appliance, you are taken directly to the menu for the types of heating. Type of heating CircoTherm hot air Temperature 40 - 200 °C, f ÷ , ... ^%o † Š Æ ' ž ----- Top/bottom heating 50 - 275 °C Circo-roasting 50 - 250 °C Pizza setting 50 - 275 °C Bread-baking Grill, large area 180 - 240 °C 50 - 290 °C Use For baking and cooking on one or more levels.

Button (Left) Right % Up & Down Use Navigates to the left on the display Navigates to the right on the display Navigates upwards on the display Navigates downwards on the display en Main menu Touch the 0 touch button to access the main menu. Menu Use Types of heating Selecting the required type of heating and temperature for your dish ~ "Switching the appliance on and off" on page 13 Basic settings Individually adjusting the appliance settings~ "Basic settings" on page 17 EasyClean Cleaning light soiling from the cooking compartment ~ "Cleaning function" on page 20 Self-cleaning Cleaning the cooking compartment pyrolytically ~ "Cleaning function" on page 20 Note: You can also scroll through the settings values quickly by pressing and holding a button. As soon as you release the button, you stop scrolling through the values quickly. Menu for the types of heating Your appliance has different types of heating. After switching on the appliance, you are taken directly to the menu for the types of heating. Type of heating CircoTherm hot air Temperature 40 - 200 °C, f ÷ , ... ^%o † Š Æ ' ž ----- Top/bottom heating 50 - 275 °C Circo-roasting 50 - 250 °C Pizza setting 50 - 275 °C Bread-baking Grill, large area 180 - 240 °C 50 - 290 °C Use For baking and cooking on one or more levels.

Button (Left) Right % Up & Down Use Navigates to the left on the display Navigates to the right on the display Navigates upwards on the display Navigates downwards on the display en Main menu Touch the 0 touch button to access the main menu. Menu Use Types of heating Selecting the required type of heating and temperature for your dish ~ "Switching the appliance on and off" on page 13 Basic settings Individually adjusting the appliance settings~ "Basic settings" on page 17 EasyClean Cleaning light soiling from the cooking compartment ~ "Cleaning function" on page 20 Self-cleaning Cleaning the cooking compartment pyrolytically ~ "Cleaning function" on page 20 Note: You can also scroll through the settings values quickly by pressing and holding a button. As soon as you release the button, you stop scrolling through the values quickly. Menu for the types of heating Your appliance has different types of heating. After switching on the appliance, you are taken directly to the menu for the types of heating. Type of heating CircoTherm hot air Temperature 40 - 200 °C, f ÷ , ... ^%o † Š Æ ' ž ----- Top/bottom heating 50 - 275 °C Circo-roasting 50 - 250 °C Pizza setting 50 - 275 °C Bread-baking Grill, large area 180 - 240 °C 50 - 290 °C Use For baking and cooking on one or more levels.



[You're reading an excerpt. Click here to read official NEFF](#)

[B27CR22N1 user guide](#)

<http://yourpdfguides.com/dref/5905061>

The fan distributes the heat from the ring heating element in the back panel evenly around the cooking compartment. For traditional baking and roasting on one level. Especially suitable for cakes with moist toppings. Heat is emitted evenly from the top and bottom.

For roasting poultry, whole fish and larger pieces of meat. The grill element and the fan switch on and off alternately. The fan circulates the hot air around the food. For preparing pizza and dishes which require a lot of heat from underneath. The bottom heating element and the ring heating element in the back panel heat up. For baking bread, bread rolls and baked items that require high temperatures. For grilling flat items, such as steaks or sausages, for making toast, and for au gratin dishes. The whole area below the grill element becomes hot. For grilling small amounts of steaks or sausages, for making toast, and for au gratin dishes. The centre area under the grill heating element becomes hot.

For cooking in a bain marie and for the final baking stage. The heat is emitted from below. For gentle and slow cooking of seared, tender pieces of meat in ovenware without a lid. The heat is emitted evenly from the top and bottom at low temperatures. For leaving yeast dough and sourdough to prove and for culturing yogurt.

Dough will prove more quickly than at room temperature. The surface of the dough does not dry out. For energy-optimised cooking of selected dishes. Heat is emitted evenly from the top and bottom. For energy-optimised cooking of selected dishes on one level without preheating.

The fan distributes the energy-optimised heat from the ring heating element in the back wall evenly around the cooking compartment. Grill, small area 50 - 290 °C Bottom heating Slow cooking 50 - 250 °C 70 - 120 °C Dough proving 35 - 55 °C Top/bottom heating eco CircoTherm eco 50 - 275 °C 40 - 200 °C 9 en Accessories Cooking compartment functions The functions in the cooking compartment make your appliance easier to use. This, for example, enables the cooking compartment to be well lit and a cooling fan to prevent the appliance from overheating. Opening the appliance door If you open the appliance door during an operation, the operation is paused. The operation continues to run when you close the door. Note: For some types of heating, the operation continues to run even when the appliance door is open. Interior lighting If you open the appliance door, the interior lighting switches on. If the door remains open for longer than around 15 minutes, the lighting switches off again. For most operating modes, the interior lighting switches on as soon as the operation is started. When the operation has finished, the lighting switches off.

Note: You can set the interior lighting not to come on during the operation in the basic settings. ~ "Basic settings" on page 17 Cooling fan The cooling fan switches on and off as required. The hot air escapes above the door. Caution! Do not cover the ventilation slots. Otherwise, the appliance may overheat. So that the cooking compartment cools down more quickly after the operation, the cooling fan continues to run for a certain period afterwards. Note: You can change how long the cooling fan continues to run for in the basic settings. ~ "Basic settings" on page 17 _Accessories se i r os ec A Your appliance is accompanied by a range of accessories. Here, you can find an overview of the accessories included and information on how to use them correctly.

Accessories included Your appliance is equipped with the following accessories: Wire rack For ovenware, cake tins and ovenproof dishes.

For roasts and grilled food. Universal pan For moist cakes, pastries, frozen meals and large roasts. It can be used to catch dripping fat when you are grilling directly on the wire rack. Baking tray For tray bakes and small baked products. Accessory supports You can use these if you wish to leave an accessory (e.g. the universal pan) in the cooking compartment for cleaning by the self-cleaning function. ----- Only use genuine accessories. They are specially adapted for your appliance. You can buy accessories from the after-sales service, from specialist retailers or online.

Note: The accessories may become deformed when they become hot. This does not affect their function. Once they cool down again, they regain their original shape. 10 Accessories en Inserting accessories The cooking compartment has four shelf positions. The shelf positions are counted from the bottom up.

Combining accessories You can insert the wire rack and the universal pan at the same time to catch drops of liquid. When inserting the wire rack, ensure that both spacers, are at the rear edge. When the universal pan is inserted, the wire rack is on top of the upper guide rod of the shelf position. The accessories can be pulled out up to approximately halfway without tipping. Notes Ensure that you always insert the accessories into the cooking compartment the right way round.

Always insert the accessories fully into the cooking compartment so they do not touch the appliance door. Locking function The accessories can be pulled out approximately halfway until they lock in place. The locking function prevents the accessories from tilting when they are pulled out. The accessories must be inserted into the cooking compartment correctly for the tilt protection to work properly. When inserting the wire rack, ensure that the lug, is at the rear and is facing downwards. The open side must be facing the appliance door and the curvature must be facing downwards $\frac{3}{4}$. Optional accessories You can purchase optional accessories from the aftersales service and specialist retailers, or on the Internet. You will find a comprehensive range of products for your appliance in our brochures and on the Internet. Both availability and whether it is possible to order online differ between countries. Please see your sales documents for more details.

When purchasing, please always quote the exact order number of the optional accessory. Note: Not all optional accessories are suitable for every appliance. When purchasing, please always quote the exact designation (E no.) of your appliance. ~ "Customer service" on page 26 Accessories Order number Baking and roasting shelf Z11CR10X0 Baking tray, suitable for pyrolytic cleaning Z12CB10A0 Universal pan, suitable for pyrolytic cleaning Z12CU10A0 Extra-deep pan, suitable for pyrolytic cleaning Z12CM10A0 Steaming set for ovens Z19DD10X0 Profi pan, suitable for pyrolytic cleaning Z12CN10A0 Lid for the Profi pan Z12CL10A0 Pizza tray Z1352X0 Grill tray, suitable for pyrolytic cleaning Z12CQ10A0 Bread-baking stone, suitable for pyrolytic cleaning Z1913X0 Glass roasting dish, 5.

1 litres Z11GT10X0 Glass pan Z11GU10X0 ComfortFlex rail (1 level)* Z11TC10X0 3 x fully extendable pull-out rack* Z11TF36X0 *Accessory does not fit in every appliance, quote the E no. when ordering ----- When inserting the baking tray or the universal pan, ensure that the lug f is at the rear and is facing downwards.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/5905061)

[B27CR22N1 user guide](http://yourpdfguides.com/dref/5905061)

<http://yourpdfguides.com/dref/5905061>

The sloping edge of the accessory, must be facing towards the appliance door. 11 en Before using for the first time KBefore using for the first time emi t t s r
i f e h t r o f g n i s u e r o f e B Cleaning the cooking compartment To remove the new-appliance smell, heat up the cooking compartment when it is empty and
with the oven door closed. 1.

Remove the accessories from the cooking 2. Remove leftover packaging, such as polystyrene 3. Before heating the appliance, wipe the smooth Before you can
use your new appliance, you must make some settings. You must also clean the cooking compartment and accessories. compartment, pellets, from the cooking
compartment. Initial use As soon as the appliance is connected to the power supply, the first setting "Language" appears on the display. Setting the language
1. 2. 3.

4. surfaces in the cooking compartment with a soft, wet cloth. 4. Use the # touch button to switch on the appliance. 5. Set the heating type and temperature,
then start the appliance operation. ~ "Setting and starting the appliance operation" on page 13 Settings Heating type Top/bottom heating f Temperature 240
°C Cooking time 1 hour 6. Keep the kitchen ventilated while the appliance is heating up. 7. Use the # touch button to switch off the appliance after the
indicated cooking time.

8. Wait until the cooking compartment has cooled down. 9. Clean the smooth surfaces with soapy water and a dish cloth. Use Use Use Use the the the the &
button to navigate to the bottom line.

(or) button to select the language. % button to return to "Language".) button to select the next setting. Setting the time 1. 2.

3. 4. Use the & button to navigate to the next line. Use the (or) button to select the current time. Press the % button. Use the) button to select the next
setting. Setting the date 1. Use 2. Use 3. Use 4.

Use 5. Use 6. Use 7. Use 8. Use 9. Use 10. Use 11. Use 12. Use the & button to navigate to the next line. the (or) button to select the current day.
the % button to return to "Day". the) button to select the next setting. the & button to navigate to the next line. the (or) button to select the current month.
the % button to return to "Month".

the) button to select the next setting. the & button to navigate to the next line. the (or) button to select the current year. the % button to return to "Year". the
) button to apply the settings.

The initial use is complete. Cleaning the accessories Clean the accessories thoroughly using soapy water and a dish cloth or soft brush. Notes You can change
these settings at any time in the basic settings. ~ "Basic settings" on page 17 □ After connecting the appliance to the power or following a power cut, the
settings for initial use are shown in the display. □ 12 Operating the appliance en 1 Operating the appliance en a i l p a e h t g n i t a r e p O 4. Use the (or)
button to select the temperature. You have already learnt about the controls and how they work. Now we will explain how to set your appliance. You will learn
about what happens when you switch the appliance on and off, and how to select the operating mode. Switching the appliance on and off Touch the # touch
button to switch the appliance on or off.

After switching off the appliance, on the display you can see if the residual heat in the cooking compartment is high or low. Display -H-h Meaning Residual
heat high (above 120 °C) Residual heat low (between 60 °C and 120 °C) Note: Depending on the operating mode, different settings are available. For each
further setting, use the & button to navigate to the next line. Use the (or) button to select the setting. 5. Touch the # touch button to start the appliance
operation. The heating bar and run time appear on the display. Note: If you would like to go directly to the 0 main menu after switching on the appliance, you
can select the main menu under "Operation after switching on" in the basic settings chapter. ~ "Basic settings" on page 17 Default values The appliance
suggests a temperature or setting for each type of heating. You can accept this value or change it in the appropriate area.

Heating bar As soon as a type of heating has started, the heating bar appears on the display. The heating bar shows the temperature increase in the cooking
compartment. Run time When a type of heating has been started, the run time is displayed. The run time counts upwards during the operation. You can
therefore check how long the operation has already been running.

Displaying the current temperature To show the current temperature on the display, press the ! touch button. The current temperature is shown briefly only
when heating up. Further information If the ! touch button lights up, information can be displayed. Touch the ! touch button to do this. The information is
displayed for a few seconds.

Notes Certain displays and notes, such as the residual heat in the cooking compartment, remain visible on the display even when the appliance is switched off.
□ After an appliance operation, the cooling fan runs on audibly until the cooking compartment has been cooled as far as possible. □ Switch off your device
when you do not need to use it. If no settings are applied for a long time, the appliance switches itself off automatically. □ Setting and starting the appliance
operation Example: CircoTherm hot air , at 170 °C 1. Touch the # touch button to switch on the appliance. You are taken directly to the € menu for the types
of heating. 2. Use the (or) button to select the type of heating. 3.

Use the & button to navigate to the next line. 13 en Operating the appliance Activating the "PowerBoost" function 1. Set CircoTherm hot air , or the bread
baking setting ... and the temperature. Note: Set a temperature above 100 °C to allow the appliance to preheat quickly. 2. Place the food on a single level in
the cooking compartment. 3. Touch the # touch button to start the appliance operation. 4. Touch the ° touch button to activate the "PowerBoost" function.
The ° symbol appears on the display. Once the set temperature has been reached, the "PowerBoost" function switches itself off automatically. The ° symbol
disappears from the display. Changing or cancelling the appliance operation Changing the appliance operation 1. Use the # button to stop the operation.

2. Use the & or % button to navigate to the line for the setting that should be changed. 3. Use the (or) button to change the setting. 4.

Use the # touch button to start the changed operation. Notes The cooling fan may continue to run while an operation is interrupted. □ After a temperature
change, the paused running time continues to count. After a change in the type of heating, the running time starts again from zero. □ Cancelling the appliance
operation Press and hold the # touch button until the appliance operation is cancelled. Note: Operating modes such as the cleaning function cannot be
cancelled.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/5905061)

[B27CR22N1 user guide](http://yourpdfguides.com/dref/5905061)

<http://yourpdfguides.com/dref/5905061>

Heating up the appliance quickly You can use the "Rapid heat-up" and "PowerBoost" functions to reduce the preheat time. Whether the appliance is preheated with the "Rapid heat-up" function or the "PowerBoost" function depends on the type of heating that has been set. With the "PowerBoost" function, unlike with the "Rapid heat-up" function, you can place your food into the cold cooking compartment even before preheating has begun. Only cook on one level when using the "PowerBoost" function.

Function Rapid heat-up PowerBoost* Type of heating Place the food in the cooking compartment after preheating before preheating Top/bottom heating f CircoTherm hot air , Bread-baking setting ... * Do not use more than one level for cooking Notes □ If the ° touch button is lit, the "Rapid heat-up" or "PowerBoost" function can be activated. □ To deactivate the "Rapid heat-up" or "PowerBoost" function before it has finished, touch the ° touch button. Activating the "Rapid heat-up" function 1. Set top/bottom heating f and the temperature. Note: Set a temperature above 100 °C to allow the appliance to preheat quickly. 2. Touch the # touch button to start the appliance operation. 3. Touch the ° touch button to activate the "Rapid heat-up" function. The ° symbol appears on the display.

4. Once the set temperature has been reached, the "Rapid heat-up" function switches itself off automatically. The ° symbol disappears from the display. Place the food in the cooking compartment 14 Time-setting options en OTime-setting options sno i t po gn i t es -emi T Setting the cooking time Once the set cooking time has elapsed, the appliance switches off automatically. The function can only be used in combination with a type of heating.

1. Touch the # touch button. 2. Set the type of heating and temperature. 3.

Touch the 0 touch button. Your appliance has different time-setting options. Time-setting option . Timer Cooking time Ready at Use The timer functions like an egg timer. The appliance does not switch on and off automatically. Once the set cooking time has elapsed, the appliance switches off automatically. The appliance switches on automatically, and once the set cooking time has elapsed and the end time has passed, it switches off automatically. + * 4. Use the (or) button to set the cooking time. The time-setting options are shown in the display.

– Default value for the (button = 10 minutes – Default value for the) button = 30 minutes 5. Touch the # touch button to start the set cooking time. As soon as the cooking time has elapsed, an audible signal sounds and the appliance ends the operation automatically. Touch the 0 touch button to end the audible signal. Note: If you have set a time-setting option, the time interval increases if you set a higher value. Example: You can set a cooking time of up to one hour in oneminute increments; for cooking times over one hour, you can set a cooking time in five-minute increments. Start delay – "Ready at" The appliance switches on automatically and switches off at the preset end time. To do this, set the cooking time and determine the end time for the operation. The start delay can only be used in combination with a type of heating. Notes □ Ensure that food is not left in the cooking compartment for too long as it may spoil.

□ It is not possible to start every type of heating with a start delay. 1. Slide food into the cooking compartment on a 2. Touch the # touch button. 3.

Set the type of heating and temperature. 4. Touch the 0 touch button. Showing and hiding the time-setting options To show or hide the time-setting options, touch the 0 touch button. Note: After a particular length of time, the time-setting options that are shown are automatically hidden.

If you have already set a cooking time, it will be applied. suitable accessory and close the appliance door. 5. Select the cooking time using the) button. 6. Use the & button to navigate to the "* Ready at" The time-setting options are shown on the display. Setting the timer The timer can be set when the appliance is switched on or off. 1. Touch the 0 touch button. 7.

Select the end time using the) button. 8. Touch the # touch button. line. The appliance waits until the appropriate time to start the operation. The time-setting options are shown on the display. 2. Select the cooking time using the) button. Note: When the appliance is switched on, use the % button to navigate to the Timer . line and then select the cooking time using the) button.

3. Touch the 0 touch button to start the timer. The . symbol appears on the display. The timer counts down.

Note: As soon as the set time has elapsed, a signal sounds. To cancel the signal tone, touch the 0 touch button. As soon as the end time has passed, a signal sounds and the appliance stops the operation automatically. To cancel the signal tone, touch the 0 touch button. Checking, changing or deleting settings 1. Touch the 0 touch button. 2. Use the & or % button to navigate through the lines. 3. If necessary, change the setting using the (or) The time-setting options are shown on the display. button. Set "00:00" to delete a time function. The setting is applied automatically. 15 en Childproof lock AChildproof lock kco l f o rpd l i hC One-time childproof lock The control panel is locked so that the appliance cannot be switched on. To switch it on, the one-time childproof lock must be deactivated.

After the appliance is switched off, the control panel is no longer locked. Activating and deactivating 1. Press and hold the 0 touch button until "Childproof lock activated" appears on the display. The childproof lock is activated. 2. Press and hold the 0 touch button until "Childproof lock deactivated" appears on the display. The childproof lock is deactivated. Your appliance is equipped with a childproof lock so that children cannot switch it on accidentally or change any settings. Your appliance has two different locks. Lock Automatic childproof lock One-time childproof lock Activate/deactivate Via the Settings menu ~ "Basic settings" on page 17 Via the 0 touch button Note: As soon as you activate the childproof lock, the control panel is locked.

The 0 and # touch buttons are not included. You can deactivate the childproof lock at any time. Automatic childproof lock The control panel is locked so that the appliance cannot be switched on. To switch it on, the automatic childproof lock must be interrupted. After the appliance operation, the control panel is locked automatically.

Activating 1. Touch the ± touch button. 2. Touch the 0 touch button. 3.

Use the (or) button to select the "Settings". 4. Use the & button to navigate to the next line. 5. Use the (or) button to select "Automatic childproof lock". 6. Use the & button to navigate to the next line.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/5905061)

[B27CR22N1 user guide](http://yourpdfguides.com/dref/5905061)

<http://yourpdfguides.com/dref/5905061>

7. Use the (or) button to select "Activated". 8.

Touch the 0 touch button. 9. Use the & button to navigate to the next line to save the setting. The "Automatic childproof lock" is activated. The 1 symbol appears on the display after switching off the appliance. Cancelling 1. Press and hold the 0 touch button until "Childproof lock deactivated" appears on the display. 2. Touch the ± touch button. 3.

Switch on the required appliance operation. Deactivating 1. Press and hold the 0 touch button until "Childproof 2. 3. 4. 5. 6. lock deactivated" appears on the display. Touch the ± touch button. Touch the 0 touch button.

Use the (or) button to select the "Settings". Use the & button to navigate to the next line. Use the (or) button to select "Automatic childproof lock". 7. Use the & button to navigate to the next line. 8. Use the (or) button to select "Deactivated". 9. Touch the 0 touch button. 10.

Use the & button to navigate to the next line to save the setting. The "Automatic childproof lock" is deactivated. 11. Touch the ± touch button. 16 Basic settings en QBasic settings sgn i t e s c i saB Fan run-on time There are various settings available to you in order to help use your appliance effectively and simply. You can change these settings as required. Changing the basic settings 1. 2. 3. 4.

5. 6. 7. 8. 9.

Touch the # touch button. Touch the 0 touch button. Use the (or) button to select the "" Settings". Use the & button to navigate to the next line. Use the (or) button to select the setting.

Use the & button to navigate to the next line. Use the (or) button to select the setting. Touch the 0 touch button. To save the setting, use the & button to select "Save". To discard the setting, use the % button to select "Discard". Recommended Minimum Pull-out system No Yes (double or triple pull-out system retrofitted) Factory settings Load *) Depending on the appliance model, this basic setting cannot be selected ----- Setting favourites You can set which heating types are shown in the Types of heating menu. Note: The "CircoTherm hot air", "Circo-roasting" and "Grill, large area" types of heating are always shown in the Types of heating menu. They cannot be deactivated. Touch the # touch button. Touch the 0 touch button.

Use the (or) button to select the "" Settings". Use the & button to navigate to the next line. Use the (or) button to select "Favourites". Use the & button to navigate to the next line. Use the (or) button to select the type of heating. Use the & button to navigate to the next line. Use the (or) button to select "Activated" or "Deactivated". Note: If you have selected "Activated", the type of heating is shown in the Types of heating menu. If you have selected "Deactivated", the type of heating is shown in the Types of heating menu. 10.

Touch the 0 touch button. 11. To save the setting, use the & button to select "Save". To discard the setting, use the % button to select "Discard". 1. 2. 3. 4. 5. 6.

7. 8. 9. List of basic settings Setting Language Time of day Date Favourites Selection Select language Sets the current time Sets the current date Set the heating types that should be shown in the heating types menu ~ "Setting favourites" on page 17 Audible signal duration Short Medium Long Button tone Switched off (Exception: The button tone for the # touch button remains switched on) Switched on Display brightness Adjustable across 5 levels Clock display Digital Off Lighting On during operation Off during operation Childproof lock* Only key lock Door lock and key lock Automatic childproof lock Deactivated Activated Action after switching on Main menu Heating types Night-time dimming Switched off Switched on (display dimmed between 10 p.m. and 5.59 a.m.) Brand name logo Display Do not display 17 en Sabbath mode FSabbath mode edom h t ab aS DCleaning agent t nega gn i nae l C You can set a time of up to 74 hours using Sabbath mode. The food in the cooking compartment remains warm, without you having to switch the appliance on or off.

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance. Starting Sabbath mode Before you can use Sabbath mode, you must activate it under "Favourites" in the basic settings. ~ "Setting favourites" on page 17 Once the Sabbath mode has been activated, you can select it under the menu for the types of heating. The appliance heats up with top/bottom heating. The temperature can be set between 85 °C and 140 °C. 1. 2. 3. 4.

5. 6. 7. Suitable cleaning agents To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table. Depending on the appliance model, not all of the areas listed may be on/in your appliance.

Caution! Risk of surface damage Do not use: Harsh or abrasive cleaning agents, Cleaning agents with a high alcohol content, Hard scouring pads or cleaning sponges, High-pressure cleaners or steam cleaners, Special cleaners for cleaning the appliance while it is hot. Wash new sponge cloths thoroughly before use. Tip: Highly recommended cleaning and care products can be purchased through the after-sales service. Observe the respective manufacturer's instructions. Touch the # touch button.

Use the (or) button to select "Sabbath mode". Use the & button to navigate to the next line. Use the (or) button to select the temperature. Use the & button to navigate to the next line. Use the (or) button to select the cooking time. Touch the # touch button. The appliance starts the operation. Notes Once Sabbath mode has started, you can no longer change any settings or cancel the operation using the # touch button. The operation is not interrupted if you open the appliance door. : Warning – Risk of burns! Once the Sabbath mode duration has elapsed, a signal sounds.

The appliance stops heating. Use the # touch button to switch off the appliance. The appliance becomes very hot. Never touch the interior surfaces of the cooking compartment or the heating elements. Always allow the appliance to cool down. Keep children at a safe distance. Area Cleaning Cancelling Sabbath mode Touch the # touch button to cancel Sabbath mode. Appliance exterior Stainless steel Hot soapy water: front Clean with a dish cloth and then dry with a soft cloth. Remove flecks of limescale, grease, starch and albumin (e.g. egg white) immediately. Corrosion can form under such flecks. Special stainless steel cleaning products suitable for hot surfaces are available from our after-sales service or from specialist retailers. Apply a very thin layer of the cleaning product with a soft cloth.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/5905061)

[B27CR22N1 user guide](http://yourpdfguides.com/dref/5905061)

<http://yourpdfguides.com/dref/5905061>

Plastic Hot soapy water: Clean with a dish cloth and then dry with a soft cloth.

Do not use glass cleaner or a glass scraper. Painted surfaces Hot soapy water: Clean with a dish cloth and then dry with a soft cloth. Control panel Hot soapy water: Clean with a dish cloth and then dry with a soft cloth. Do not use glass cleaner or a glass scraper. 18 Cleaning agent Door panels Hot soapy water: Clean with a dish cloth and then dry with a soft cloth.

Do not use a glass scraper or a stainless steel scouring pad. Hot soapy water: Clean with a dish cloth and then dry with a soft cloth. If descaler comes into contact with the door handle, wipe it off immediately. Otherwise, any stains will not be able to be removed. en Keeping the appliance clean Always keep the appliance clean and remove dirt immediately so that stubborn deposits of dirt do not build up. Tips □ Clean the cooking compartment after each use. This will ensure that dirt cannot be baked on. □ Always remove flecks of limescale, grease, starch and albumin (e.g. egg white) immediately.

□ Use the universal pan for baking very moist cakes. □ Use suitable ovenware for roasting, e.g. a roasting dish. □ Where possible, use Circotherm hot air. This type of heating creates less dirt. Door handle Appliance interior Enamel surfaces Hot soapy water or a vinegar solution: Clean with a dish cloth and then dry with a soft cloth. Soften baked-on food residues with a damp cloth and soapy water. If there are heavy deposits of dirt, use a stainless steel scouring pad or oven cleaner. Leave the cooking compartment open to dry after cleaning.

It is best to use the cleaning function. ~ "Cleaning function" on page 20 Glass cover for Hot soapy water: the interior light- Clean with a dish cloth and then dry with a soft ing cloth. If the cooking compartment is heavily soiled, use oven cleaner. Stainless steel Stainless steel cleaner: door cover Observe the manufacturer's instructions. Do not use stainless steel care products.

Remove the door cover for cleaning. Rails Hot soapy water: Soak and clean with a dish cloth or brush. Pull-out system Hot soapy water: Clean with a dish cloth or a brush. Do not remove the lubricant while the pull-out rails are pulled out – it is best to clean them when they are pushed in. Do not clean in the dishwasher.

Accessories Hot soapy water: Soak and clean with a dish cloth or brush. If there are heavy deposits of dirt, use a stainless steel scouring pad. ----- Notes □ Slight differences in colour on the front of the appliance are caused by the use of different materials, such as glass, plastic and metal. □ Shadows on the door panels, which look like streaks, are caused by reflections made by the interior lighting. □ Enamel is baked on at very high temperatures. This can cause some slight colour variation. This is normal and does not affect operation. The edges of thin trays cannot be completely enamelled. As a result, these edges can be rough. This does not impair the anti-corrosion protection.

19 en Cleaning function .Cleaning function no i t c nu f g n i nae l C : Warning – Risk of serious damage to health! Your appliance is equipped with a self-cleaning function and EasyClean. You can use the self-cleaning function to clean the cooking compartment. Use the EasyClean cleaning aid for intermediate cleaning of the cooking compartment. Dirt is softened beforehand using EasyClean. It can then be removed more easily. The appliance will become very hot during the cleaning function. The non-stick coating on baking trays and tins is destroyed and noxious gases are released. Never clean non-stick baking trays and baking tins using the cleaning function. Only clean enamelled accessories using the cleaning function.

Caution! Shelf supports and pull-out rails tend to discolour if they are left in the cooking compartment when it is cleaned. Before you start the cleaning function, remove the shelf supports and pull-out rails from the cooking compartment. 1. Remove the shelf supports and pull-out rails from the 2. Remove the worst of the food residues from the 3.

Clean the inside of the appliance door and along the Self-cleaning You can use the "Self-cleaning" operating mode to clean the cooking compartment effortlessly. The cooking compartment is heated up to a very high temperature. Residues from roasting, grilling and baking will burn. You can choose from three cleaning settings. Setting 1 2 3 Cleaning level Light Medium Intensive Duration Approx.

1 hour, 15 minutes Approx. 1 hour, 30 minutes Approx. 2 hours cooking compartment. ~ "Rails" on page 22 cooking compartment and accessories. The dirtier the cooking compartment and the longer the dirt has been there, the higher the cleaning setting should be. A cleaning cycle requires only approx. 2.5 – 4.7 kilowatt hours. Note: For your safety, the cooking compartment door locks automatically.

It cannot be opened again until the H symbol for the locking mechanism goes out in the status bar. The interior lighting remains off during cleaning. edges of the cooking compartment in the area around the seal. Do not scrub the seal. ~ "Cleaning agent" on page 18 4. Insert the accessory supports if you wish to clean accessories when the cooking compartment is being cleaned. Make sure that the vertical bar , on the accessory support is facing the front (figure !). : Warning – Risk of burns! □ Risk of burns! □ The cooking compartment becomes extremely hot during the cleaning function. Never open the appliance door. Allow the appliance to cool down.

Keep children away from the appliance. ; The appliance will become very hot on the outside during the cleaning function. Never touch the appliance door. Allow the appliance to cool down. Keep children away from the appliance.

5. Insert the rear end of the accessory support as far as it will go into the rear socket f, and push the accessory support back ,, (figure "). 6. Then insert the front end of the accessory support as far as it will go into the front socket ..., and push the accessory support down † (figure #). Preparation : Warning – Risk of fire! □ Risk of fire! □ Loose food residues, grease and meat juices may catch fire during the cleaning function.

Before starting the cleaning function, remove coarse dirt from the cooking compartment and from the accessories. The appliance will become very hot on the outside during the cleaning function. Never hang combustible objects, e.g. tea towels, on the door handle. Do not place anything against the front of the appliance. Keep children away from the appliance. 7. Whenever you wish to use the cleaning function, make sure that you never leave anything other than an enamelled accessory without anti-stick coating (e.g.

the universal pan) on the accessory supports (figure \$). 20 Cleaning function Caution! The wire rack tends to discolour if it is left in the cooking compartment when it is cleaned. Do not attempt to clean the rack using the cleaning function.



[You're reading an excerpt. Click here to read official NEFF](#)

[B27CR22N1 user guide](#)

<http://yourpdfguides.com/dref/5905061>

en EasyClean The EasyClean cleaning aid makes it easier to clean the cooking compartment. Dirt is softened beforehand by vaporizing soapy water. It can then be removed more easily. : Warning – Risk of scalding! Water in a hot cooking compartment may create hot steam. Never pour water into the hot cooking compartment. Starting Notes □ The "EasyClean s" cleaning aid can only be started once the cooking compartment is cold (room temperature) and the appliance door is closed. □ Do not open the appliance door during operation.

Doing this will interrupt the "EasyClean s" cleaning aid. 1. Remove the accessories from the cooking 2. Mix 0.4 litres of water (not distilled water) with a drop 3.

4. 5. 6. 7. Note: Further accessories that can be cleaned using the cleaning function are listed in the table for special accessories.

~ "Accessories" on page 10 Starting Touch the # touch button. Touch the 0 touch button. Use the (or) button to select "Self-cleaning ~". Use the & button to navigate to the next line. Use the (or) button to select the cleaning setting. Note: Once it has started, the cleaning setting can no longer be changed. 6. Use the & button to navigate to the next line. 7. Touch the # touch button.

The appliance starts self-cleaning. 1. 2. 3. 4. 5. compartment. During self-cleaning, the appliance door is locked automatically. The 5 symbol appears on the display. Note: If you would like to start self-cleaning later, set an end time.

Cancelling Touch the # touch button to cancel. The appliance door cannot be opened until the 5 symbol goes out. Finishing As soon as self-cleaning has run through, a signal sounds. The appliance door cannot be opened until the 5 symbol goes out. Once the cleaning function has ended 1.

Allow the cooking compartment to cool down. 2. Wipe off any ash that has been left behind in the of washing-up liquid and pour into the middle of the cooking compartment floor. Touch the # touch button. Touch the 0 touch button.

Use the (or) button to select "EasyClean s". Use the & button to navigate to the next line. Touch the # touch button. The appliance starts EasyClean. The remaining time appears on the display. Finishing As soon as the cleaning aid has finished, an audible signal sounds and the appliance ends the operation automatically. As soon as you open the appliance door, the interior lighting is switched on so that you can finish cleaning the cooking compartment more easily. The remaining water in the cooking compartment must be removed promptly. Do not leave the remaining water in the cooking compartment for a long time (e.g.

overnight). The appliance must not be operated when the cooking compartment is still wet or damp. Final cleaning 1. Open the appliance door and remove the remaining 2. Clean the smooth surfaces in the cooking compartment and around the appliance door with a damp cloth. 3. If you have left an accessory inside the cooking compartment to be cleaned, remove it and wipe it down with a damp cloth. 4. Lift the accessory support up at the front and remove it. ~ "Rails" on page 22 5.

Refit the shelf supports or pull-out rails. ~ "Rails" on page 22 water with an absorbent sponge cloth. compartment with a dish cloth or a soft brush. Stubborn residues can be removed using a stainless steel scouring pad. 3.

Remove limescale with a cloth soaked in vinegar. Then wipe with clean water and rub dry with a soft cloth (including under the door seal). 4. Use the # touch button to switch off the appliance. 5.

Leave the appliance door ajar in the locking position (approx. 30°) for approx. 1 hour to allow the enamel surfaces in the cooking compartment to dry.

Alternatively, you can also run the rapid drying function for the cooking compartment. 21 en Rails Running the rapid drying function for the cooking compartment 1. After the cleaning aid process has finished, leave the appliance door ajar in the locking position (approx. 30°). 2. Touch the # touch button. 3.

Start CircoTherm hot air at 50 °C. 4. After 5 minutes, switch off the appliance and close the appliance door. Removing heavy deposits of dirt You have several options for removing particularly stubborn deposits of dirt. □ Leave the soapy water to work for some time before starting the cleaning aid. □ Rub soapy water onto the dirt on the smooth surfaces before starting the cleaning aid. □ Repeat the cleaning aid once the cooking compartment has cooled down. pRails s l i a R With good care and cleaning, your appliance will retain its appearance and remain fully functional for a long time to come. This will tell you how to remove the shelves and clean them. Detaching and refitting the rails : Warning – Risk of burns! The rails become very hot.

Never touch the hot rails. Always allow the appliance to cool down. Keep children away from the appliance. Detaching the rails 1. Lift the rail slightly at the front , and detach it f (figure !).

2. Then pull the whole rail towards you and take it out (figure "). Clean the rails with cleaning agent and a sponge. For stubborn deposits of dirt, use a brush. Attaching the rails The rails only fit on the right or the left side.

For both rails, ensure that the retaining bracket is at the front. 1. First, insert the rail in the middle of the rear socket ,, until the rail rests against the cooking compartment wall, and push it back f (figure !). 2. Then insert the rail into the front socket ,, until the rail also rests against the cooking compartment wall here, and press it downwards ... (figure "). 22 Appliance door en qAppliance door r o d e c n i l p A With good care and cleaning, your appliance will retain its appearance and remain fully functional for a long time to come. This will tell you how to remove the appliance door and clean it. Fitting the appliance door Reattach the appliance door in the opposite sequence to removal. 1. When attaching the appliance door, ensure that both Removing and fitting the appliance door For cleaning purposes and to remove the door panels, you can detach the appliance door.

The appliance door hinges each have a locking lever. When the locking levers are closed (figure !), the appliance door is secured in place. It cannot be detached. When the locking levers are open in order to detach the appliance door (figure "), the hinges are locked. They cannot snap shut. hinges are inserted straight into the opening (figure !). Place both hinges at the bottom on the outer panel and use this as a guide. Ensure that the hinges are inserted into the correct opening. You must be able to insert them easily and without resistance. If you can feel any resistance, check that the hinges are inserted into the correct opening.

2. Open the appliance door fully. Fold both locking levers closed again (figure "). : Warning – Risk of injury! □ Risk of injury! □ If the hinges are not locked, they can snap shut with great force.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/5905061)

[B27CR22N1 user guide](http://yourpdfguides.com/dref/5905061)

<http://yourpdfguides.com/dref/5905061>

Ensure that the locking levers are always fully closed or, when detaching the appliance door, fully open.

The hinges on the appliance door move when opening and closing the door, and you may be trapped. Keep your hands away from the hinges. 3. Close the cooking compartment door. Removing the appliance door 1.

Open the appliance door fully and push it in the 2. Fold up the two locking levers on the left and right (figure !). 3. Close the appliance door as far as it goes ., With Removing the door cover The stainless steel inlay in the door cover may become discoloured. To carry out thorough cleaning, you can remove the cover. 1. Open the appliance door slightly. 2. Press on the right and left side of the cover (figure !).

3. Remove the cover (figure "). direction of the appliance. both hands, grip the door on the left- and right-hand side and pull it up and out (figure "). Close the appliance door carefully. 23 en Appliance door 6. Push both retainers on the intermediate panel upwards, but do not remove it (figure %). Hold the Note:

Clean the stainless steel inlay in the cover with stainless steel cleaner. Clean the rest of the door cover with soapy water and a soft cloth. 4.

Open the appliance door again slightly. Put the cover back in place and press on it until it clicks audibly into place (figure #). panel with one hand. Remove the panel. Clean the panels with glass cleaner and a soft cloth.

5. Close the appliance door. : Warning – Risk of injury! □ Risk of injury! Removing and installing the door panels To facilitate cleaning, you can remove the glass panels from the appliance door. Removing the door from the appliance 1. Open the appliance door slightly.

2. Press on the right and left side of the cover (figure !). 3. Remove the cover (figure "). □ Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents. The hinges on the appliance door move when opening and closing the door, and you may be trapped. Keep your hands away from the hinges. Fitting the door on the appliance When fitting the intermediate panel, make sure that the arrow is in the top right of the panel and that it aligns with the arrow on the metal panel. 1.

Insert the intermediate panel at the bottom into the retainer and push it in firmly at the top (figure !). 2. Push both retainers downwards (figure "). 4. Loosen and remove the screws on the left and right of the appliance door (figure #). 5. Before closing the door again, trap a tea towel which has been folded several times in the door (figure \$). Pull out the front panel upwards and lay it on a flat surface with the door handle facing downwards. 3. Insert the front panel at the bottom into the retainers (figure #).

4. Close the front panel until both upper hooks are opposite the opening (figure \$). 5. Press the front panel at the bottom until it clicks audibly into place (figure %). 6.

Open the appliance door again slightly and remove 7. Screw both screws back in on the left and right. the tea towel. 24 Trouble shooting 8. Put the cover back in place and press on it until it clicks audibly into place (figure &).

en 3Trouble shooting gn i t o h s e l buo r T If a fault occurs, there is often a simple explanation. Before calling the after-sales service, please refer to the fault table and attempt to correct the fault yourself. Tip: If a meal does not turn out exactly as you wanted, refer to the "Tested for you in our cooking studio" section. Here, you will find plenty of cooking tips and notes. : Warning – Risk of electric shock! 9. Close the appliance door. Caution! Do not use the cooking compartment again until the panels have been correctly fitted. Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box.

Contact the after-sales service. Fault table : Warning – Risk of electric shock! □ □ Work on the appliance electronics may only be performed by a specialist.

Always disconnect the appliance from the power supply when work is carried out on the electronics. Switch off the circuit breaker or remove the fuse from your household fuse box. Notes/remedy Connect the appliance to the power supply Check whether other kitchen appliances are working Check in the fuse box to make sure that the fuse for the appliance is OK Allow the appliance to cool down and switch the operating mode on again Press and hold the 0 touch button until the 1 symbol goes out Press and hold the 0 touch button until the 1 symbol goes out Disconnect the appliance from the mains for approx. 10 seconds (switch off the circuit breaker in the fuse box) and then deactivate demo mode in the basic settings within 3 minutes ~ "Basic settings" on page 17 Wait until the 5 symbol goes out Press and hold the 0 touch button until the 5 symbol goes out; adjust the childproof lock setting Switch the appliance off and back on again If the message appears again, call the after-sales service Fault The appliance does not work Possible cause The plug is not plugged into the mains Power cut The circuit breaker is faulty The appliance has not cooled down sufficiently After switching on an operating mode, a message is shown on the display which indicates that the temperature is too high The appliance cannot be switched on; the 1 symbol is shown on the display The appliance cannot be operated when it is switched on; the 1 symbol is shown on the display The appliance does not heat up; 6 is shown on the display The automatic childproof lock is activated The childproof lock is activated Demo mode is activated in the basic settings The appliance door cannot be opened; the 5 symbol is shown on the display "EXXXX" appears on the display, e.g. "E0111" ----- The appliance door is locked until the cooking compartment has cooled down The childproof lock locks the appliance door Technical problem 25 en Customer service Maximum operating time exceeded Your appliance ends the operation automatically when no cooking time is set and the setting has not been changed for a long time. The actual cooking time until the operation is stopped automatically varies according to the selected settings. The appliance display indicates that the operation will end automatically.

Afterwards, the operation is stopped. To use the appliance again, switch it off beforehand. Then switch the appliance on again and set the required operation. 4Customer service ec i v res remo t suC Our after-sales service is there for you if your appliance needs to be repaired. We will always find an appropriate solution, also in order to avoid after-sales personnel having to make unnecessary visits.

E number and FD number When calling us, please give the full product number (E no.) and the production number (FD no.) so that we can provide you with the correct advice.



[You're reading an excerpt. Click here to read official NEFF](#)

[B27CR22N1 user guide](#)

<http://yourpdfguides.com/dref/5905061>