



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF C17KS61N0. You'll find the answers to all your questions on the NEFF C17KS61N0 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF C17KS61N0

User guide NEFF C17KS61N0

Operating instructions NEFF C17KS61N0

Instructions for use NEFF C17KS61N0

Instruction manual NEFF C17KS61N0



[You're reading an excerpt. Click here to read official NEFF C17KS61N0 user guide](http://yourpdfguides.com/dref/5906253)

<http://yourpdfguides.com/dref/5906253>

Manual abstract:

On purchasing this fully automatic coffee machine! You have now acquired a high quality and modern kitchen appliance. @@@@ These instructions are designed to help you. So please take the time to read them before you switch on the appliance. How to use these instructions You can open up the front cover of this instruction manual. There you will find illustrations of the appliance with each part numbered. These numbers will be referred to throughout the text. example: brewing unit (15) These instructions also show display texts and symbols in a special way. These enable you to clearly see where we refer to texts or symbols that are marked or displayed on the appliance. Display indicators: Espresso Buttons and controls on the display: C The appliance comes with a quick reference guide where you can find the most important functions at a glance. It can be stored in the accessory drawer of the appliance. neff C1. KS61N0 07/2014 34 en Safety instructions Please read and follow the operating instructions carefully and keep them for later reference. Enclose these instructions when you give this appliance to someone else. This appliance is designed for the preparation of normal household quantities in the home, or in household-like, non-commercial environments. Household-like environments include staff kitchens in shops, offices, agricultural and other small businesses or for use by guests at bed-and-breakfast establishments, small hotels and similar residential facilities.

Danger of electric shock! Connect and operate the appliance only according to the type plate specifications. To avoid potential hazards, repairs must only be carried out by our customer service personnel; 1/2 If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent; 1/2 This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved; 1/2 Keep children under 8 years of age away from the appliance and connecting cable and do not allow them to use the appliance; 1/2 Children shall not play with the appliance; 1/2 Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised; 1/2 Never immerse the appliance or mains cable in water; 1/2 Use only if power cord and appliance show no signs of damage; 1/2 Should a fault occur, pull the plug or disconnect from the mains immediately; 1/2 Neff C1. KS61N0 07/2014 en 35 The appliance contains permanent magnets that may influence electronic implants such as pacemakers or insulin pumps; 1/2 Persons with electronic implants should keep a minimum of 10 cm away from the front of the appliance; 1/2 A Risk of suffocation! Do not allow children to play with packaging material; 1/2 Store small parts safely as they can be easily swallowed; 1/2 A Risk of injury! Do not reach into the grinding unit; 1/2 Be careful not to jam your fingers when closing the door. a Risk of burns!

The beverage outlet gets very hot; 1/2 After use, allow to cool down first before touching. neff C1.

KS61N0 07/2014 36 en Overview (Figures B to E on the fold-out pages) 1 Appliance door a) Recessed grip (for opening the door) b) Drip tray 2 Display 3 Control panel 4 Outlet system (coffee, milk, hot water), height-adjustable a) Cover 5 Milk system a) Snap lever b) Beverage outlet (upper part, lower part) c) Milk tube (2 pieces) d) Connecting element, metal (for magnet holder) 6 Mains switch J (power supply) 7 Accessory drawer (for quick reference guide and accessories) a) Quick reference guide b) Measuring spoon c) Water hardness strip d) Water filter 8 Removable water tank a) Lid for water tank 9 Removable bean container a) Lid for bean container 10 Slide regulator for grinding degree setting 11 Magnet holder for (connecting element) 12 Removable drawer (for ground coffee/cleaning tablet) 13 Holder (for milk tube) 14 Protective cover (for brewing unit) 15 Brewing unit a) Locking mechanism b) Cover 16 Eject lever 17 Drip tray a) Coffee grounds container 18 Collecting tray 19 Holder (for suction pipe) a) Suction pipe 20 Rating plate (E number, FD) 21 Shelf with sensor (for milk container) 22 Milk container a) Stainless steel container b) Lower part of the lid c) Upper part of the lid Neff C1.

KS61N0 07/2014 en 37 A Touch A to call up the menu. Settings can be made and information called up (see the section Menu). e Touch E to open the selection of service programmes. Run the desired programme as described in the section Service programmes. Double G Touch G after selecting a drink to prepare two cups simultaneously (see the section Two cups at once). my Coffee B Touch B to open the selection of Personalised beverage preparation. Personal settings for coffee drinks can be saved and called up (see the section Personalised drinks). c Touch C for either beverage preparation or to launch a service programme. If you touch C again while the drink is being prepared, dispensing will be prematurely halted.

Arrow navigation button Press the arrow on the arrow button to navigate in the display or to change parameters. Display The display shows drinks, settings and information (see the section Display). Controls The appliance features user-friendly menu navigation to ensure that operation is as easy as possible while at the same time offering a wide range of functions. That means a range of options can be selected with just a few operating steps. Mains switch J The mains switch J (with the door open) is used to switch on the appliance or switch it off completely (power supply is interrupted). FF Important: Do not press the mains switch while the appliance is in use. Switch off the appliance only when it is in energy saving mode, so that it can rinse automatically. Control panel (touch field) Navigate on the control panel by touching the symbols and characters. You will hear an audible signal. The audible signal can be switched on and off (see the section Menu Key tones).

I Touch I to switch on the appliance or put it into energy saving mode. the appliance is rinsed automatically. The appliance does not rinse if: if it is still warm when switched on, or if no coffee was dispensed before it was switched off.



[You're reading an excerpt. Click here to read official NEFF](#)

[C17KS61N0 user guide](#)

<http://yourpdfguides.com/dref/5906253>

The appliance is ready for use as soon as the symbols for the drinks selection appear on the display. neff C1.

KS61N0â€¦â€¦07/2014 38 en â€¦â€¦ Select the â€¦Water hardnessâ€¦ with the L arrow button. Initial use General Fill the appropriate container using only pure, cold, uncarbonated water and solely roasted beans (preferably espresso or coffee bean blends for fully automatic coffee machines). Do not use coffee beans that have been glazed, caramelised or treated with other additives containing sugar, since they will block the brewing unit. FF AA Before the appliance can be switched on and used, it must be assembled and connected according to the enclosed assembly instructions. It is important to set the water hardness correctly to enable the appliance to accurately indicate when the descaling programme should be run.

The preset water hardness is level 4. If a water softener is installed in the house, please set the water hardness to level 3. You can also check the water hardness by asking your local water supplier. Setting up the appliance â€¦â€¦ Remove any protective plastic film. â€¦â€¦ Use the enclosed test strip to determine the water hardness. Briefly dip the test strip in water and check the result after one minute. Level Water hardness German (Â°dH) French (Â°fH) 1 1-7 1-13 2 8-14 14-25 3 15-21 26-38 4 22-30 39-54 â€¦â€¦ Press the M arrow button. The field â€¦4Â (very hard)â€¦ has a light background. The water hardness can be changed. â€¦â€¦ Set the water hardness determined with the K arrow button.

The settings are saved. The appliance is ready to use when the drink symbols are shown on the display. The integrated fan switches on each time a drink is dispensed and switches off again after a few minutes. fF Important: Only use the appliance in a frost-free room. If it has been transported or stored at temperatures below 0Â°C, wait at least 3 hours before initial use. â€¦â€¦ Take hold of the appliance door by the recessed grip and open. â€¦â€¦ Remove the water tank, rinse it and fill it with fresh water up to the â€¦max. â€¦ mark. â€¦â€¦ Replace the water tank and click into place. â€¦â€¦ Remove the bean container, fill with coffee beans and replace.

â€¦â€¦ Set the mains switch to I and close the appliance door. The field â€¦Deutschâ€¦ has a light background. The language can be changed. â€¦â€¦ With the L arrow button select the desired language. â€¦â€¦ Press the N arrow button.

The field â€¦Languageâ€¦ has a light background. neff C1. KS61N0â€¦â€¦07/2014 en When the appliance is used for the first time after running a service program, or if it has not been operated for a long period, the first beverage will not have the full aroma and should not be consumed. When the fully automatic coffee machine is first used, a suitably thick and stable â€¦cremaâ€¦ is only achieved after the first few cups have been dispensed. Switch off appliance â€¦â€¦ Press the I button.

The appliance rinses and switches to energy saving mode. Exception: If only hot water is dispensed, the appliance switches off without rinsing. â€¦â€¦ To switch the appliance off completely, open the appliance door and set the mains switch to h. 39 Display Display The display shows the drinks, settings and setting options, as well as messages about the applianceâ€¦â€¦ operating status. Examples: Drink selection Ristretto normal 30 ml (medium) Information Information disappears after pressing the button or after a short time. FF FF Important: Do not press the mains switch while the appliance is in use. Switch off the appliance only when it is in energy saving mode, so it can rinse automatically. The factory settings of the fully automatic coffee machine are programmed for optimal performance. The appliances switches automatically to the energy saving mode after a configured time and rinses (duration can be set, see â€¦Switch off afterâ€¦ in the section â€¦Menuâ€¦). The appliance is equipped with a sensor.

If there is a milk container, this will be correspondingly shown on the display when switching to the energy saving mode. If there is milk in the container, please keep in the fridge. B Water tank almost empty The information remains however at the top of the display in the form of a small symbol. a b c d e f Bean container almost empty Water tank almost empty Replace water filter Cleaning programme necessary Descaling programme necessary calcâ€¦nClean programme necessary FF Neff C1. KS61N0â€¦â€¦07/2014 40 Prompts to take action en Beverage selection Press the K or L arrow button to select different drinks: The symbol for the selected drink will appear in the middle. The name of the drink and the values currently set, e. g. For the coffee strength and volume are shown in lower row. Ristretto b Fill water tank FF If the action required was carried out, e. g.

Filling the water tank, the corresponding message and symbol will disappear. Normal Preparing drinks This fully automatic coffee machine can be operated using coffee beans or ground coffee (but not instant coffee). If using coffee beans, they will be freshly ground for each brewing. Preferably use espresso or coffee beans for fully automatic machines. For optimum quality, deep-freeze the beans or store in a cool place in sealed containers.

Deep-frozen coffee beans can also be ground. 30 ml (medium) The following drinks can be selected: Ristretto Espresso Espresso Macchiato Coffee Cappuccino LatteÂ Macchiato CaffèÂ Latte MilkÂ froth WarmÂ milk HotÂ water The drink selected can be directly prepared with the pre-set values or first adjusted to individual taste. Drink adjustment By pressing the M arrow button, different fields will appear for adjustment depending on the drink. The field where the value can be changed has a light background. FF FF FF Important: Fill the water tank with fresh, uncarbonated, cold water every day.

The tank should always contain sufficient water for operating the appliance. This applies particularly to small thick-walled espresso cups. For some settings, coffee is prepared in two stages (see the section â€¦AromaÂ DoubleÂ Shotâ€¦ and â€¦Two cups at onceâ€¦). Please wait until the process is completely finished. neff C1. KS61N0â€¦â€¦07/2014 en An example: The values for a cup of coffee can be changed as follows: â€¦â€¦ Select â€¦Coffeeâ€¦ with the K or L arrow button. Coffee strong 160 ml (large) Temperature high normal 120 ml (medium) â€¦â€¦ Press the M arrow button.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/5906253)

[C17KS61N0 user guide](http://yourpdfguides.com/dref/5906253)

<http://yourpdfguides.com/dref/5906253>

The fields containing the preset values appear. The active field, e. g.

For the coffee strength has a light background. Coffee normal 120 ml (medium) Temperature normal Set the desired coffee strength, e. Coffee strong 120 ml (medium) Temperature normal Set the desired amount of coffee, e. Coffee strong 160 ml (large) Temperature normal Neff To go back to the drinks menu either press the N arrow button or dispense a drink with C. The settings are saved. FF There are different setting options depending on the type of drink. For coffee drinks, for example, the strength, temperature and quantity can be set, for milk only the volume. The following settings are possible: Coffee strength very mild mild normal strong very strong DoubleShot DoubleShot + DoubleShot ++ FF

Aroma Double Shot The longer the coffee is brewed, the more bitter substances and undesired aromas are released. This has a negative effect on the taste and makes the coffee less easily digestible. For extra strong coffee, the appliance has therefore a special Aroma Double Shot function.

When half the quantity has been prepared, it grinds and brews fresh coffee beans so that only the pleasant, aromatic scents are released. c1.

KS61N0 07/2014 42 en The Aroma Double Shot function is not available for ristretto, espresso macchiato, and when ground coffee is used. FF Preparation using coffee beans The appliance must be ready for use. Place a cup underneath the beverage outlet.

Select Ristretto, Espresso or Coffee with the K or L arrow button. The display shows the selected drink along with the preset values for the strength of the coffee and the amount for this drink. Coffee Volume The volume differs depending on the type of drink and can be set in ml steps. FF FF The volume dispensed can fluctuate depending on the quality of the milk. If no controls are activated for approx.

30 seconds, the appliance will automatically exit the settings mode. The settings made will be automatically stored. Drinks temperature Values for coffee drinks: Temperature normal Temperature high Temperature very high Values for hot water: 70°C (White tea) 80°C (Green tea) 90°C (Black tea) Max (Fruit tea) very strong 160 ml (large) FF The settings can be changed as described in the section Drink adjustment. Touch C to start dispensing. The coffee is brewed and then dispensed into the cup. Touch C again to prematurely halt dispensing. Preparation using milk This fully automatic coffee machine has an integrated beverage outlet. This can be used to prepare coffee drinks with milk or also milk froth and warm milk. bB Risk of burns! The beverage outlet gets very hot. After use, always let it cool down before you touch it.

neff c1. KS61N0 07/2014 en Milk container The milk container has been designed especially for use together with this fully automatic coffee machine. It is intended solely for use in the household and for storing milk in the refrigerator. The insulated container keeps milk cool for a number of hours. 43 FF Dried milk residues are difficult to remove, therefore always clean (see the section Cleaning the milk system). FF Important: Remove cups or glasses before opening the door in case they fall. Connecting the milk container or a milk carton: Open the appliance door. Remove the cover of the beverage outlet towards the front. Connect and fix the milk tubes and connecting elements as illustrated. Coffee drinks with milk

Place a cup or glass underneath the beverage outlet.

Select Espresso Macchiato, Cappuccino, Latte Macchiato or Caffè Latte with the K or L arrow button. The display shows the selected drink along with the preset values for the strength of the coffee and the amount for this drink. FF The settings can be changed as described in the section Drink adjustment. Touch C to start dispensing. The milk is dispensed into the cup or glass first.

Then the coffee is brewed and runs into the cup or glass. Press button C again to stop the current step of the process prematurely. Milk froth or warm milk Place a cup or glass underneath the beverage outlet. Select Milk froth or Warm milk with the K or L arrow button.

Attach the cover firmly from the front on to the beverage outlet.

Attach the suction pipe and insert into the milk container or a milk carton. FF The settings can be changed as described in the section Drink adjustment. Touch C to start dispensing. Milk froth or warm milk is dispensed from the beverage outlet. Close the appliance door. Press button C again to stop the current step of the process prematurely. FF Neff For optimal milk froth quality, use cold milk with a fat content of at least

1. KS61N0 07/2014 44 en Preparation using ground coffee FF For coffee drinks with milk, please observe the instructions in the section Preparation using milk. FF FF When using ground coffee, the setting for the strength of the coffee and dispensing two cups at once is not available. Important: Remove cups or glasses before opening the door in case they fall.

Touch C to start dispensing. The coffee is brewed and then dispensed into the cup. When selecting coffee drinks with milk, the milk is first dispensed and then the coffee brewed. FF For another drink with ground coffee, repeat the procedure. The appliance must be ready for use. Open the appliance door. Remove the ground coffee drawer. the removable drawer must be dry. Put in coffee powder (maximum 2 level measuring spoons); do not press firmly. dispensing hot water BB FF Caution! Do not use whole beans or instant coffee.

risk of burns! The beverage outlet gets very hot. After use, always let it cool down before you touch it. Replace the ground coffee drawer. Close the appliance door. The display shows Ground coffee instead of coffee strength.

FF If coffee is not dispensed within 90 seconds, the brewing chamber empties automatically to avoid an overflow. The appliance is then rinsed.



[You're reading an excerpt. Click here to read official NEFF](#)

[C17KS61N0 user guide](#)

<http://yourpdfguides.com/dref/5906253>

The appliance must be ready for use. **Remove the milk tube from the milk container.** **Remove any milk or coffee residue from the outlet.** **Place a cup or glass underneath the beverage outlet.** **Select Hot water** with the K or L arrow button. FF The settings can be changed as described in the section **Drink adjustment**. **Place a cup underneath the beverage outlet.** **Select a coffee drink or a coffee drink with milk with the K or L arrow button.** The display shows the selected drink along with the preset values for this drink. **If still connected, remove the milk tube and press the M arrow button.** Hot water flows out of the beverage outlet. Touch C again to prematurely halt the dispensing process. FF Neff The settings can be changed as described in the section **Drink adjustment**.

c1. KS61N0 07/2014 en 45 Personalised drinks Press B to open the selection for personalised drinks. up to 8 storage spaces can be used. Save your favourite drinks that are frequently dispensed here with all their settings. FF For milk drinks, the mixing ratio of coffee and milk can be set. The mask for entering the name opens. Delete S T U V W X Y Z A B C D E F G H I J A Select letter FF Press B to exit the menu without saving at any time. entering or changing drinks **Touch B.** The selection of memory locations appears. MyCoffee 1 Create **Use the K or L arrow button to select an empty memory location [for a new entry, change an occupied memory location, or to delete a favourite drink.**

Select Create at an empty memory location or **Change** at an occupied memory location. **Press the M arrow button.** **With N exit the entry without any change.** the drink selection menu appears. **Select a letter or a symbol in the upper row with the K or L arrow button.**

The selection of memory locations opens. **Select the desired memory location with the K or L arrow button.** **Place a cup or glass underneath the beverage outlet.** **Touch C to start dispensing.** FF If **Delete** is selected, the settings for the memory location are deleted and it is again empty.

The menu for adjusting the drinks opens. The last drink dispensed is shown with the last settings selected. **If you do not wish to save last drink dispensed, select another drink with the K or L arrow button.** **Select each setting to be changed with the M or N arrow button.** Adjust the values to your own wishes with the K or L arrow button. Different setting options appear depending on the drink selected. Neff Two cups at once Touch G to prepare two cups of the selected drink simultaneously. The setting is shown by a second cup symbol and as text, e. **Select the desired drink with the K or L arrow button.** KS61N0 07/2014 46 **Place two cups left and right underneath the beverage outlet.**

Touch C to start dispensing. The selected drink is prepared and then dispensed into both cups. En FF FF The new setting will not become apparent until after the second cup of coffee. If the display shows the message **Select a coarser degree of grinding**, this means that the beans are being ground too finely. Adjust the grinding level to a coarser setting. FF FF The drink is prepared in two stages (two grinding operations). Please wait until the process is completely finished. Two cups at once cannot be dispensed for the settings **Double Shot** or **ground coffee**. **Childproof lock** The appliance can be locked to protect children against scalding and burns. **Press and hold A for at least 4 seconds.**

Childproof lock activated briefly appears on the display. No further operation is now possible; only I can be pressed. **To deactivate the child lock, press and hold A for at least 4 seconds.** **Childproof lock deactivated** briefly appears on the display. Adjusting the grind setting This fully automatic coffee machine has an adjustable grinding unit.

This enables the grinding level of the coffee to be individually changed. **Open the appliance door.** **Slide the regulator to select the grinding degree setting between finely ground coffee V and coarsely ground coffee W.** **Close the appliance door again.** FF FF Neff For dark roast coffee beans, choose a finer grind, for lighter beans a coarser grind.

Tip: Only make small changes to the grinding degree setting. c1. KS61N0 07/2014 en 47 The following settings can be made: Language Set the desired language to show the display texts. Water hardness Set this to the local water hardness. @@@@ press N to exit the respective setting again. @@@@ the menu opens. @@The drink selection appears on the display. @@@@FF Press A to exit the menu at any time. if no entry is made within approx. @@@@ neff C1.

@@@@@ the factory setting is 30 minutes. Illumination Setting the illumination of the beverage outlet. @@@@Key tones Switch the signal tones on or off. @@The settings for this can be changed in the next menu options. Time of day Setting for the current time. This programme completely empties the appliance. @@The appliance automatically empties all its pipes. **Empty the drip tray and re-insert.** Beverage info Display shows how many drinks have been prepared since its initial use. KS61N0 07/2014 FF Caution: Do not jam the tube when closing the door.

Water will now flow through the filter to rinse it. **Then empty the container.** The appliance is ready for use again. FF Rinsing the filter simultaneously activates the setting for the change filter display. The filter is no longer effective when the **Replace water filter** **Press A** display appears, or at the latest after two months.

It needs to be replaced for reasons of hygiene and to prevent a build-up of limescale (which could damage the appliance). **If a new filter is not inserted, select the setting Remove** and press button C. The message **Remove filter, reinsert water tank, close door** appears. FF If the appliance has not been used for a prolonged period (for example, while you are on holiday), the existing filter should be rinsed before the first time the appliance is used again. To do this, simply dispense a cup of hot water.



[You're reading an excerpt. Click here to read official NEFF C17KS61N0 user guide](http://yourpdfguides.com/dref/5906253)
<http://yourpdfguides.com/dref/5906253>

Detailed information about the water filter can be found in the manual supplied with the filter. Switch off after To set how long the appliance should wait after the last drink was prepared before it automatically rinses and switches itself off. Neff en Factory settings Resets your own settings to the condition when delivered. Select reset with the K or L arrow button. The message Are you sure? 49 FF Important: The drip tray and the coffee grounds container should be emptied and cleaned every day to prevent the formation of mould. Remove the ground coffee drawer, clean under running water and dry well. care and daily cleaning EE Risk of electric shock! Never immerse the appliance in water. Do not steam-clean the appliance. Wipe the outside of the appliance with a soft, damp cloth. Clean the control panel and display using a micro-fibre cloth.

Do not use any cleaning agents containing alcohol or spirits. Do not use abrasive cloths or cleaning agents. Wipe and dry the inside of the appliance (support, drip tray and the ground coffee drawer) and collecting tray. Replace the dried parts, e. g. The ground coffee drawer. Do not put the following parts in the dishwasher: Accessory drawer, water tank, lid of the water tank, beverage outlet cover, bean container, lid of the bean container, metal connecting element, ground coffee drawer, protective cover of the brewing unit and the milk container. LL Always remove any limescale, residues of coffee or milk, cleaning or descaling solution immediately. it is possible for corrosion to form underneath such deposits. The following parts may be cleaned in the dishwasher: Drip tray, collecting tray, drip shelf, coffee grounds container, milk tubes, individual parts of the beverage outlet, measuring spoon and individual parts of the milk container lid.

mM FF New sponge cloths may contain salts. Salts can cause rust film on stainless steel and must therefore be washed out thoroughly before use. FF If the appliance is cold when switched on, or if it is switched off after dispensing coffee, it rinses automatically. The system is therefore self-cleaning. Open the door, pull the drip tray forward and remove the coffee grounds container.

Empty, clean and dry them both. neff C1. KS61N0 07/2014 50 en Important: If the appliance is not used for a lengthy period (e. g. While you are on holiday), clean the entire appliance thoroughly, including the milk system, the ground coffee drawer and the brewing unit before use.

Close the door. Be careful not to jam the milk tube. Place an empty glass under the beverage outlet and put the end of the milk tube into it. Touch C. The milk system is rinsed with water. Then empty the glass and wipe the milk tube. Touch E to exit the programme.

The milk system has finished rinsing. The appliance is ready for use again. Cleaning the milk system manually Take the milk system apart to clean it: Push the beverage outlet down completely and pull the cover forward to remove.

Press the snap lever to the left of the beverage outlet downwards and pull the beverage outlet forward. FF Cleaning the milk system The milk system is automatically cleaned with a short jet of steam directly after preparing a milk drink. FF FF Tip: For particularly thorough cleaning, the milk system can be additionally rinsed with water (see the section Rinsing the milk system). Important: Clean the milk system manually every week and, if required, also more often (see the section Cleaning the milk system manually). risk of burns! The beverage outlet gets very hot. After use, always let it cool down before you touch it. BB Rinsing the milk system Touch E and select K or L Rinse milk system with the arrow button.

Open the door and remove the milk tube from the milk container. Fix the connecting element on the right of the beverage outlet with the magnet. Remove the milk tube.

Dismantle the top and bottom sections of the beverage outlet. 51 Cleaning the milk container For reasons of hygiene, the milk container should be cleaned regularly. Only the individual parts of the lid are suitable for being cleaned in the dishwasher. Clean the stainless steel milk container by hand with a mild detergent. L M Clean the individual parts with a detergent solution and a soft cloth.

Rinse all parts with clean water and dry them. MM All parts of the milk system can also be put in the dishwasher. Put the individual parts back together again. Attach the beverage outlet directly from the front firmly to the three connections. Replace the cover.

Cleaning the brewing unit (see also the Quick reference guide) In addition to the automatic cleaning programme, the brewing unit should be removed regularly for cleaning. Open the appliance door. Use the mains switch J to switch off the appliance completely. Remove the protective cover of the brewing unit. Remove the coffee grounds container. Slide the red latch on the brewing unit all the way to the left. Press the eject lever right down. The brewing unit will be released. Take hold of the brewing unit by the recessed grips and carefully remove it. neff C1.

KS61N0 07/2014 52 Remove the cover of the brewing unit and clean thoroughly under running water. En Service programmes (see also the Quick reference guide) The following messages will appear on the display at certain intervals, either Descaling programme required! The unit should immediately be cleaned or descaled using the appropriate programme. Alternatively, the two processes Descale and Clean can be carried out together using the calcClean function (see the section calcClean). Failure to carry out the service programme according to the instructions may damage the appliance. To display how many beverages can still be prepared before one of the service programmes needs to be run, proceed as follows: Touch E. Select Service info with the K or L arrow button. Press M to call up the information. Clean the strainer of the brewing unit thoroughly under the water jet.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/5906253)

[C17KS61N0 user guide](http://yourpdfguides.com/dref/5906253)

<http://yourpdfguides.com/dref/5906253>

LL Important: Clean it without using washing-up liquid and do not put it in the dishwasher. **Á** Clean the inside of the appliance thoroughly with a moist cloth, removing any coffee residues.

Á Leave the brewing unit and the inside of the appliance to dry. **Á** Replace the cover on the brewing unit and then push the brewing unit back into the appliance until it clicks into place. **AA FF Neff** Important: The red latch must be right over at the left at j before replacing (see diagram E). **caution!** For each of the service programmes, use descaling and cleaning agents as described in the instructions. Never use vinegar, citric acid or any vinegar-based or citric acid-based agents.

Never place descaling tablets or other descaling materials in the coffee drawer! **Á** Press the eject lever right up and push the red latch right over to the right to k. **c1. KS61N0** **Á** **07/2014 en 53 Important:** Before starting each service program (Descale, Clean or calcClean) remove the brewing unit, clean as instructed and replace it. Be careful not to jam the milk tube when closing the door. After completion of each service programme, wipe the appliance immediately with a soft, damp cloth to remove any residues from the descaling and cleaning solution.

It is possible for corrosion to form underneath such deposits. New sponge cloths may contain salts. Salts can cause rust film on stainless steel and must therefore be washed out thoroughly before use. Clean the beverage outlet, milk tubes and connecting piece thoroughly. Specially developed, suitable descaling and cleaning tablets are available from retail outlets or from customer services (see the section **Accessories**). **FF FF** If there is not enough descaling solution in the water tank, you will be asked to do the following. The display indicates the progress of the programme. **Á** Empty the drip trays and replace. **Á** Remove the water filter (if there is one) and press C. **Á** Pour lukewarm water into the empty water tank up to the **0**.

5 l mark and then dissolve one Neff descaling tablet 00576693 in it. For the 00310967 you should always dissolve two tablets. **Á** Remove the milk tube from the milk container and fix the connecting part to the right side of the beverage outlet with the magnet. **Á** Put the end of the milk tube into the container. **Á** Touch C. The descaling programme will now run for about 19 minutes. **Á** Remove the container and touch C. **Á** Rinse the water tank and (if removed) replace the water filter. **Á** Fill the tank with fresh water up to the **max** indicator. **Á** Replace the water tank and close the door.

Á Place the container underneath the beverage outlet again. **Á** Put the end of the milk tube into the container. **Á** Touch C. The descaling programme will now run for about 2 minutes and rinse the appliance. **Á** Remove the container, empty the drip trays, replace and close the appliance door.

Á Touch C. The appliance has finished descaling and is ready for use again. The display indicates the progress of the programme. **Á** Clean the beverage outlet and replace, empty the drip trays and replace. **Á** Open the ground coffee drawer, drop in a cleaning tablet and close the coffee drawer again.

The cleaning programme will now run for about 5 minutes. **Á** Remove the container, empty the drip trays, replace and close the appliance door. **Á** Touch C. The appliance has finished cleaning and is ready for use again. If both programmes are due to be carried out close together, the fully automatic coffee machine will automatically suggest this service programme. The display indicates the progress of the programme. **Á** Clean the beverage outlet and replace, empty the drip trays and replace. **Á** Open the ground coffee drawer, drop in a cleaning tablet and close the coffee drawer again. **Á** Remove the water filter (if there is one) and touch C. **En** **Á** Pour lukewarm water into the empty water tank up to the **0**.

5 l mark and then dissolve one Neff descaling tablet 00576693 in it. For the 00310967 you should always dissolve two tablets. **FF** If there is not enough descaling solution in the water tank, you will be asked to do the following. refill using uncarbonated water and press C again. **Á** Remove the milk tube from the milk container and fix the connecting part to the right side of the beverage outlet with the magnet. **Á** Put the end of the milk tube into the container. **Á** Touch C. The programme will now run for about 19 minutes. **Á** Remove the container and touch C. **Á** Rinse the water tank and (if removed) replace the water filter.

Á Fill the tank with fresh water up to the **max** indicator. **Á** Replace the water tank and close the door. **Á** Place the container underneath the beverage outlet again. **Á** Put the end of the milk tube into the container. **Á** Touch C.

The programme will now run for about 7 minutes and rinse the appliance. **Á** Remove the container, empty the drip trays, replace and close the appliance door. **Á** Touch C. The appliance is descaled, cleaned and ready for use again. **KS61N0** **Á** **07/2014 en Special rinsing 55 Frost protection** To prevent frost damage during transport and storage, completely empty the appliance beforehand (see the section **Menu** **Á** **Transport protection**).

FF Important: If any of the service programmes is ever interrupted, for instance by a power failure, please proceed according to the information on the display: **Á** Rinse the water tank and refill it with fresh water up to the **max** mark. **Á** Touch C. The programme will now run for about 2 minutes and rinse the appliance. **Á** Empty the drip trays, replace and close the appliance door. The appliance is ready for use again. **Á** Touch E to exit the programme. **Storing accessories** The fully automatic coffee machine has a special accessory drawer for storing the Quick reference guide and the accessories in the appliance. **Á** Put the measuring spoon and the water filter into the accessory drawer.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/5906253)

[C17KS61N0 user guide](http://yourpdfguides.com/dref/5906253)

<http://yourpdfguides.com/dref/5906253>

Put the Quick Reference Guide into the special support at the front of the accessory drawer. The long suction pipe can be stored in the holder on the inside of the door.

The connecting element can be fixed to the magnetic holder above the ground coffee drawer. Tips on energy saving Touch I to switch the appliance to energy saving mode. The appliance uses very little power when in energy saving mode, but monitors all safety-relevant functions so as to avoid damage. In the menu under Switch off after, set the automatic switch off period to 15 minutes. Reduce the brightness of the display and the illumination in the menu to save energy. If possible, do not interrupt the dispensing of coffee or milk froth. Stopping a process prematurely results in higher energy consumption and the drip tray fills up more quickly. Accessories The following accessories are available from customer service: Accessories Cleaning tablets Descaling tablets Water filter Care set Milk container with FreshLock lid Order number Customer service 00310575 00576693 00575491 00576330 00576166 Neff C1. KS61N0 07/2014 56 en Disposal A Guarantee The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased.

The bill of sale or receipt must be produced when making any claim under the terms of this guarantee. This appliance is labelled in accordance with European Directive 2012/19/EG concerning used electrical and electronic appliances (waste electrical and electronic equipment WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU. Please ask your specialist retailer about current disposal facilities. Technical specifications Power connection (voltage frequency) Heater wattage Maximum static pump pressure Maximum water tank capacity (without filter) Maximum capacity of the coffee bean container Length of power cable Dimensions (H x B x D) Weight, empty Type of grinding unit Neff 220-240V 50/60Hz 1600 W 19 bar 2.

KS61N0 07/2014 en 57 Simple troubleshooting Solution Descale the appliance according to the instructions, see the section Service programmes. Clean the suction pipe. Clean the beverage outlet and the connections. Attach the lower part, see the section Cleaning the milk system. Descale the appliance according to the instructions, see the section Service programmes.

Beverage outlet or one of the Clean the beverage outlet 3 connections are blocked. and the connections. Milk not suitable for foaming. Do not use milk that has already been boiled. Use cold milk with a fat content of at least 1.5%. Beverage outlet or the milk Moisten the individual parts tubes are not correctly and put them together again. The personally selected Coffee is ground too finely. Adjust the grinding level volume is not reached. Preground coffee is too fine.

to a coarser setting. Use a Coffee dispensing slows to a coarser ground coffee. trickle or stops completely. Heavy build-up of limescale Descale the appliance in the appliance. According to the instructions, see the section Service programmes. Hot water milky or tastes of Milk tube has not been Remove the milk tube from coffee. Milk or coffee residue in the Clean the beverage outlet. Use a type of coffee with a higher proportion of robusta beans. The beans are no longer Use fresh beans. fresh.

The grinding level is not suit- Adjust the grinding unit to a able for the beans. KS61N0 07/2014 Problem Cause Strongly fluctuating coffee or Build-up of limescale in the milk froth quality (e. Beverage outlet or one of the 3 connections are blocked. The drink runs out at Lower part of the beverage the entire outlet during outlet is missing. dispensing.

Too little milk froth, none at Build-up of limescale in the all, or the milk system is not appliance. Taking in any milk. 58 Problem Coffee is too acidic. Cause The grinding level is too coarse. Preground coffee is too coarse.

unsuitable type of coffee. Coffee is ground too finely. Preground coffee is too fine. En Solution Adjust the grinding unit to a finer setting. Use a finer ground coffee. change the type of coffee. Adjust the grinding level Coffee is too bitter. to a coarser setting. Use a coarser ground coffee. The brewing temperature is Reduce the temperature, too high.

see the section Drink adjustment. Adjust the grinding level Coffee is ground too finely. Preground coffee is too fine. to a coarser setting. Use a coarser ground coffee. Coffee is too weak. Coffee strength selected is Raise the strength of the too weak. Coffee, see the section Drink adjustment. Ground coffee jammed in the Remove the ground coffee coffee drawer. Drawer, clean and dry thoroughly.

Ground coffee sticks in the Ground coffee sticks Do not press the ground coffee drawer. together. Coffee firmly into the coffee drawer. coffee drawer is damp. Remove the ground coffee drawer, clean and dry thoroughly.

The water filter does not stay The water filter is not Firmly press the water filter in position in the water tank. mounted correctly. Straight down into the tank connection. Bean container sticks when There are beans in the Remove the beans. The coffee grounds are not The grinding setting is too Adjust the grinding unit to compact and are too wet.

Fine or too coarse, or not a coarser or finer setting, enough ground coffee has or use 2 level measuring been used. spoons of ground coffee. Grinding level adjustment is Too many beans in the Dispensing a drink from stiff. Cause Brewing unit is in the wrong position. brewing unit is locked.

Protective cover of the Brewing unit is not locked. brewing unit. Display shows Power failure or appliance Re-enter values; do not 12:00 switched off at mains. Switch the appliance off at the mains or select the "Off" option in the Clock display menu. Display shows Container is outside the Position the container at the Milk container connected? Milk carton is Confirm the display request container.

not recognised. With Yes or use the enclosed milk container. Display shows, for example: The appliance has a fault. Proceed according to the Fault: E0510 display screen. Display shows Beans are not falling into the Gently tap the bean Fill bean container grinding unit (beans too oily).



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/5906253)

[C17KS61N0 user guide](http://yourpdfguides.com/dref/5906253)

<http://yourpdfguides.com/dref/5906253>

container. Possibly change although the container is the type of coffee. When already full, or the grinder is the bean container is empty, not grinding any beans. Wipe it with a dry cloth. Display shows Too much ground coffee in Clean the brewing unit.

do Clean brewing unit the brewing unit. Not place more than two level measuring spoons of ground coffee in the drawer. The mechanism of the Clean the brewing unit, see brewing unit is stiff. KS61N0 07/2014 60 Problem Display shows Refill with still water or remove filter Cause Water tank wrongly inserted Carbonated water in the water tank. Float is stuck in the water tank.

New water filter not rinsed according to instructions, or water filter used or defective. air in the water filter. Display shows Empty drip trays despite them being empty. Display shows Insert drip trays even though drip tray in use. Water dripped onto the inner floor of the appliance when the drip tray was removed.

En Solution Insert water tank correctly Fill the water tank with fresh tap water. Remove the tank and clean thoroughly. Rinse the water filter according to the instructions and then switch on, or use a new water filter. Dip the water filter into water until no more air bubbles escape, replace the filter. Clean and dry the drip tray thoroughly. clean the inside. Wait a few seconds after the last drink was dispensed before removing the drip tray. If you are unable to solve the problem, always call the hotline! You will find the telephone numbers at the back of these instructions. Grand Union House Old Wolverton Road Wolverton Milton Keynes MK12 5PT To arrange an engineer visit, to order spare parts and accessories or for product advice please visit www. A call set-up fee of up to 6 pence may apply BSH Home Appliances Limited Unit 1 & 2, 3rd Floor North Block, Skyway House 3 Sham Mong Road Tai Kok Tsui, Kowloon, Hong Kong Tel.



[You're reading an excerpt. Click here to read official NEFF C17KS61N0 user guide](http://yourpdfguides.com/dref/5906253)
<http://yourpdfguides.com/dref/5906253>