



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF D39GT57N0. You'll find the answers to all your questions on the NEFF D39GT57N0 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual NEFF D39GT57N0**  
**User guide NEFF D39GT57N0**  
**Operating instructions NEFF D39GT57N0**  
**Instructions for use NEFF D39GT57N0**  
**Instruction manual NEFF D39GT57N0**



[You're reading an excerpt. Click here to read official NEFF D39GT57N0 user guide](http://yourpdfguides.com/dref/5905086)  
<http://yourpdfguides.com/dref/5905086>

*Manual abstract:*

.....  
.....  
.....  
.....

.....  
.....  
.....

*..3 Environmental protection .....*

.....  
.....  
.....  
.....

.....  
.....  
.....

*5 Saving energy.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*.5 Environmentally-friendly disposal....*

.....  
.....  
.....  
.....  
.....

*.....5 Operating modes.*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.5 Exhaust air mode .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*.5 Circulating-air mode ....*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....5 Operating the appliance ....*

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....6 Control panel ....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*...6 Setting the fan .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*...6 Intensive setting ..*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....

*6 Fan run-on time .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*...6 Interval ventilation .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*..6 Lighting .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.....6 Saturation display .*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*...6 Cleaning and maintenance..*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.... 7 Trouble shooting .*

.....  
.....



the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.  Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians.

If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.  Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock. Risk of electric shock! Risk of electric shock! Causes of damage  
Caution! Risk of damage due to corrosion. Always switch on the appliance while cooking to avoid condensation. Condensate can produce corrosion damage.

Risk of damage due to ingress of humidity into the electronic circuitry. Never clean operator controls with a wet cloth. Surface damage due to incorrect cleaning. Clean stainless steel surfaces in the direction of the grain only.

Do not use any stainless steel cleaners for operator controls. Surface damage due to strong or abrasive cleaning agents. Never use strong and abrasive cleaning agents. Risk of damage from returning condensate. @@@@Adjust the fan speed to the intensity of the cooking fumes.

Only use intensive mode where this is required. A lower fan speed means that less energy is consumed. @@@@Alternatively, ask your dealer. @@@@The fan continues to run at the previous setting for 15 minutes. @@@@After 24 hours, the appliance switches off.

@@Press the 8 button. © is shown on the display. The fan starts at setting 1. 2. @@Press the 6 button. Setting the brightness 1. @@o not use a glass scraper. Hot soapy water: Clean using a damp dish cloth and dry with a soft cloth.



[You're reading an excerpt. Click here to read official NEFF](#)

[D39GT57N0 user guide](#)

<http://yourpdfguides.com/dref/5905086>

*Risk of damage to the electronics from penetrating moisture. Never clean operator controls with a wet cloth.*

*Do not use any stainless steel cleaners. 4. Clean the metal grease filter. 5. After removing the filters, clean the inside of the appliance. 6. Clean the filter cover. 3. Take out the metal grease filter on the underside of the appliance. Operating controls 7 Cleaning the metal mesh grease filters These instructions apply to several appliance variants.*

*Installing the metal mesh grease filter 1. Insert the two metal grease filters under the filter cover with : Risk of fire! Grease deposits in the grease filter may catch fire. Clean the grease filter at least every 2 months. Never operate the appliance without the grease filter. Notes □ Do not use any aggressive, acidic or alkaline cleaning agents.*

*□ the lock facing downwards. Fold the lock downwards and the metal grease filters inwards and lock them in place. appliance. 2. Insert the metal grease filters on the underside of the 3.*

*Close the filter cover. 4. Press and hold the 7 button for two seconds. The saturation indicator is reset. When cleaning the metal mesh grease filters, also clean the holder for the metal mesh grease filters in the appliance using a damp cloth. The metal mesh grease filters can be cleaned in the dishwasher or by hand. Changing the activated charcoal filter (only in circulating-air mode) In order to guarantee efficient odour filtration, the filter must be serviced regularly. The activated charcoal filters must be replaced at least every 4 months. Notes □ The activated charcoal filters are not included in the delivery. The activated charcoal filters can be obtained from specialist retailers, from our after-sales service or from the Online Shop.*

*□ □ By hand: Note: You can use a special grease solvent for stubborn dirt. It can be ordered via the Online Shop. □ □ □ Soak the metal mesh grease filters in a hot soapy solution. Clean the filters with a brush and then rinse them thoroughly. Leave the metal mesh grease filters to drain. The activated charcoal filters cannot be cleaned or reactivated. 1. Remove the metal grease filters. 2. Turn the old activated charcoal filters and pull away from the In the dishwasher:*

*Note: If the metal mesh grease filters are cleaned in the dishwasher, slight discolouration may occur.*

*This has no effect on the function of the metal mesh grease filters. □ holder. " turn. © 3. Push the new activated charcoal filters onto the holder and Do not clean heavily soiled metal mesh grease filters together with utensils.*

*Place the metal mesh grease filters loosely in the dishwasher. The metal mesh grease filters must not be wedged in. □ 4. Install the metal grease filters. 5. Reset the saturation indicator; see section Saturation indicator. Trouble shooting Malfunctions often have simple explanations. Please read the following notes before calling the after-sales service. Malfunction table Problem The appliance does not work Possible cause Solution The plug is not plugged in. Power cut Connect the appliance to the electricity supply Check whether other kitchen appliances are working Check in the fuse box to make sure that the fuse for the appliance is OK : Risk of electric shock! Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service. LED lights Defective LED lights must only be replaced by the manufacturer, their customer service department or a licensed technician (electrician). Faulty fuse The button illumination does not work.*

*The lighting does not work. on the display The control unit Call the aftersales service. is faulty. The LED lights are defective. Call the after-sales service. " or " appears The grease filter To clean the grease filter or or the activated change the activated charcharcoal filter is coal filter, see Chapter saturated.*

*@ @ @ @ @ @ @ @ You can make a note of the numbers of your appliance and the telephone number of the after-sales service in the space below to save time should it be required. E no. After-sales service O FD no. Please be aware that a visit by an after-sales engineer will be charged if a problem turns out to be the result of operator error, even during the warranty period.*

*Please find the contact data of all countries in the enclosed customer service list. To book an engineer visit and product advice GB 0344 892 8989 Calls charged at local or mobile rate. IE 01450 2655 0.03 € per minute at peak. Off peak 0.*

*0088 € per minute. Rely on the professionalism of the manufacturer. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts for your appliances. Accessories for circulated air mode (not included in the delivery) Z5140X5 Z5135X4 Z5270X0 Z5170X1 9 Constructa-Neff Vertriebs-GmbH Carl-Wery-Straße 34 D-81739 München GERMANY Register your product online www.neff-international.com \*9001021439\* 9001021439 950508 .*



[You're reading an excerpt. Click here to read official NEFF D39GT57N0 user guide](http://yourpdfguides.com/dref/5905086)  
<http://yourpdfguides.com/dref/5905086>