



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF KI2823F30. You'll find the answers to all your questions on the NEFF KI2823F30 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF KI2823F30
User guide NEFF KI2823F30
Operating instructions NEFF KI2823F30
Instructions for use NEFF KI2823F30
Instruction manual NEFF KI2823F30



[You're reading an excerpt. Click here to read official NEFF
KI2823F30 user guide](http://yourpdfguides.com/dref/5917305)
<http://yourpdfguides.com/dref/5917305>

Manual abstract:

Switching off and disconnecting the appliance . Tips for saving energy . @@@@Retain all documents for subsequent use or for the next owner.

@@Ensure that the tubing of the refrigerant circuit is not damaged during transportation and installation. Leaking refrigerant may cause eye injuries or ignite. If damage has occurred □ Keep naked flames and/or ignition sources away from the appliance, □ thoroughly ventilate the room for several minutes, switch off the appliance and pull out the mains plug, □ inform customer service. The more refrigerant an appliance contains, the larger the room must be in which the appliance is situated. Leaking refrigerant can form a flammable gas-air mixture in rooms which are too small. The room must be at least 1 m³ per 8 g of refrigerant. The amount of refrigerant in your appliance is indicated on the rating plate inside the appliance.

If the power cord of this appliance is damaged, it must be replaced by the manufacturer, customer service or a similarly qualified person. Improper installations and repairs may put the user at considerable risk. Repairs may be performed by the manufacturer, customer service or a similarly qualified person only. Only original parts supplied by the manufacturer may be used. The manufacturer guarantees that only these parts satisfy the safety requirements.

A extension cable may be purchased from customer service only. □ 23 en Important information when using the appliance □ □ □ □ □ □ □ Never use electrical appliances inside the appliance (e. Never defrost or clean the appliance with a steam cleaner! The steam may penetrate electrical parts and cause a short-circuit. You could damage the refrigerant tubes. Leaking refrigerant may cause eye injuries or ignite.

Do not store products which contain flammable propellants (e. Do not stand on or lean heavily against base of appliance, drawers or doors, etc For defrosting and cleaning, pull the mains plug out or switch off the fuse. Do not pull out the mains plug by tugging on the power cord. Store high-percentage alcohol tightly closed and standing up. □ □ Keep plastic parts and the door seal free of oil and grease. Otherwise, parts and door seal will become porous. Never cover or block the ventilation openings of the appliance! Avoiding placing children and vulnerable people at risk: At risk are children, people who have limited physical, mental or sensory abilities, as well as people who have inadequate knowledge concerning safe operation of the appliance. Ensure that children and vulnerable people have understood the hazards. A person responsible for safety must supervise or instruct children and vulnerable people who are using the appliance. Only children from 8 years and above may use the appliance.

Supervise children who are cleaning and maintaining the appliance. Never allow children to play with the appliance. 24 en □ □ □ Do not store bottled or canned drinks (especially carbonated drinks) in the freezer compartment. bottles and cans may burst! Never put frozen food straight from the freezer compartment into your mouth. risk of low-temperature burns! Avoid prolonged touching of frozen food, ice or the evaporator pipes, etc. risk of low-temperature burns! Keep children away from packaging and its parts. danger of suffocation from folding cartons and plastic film! Do not allow children to play with the appliance! If the appliance features a lock: keep the key out of the reach of children! The appliance is suppressed according to EU Directive 2004/108/EC. The refrigeration circuit has been checked for leaks. This product complies with the relevant safety regulations for electrical appliances (EN 60335-2-24). Information concerning disposal * Disposal of packaging The packaging protects your appliance from damage during transit.

All utilised materials are environmentally safe and recyclable. please help us by disposing of the packaging in an environmentally friendly manner. Please ask your dealer or inquire at your local authority about current means of disposal. Children in the household □ □ □ * Disposal of your old appliance Old appliances are not worthless rubbish! Valuable raw materials can be reclaimed by recycling old appliances. This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE).

The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU. General regulations The appliance is suitable for refrigerating and freezing food, □ for making ice. This appliance is intended for use in the home and the home environment. □ 25 en m Warning Redundant appliances 1. Pull out the mains plug.

2. Cut off the power cord and discard with the mains plug. 3. Do not take out the trays and receptacles: children are therefore prevented from climbing in! 4. Do not allow children to play with the appliance once it has spent its useful life. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal. Room temperature, ventilation and cavity depth Ambient temperature The appliance is designed for a specific climate class. Depending on the climate class, the appliance can be operated at the following temperatures. The climate class can be found on the rating plate. fig.

0 Climate class SN N ST T Permitted ambient temperature +10 °C to 32 °C +16 °C to 32 °C +16 °C to 38 °C +16 °C to 43 °C Scope of delivery After unpacking all parts, check for any damage in transit. If you have any complaints, please contact the dealer from whom you purchased the appliance or our customer service. The delivery consists of the following parts: □ Built-in appliance □ Interior fittings (depending on model) □ Bag containing installation materials □ Operating instructions □ Installation manual □ Customer service booklet □ Warranty enclosure □ Information on the energy consumption and noises Note The appliance is fully functional within the room temperature limits of the indicated climatic class. If an appliance of climatic class SN is operated at colder room temperatures, the appliance will not be damaged up to a temperature of +5 °C. Ventilation The air on the rear panel of the appliance heats up. Conduction of the heated air must not be obstructed. Otherwise, the refrigeration unit must work harder. This increases power consumption. Therefore: Never cover or block the ventilation openings! 26 en Cavity depth A cavity depth of 560 mm is recommended for the appliance. If the cavity depth is smaller – at least 550 mm – the energy consumption increases slightly.

Electrical connection The socket must be near the appliance and also freely accessible following installation of the appliance. The appliance complies with the protection class I. Connect the appliance to 220–240 V/50 Hz alternating current via a correctly installed socket with protective conductor.



[You're reading an excerpt. Click here to read official NEFF](#)

[KI2823F30 user guide](#)

<http://yourpdfguides.com/dref/5917305>

The socket must be fused with a 10 to 16 A fuse. For appliances operated in non-European countries, check whether the stated voltage and current type match the values of your mains supply.

This information can be found on the rating plate. fig. 0 Installation location Install the appliance in a dry, well ventilated room. The installation location should neither be exposed to direct sunlight nor near a heat source, e. If installation next to a heat source is unavoidable, use a suitable insulating plate or observe the following minimum distances to a heat source: □ □ m Warning Never connect the appliance to electronic energy saver plugs.

Our appliances can be used with mains and sine-controlled inverters. Mains-controlled inverters are used for photovoltaic systems which are connected directly to the national grid. Sine-controlled inverters must be used for isolated applications (e. g. On ships or in mountain lodges) which are not connected directly to the national grid. Connecting the appliance After installing the appliance, wait at least 1 hour until the appliance is switched on. During transportation the oil in the compressor may have flowed into the refrigeration system. Before switching on the appliance for the first time, clean the interior of the appliance (see chapter "Cleaning the appliance"). Temperature selection button Press this button to set the temperature. Temperature display The numbers correspond to the set refrigerator compartment temperatures in °C.

Alarm button Used to switch off the warning signal, see chapter "Alarm function". 2 Please fold out the illustrated last page. These operating instructions refer to several models. The features of the models may vary. The diagrams may differ. A B 1-5 6* 7 8 9* 10 11 12 13 14* 15 Freezer section Refrigerator compartment Controls Fan Light Glass shelf in the refrigerator compartment Extendable glass shelf Vegetable container with humidity control Vegetable container Shelf for tubes and small tins Butter and cheese compartment Vario door shelf Shelf for large bottles 3 4 5 Switching the appliance on Fig. " Switch on the appliance with the On/Off button 1. The temperature display 4 indicates the set temperature. the appliance begins to cool. Light is switched on when the door is open.

We recommend a factory setting of +4 °C in the refrigerator compartment. Do not store perishable food warmer than +4 °C. 28 en Operating tips □ Freezer compartment The temperature in the refrigerator compartment will affect the temperature in the freezer compartment. Change the temperature in the refrigerator compartment in order to change the temperature in the freezer compartment. @@@@Do not put any food in the appliance beforehand. @@ this is due to functional reasons. @@ the rear panel defrosts automatically. @@ fig. @@Close the door to switch off the warning signal. " Press the alarm button 5 to switch off the warning signal.

@@@@@ notes □ There may be increased operating noises. @@@@@ cooling drinks quickly. Storing large quantities of food in the refrigerator compartment. The button is lit when the Super function is switched on. The Super function automatically switches off after approx. 1½ days and the temperature set previously is restored. □ Store fresh, undamaged food. The quality and freshness will then be retained for longer. @@@@@@Food or packaging could freeze to the rear panel. Note the chill zones in the refrigerator compartment The air circulation in the refrigerator compartment bular film made of polyethylene can be sealed with a film heat sealer.

interior fittings (not all models) Glass shelves Fig. @@@@@@ vario shelf Fig. * To facilitate the storage of tall items (e. g. @@Thawing frozen food Depending on the type and application, select one of the following options: □ □ □ □ Butter and cheese compartment Fig. + To open the butter compartment, gently press in the middle of the butter compartment flap. At room temperature in the refrigerator in an electric oven, with/without fan assisted hot-air in the microwave Vario door shelf Fig. , The position of the Vario door shelf can be moved to the side so that tall bottles can be stored on the lower shelf. m Caution Do not refreeze thawing or thawed food. Only ready meals (boiled or fried) may be refrozen.

No longer store the frozen produce for the max. The bottle holder prevents bottles from falling over when the door is opened and closed. 33 en Sticker "OK" (not all models) The "OK" temperature monitor can be used to determine temperatures below +4 °C. Gradually reduce the temperature if the sticker does not indicate "OK". Note When the appliance is switched on, it may take 12 hours until the temperature is reached.

Defrosting Refrigerator compartment defrosts fully automatically While the refrigerating unit is running, beads of condensation or hoarfrost form at the back of the refrigerator compartment. This is quite normal. It is not necessary to wipe off the condensation or frost. the rear panel defrosts automatically. The condensation runs into the condensation channel, Fig.

#. And is conveyed to the refrigerating unit where it evaporates. Note Keep the condensation channel and drainage hole clean, so that the condensation can run out. Correct setting Switching off and disconnecting the appliance Turn off appliance Fig. " Press the On/Off button 1. Temperature display 4 goes out, refrigeration unit switches off. freezer compartment The freezer compartment does not defrost automatically. A layer of hoarfrost in the freezer compartment will impair refrigeration of the frozen food and increase power consumption. regularly defrost the freezer compartment. Disconnecting the appliance If you do not use the appliance for a prolonged period: 1.

Pull out mains plug or switch off fuse. M Caution Do not scrape off hoarfrost or ice with a knife or pointed object. You could damage the refrigerant tubes. Leaking refrigerant may ignite or cause eye injuries. As a result, the food will drop to a very low temperature and can therefore be stored for longer at room temperature. 1. Remove the frozen food and place temporarily in a cool location. Place ice pack (if available) on the frozen food. Pull out the mains plug or remove the fuse. 4.

To accelerate the defrosting process, place a pan of hot water on a trivet in the freezer compartment. 5. Wait until the layer of frost has thawed. Put the frozen food back in the freezer compartment. proceed as follows: 1.

Before cleaning: Switch off the appliance. 2. Pull out the mains plug or switch off the fuse! 3. Take out the food and store in a cool location. Place ice pack (if available) on the food.

4. Wait until the layer of frost has thawed. 5. Clean the appliance with a soft cloth, lukewarm water and a little pH neutral washing-up liquid. The rinsing water must not run into the light or through the drainage hole into the evaporation area. 6. Wipe the door seal with clear water only and then wipe dry thoroughly.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/5917305)

[KI2823F30 user guide](http://yourpdfguides.com/dref/5917305)

<http://yourpdfguides.com/dref/5917305>

7. After cleaning reconnect and switch the appliance back on. 8.

Put the food back into the appliance. Interior fittings All variable parts of the appliance can be taken out for cleaning. take out glass shelves Fig. (To do this, pull out shelf, lift at the front and take out. Taking out the extendable glass shelf Fig.) Hold down levers on the underside on both sides, pull glass shelf forwards, lift and swivel out to the side. condensation channel Fig. # Regularly clean the condensation channel and drainage hole with a cotton bud or similar implement to ensure that the condensation can drain. Cleaning the appliance m Caution □ □ □ Do not use abrasive, chloride or acidic cleaning agents or solvents. do not use scouring or abrasive sponges.

The metallic surfaces could corrode. Never clean the shelves or containers in the dishwasher. The parts may become deformed! 35 en Taking out the butter and cheese compartment Fig. + To clean the compartment, lift it at the bottom and take out. Take out shelves in the door Fig.

Taking out glass shelf above vegetable container Fig. 1 The glass shelf can be taken out and disassembled for cleaning. Note Before taking out the glass shelf, pull out vegetable container. removing the container Fig. / Pull out the container all the way and lift to detach it.

To insert the container, place on the telescopic rails and push into the appliance. Seal strong smelling food in order to avoid odours from forming. Store food in the appliance. 8. Check whether the formation of odours is still occurring after 24 hours. light (LED) Your appliance features a maintenancefree LED light.

These lights may be repaired by customer service or authorised technicians only. Tips for saving energy □ □ Odours If you experience unpleasant odours: 1. Switch off the appliance with the On/ Off button. Take all food out of the appliance.

3. Clean interior (see chapter "Cleaning the appliance"). □ □ □ □ □ □ Install the appliance in a dry, well ventilated room! The appliance should not be installed in direct sunlight or near a heat source (e. @@Thaw frozen food in the refrigerator compartment and use the low temperature of the frozen food to cool refrigerated food. open the appliance as briefly as possible. Ensure that the freezer compartment door has been closed properly. To avoid increased power consumption, occasionally clean the back of the appliance. 36 en □ □ Regularly defrost the freezer compartment to remove the layer of frost! A layer of hoarfrost will impair refrigeration of the frozen food and increase power consumption. @@@@ if required , place something underneath.

@@@Eliminating minor faults yourself Before you call customer service: Please check whether you can eliminate the fault yourself based on the following information.

Customer service will charge you for advice – even if the appliance is still under guarantee! Fault Temperature differs greatly from the set value. Possible cause Remedial action In some cases it is adequate to switch off the appliance for 5 minutes. If the temperature is too high wait a few hours and check whether the temperature has approached the set value. If the temperature is too low check the temperature again the next day. Power failure; the fuse has Connect mains plug.

Check whether the power been switched off; the mains is on, check the fuses. The light does not function. possible cause Electronics have detected a fault. The LED light is defective. appliance was open too long.

Light is switched off after approx. 10 min. There is a thick layer of frost in the freezer compartment. Bottom of the refrigerator compartment is wet. The refrigerating unit is switching on more frequently and for longer. The temperature in the refrigerator compartment is too cold. When the appliance is closed and opened, the light is on again. defrosting the freezer compartment (see chapter Defrosting). Always ensure that the freezer compartment door is closed properly. The condensation channel Clean the condensation channel or drainage hole are blocked.

and the drainage hole. See chapter Cleaning the appliance. The ventilation openings have been covered. Do not open the appliance unnecessarily. Hold down alarm button, Fig "75, for 10 seconds until an acknowledgement signal sounds. After a short time check whether your appliance is cooling. Showroom mode is Appliance is not cooling, temperature display and light switched on. are lit. 38 en Appliance self-test Your appliance features an automatic self-test program which shows you sources of faults which may be repaired by customer service only. Customer service Your local customer service can be found in the telephone directory or in the customer-service index.

Please provide customer service with the appliance product number (E-Nr.) and production number (FD). These specifications can be found on the rating plate. fig. 0 To prevent unnecessary call-outs, please assist customer service by quoting the product and production numbers.

This will save you additional costs. starting the appliance self-test 1. Switch off the appliance and wait 5 minutes. "2, for 3–5 seconds within the first 10 seconds until an acoustic signal sounds. the self-test programme starts.

While the self-test is running, a long acoustic signal sounds. When the self-test ends and an acoustic signal sounds twice, your appliance is in working order. If the Super button flashes for 10 seconds and 5 acoustic signals sound, there is a fault. inform customer service. Repair order and advice on faults Contact information for all countries can be found on the enclosed customer service list. gB 0844 892 8989 Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply. IE Ending the appliance self-test When the programme has ended, the appliance switches over to normal operation. .



[You're reading an excerpt. Click here to read official NEFF](#)

[KI2823F30 user guide](#)

<http://yourpdfguides.com/dref/5917305>