



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF S54T59X0GB. You'll find the answers to all your questions on the NEFF S54T59X0GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual NEFF S54T59X0GB User guide NEFF S54T59X0GB Operating instructions NEFF S54T59X0GB Instructions for use NEFF S54T59X0GB Instruction manual NEFF S54T59X0GB

**Summary of instructions for dishwasher**

9000 156 632 (8602) 638x

Quick and easy: everything you need to know about your dishwasher. You should, however, still read the installation and operating instructions before you use the dishwasher for the first time.

**1 Pour in the water/special salt**  
Dissolves limescale (not required for set value 0!).  
Unscrew the lid. Only before using the dishwasher for the first time pour approx. 1 l / 2 pt water into the salt opening. Pour in max. 1.5 kg / 3 lb 8 oz salt (never detergent!). Screw on the lid. Switch on dishwasher immediately.

**2 Pour in the rinsing agent**  
Everything is sparkling clean ...  
Press mark 1, lift up lid 2. Refill whenever level indicator is light!

**3 Pour in the cleaning agent**  
Very dirty dishes, a lot of detergent ...  
If required, open the lid (press the pin). Warning, combination products are not suitable for all programmes, follow manufacturer's instructions. Pour in detergent. Push the lid shut, press FLOP!

**4**

**5 Select the programme**  
Quick, economical or intensive ...  
Programme overview  
This overview lists the max. possible number of programmes. The programmes supplied with your appliance are indicated on the fascia.

	Auto 65°-75°	Auto 55°-65°	Auto 35°-45°	Eco 50°	Quick 45°	Pre-rinse
Duration in minutes	105-135	85-140	70-80	140	30	19
Electricity consumption in kWh	1,45-1,75	1,00-1,60	0,70-0,75	1,05	0,70	0,05
Water consumption in litres	-	-	-	12	10	4
with Aquasensor	12-20	9-19	13-18	-	-	-

The programme data are values measured in the laboratory in compliance with Standard EN 50242. Deviations in practice are possible.

**6 Additional programmes \*\***  
Soak crockery in the lower basket, programme starts automatically, remember to add an extra 5g of cleaning agent when the door unlocks.  
Saving time (VariSpeed) ... is obtained by increased energy consumption at a constant cleaning and drying performance.  
Increased flexibility ...  
Half load ... for a few items, saves water, energy and time.  
Lower basket cleaning ... Only the crockery in the lower basket is cleaned.  
Time selection ... switches on as soon as you press the time selection button. Alters the programme start in hourly steps.

**7 Switch on the appliance the dishwasher starts ...**  
Press the on/off switch, the cycle time for the programme selected appears.

**Switch off the appliance that's it ...**  
Press the on/off switch when the indicator shows 0 (programme end).

**Set the water softening system \***  
Find out the water hardness at your water utility company and enter

°dH	"Hk	"dure	mmol/l
0-6	0-11	0-8	0-11
7-8	12-15	9-10	1.2-1.4
8-10	16-17	11-12	1.5-1.8
11-12	18-21	13-15	1.9-2.1
13-16	22-29	16-20	2.2-2.9
17-21	30-37	21-26	3.0-3.7
22-30	38-54	27-38	3.8-5.4
31-50	55-89	39-62	5.5-8.9

\* only before using the dishwasher for the first time or if the water hardness changes

Quickly sorted... and then set  
- Hold down programme button B and switch on the main switch, then release the buttons. The display of button B and the number H4 set by the factory flash.  
- Each time button B is depressed, the setting increases by one; if H9 has been reached, the display jumps back to H0.  
- Switch off the main switch. The selected setting has been stored in the appliance.



You're reading an excerpt. [Click here to read official NEFF S54T59X0GB user guide](http://yourpdfguides.com/dref/3548077)  
<http://yourpdfguides.com/dref/3548077>

**Manual abstract:**

Each time button B is depressed, the setting increases by one; if H7 has been reached, the display jumps back to H0. Switch off the main switch. The selected setting has been stored in the appliance. \* only before using the dishwasher for the first time or if the water hardness changes Pour in the water/special salt Dissolves limescale (not required for set value 0!) Unscrew the lid. Only before using the dishwasher for the first time pour approx. 1 l / 2 pt water into the salt opening. Pour in max. 1.5 kg / 3 lb 5 oz salt (never detergent!) Screw on the lid. Switch on dishwasher immediately.

Pour in the rinsing agent Everything is sparkling clean ... Press mark 1, lift up lid 2. Refill whenever level indicator is light! Pour in rinse aid.

Close the lid. CLICK! Pour in the cleaning agent Very dirty dishes, a lot of detergent ... If required, open the lid (press the pin).

Warning, combination products are not suitable for all programmes, follow manufacturer's instructions. Pour in detergent. Push the lid shut, press.

@@possible number of programmes. @@@@Saving time (VarioSpeed) ... @@@@@Insert ...

@@@@@@@Follow manufacturer's specifications (detergent). Select more intensive programme. Clean spray arms (see above). Clean the strainers (see above). Arrange the utensils so that the spray arms can rotate freely. Device does not work/stops Check water supply Display lights up Supply fitting not open

Supply hose kinked Supply fitting jammed or calcified Open supply fitting. Lay supply hose without kinks. 1. Unscrew water connection. 2.

Clean filter in the water connection. 3. Flow rate must be min. 9 l/min when the water inlet is open. If the flow rate is less, replace the supply fitting.

Filters dirty, not installed securely Spray arms blocked Stains and streaks Rinse aid dosage too high / too low Streaks: Reduce dosage. Water or limescale stains: Increase dosage. Milky residues on dishes (can be removed) Plastic parts / parts of dishes discoloured Too little cleaning product Discoloration caused by food colourings (tomato sauce) Follow manufacturer's specifications (detergent). Discoloration is quite safe; fades after subsequent rinse cycles.

Milky film, glasses cloudy / dull (cannot be removed) Water softening system incorrectly set; no special salt Glasses not dishwasher-proof.

Set water softening system correctly. Refill with special salt. Use dishwasher-proof glasses. @@.



[You're reading an excerpt. Click here to read official NEFF](#)

[S54T59X0GB user guide](#)

<http://yourpdfguides.com/dref/3548077>