




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF S66M63N1EU. You'll find the answers to all your questions on the NEFF S66M63N1EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual NEFF S66M63N1EU**  
**User guide NEFF S66M63N1EU**  
**Operating instructions NEFF S66M63N1EU**  
**Instructions for use NEFF S66M63N1EU**  
**Instruction manual NEFF S66M63N1EU**

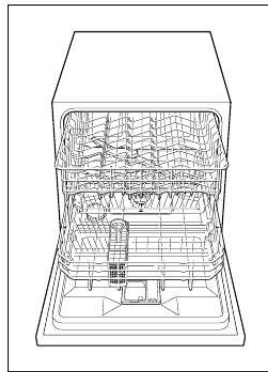

9000 460 404 (8908)

en Operating instructions



[You're reading an excerpt. Click here to read official NEFF S66M63N1EU user guide](http://yourpdfguides.com/dref/3562351)  
<http://yourpdfguides.com/dref/3562351>

**Manual abstract:**

.....  
.. Programme data ...  
.....  
..... Aqua sensor ..  
.....  
.....  
.. Switching on the appliance ...  
..... Programme sequence indicator ... Remaining running time display .  
.....  
... Timer programming .....  
.....  
.. End of programme ....  
.....  
Switching off the appliance ..... Interrupting the programme ..  
.....  
Terminating the programme .....  
.. Changing the programme .....  
.....  
.. Intensive drying .....  
.....  
... Maintenance and care ..  
.....  
.. Overall condition of the machine ... Special salt and rinse aid .....  
... Filters ..  
.....  
..... Spray arms ...  
.....  
..... Troubleshooting ...  
.....  
.... Waste water pump .  
.....  
.....  
.. when the appliance is switched on ... changing settings .....  
.....  
.....  
on the appliance .....  
..... during the wash cycle ...  
.....  
.....  
on the utensils .....  
..... Customer service ....  
.....  
.....  
.. Installation .....  
.....  
.... Safety instructions .  
.....  
..... Delivery .  
.....  
.....  
.....  
.. Technical specifications .....

.. Installation .....

.....

.....

... Waste-water connection .....

... Fresh water connection .....

.... Electrical connection .

.....

..... Removing the appliance ...

..... Transportation ...

.....

.....

..... Protection against frost (Emptying the appliance) .....

.....

.....

.. Waste disposal .....

.....

..... Packaging .....

.....

..... Old appliances .....

.....

.. @@ .....

.....

..... 4 Delivery ..

.....

.....

.. 4 Installation .....

.....

.....

.... 4 In daily use .

.....

.....

..... 4 Children in the household .....

.....

4 Door lock .....

.....

..... 4 Button lock ...

.....

.....

..... 4 Damage ..

.....

.....

.....

.. 5 Disposal .....

.....

.....

.... 5 Getting to know your appliance .

.....

5 Control panel .....

.....

..... 5 Appliance interior .

.....

.....

..... 5 Water softening system .....

.....

..... 6 Setting ..

.....

|  |  |
|--|--|
| .....  |  |
| .....  |  |
| ... 6 Water hardness table .....                                 |  |
| .....  |  |
| . 6 Special salt \$.....   |  |
| .....  |  |
| ..... 7 Using special salt ...                                   |  |
| .....  |  |
| .....  |  |
| ... 7 Detergents with salt component .....                       | 7 Switching off water softening system . 7 Rinse aid % . |
| .....  |  |
| .....  |  |
| .....  |  |
| .. 8 Setting amount of rinse aid .....                           |  |
| . 8 Switching off rinse aid refill indicator .. 8 Utensils ..... |  |
| .....  |  |
| .....  |  |
| ..... 9 Not suitable .   |  |
| .....  |  |
| .....  |  |
| .....  |  |
| 9 Glass and utensil damage .....                                 | 9 Loading the dishwasher .                               |
| .....  |  |
| 9 Unloading the dishwasher .....                                 |  |
| .... 9 Cups and glasses .  |  |
| .....  |  |
| ..... 9 Pans .....   |  |
| .....  |  |
| .....  |  |
| . 9 Cutlery basket .....   |  |
| .....  |  |
| .... 10 Folding spikes .   |  |
| .....  |  |
| ..... 10 Small accessories holder .....                          |  |
| .....  |  |
| 10 Detergent .....   |  |
| .....  |  |
| ..... 11 Adding detergent .                                      |  |
| .....  |  |
| .... 11 Combination detergent .....                              |  |
| ..... 12 Overview of programmes .....                            |  |
| .....  |  |
| 13 Programme selection .....                                     |  |
| ..... 13 Information for test institutes ...                     |  |
| ..... 13 Additional options .....                                |  |
| .....  |  |
| .....  |  |
| 14 Express Wash .....  |  |
| ..... 14 Hygiene ..  |  |
| .....  |  |
| .....  |  |
| .....  |  |

. 14 Intensive zone . . . . .

. . . . . 14 Extra drying .  
. . . . .

. . . . . @@ Do not switch on a damaged appliance, but contact your supplier.

@@ Do not let children play with packaging and its parts. There is a risk of suffocation from collapsible boxes and film. ⚠=Warning Knives and other utensils with sharp points must be placed in the cutlery basket with the points downwards or horizontally on the knife shelf\*. \* depending on model Children in the household If fitted, use the childproof lock. An exact description can be found in the back of the envelope.

Do not allow children to play with or operate the appliance. Keep children away from detergents and rinse aid. These may cause chemical burns in the mouth, throat and eyes or asphyxiation. Keep children away from open dishwasher. The water in the rinsing compartment is not drinking water and could contain detergent residue.

Installation Read the "Installation" chapter to learn how to install and connect the appliance correctly. In daily use Use the dishwasher only in the household and only for its designed purpose: for washing domestic dishes. Children or people whose physical, sensory or mental abilities prevent them from using the appliance safely must not use this appliance without supervision or instruction by a responsible person. Do not lean or sit on the open door. The appliance could tip. Please note that free-standing appliances may tip over if the baskets are overloaded. Do not add any solvents to the washing chamber. Danger of explosion! Open the door carefully when the programme is still running. There is a risk of hot water spraying out of the appliance. Read and observe the safety information and instructions for use on the packaging for cleaning and rinsing agents.

Childproof lock (door lock) \* The description of the childproof lock is at the back in the envelope. \* depending on model Childproof lock (button lock) You can secure your appliance from being unintentionally the programme terminated (e.g. improper operation by children). Activating the button lock: Start the required programme. Hold down the button + for approx. 4 sec. until this is indicated on the digital display. If any button is pressed while the programme is running, this is indicated on the digital display. It is not possible to end (Reset) the programme.

Deactivating the button lock: Hold down the button + for approx. 4 sec. until the display goes out. When the programme ends ( : on the digital display), the button lock is cancelled. If there is a power failure, the button lock is retained.

Whenever a programme is restarted, the button lock must be reactivated. 4 en Damage The appliance may be repaired and opened up by a technician only.

To do this, disconnect the appliance from the power supply. Pull out the mains plug or switch off the fuse. Turn off the tap.

Getting to know your appliance Diagrams of the control panel and the interior of the appliance can be found in the envelope at the front. Individual positions are referred to in the text. Disposal Make redundant appliances unusable to prevent subsequent accidents. Dispose of the appliance in an environmentally friendly manner. Control panel ( 0 8 @ H P X `h )" ON/OFF switch Programme buttons \*\* Display "Check water supply" Salt refill indicator Rinse aid refill indicator Timer programming \* Additional options \*\* START button Programme sequence indicator Digital display ⚠=Warning Children could become locked in the appliance (risk of suffocation) or find themselves in other dangerous situations. Therefore: Pull out the mains plug, sever and dispose of the power cord. Destroy the door lock so that the door can no longer be closed. \* depending on model \*\* Number depending on model Appliance interior 1" 1\* 12 1: 1B 1J 1R 1Z 1b 1j 9" Top basket Top spray arm Bottom spray arm Filters Dispenser for special salt Cutlery basket Bottom basket Dispenser for rinse aid Detergent dispenser Lock for detergent dispenser Rating plate \* depending on model 5 en Water softening system To ensure good washing results, the dishwasher requires soft water, i.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3562351)

[S66M63N1EU user guide](http://yourpdfguides.com/dref/3562351)

<http://yourpdfguides.com/dref/3562351>

e. containing low amounts of lime, otherwise white limescale will be deposited on the utensils and inner container.

Tap water above 9° Clarke (from set value : ) must be softened. The water is softened with salt (regeneration salt) in the water softening system of the dishwasher. The setting and therefore the required amount of salt depends on the degree of hardness of your tap water (see table). Water hardness table  
Water hardness value °Clarke Hardness range mmol/l Set value on the machine 08 910 1112 1315 1620 2126 2738 3944 soft soft medium medium medium  
hard hard hard 01.1 1.21.4 1.51.8 1.92.  
1 2.22.9 3.03.7 3.

85.4 5.56,2 :<< :<, :< :<,, :<...  
:< :< :<^ Setting The amount of salt dispensed can be set from : to : . Salt is not required at the set value : . Find out about the hardness value of your tap water. Your water utility company will help you with this. Set value can be found in the water hardness table. Close the door. Switch on ON/OFF switch (. Hold down programme button # and press START button `until : ...

. is indicated on the digital display. Release both buttons. @@To change the setting: Press programme button 3. Each time the button is pressed, the set value increases by one level; when the value of : has been reached, the display jumps back to : (off). Press START button ` The chosen setting has now been stored. 6 en Special salt \$ Using special salt Always refill with special salt immediately before switching on the appliance. This ensures that overrun special salt solution is immediately washed out and does not corrode the rinsing tank. Open the screw-type cap of the compartment 1B.

Fill the tank with water (only required when switching on the appliance for the first time). Then add dishwasher salt (not table salt or tablets). The water is displaced and runs out. As soon as the salt refill indicator @ on the fascia is lit, top up the salt. Switching off salt refill indicator/ water softening system If the salt refill indicator @ is impaired (e.

g. when using combined detergents containing salt component), it can be switched off. Proceed as described under "Adjusting the water softening system" and set the value to : . The water softening system and salt refill indicator are now switched off. ã=Warnings Never fill the salt dispenser with detergent. You will destroy the water softening system. To prevent corrosion, always refill with salt immediately before switching on the appliance. \*\* depending on model Using detergents with salt component If combined detergents with a salt component are used, salt can usually be omitted up to a water hardness of 21° dH (37° fH, 26° Clarke, 3.7 mmol/l). If the water hardness is over 21° dH, special salt must be used. 7 en Rinse aid % As soon as the rinse-aid refill indicator H is lit on the fascia, there is still a rinse-aid reserve of 1 2 rinsing processes. Refill with rinse aid. The rinse aid is required for stain-free utensils and clear glasses. Use only rinse aid for domestic dishwashers. Combined detergents with rinse-aid component may be used up to a water hardness of 21° dH (37° fH, 26° Clarke, 3.

7 mmol/l) only. If the water hardness is over 21° dH, rinse aid must be used. Open the dispenser 1Z by pressing and lifting the plate on the cover. Setting amount of rinse aid The amount of rinse aid dispensed can be set from : to : . This is the factory setting : . Do not change the amount of rinse aid unless streaks (select lower setting) or water stains (select higher setting) are left on the utensils. Close the door. Switch on ON/OFF switch (. Hold down programme button # and press START button `until hate-free detergents are less frequent. These have a slightly weaker lime bonding capacity and require a higher dosage.

To remove coloured stains (e.g. tea, tomato sauce), oxygenbased bleaching agents are usually used. Note To ensure a good washing result, always follow the instructions on the detergent packaging! If you have further questions, we recommend that you contact the detergent manufacturers' helpline. Adding detergent If the detergent dispenser 1b is still closed, press the lock 1j to open the detergent dispenser. Pour detergent into the dry detergent dispenser 1b only (insert tablet flat, not on its edge). Dosage: see manufacturer's instructions on the packaging. The graduated detergent dispenser 1b helps you add the correct amount of powder or liquid detergent. 50 ml 25 ml 15 ml Close the cover on the detergent dispenser by sliding it up until the lock engages without difficulty. ã=Warning Read and observe the safety information and instructions for use on the packaging for cleaning and rinsing agents.

The detergent dispenser opens automatically at the optimum time depending on the programme. The powder or liquid detergent is distributed in the appliance and is dissolved. The tablet falls into the appliance and dissolves. Tip If the utensils are only lightly soiled, slightly less than the indicated amount of detergent is usually adequate. Suitable detergents and care products can be purchased online via our website or via customer service (see back page). 11 en Combination detergent Apart from conventional detergents (Solo), a number of products are offered with additional functions. These products contain not only the detergent but also rinse-aid and salt replacement substances (3in1) and, depending on the combination (4in1, 5in1, etc.), additional components such as glass protection or stainless steel cleaner. Combination detergents function only up to a specific degree of hardness (usually 21°dH). Over this limit salt and rinse-aid must be added.

As soon as combined detergents are used, the rinse programme is adjusted automatically to ensure the best possible rinsing and drying result. Notes You will obtain optimum rinsing and drying results by using solo detergents and applying salt and rinse aid separately. If programmes are short, tablets may not have full cleaning effect due to different dissolving properties and there may even be undissolved detergent residue. It is recommended to use washing powder for these programmes. Even if the rinse-aid and/or salt refill indicator is lit, the rinse programme will run correctly with combined detergents. If using detergents in a water-soluble protective cover: Take hold of the cover with dry hands only and put the detergent into an absolutely dry detergent dispenser only, otherwise the detergent may stick. If you switch from combined detergents to solo detergents, ensure that the water softening system and amount of rinse aid have been set to the correct value. 12 en Overview of programmes The max. possible number of programmes is illustrated in this overview.

As soon as combined detergents are used, the rinse programme is adjusted automatically to ensure the best possible rinsing and drying result. Notes You will obtain optimum rinsing and drying results by using solo detergents and applying salt and rinse aid separately. If programmes are short, tablets may not have full cleaning effect due to different dissolving properties and there may even be undissolved detergent residue. It is recommended to use washing powder for these programmes. Even if the rinse-aid and/or salt refill indicator is lit, the rinse programme will run correctly with combined detergents. If using detergents in a water-soluble protective cover: Take hold of the cover with dry hands only and put the detergent into an absolutely dry detergent dispenser only, otherwise the detergent may stick. If you switch from combined detergents to solo detergents, ensure that the water softening system and amount of rinse aid have been set to the correct value. 12 en Overview of programmes The max. possible number of programmes is illustrated in this overview.

The detergent dispenser opens automatically at the optimum time depending on the programme. The powder or liquid detergent is distributed in the appliance and is dissolved. The tablet falls into the appliance and dissolves. Tip If the utensils are only lightly soiled, slightly less than the indicated amount of detergent is usually adequate. Suitable detergents and care products can be purchased online via our website or via customer service (see back page). 11 en

Combination detergent Apart from conventional detergents (Solo), a number of products are offered with additional functions. These products contain not only the detergent but also rinse-aid and salt replacement substances (3in1) and, depending on the combination (4in1, 5in1, etc.), additional components such as glass protection or stainless steel cleaner. Combination detergents function only up to a specific degree of hardness (usually 21°dH). Over this limit salt and rinse-aid must be added.

As soon as combined detergents are used, the rinse programme is adjusted automatically to ensure the best possible rinsing and drying result. Notes You will obtain optimum rinsing and drying results by using solo detergents and applying salt and rinse aid separately. If programmes are short, tablets may not have full cleaning effect due to different dissolving properties and there may even be undissolved detergent residue. It is recommended to use washing powder for these programmes. Even if the rinse-aid and/or salt refill indicator is lit, the rinse programme will run correctly with combined detergents. If using detergents in a water-soluble protective cover: Take hold of the cover with dry hands only and put the detergent into an absolutely dry detergent dispenser only, otherwise the detergent may stick. If you switch from combined detergents to solo detergents, ensure that the water softening system and amount of rinse aid have been set to the correct value. 12 en Overview of programmes The max. possible number of programmes is illustrated in this overview.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3562351)

[S66M63N1EU user guide](http://yourpdfguides.com/dref/3562351)

<http://yourpdfguides.com/dref/3562351>

The corresponding programmes for your appliance can be found on the fascia.

Type of utensils Possible additional Programme sequence options Prerinse pots and pans, very adhesive burned Clean 70° non-sensitive in or dried-on food Intermediate rinse utensils remnants containing Intensive 70° Final rinse 65° and cutlery starch or protein Dry Is optimised according to all the soiling with the aid of sensors. Auto 45° 65° part dried, common Prerinse mixed utensils household food Clean 50° and cutlery remnants Intermediate rinse Eco 50° Final rinse 65° Dry Prerinse Clean 40° Intensive zone sensitive utensils, Intermediate rinse Express Wash cutlery, Gentle 40° Final rinse 55° Extra drying slightly adhesive, temperature refresh food remnants Dry sensitive plastic Clean 45° and glasses Extra drying Intermediate rinse Quick 45° Final rinse 55° Type of soiling Programme ±° Á á/à é/è ñ/ð Prerinse all types of utensils cold rinsing, intermediate cleaning ù/ø none Prerinse Programme selection You can select a suitable programme according to the type of utensils and degree of soiling. Information for test institutes Test institutes can request the conditions for running comparison tests by sending an e-mail to dishwasher@test-appliances.com. Quote the appliance number (E Nr. ) and the production date (FD) which you can find on the rating plate 9" on the appliance door. 13 en Additional options \* depending on model Additional options can be set with the buttons X. Washing the dishes Programme data The programme data (consumption values) can be found in the summary of instructions. They refer to normal conditions and the water hardness set value : . Different influencing factors such as e. g. water temperature or line pressure may result in deviations. Y Express Wash \* The >>Express Wash<< function can reduce the running time by approx. 20% to 50% depending on the selected rinse programme. The change in the running time is indicated on the digital display ). To obtain optimum cleaning results at a reduced running time, water and energy consumption are increased. Aqua sensor \* \* depending on model The Aqua sensor is an optical measuring device (light barrier) which measures the turbidity of the rinsing water. The Aqua sensor is used according to the programme. If the Aqua sensor is active, "clean" rinsing water can be transferred to the next rinse bath and water consumption can be reduced by 24 litres. If the turbidity is greater, the water is drained and is replaced with fresh water.

In the automatic programmes the temperature and running time can also be adjusted to the degree of soiling. · Hygiene \* The temperature is increased during the cleaning process. This increases the hygiene status. This additional option is ideal for cleaning e.g. chopping boards and baby bottles. Ý Intensive zone \* Perfect for a mixed load. You can wash very soiled pots and pans in the lower basket together with normally soiled utensils in the upper basket. The spray pressure in the lower basket is intensified, the rinsing temperature is increased slightly. Switching on the appliance Turn on the tap fully.

Switch on ON/OFF switch ( . The display of the last selected programme flashes. This programme remains selected if no other programme button 0 is pressed. The expected programme duration flashes on the digital display ). Press the START button :

The programme starts running. ç Extra drying \* An increased temperature during the final rinse and an extended drying phase ensure that even plastic parts dry better. There is a slight increase in the energy consumption. Programme sequence indicator h -/, Your dishes are being cleaned. 5/!% Your dishes are being rinsed.

=/< Your dishes are being dried. 14 en Remaining running time display When the programme is selected, the remaining running time of the programme is indicated on the digital display ). The running time is determined during the programme by the water temperature, the number of utensils as well as the degree of soiling and may vary (depending on the selected programme). Interrupting the programme Switch off ON/OFF switch ( . The LEDs go out. The programme is saved. If the door was opened on an appliance which has a warm water connection or is heated, first leave the door ajar for several minutes and then close. Otherwise, expansion (pressure) may cause the appliance door to spring open or water to run out of the appliance. To continue the programme, switch on the ON/OFF switch ( again. Timer programming \* \* depending on model You can delay the start of the programme in 1-hour steps up to 24 hours.

Close the door. Switch on ON/OFF switch ( . Press button P + until the digital display )" jumps to : . @@ Press START button ; timer programming is activated. @@@@3 sec. The numerical display )" indicates : . The programme sequence lasts approx. 1 min. On the digital display )" is indicated : .

@@@@ Turn off the tap (not applicable if AquaStop fitted).

@@@@@The running time may increase slightly. (Caution if utensils are delicate!) Close the door. Switch on ON/OFF switch ( . @@ is indicated. Release both buttons.

@@@@@@@ Press START button `@@@@@@@@ Regularly clean door seal with a damp cloth. Never use a steam cleaner to clean your dishwasher. The manufacturer is not liable for any consequential damage. @@@@@@@@@@ These foreign objects may occasionally block the filters.

@@ After each washing cycle check the filters for residue. Unscrew filter cylinder as illustrated and take out filter system. Spray arms Limescale and contaminants in the rinsing water may block nozzles and bearings on the spray arms 1\* and 12. Check outlet nozzles on the spray arms for blockages. Unscrew the upper spray arm 1\*. Remove the lower spray arm 12 upwards. Clean spray arms under running water. Re-engage or screw on spray arms. Remove any residue and clean filters under running water. Re-install filter system in reverse sequence and ensure that the arrow marks are opposite each other after closing the filter system.

17 en Troubleshooting The majority of faults which could occur in daily operation can be rectified by the user. This ensures that the appliance is quickly available for use again. The following overview will help you locating the causes and gives helpful advice to eliminate them. Note If the appliance stops during dishwashing for no obvious reason, first run the Abort programme function (Reset). (See chapter entitled "Dishwashing") Waste water pump Large food remnants in the rinsing water not retained by the filters may block the waste water pump. The rinsing water is then not pumped out and covers the filter.



[You're reading an excerpt. Click here to read official NEFF](#)

[S66M63N1EU user guide](#)

<http://yourpdfguides.com/dref/3562351>

*In this case: First disconnect the appliance from the power supply. Remove the filters 1: Scoop out water, use a sponge if required. Loosen screws on the pump cover (Torx T 20) and pull off.*

*If on the digital display )" an error code (: to : ), always disconnect the appliance from the power supply and then turn off the tap. You can rectify certain faults yourself (see following fault description), for all other faults please contact customer service and state the indicated fault :XX. ⚠=Warning ⚠=Warning Don't forget: Repairs may be carried out by technicians only. If a component has to be replaced, ensure that only original spare parts are used. Improper repairs or use of non-original spare parts may cause considerable damage and put the user at considerable risk.*

*Check inner compartment and remove any foreign objects. Place pump cover in the original position, press down and screw tight. Install filters. 18 en .. when the appliance is switched on The appliance does not start. The mains fuse has tripped. The appliance plug has not been inserted. The appliance door has not been shut properly. Clean filter in the supply hose. ... changing settings A setting cannot be changed, a programme starts.*

*Wrong programme button pressed. Terminate the programme (see chapter entitled "Terminating the programme (Reset)") and start all over again. You did not wait until programme ended. Reconnect power supply. Turn on the tap. Switch on the appliance. Water is left in the appliance at the end of the programme. ( : ) Waste water hose is blocked or kinked. Filters blocked. ( : ) Waste water pump blocked, cover on the waste water pump is not locked in position (see Waste water pump).*

*Filters blocked. The programme has not yet ended. Wait until programme ends (digital display indicates : ) or implement the "Reset" function. Error code : Filters 1: are soiled or blocked. Refill indicator for salt @ and/or rinseaid H is not lit.*

*Refill indicator/s switched off. Adequate salt/rinse-aid available. Refill indicator for special salt @ is lit. No salt. Refill with special salt.*

*Sensor does not detect salt tablets. Use different special salt. ... on the appliance Lower spray arm rotates sluggishly. Spray arm blocked. The door is difficult to open. \* Child-proof lock is activated. The deactivation instructions are at the back in the envelope.*

*\* depending on model Door cannot be closed. Door lock has been activated. To reset, close the door with greater force. Cover on the detergent dispenser cannot be closed. Detergent dispenser overfilled or mechanism blocked by sticky detergent residue. Detergent residue in the detergent dispenser. Dispenser was damp when filled. "Check water supply" display 8 lights up. Tap turned off. Water supply interrupted.*

*Supply hose kinked. Filter in the water supply blocked. Switch off the appliance and pull out the mains plug. Turn off the tap. 19 en .*

*.. during the wash cycle Unusual foam formation. Handwash liquid in the rinse aid dispenser. Spilled rinse aid causes excessive frothing, therefore please remove with a cloth.*

*Appliance stops during the wash cycle. Power supply interrupted. Water supply interrupted. Filling valves making striking noises Caused by the installation of the water line and has no effect on the function of the machine. Remedial action is not possible. Knocking/rattling noise during rinsing Spray arm is striking utensils. Utensils not arranged correctly. White stains on the utensils/glasses remain milky. If phosphate-free detergents are used with hard tap water, white deposits may be deposited more easily on utensils and the container walls. Too little/unsuitable detergent.*

*Too weak programme selected. No/too little rinse aid. No/too little special salt. Water softening system set to the wrong value. Salt dispenser lock not fastened. Contact the detergent manufacturer, in particular if: the utensils are very wet at the end of the programme. limescale forms. Dull, discoloured glasses, film cannot be washed off. Unsuitable detergent. Glasses not dishwasher-proof.*

*Streaks on glasses and cutlery, glasses have metallic appearance. Too much rinse aid. Plastic parts discoloured. Too little/unsuitable detergent. Too weak programme selected.*

*Rust spots on the cutlery. Cutlery not rust-resistant. Salt content in the rinsing water too high, as salt dispenser lock not fastened firmly or salt was spilled while being refilled. Utensils not dry. Appliance door opened too early and utensils taken out too early.*

*Programme selected without drying. Too little/unsuitable rinse aid. Activate intensive drying. The combined detergent used has a poor drying performance. Use rinse aid (see Rinse aid chapter for setting). ... on the utensils Food residue on the utensils. Utensils placed too closely together, utensils basket overfilled.*

*Too little detergent. Rinse programme too weak. Spray arm rotation obstructed. Spray arm nozzles blocked. Filters blocked. Filters incorrectly inserted. Waste water pump blocked. Tea or lipstick residue is not completely removed. The detergent has an inadequate bleaching effect. Too low rinsing temperature.*

*Too little/unsuitable detergent. 20 en Customer service If the advice given does not resolve your problem, please contact your customer service. Contact details can be found on the back cover of this instruction manual or in the enclosed customer service list. When calling , please quote the appliance number (1) and the production date (FD = 2) which can be found on the rating plate 9" on the appliance door. Installation The dishwasher must be connected correctly, otherwise it will not function properly.*

*The specifications for the inlet and outlet as well as the electrical connected loads must correspond with the required criteria as specified in the following paragraphs or in the installation instructions. Install the appliance in the correct sequence: Checking appliance on delivery Installing the appliance Waste water connection Fresh water connection Electrical connection 1 FD 2 Rely on the expertise of the manufacturer. Call us to ensure that the repair will be carried out by fully-trained service engineers, who are equipped with original spare parts for your appliance. Safety instructions Install and connect the appliance according to the installation and assembly instructions. Prior to installation, disconnect the dishwasher from the power supply.*

*Ensure that the protective conductor system of the domestic supply has been correctly installed. The electrical connection conditions must correspond with the specifications on the dishwasher rating plate 9".*



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3562351)

[S66M63N1EU user guide](http://yourpdfguides.com/dref/3562351)

<http://yourpdfguides.com/dref/3562351>



If the power cord of this appliance is damaged, it must be replaced with a particular power cord. To prevent injury, the power cord may be replaced by customer service only. If the dishwasher is installed in a high-sided unit, the unit must be secured properly. Do not install the appliance near heat sources (radiators, heat storage tanks, cookers or other appliances which generate much heat) and install it under a hob only in consideration of the stipulated safety clearances. After installing the appliance, ensure that the plug is easily accessible. 21 en Some models: The plastic housing on the water connection contains an electric valve, the connecting cables are in the supply hose. Do not cut through this hose, do not immerse the plastic housing in water. Waste-water connection The required work sequence can be found in the installation instructions.

If required, fit a siphon with a drainage connection. Connect the waste-water hose to the drainage connection of the siphon with the enclosed parts. Ensure that the drainage hose is not kinked, crushed or twisted and that there is no cover plate in the drainage to prevent the waste water from flowing out! Delivery Your dishwasher has been checked thoroughly in the factory to ensure that it is in working order. This may cause small water stains. These will disappear after the first wash cycle. Technical specifications Weight: max. 27 kg Voltage: 220/240 V, 50 Hz or 60 Hz Connected load: 1.92.3 kW Fuse: 10/16 A Water pressure: at least 0.05 MPa (0.

5 bar), maximum 1 MPa (10 bar). At a higher water pressure: connect pressure-reducing valve ahead. Inlet rate: minimum 10 litres/minute Water temperature: cold water; hot water max. temperature 60 °C. Fresh water connection Connect the fresh-water connection to the tap according to the installation instructions with the enclosed parts.

Ensure that the fresh-water connection is not kinked, crushed or twisted. When replacing the appliance, always use a new water supply hose. Water pressure: at least 0.05 MPa (0.5 bar), maximum 1 MPa (10 bar).

At a higher water pressure: connect pressure-reducing valve ahead. Inlet rate: minimum 10 litres/minute Water temperature: cold water preferred; hot water max. temperature 60 °C. Installation The required installation dimensions can be found in the installation instructions. Level the appliance. Ensure that the appliance is situated securely on the floor. The appliance can easily be installed in a fitted kitchen between wooden and plastic walls. If the plug is not freely accessible, an all-pole disconnect with a contact opening of at least 3 mm must be fitted on the installation side to satisfy the relevant safety instructions. 22 en Electrical connection Connect the appliance to an alternating current only, ranging from 220 V to 240 V and 50 Hz or 60 Hz via a correctly installed socket with protective earth conductor. See rating plate for required fusing 9".

The socket must be near the appliance and freely accessible following installation. The connection may be modified by technicians only. A power cord extension may be purchased from customer service only. @@@@ The appliance features a water damage protection system. @@@@ Close the door. Switch on ON/OFF switch (. The displays of the last selected programme light up. Select programme with the highest temperature. The expected programme duration is indicated on the numerical display)". Press START button :

Programme sequence starts. After approx. 4 minutes press the START button `until : is indicated on the digital display. After approx. 1 min : is indicated on the digital display .

Switch the appliance off ( and turn the tap off. Transport appliance upright only. (This prevents residual water from running into the machine control and damaging the programme sequence.) Removing the appliance Also observe the sequence of worksteps here. Disconnect the appliance from the power supply.

Turn off the water supply. Disconnect the waste water and fresh water connections. Pull out the appliance, carefully pulling the hose behind. Protection against frost If the appliance is in a room where there is a risk of frost (e.g. holiday home), empty the appliance completely (see Transportation). Turn off the tap, disconnect supply hose and drain water. 23 en Waste disposal Both the packaging of new appliances and the old appliances themselves contain valuable raw materials and recyclable materials. Please dispose of the individual parts separated according to type. Please ask your dealer or inquire at your local authority about current means of disposal.

Packaging All plastic parts of the appliance are identified with internationally standardised abbreviations (e.g. >PS< polystyrene). Therefore, plastic waste can be sorted out when the appliance is being disposed of. Please follow the safety instructions under "Delivery". Old appliances Please follow the safety instructions under "Disposal of your appliance". ) This appliance is identified according to the European guideline 2002/96/EC on waste electrical and electronic equipment WEEE. The guideline specifies the framework for an EU-wide valid return and re-use of old appliances. Subject to changes. 24 Childproof lock (door lock) \* To open the door, move lever to right and pull door handle.

Always close the appliance door completely when you leave the appliance. This is the only way you can protect your children from potential dangers. AQUA-STOP guarantee (does not apply to appliances without Aqua-Stop) en In addition to warranty claims against the seller based on the purchase contract and in addition to our appliance warranty we will pay damages under the following conditions: 1. If our Aqua-Stop system is defective and causes water damage, we will make good the damage for private users. To ensure water damage protection, the appliance must be connected to the power supply.

2. This liability guarantee is valid for the service life of the appliance. 3. A prerequisite for the warranty claim is that the appliance has been correctly installed and connected with Aqua-Stop according to our instructions. This also includes the correct installation of the Aqua-Stop extension (original accessory).

Our warranty does not extend to defective feed lines or fittings up to the Aqua-Stop connection on the tap. 4. If your appliance is fitted with Aqua-Stop, you can leave your appliance unattended during operation and leave the tap turned on afterwards. The tap should only be turned off if you are absent from home for a prolonged period, e.g. several weeks holiday. Neff GmbH Carl-Wery-Straße 34 81739 München To book an engineer visit and product advice GB IE 0844 / 892 8989 01450 2655 Calls from a BT landline will be charged at up to 3 pence per minute.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3562351)

[S66M63N1EU user guide](http://yourpdfguides.com/dref/3562351)

<http://yourpdfguides.com/dref/3562351>

*A call set-up free of up to 6 pence may apply. Constructa Neff Vertriebs GmbH Postfach 100 250 80076 München 9000 460 404 en (8908) 550MG Please find the contact data of all countries in the enclosed customer service list. Internet: www.*

*neff-international.com .*



[You're reading an excerpt. Click here to read official NEFF  
S66M63N1EU user guide  
http://yourpdfguides.com/dref/3562351](http://yourpdfguides.com/dref/3562351)